



# **DGS-3312SR**

Release III

## 12-Port Gigabit Layer 3 Stackable Switch Command Line Interface Reference Manual

---

Third Edition  
(Feb 2005)

---

**Version 0.3**

Printed In China



RECYCLABLE



---

Information in this document is subject to change without notice.

© 2005 D-Link Computer Corporation. All rights reserved.

Reproduction in any manner whatsoever without the written permission of D-Link Computer Corporation is strictly forbidden.

Trademarks used in this text: D-Link and the D-LINK logo are trademarks of D-Link Computer Corporation; Microsoft and Windows are registered trademarks of Microsoft Corporation.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. D-Link Computer Corporation disclaims any proprietary interest in trademarks and trade names other than its own.

February 2005 P/N 651SR3312035



# Table of Contents

---

Introduction .....	1
Using the Console CLI.....	4
Command Syntax .....	10
Basic Switch Commands.....	13
Switch Port Commands .....	27
Port Security Commands.....	30
Network Management (SNMP) Commands .....	34
Switch Utility Commands .....	57
Network Monitoring Commands.....	61
Multiple Spanning Tree Protocol (MSTP) Commands .....	78
Forwarding Database Commands .....	94
Broadcast Storm Control Commands.....	103
QoS Commands.....	106
Port Mirroring Commands .....	115
VLAN Commands.....	120
Link Aggregation Commands .....	127
Basic IP Commands .....	134
IGMP Commands.....	139
IGMP Snooping Commands .....	142
MAC Notification Commands .....	152
Access Authentication Control Commands.....	157
SSH Commands .....	185
SSL Commands.....	194
802.1X Commands.....	199
Access Control List (ACL) Commands .....	214
Traffic Segmentation Commands.....	225

Stacking Commands .....	228
D-Link Single IP Management Commands .....	231
Time and SNTP Commands .....	243
ARP Commands .....	251
VRRP Commands.....	256
Routing Table Commands .....	265
Route Redistribution Commands .....	269
BOOTP Relay Commands.....	275
DNS Relay Commands.....	279
RIP Commands .....	284
DVMRP Commands .....	288
PIM Commands .....	294
IP Multicasting Commands.....	299
MD5 Configuration Commands .....	301
OSPF Configuration Commands .....	304
Command History List.....	327
Technical Specifications .....	330
VCCI Warning .....	333
この装置は、クラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。 .....	333

## INTRODUCTION

The switch can be managed through the switch's serial port, Telnet, or the Web-based management agent. The Command Line Interface (CLI) can be used to configure and manage the switch via the serial port or Telnet interfaces.

This manual provides a reference for all of the commands contained in the CLI. Configuration and management of the switch via the Web-based management agent is discussed in the User's Guide.


### Accessing the Switch via the Serial Port

The switch's serial port's default settings are as follows:

- **9600 baud**
- **no parity**
- **8 data bits**
- **1 stop bit**

A computer running a terminal emulation program capable of emulating a VT-100 terminal and a serial port configured as above is then connected to the switch's serial port via an RS-232 DB-9 cable.

With the serial port properly connected to a management computer, the following screen should be visible. If this screen does not appear, try pressing Ctrl+r to refresh the console screen.

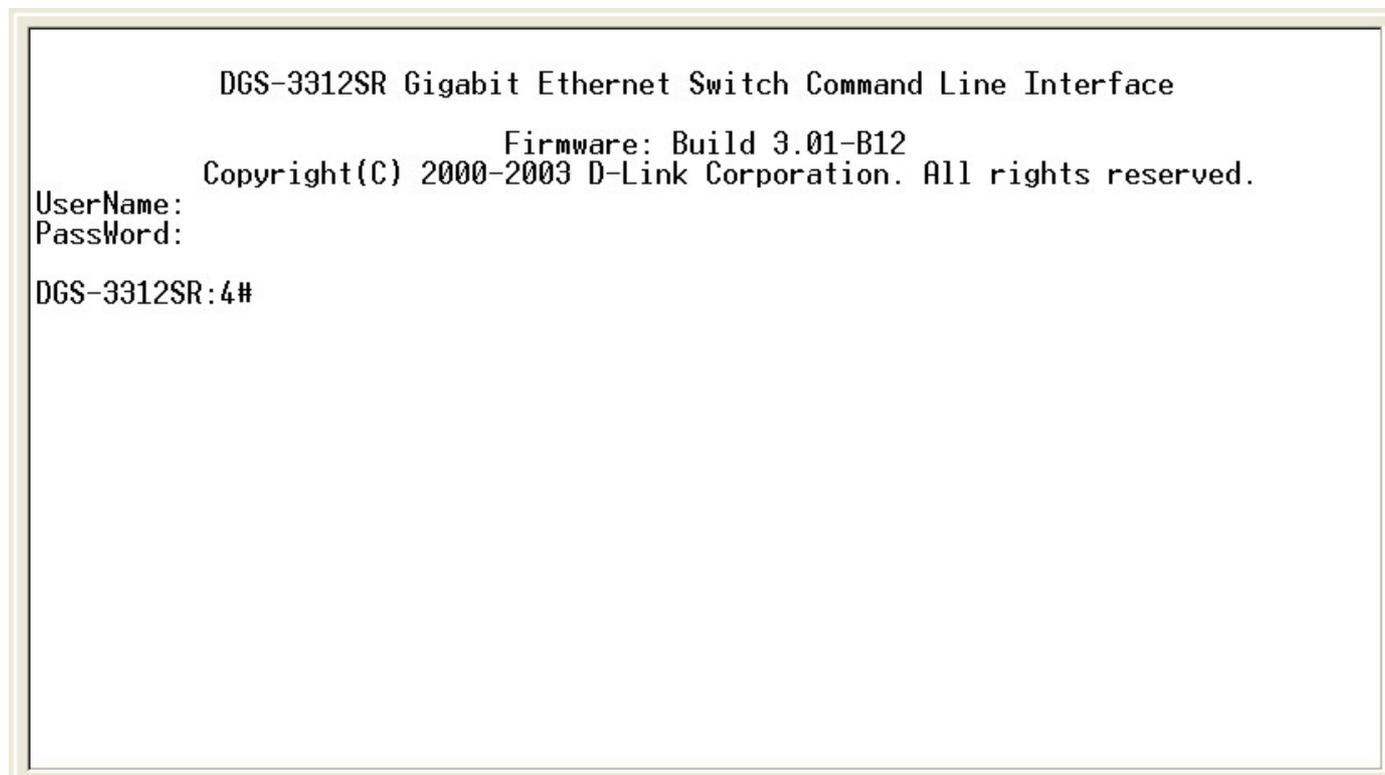

```
DGS-3312SR Gigabit Ethernet Switch Command Line Interface
                          Firmware: Build 3.01-B12
Copyright(C) 2000-2003 D-Link Corporation. All rights reserved.
UserName:
PassWord:
DGS-3312SR:4#
```

Figure 1-1. Initial CLI screen

There is no initial username or password. Just press the **Enter** key twice to display the CLI input cursor – **DGS-3312SR:4#**. This is the command line where all commands are input.

## Setting the Switch's IP Address

Each Switch must be assigned its own IP Address, which is used for communication with an SNMP network manager or other TCP/IP application (for example BOOTP, TFTP). The switch's default IP address is 10.90.90.90. You can change the default Switch IP address to meet the specification of your networking address scheme.

The switch is also assigned a unique MAC address by the factory. This MAC address cannot be changed, and can be found on the initial boot console screen – shown below.

```

Boot Procedure                                                    2.00.002
-----
Power On Self Test ..... 100 %
MAC Address   : 00-80-C8-32-12-E0
H/W Version   :
Please wait, loading Runtime image ..... 100 %_

```

**Figure 1-2. Boot Screen**

The switch's MAC address can also be found in the Web management program on the Switch Information (Basic Settings) window on the Configuration menu.

The IP address for the switch must be set before it can be managed with the Web-based manager. The switch IP address can be automatically set using BOOTP or DHCP protocols, in which case the actual address assigned to the switch must be known.

The IP address may be set using the Command Line Interface (CLI) over the console serial port as follows:

1. Starting at the command line prompt, enter the commands **config ipif System ipaddress xxx.xxx.xxx.xxx/yyy.yyy.yyy.yyy**. Where the **x**'s represent the IP address to be assigned to the IP interface named **System** and the **y**'s represent the corresponding subnet mask.
2. Alternatively, you can enter **config ipif System ipaddress xxx.xxx.xxx.xxx/z**. Where the **x**'s represent the IP address to be assigned to the IP interface named **System** and the **z** represents the corresponding number of subnets in CIDR notation.

The IP interface named **System** on the switch can be assigned an IP address and subnet mask which can then be used to connect a management station to the switch's Telnet or Web-based management agent.

```
DGS-3312SR Gigabit Ethernet Switch Command Line Interface
                          Firmware: Build 3.01-B12
                          Copyright(C) 2000-2003 D-Link Corporation. All rights reserved.
UserName:
Password:

DGS-3312SR:4#config ipif System ipaddress 10.53.13.144/255.0.0.0
Command: config ipif System ipaddress 10.53.13.144/8

Success.

DGS-3312SR:4#
```

**Figure 1-3. Assigning an IP Address**

In the above example, the switch was assigned an IP address of 10.53.13.144/8 with a subnet mask of 255.0.0.0. The system message **Success** indicates that the command was executed successfully. The switch can now be configured and managed via Telnet and the CLI or via the Web-based management agent using the above IP address to connect to the switch.

## USING THE CONSOLE CLI

The DGS-3312SR supports a console management interface that allows the user to connect to the switch's management agent via a serial port and a terminal or a computer running a terminal emulation program. The console can also be used over the network using the TCP/IP Telnet protocol. The console program can be used to configure the switch to use an SNMP-based network management software over the network.

This chapter describes how to use the console interface to access the switch, change its settings, and monitor its operation.



**Note:** Switch configuration settings are saved to non-volatile RAM using the `save` command. The current configuration will then be retained in the switch's NV-RAM, and reloaded when the switch is rebooted. If the switch is rebooted without using the `save` command, the last configuration saved to NV-RAM will be loaded.

### Connecting to the Switch

The console interface is used by connecting the Switch to a VT100-compatible terminal or a computer running an ordinary terminal emulator program (e.g., the **HyperTerminal** program included with the Windows operating system) using an RS-232C serial cable. Your terminal parameters will need to be set to:

- **VT-100 compatible**
- **9600 baud**
- **8 data bits**
- **No parity**
- **One stop bit**
- **No flow control**

You can also access the same functions over a Telnet interface. Once you have set an IP address for your Switch, you can use a Telnet program (in VT-100 compatible terminal mode) to access and control the Switch. All of the screens are identical, whether accessed from the console port or from a Telnet interface.

After the switch reboots and you have logged in, the console looks like this:

```
DGS-3312SR Gigabit Ethernet Switch Command Line Interface
                          Firmware: Build 3.01-B12
Copyright(C) 2000-2003 D-Link Corporation. All rights reserved.
UserName:
```

Figure 2-1. Initial Console Screen

Commands are entered at the command prompt, **DGS-3312SR:4#**.

There are a number of helpful features included in the CLI. Entering the ? command will display a list of all of the top-level commands.

```
?
clear
clear arptable
clear counters
clear fdb
clear log
clear port_security_entry port
config 802.1p default_priority
config 802.1p user_priority
config 802.1x auth_mode
config 802.1x auth_parameter ports
config 802.1x capability ports
config 802.1x init
config 802.1x reauth
config access_profile profile_id
config account
config admin local_enable
config arp_aging time
config authen application
config authen parameter attempt
config authen parameter response_timeout
CTRL+C ESC q Quit SPACE n Next Page ENTER Next Entry a All
```

Figure 2-2. The ? Command

When you enter a command without its required parameters, the CLI will prompt you with a **Next possible completions:** message.

```
DGS-3312SR:4#config account
Command: config account

Next possible completions:
<username>

DGS-3312SR:4#
```

**Figure 2-3. Example Command Parameter Help**

In this case, the command **config account** was entered with the parameter **<username>**. The CLI will then prompt you to enter the **<username>** with the message, **Next possible completions:**. Every command in the CLI has this feature, and complex commands have several layers of parameter prompting.

In addition, after typing any given command plus one space, you can see all of the next possible sub-commands, in sequential order, by repeatedly pressing the **Tab** key.

To re-enter the previous command at the command prompt, press the up arrow cursor key. The previous command will appear at the command prompt.

```
DGS-3312SR:4#config account
Command: config account

Next possible completions:
<username>

DGS-3312SR:4#config account
```

**Figure 2-4. Using the Up Arrow to Re-enter a Command**

In the above example, the command **config account** was entered without the required parameter **<username>**, the CLI returned the **Next possible completions: <username>** prompt. The up arrow cursor control key was pressed to re-enter the previous command (**config account**) at the command prompt. Now the appropriate User name can be entered and the **config account** command re-executed.

All commands in the CLI function in this way. In addition, the syntax of the help prompts are the same as presented in this manual – angle brackets **<>** indicate a numerical value or character string, braces **{ }** indicate optional parameters or a choice of parameters, and brackets **[ ]** indicate required parameters.

If a command is entered that is unrecognized by the CLI, the top-level commands will be displayed under the **Available commands:** prompt.

```

DGS-3312SR:4#the

Available commands:
..
create          ?
download        delete
ping            enable
save           reboot
               show
               clear
               dir
               login
               reconfig
               traceroute
               config
               disable
               logout
               reset
               upload

DGS-3312SR:4#

```

Figure 2-5. The Next Available Commands Prompt

The top-level commands consist of commands such as **show** or **config**. Most of these commands require one or more parameters to narrow the top-level command. This is equivalent to **show** what? or **config** what? Where the what? is the next parameter.

For example, if you enter the **show** command with no additional parameters, the CLI will then display all of the possible next parameters.

```

DGS-3312SR:4#show
Command: show

Next possible completions:
802.1p          802.1x          access_profile  account
arprentry      authen          authen_enable  authen_login
authen_policy  bandwidth_control bootp_relay    certificate
command_history config          dnsr          dvmrp
error          fdb            gvrp          igmp
igmp_snooping ipfdb          ipif          ipmc
iproute        lacp_port      link_aggregation log
mac_notification md5           mirror        multicast
multicast_fdb ospf          packet        pim
port_security  ports         radius        rip
route          router_ports   scheduling_mechanism
serial_port    session       sim           snmp
sntp          ssh           ssl           stacking
stp           switch        syslog        time
traffic       traffic_segmentation
utilization   vlan          vrrp         trusted_host

DGS-3312SR:4#

```

Figure 2-6. Next possible completions: Show Command

In the above example, all of the possible next parameters for the **show** command are displayed. At the next command prompt, the up arrow was used to re-enter the **show** command, followed by the **account** parameter. The CLI then displays the user accounts configured on the switch.

## COMMAND SYNTAX

The following symbols are used to describe how command entries are made and values and arguments are specified in this manual. The online help contained in the CLI and available through the console interface uses the same syntax.



**Note:** All commands are case-sensitive. Be sure to disable Caps Lock or any other unwanted function that changes text case.

<b>&lt;angle brackets&gt;</b>	
Purpose	Encloses a variable or value that must be specified.
Syntax	<b>create ipif &lt;ipif_name&gt; vlan &lt;vlan_name 32&gt; ipaddress &lt;network_address&gt;</b>
Description	In the above syntax example, you must supply an IP interface name in the <ipif_name> space, a VLAN name in the <vlan_name 32> space, and the network address in the <network_address> space. Do not type the angle brackets.
Example Command	<b>create ipif Engineering vlan Design ipaddress 10.24.22.5/255.0.0.0</b>

<b>[square brackets]</b>	
Purpose	Encloses a required value or set of required arguments. One value or argument can be specified.
Syntax	<b>create account [admin   user]</b>
Description	In the above syntax example, you must specify either an <b>admin</b> or a <b>user</b> level account to be created. Do not type the square brackets.
Example Command	<b>create account admin</b>

<b>  vertical bar</b>	
Purpose	Separates two or more mutually exclusive items in a list, one of which must be entered.
Syntax	<b>show snmp [community   detail]</b>
Description	In the above syntax example, you must specify either <b>community</b> , or <b>detail</b> . Do not type the backslash.
Example Command	<b>show snmp community</b>

<b>{braces}</b>	
Purpose	Encloses an optional value or set of optional arguments.
Syntax	<b>reset {[config   system]}</b>
Description	In the above syntax example, you have the option to specify <b>config</b> or <b>system</b> . It is not necessary to specify either optional value, however the effect of the system reset is dependent on which, if any, value is specified. Therefore, with this example there are three possible outcomes of performing a system reset. See the following chapter, Basic Commands for more details about the reset command.
Example command	<b>reset config</b>

<b><i>Line Editing Key Usage</i></b>	
Delete	Deletes the character under the cursor and then shifts the remaining characters in the line to the left.
Backspace	Deletes the character to the left of the cursor and shifts the remaining characters in the line to the left.
Left Arrow	Moves the cursor to the left.
Right Arrow	Moves the cursor to the right.
Up Arrow	Repeat the previously entered command. Each time the up arrow is pressed, the command previous to that displayed appears. This way it is possible to review the command history for the current session. Use the down arrow to progress sequentially forward through the command history list.
Down Arrow	The down arrow will display the next command in the command history entered in the current session. This displays each command sequentially as it was entered. Use the up arrow to review previous commands.
Tab	Shifts the cursor to the next field to the left.

<b><i>Multiple Page Display Control Keys</i></b>	
Space	Displays the next page.
CTRL+c	Stops the display of remaining pages when multiple pages are to be displayed.
ESC	Stops the display of remaining pages when multiple pages are to be displayed.
n	Displays the next page.
p	Displays the previous page.
q	Stops the display of remaining pages when multiple pages are to be displayed.
r	Refreshes the pages currently displayed.
a	Displays the remaining pages without pausing between pages.

Enter	Displays the next line or table entry.
-------	--

## BASIC SWITCH COMMANDS

The basic switch commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
create account	[admin   user] <username 15>
config account	<username 15>
show account	
delete account	<username 15>
show session	
show switch	
show config	[current_config   config_in_NVRAM]
show serial_port	
config serial_port	{baud_rate [9600   19200   38400   115200] auto_logout [never   2_minutes   5_minutes   10_minutes   15_minutes]}
enable clipaging	
disable clipaging	
enable telnet	<tcp_port_number 1-65535>
disable telnet	
enable web	<tcp_port_number 1-65535>
disable web	
save	
reboot	
reset	{[config   system]}
login	
logout	

Each command is listed, in detail, in the following sections.

### create account

<b>Purpose</b>	Used to create user accounts
<b>Syntax</b>	<b>create [admin   user] &lt;username&gt;</b>
<b>Description</b>	The create account command is used to create user accounts that consist of a username of 1 to 15 characters and a password of 0 to 15 characters. Up to 8 user accounts can be created.
<b>Parameters</b>	<i>Admin &lt;username&gt;</i>

**create account***User <username>*

**Restrictions** Only Administrator-level users can issue this command.

Usernames can be between 1 and 15 characters.

Passwords can be between 0 and 15 characters.

Example usage:

To create an administrator-level user account with the username “dlink”.

```
DGS-3312SR:4#create account admin dlink
Command: create account admin dlink

Enter a case-sensitive new password:****
Enter the new password again for confirmation:****

Success.

DGS-3312SR:4#
```

**config account**

**Purpose** Used to configure user accounts

**Syntax** **config account <username>**

**Description** The config account command configures a user account that has been created using the **create account** command.

**Parameters** *<username>*

**Restrictions** Only Administrator-level users can issue this command.

Usernames can be between 1 and 15 characters.

Passwords can be between 0 and 15 characters.

Example usage:

To configure the user password of “dlink” account:

```
DGS-3312SR:4#config account dlink
Command: config account dlink

Enter a old password:****
Enter a case-sensitive new password:****
Enter the new password again for confirmation:****
```

Success.

DGS-3312SR:4#

## show account

<b>Purpose</b>	Used to display user accounts
<b>Syntax</b>	<b>show account</b>
<b>Description</b>	Displays all user accounts created on the switch. Up to 8 user accounts can exist on the switch at one time.
<b>Parameters</b>	None.
<b>Restrictions</b>	None.

Example usage:

To display the accounts that have been created:

```
DGS-3312SR:4#show account
```

**Command: show account**

**Current Accounts:**

Username	Access Level
-----	-----
dlink	Admin

```
DGS-3312SR:4#
```

## delete account

<b>Purpose</b>	Used to delete an existing user account
<b>Syntax</b>	<b>delete account &lt;username&gt;</b>
<b>Description</b>	The delete account command deletes a user account that has been created using the <b>create account</b> command.
<b>Parameters</b>	<username>
<b>Restrictions</b>	Only Administrator-level users can issue this command.

Example usage:

To delete the user account "System":

```
DGS-3312SR:4#delete account System
```

**Command: delete account System**

**Success.**

**DGS-3312SR:4#**

## show switch

<b>Purpose</b>	Used to display information about the switch.
<b>Syntax</b>	<b>show switch</b>
<b>Description</b>	This command displays information about the switch.
<b>Parameters</b>	None.
<b>Restrictions</b>	None.

Example usage:

To display the switch information:

```
DGS-3312SR:4#show switch
Command: show switch

Device Type       : DGS-3312SR Gigabit-Ethernet Switch
Module 1 Type     : Empty
Module 2 Type     : Empty
Unit ID           : 15
MAC Address       : DA-10-21-00-00-01
IP Address        : 10.41.44.22 (Manual)
VLAN Name         : default
Subnet Mask       : 255.0.0.0
Default Gateway   : 0.0.0.0
Boot PROM Version : Build 2.00.002
Firmware Version  : Build 3.00-B17
Hardware Version  : 2A1
Device S/N        :
System Name       : DGS-3312SR_#3
System Location   : 7th_flr_east_cabinet
System Contact    : Julius_Erving_212-555-6666
Spanning Tree     : Disabled
GVRP              : Disabled
IGMP Snooping     : Disabled
TELNET            : Enabled (TCP 23)
WEB               : Enabled (TCP 80)
RMON              : Disabled
RIP               : Disabled
DVMRP             : Disabled
PIM-DM           : Disabled
OSPF              : Disabled
```

**DGS-3312SR:4#**

**show config**

<b>Purpose</b>	Used to display the configuration of the switch.
<b>Syntax</b>	<b>show config [current_config   config_in_NVRAM]</b>
<b>Description</b>	This command displays either the current configuration of the switch, or the configuration stored in the switch's NVRAM.
<b>Parameters</b>	<p>current_config – displays the switch's current configuration. If you have entered a configuration command, but have not saved the configuration in the switch's Non-Volatile RAM (NVRAM), this configuration will differ from the one saved in the switch's NVRAM.</p> <p>config_in_NVRAM – displays the switch's configuration saved in the switch's NVRAM. Any configuration commands that have been entered, but not saved in the switch's NVRAM will not be shown.</p>
<b>Restrictions</b>	Only Administrator-level users can issue this command.

Example usage:

To display the switch's configuration information:

```
DGS-3312SR:4#show config current_config
Command: show current_config

# BASIC

config serial_port baud_rate 9600 auto_logout 10_minutes
enable telnet 23
enable web 80

# STORM

config traffic control 15:1-15:2 broadcast disable multicast disable dlf disable
threshold 128

# GM

config sim candidate
disable sim
config sim dp_interval 30
config sim hold_time 100

# SYSLOG

disable syslog

#QOS

config scheduling mechanism round robin
```

```

config scheduling_mechanism round_robin
config 802.1p user_priority 0 2
config 802.1p user_priority 1 0
config 802.1p user_priority 2 1
config 802.1p user_priority 3 3
config 802.1p user_priority 4 4
config 802.1p user_priority 5 5
config 802.1p user_priority 6 6
config 802.1p user_priority 7 7
config 802.1p default_priority 15:1-15:12 0
config bandwidth_control 15:1 rx_r
CTRL+C ESC q Quit SPACE n Next Page ENTER Next Entry a All

```

## show serial\_port

<b>Purpose</b>	Used to display the current serial port settings.
<b>Syntax</b>	<b>show serial_port</b>
<b>Description</b>	This command displays the current serial port settings.
<b>Parameters</b>	None.
<b>Restrictions</b>	None

Example usage:

To display the serial port setting:

```

DGS-3312SR:4#show serial_port
Command: show serial_port

Baud Rate      : 9600
Data Bits      : 8
Parity Bits    : None
Stop Bits      : 1
Auto-Logout    : 10 mins

DGS-3312SR:4#

```

**config serial\_port**

<b>Purpose</b>	Used to configure the serial port.
<b>Syntax</b>	<b>config serial_port {baud_rate [9600   19200   38400   115200]   auto_logout [never   2_minutes   5_minutes   10_minutes   15_minutes]}</b>
<b>Description</b>	This command is used to configure the serial port's baud rate and auto logout settings.
<b>Parameters</b>	<p><i>baud_rate [9600   19200   38400   115200]</i> – The serial bit rate that will be used to communicate with the management host.</p> <p><i>auto_logout</i> – This parameter will set the time that the switch will wait before logging out automatically, if left idle. The choices that accompany this parameter are:</p> <ul style="list-style-type: none"> <li>▪ <i>never</i> – No time limit on the length of time the console can be open with no user input.</li> <li>▪ <i>2_minutes</i> – The console will log out the current user if there is no user input for 2 minutes.</li> <li>▪ <i>5_minutes</i> – The console will log out the current user if there is no user input for 5 minutes.</li> <li>▪ <i>10_minutes</i> – The console will log out the current user if there is no user input for 10 minutes.</li> <li>▪ <i>15_minutes</i> – The console will log out the current user if there is no user input for 15 minutes.</li> </ul>
<b>Restrictions</b>	Only administrator-level users can issue this command.

Example usage:

To configure baud rate:

```
DGS-3312SR:4#config serial_port baud_rate 9600
Command: config serial_port baud_rate 9600

Success.

DGS-3312SR:4#
```

**enable clipaging**

<b>Purpose</b>	Used to pause the scrolling of the console screen when the show command displays more than one page.
<b>Syntax</b>	<b>enable clipaging</b>
<b>Description</b>	This command is used when issuing the show command which causes the console screen to rapidly scroll through several pages. This command will cause the console to pause at the end

**enable clipaging**

	of each page. The default setting is enabled.
<b>Parameters</b>	None.
<b>Restrictions</b>	Only administrator-level users can issue this command.

Example usage:

To enable pausing of the screen display when the show command output reaches the end of the page:

```
DGS-3312SR:4#enable clipaging
Command: enable clipaging

Success.

DGS-3312SR:4#
```

**disable clipaging**

<b>Purpose</b>	Used to disable the pausing of the console screen scrolling at the end of each page when the show command displays more than one screen of information.
<b>Syntax</b>	<b>disable clipaging</b>
<b>Description</b>	This command is used to disable the pausing of the console screen at the end of each page when the show command would display more than one screen of information.
<b>Parameters</b>	None.
<b>Restrictions</b>	Only administrator-level users can issue this command.

Example usage:

To disable pausing of the screen display when show command output reaches the end of the page:

```
DGS-3312SR:4#disable clipaging
Command: disable clipaging

Success.

DGS-3312SR:4#
```

**enable telnet**

<b>Purpose</b>	Used to enable communication with and management of the switch using the Telnet protocol.
----------------	---

**enable telnet**

<b>Syntax</b>	<b>enable telnet &lt;tcp_port_number 1-65535&gt;</b>
<b>Description</b>	This command is used to enable the Telnet protocol on the switch. The user can specify the TCP or UDP port number the switch will use to listen for Telnet requests.
<b>Parameters</b>	<i>&lt;tcp_port_number 1-65535&gt;</i> – The TCP port number. TCP ports are numbered between 1 and 65535. The “well-known” TCP port for the Telnet protocol is 23.
<b>Restrictions</b>	Only administrator-level users can issue this command.

Example usage:

To enable Telnet and configure port number:

```
DGS-3312SR:4#enable telnet 23
Command: enable telnet 23

Success.

DGS-3312SR:4#
```

**disable telnet**

<b>Purpose</b>	Used to disable the Telnet protocol on the switch.
<b>Syntax</b>	<b>disable telnet</b>
<b>Description</b>	This command is used to disable the Telnet protocol on the switch.
<b>Parameters</b>	None.
<b>Restrictions</b>	Only administrator-level users can issue this command.

Example usage:

To disable the Telnet protocol on the switch:

```
DGS-3312SR:4#disable telnet
Command: disable telnet

Success.

DGS-3312SR:4#
```

**enable web**

<b>Purpose</b>	Used to enable the HTTP-based management software on the switch.
<b>Syntax</b>	<b>enable web &lt;tcp_port_number 1-65535&gt;</b>
<b>Description</b>	This command is used to enable the Web-based management software on the switch. The user can specify the TCP port number the switch will use to listen for Telnet requests.
<b>Parameters</b>	<i>&lt;tcp_port_number 1-65535&gt;</i> – The TCP port number. TCP ports are numbered between 1 and 65535. The “well-known” port for the Web-based management software is 80.
<b>Restrictions</b>	Only administrator-level users can issue this command.

Example usage:

To enable HTTP and configure port number:

```
DGS-3312SR:4#enable web 80
Command: enable web 80

Success.

DGS-3312SR:4#
```

**disable web**

<b>Purpose</b>	Used to disable the HTTP-based management software on the switch.
<b>Syntax</b>	<b>disable web</b>
<b>Description</b>	This command disables the Web-based management software on the switch.
<b>Parameters</b>	None.
<b>Restrictions</b>	Only administrator-level users can issue this command.

Example usage:

To disable HTTP:

```
DGS-3312SR:4#disable web
Command: disable web

Success.

DGS-3312SR:4#
```

**save**

<b>Purpose</b>	Used to save changes in the switch's configuration to non-volatile RAM.
<b>Syntax</b>	<b>save</b>
<b>Description</b>	This command is used to enter the current switch configuration into non-volatile RAM. The saved switch configuration will be loaded into the switch's memory each time the switch is restarted.
<b>Parameters</b>	Entering just the <b>save</b> command will save the switch configuration to NV-Ram
<b>Restrictions</b>	Only administrator-level users can issue this command.

Example usage:

To save the switch's current configuration to non-volatile RAM:

```
DGS-3312SR:4#save
Command: save

Saving all configurations to NV-RAM... Done

DGS-3312SR:4#
```

**reboot**

<b>Purpose</b>	Used to restart the switch.
<b>Syntax</b>	<b>reboot</b>
<b>Description</b>	This command is used to restart the switch.
<b>Parameters</b>	None.
<b>Restrictions</b>	Only administrator-level users can issue this command.

Example usage:

To restart the switch:

```
DGS-3312SR:4#reboot
Command: reboot
Are you sure want to proceed with the system reboot? (y/n)
Please wait, the switch is rebooting...
```

**reset**

<b>Purpose</b>	Used to reset the switch to the factory default settings.
<b>Syntax</b>	<b>reset {[config   system]}</b>
<b>Description</b>	This command is used to restore the switch's configuration to the default settings assigned from the factory.
<b>Parameters</b>	<p><i>config</i> – If the keyword 'config' is specified, all of the factory default settings are restored on the switch including the IP address, user accounts, and the switch history log. The switch will not save or reboot.</p> <p><i>system</i> – If the keyword 'system' is specified all of the factory default settings are restored on the switch. The switch will save and reboot after the settings are changed to default. Rebooting will clear all entries in the Forwarding Data Base.</p> <p>If no parameter is specified, the switch's current IP address, user accounts, and the switch history log are not changed. All other parameters are restored to the factory default settings. The switch will not save or reboot.</p>
<b>Restrictions</b>	Only administrator-level users can issue this command.

Example usage:

To restore all of the switch's parameters to their default values:

```
DGS-3312SR:4#reset config
Command: reset config

Success.

DGS-3312SR:4#
```

**login**

<b>Purpose</b>	Used to log in a user to the switch's console.
<b>Syntax</b>	<b>login</b>
<b>Description</b>	This command is used to initiate the login procedure. The user will be prompted for his Username and Password.
<b>Parameters</b>	None.
<b>Restrictions</b>	None.

Example usage:

To initiate the login procedure:

**DGS-3312SR:4#login**

**Command: login**

**UserName:**

## **logout**

<b>Purpose</b>	Used to log out a user from the switch's console.
<b>Syntax</b>	<b>logout</b>
<b>Description</b>	This command terminates the current user's session on the switch's console.
<b>Parameters</b>	None.
<b>Restrictions</b>	None.

Example usage:

To terminate the current user's console session:

**DGS-3312SR:4#logout**

## SWITCH PORT COMMANDS

The switch port commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
config ports	[<portlist   all> {speed [auto   10_half   10_full   100_half   100_full   1000_full]   flow_control [enable   disable]   learning [enable   disable] state [enable   disable] description <desc 32>}]
show ports	{<portlist>} {description}

Each command is listed, in detail, in the following sections.



**NOTE:** As a stand-alone switch or as a master switch in a switch stack, the switch number will be referred to as 15 for all configurations, graphs and tables.

### config ports

<b>Purpose</b>	Used to configure the Switch's Ethernet port settings.
<b>Syntax</b>	[<portlist   all> {speed [auto   10_half   10_full   100_half   100_full   1000_full]{[master   slave]}}   flow_control [enable   disable]   learning [enable   disable] state [enable   disable] description <desc 32>]
<b>Description</b>	This command allows for the configuration of the switch's Ethernet ports. Only the ports listed in the <portlist> will be affected.
<b>Parameters</b>	<p>&lt;portlist&gt; – Specifies a range of ports to be configured. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.</p> <p><i>all</i> – Configure all ports on the switch.</p> <p><i>auto</i> – Enables auto-negotiation for the specified range of ports.</p> <p>[10   100   1000] – Configures the speed in Mbps for the specified range of ports.</p> <p>[half   full] – Configures the specified range of ports as either full- or half-duplex.</p> <p>{[master   slave]} – Configures the specified range of ports as</p>

**config ports**

either master or slave ports.

*flow\_control* [*enable* | *disable*] – Enable or disable flow control for the specified ports.

*learning* [*enable* | *disable*] – Enables or disables the MAC address learning on the specified range of ports.

*state* [*enable* | *disable*] – Enables or disables the specified range of ports.

*description* <*desc* 32> - Enter an alphanumeric string of no more than 32 characters to describe a selected port interface.

**Restrictions**

Only administrator-level users can issue this command.

Example usage:

To configure the speed of port 3 to be 10 Mbps, full duplex, learning and state enable:

```
DGS-3312SR:4#config ports 1:1-1:3 speed 10_full learning enable state
enable
Command: config ports 1:1-1:3 speed 10_full learning enable state enable

Success.

DGS-3312SR:4#
```

**show ports**

**Purpose** Used to display the current configuration of a range of ports.

**Syntax** **show ports {<portlist>} {description}**

**Description** This command is used to display the current configuration of a range of ports.

**Parameters** <*portlist*> – Specifies a range of ports to be configured. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

*description* – Enter this parameter to view the description of the port previously set in the **config ports** command.

**Restrictions** None.

Example usage:

To display the configuration of all ports on a standalone switch:

```

DGS-3312SR:4#show ports
Command show ports:

Port    Port    Settings          Connection          Address
-----  -----  -----          -----          -----
15:1    Enabled  Auto/Enabled      Link Down          Enabled
15:2    Enabled  Auto/Enabled      Link Down          Enabled
15:3    Enabled  Auto/Enabled      Link Down          Enabled
15:4    Enabled  Auto/Enabled      Link Down          Enabled
15:5    Enabled  Auto/Enabled      Link Down          Enabled
15:6    Enabled  Auto/Enabled      Link Down          Enabled
15:7    Enabled  Auto/Enabled      Link Down          Enabled
15:8    Enabled  Auto/Enabled      Link Down          Enabled
15:9    Enabled  Auto/Enabled      Link Down          Enabled
15:10   Enabled  Auto/Enabled      100M/Full/802.3x  Enabled
15:11   Enabled  Auto/Enabled      Link Down          Enabled
15:12   Enabled  Auto/Enabled      Link Down          Enabled

CTRL+C ESC q Quit SPACE n Next Page p Previous Page r Refresh
    
```

Example usage:

To view port 1:1 with description

```

DGS-3312SR:4# show ports 15:1 description
Command: show ports 15:1 description

Port    Port    Settings          Connection          Address
-----  -----  -----          -----          -----
1:1     Enabled  Auto/Enabled      Link Down          Enabled
        Desc: Darren's

CTRL+C ESC q Quit SPACE n Next Page p Previous Page r Refresh
    
```

## PORT SECURITY COMMANDS

The switch port security commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
config port_security ports	[<portlist>  all ] {admin_state [enable   disable]   max_learning_addr <max_lock_no 0-10>   lock_address_mode [Permanent   DeleteOnTimeout   DeleteOnReset]}
show port_security	{ports <portlist>}
delete port_security_entry vlan_name	<vlan_name 32> mac_address <macaddr> port <port>
clear port_security_entry port	<portlist>

Each command is listed, in detail, in the following sections.



**NOTE:** As a stand-alone switch or as a master switch in a switch stack, the switch number will be referred to as 15 for all configurations, graphs and tables.

### config port\_security ports

<b>Purpose</b>	Used to configure port security settings.
<b>Syntax</b>	<b>config</b> [<portlist>   all ] { <b>admin_state</b> [enable   disable]   <b>max_learning_addr</b> <max_lock_no 0-10>   <b>lock_address_mode</b> [Permanent   DeleteOnTimeout   DeleteOnReset]}
<b>Description</b>	This command allows for the configuration of the port security feature. Only the ports listed in the <portlist> are effected.
<b>Parameters</b>	<p><i>&lt;portlist&gt;</i> – Specifies a range of ports to be configured. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.</p> <p><i>all</i> – Configure port security for all ports on the switch.</p> <p><i>admin_state [enable   disable]</i> – Enables or disables port security for the listed ports.</p> <p><i>max_learning_addr &lt;max_lock_no 0-10&gt;</i> - Use this to limit the</p>

**config port\_security ports**

number of MAC addresses dynamically listed in the FDB for the ports.

*lock\_address\_mode [Permanent | DeleteOnTimeout | DeleteOnReset]* – Delete FDB dynamic entries for the ports on timeout of the FDB (see Forwarding Database Commands). Specify DeleteOnReset to delete all FDB entries, including static entries upon system reset or rebooting. Entering the *Permanent* parameter will permanently set the MAC address in the switch's memory until deleted by the user.

**Restrictions**

Only administrator-level users can issue this command.

Example usage:

To configure the port security:

```
DGS-3312SR:4#config port_security ports 1:1-1:5 admin_state enable
max_learning_addr 5 lock_address_mode DeleteOnReset
```

```
Command: config port_security ports 1:1-1:5 admin_state enable
max_learning_addr 5 lock_address_mode DeleteOnReset
```

```
Success
```

```
DGS-3312SR:4#
```

**show port\_security****Purpose**

Used to display the current port security configuration.

**Syntax**

**show port\_security {ports <portlist>}**

**Description**

This command is used to display port security information of the switch ports. The information displayed includes port security admin state, maximum number of learning address and lock mode.

**Parameters**

*<portlist>* – Specifies a range of ports to be viewed. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

**Restrictions**

None.

Example usage:

To display the port security configuration:

DGS-3312SR:4#show port\_security ports

Command: show port\_security ports

Port#	Admin State	Max. Learning Addr.	Lock Address Mode
15:1	Disabled	1	DeleteOnReset
15:2	Disabled	1	DeleteOnReset
15:3	Disabled	1	DeleteOnReset
15:4	Disabled	1	DeleteOnReset
15:5	Disabled	1	DeleteOnReset
15:6	Disabled	1	DeleteOnReset
15:7	Enabled	10	DeleteOnReset
15:8	Disabled	1	DeleteOnReset
15:9	Disabled	1	DeleteOnReset
15:10	Disabled	1	DeleteOnReset
15:11	Disabled	1	DeleteOnReset
15:12	Disabled	1	DeleteOnReset

CTRL+C ESC q Quit SPACE n Next Page p Previous Page r Refresh

## delete port\_security\_entry\_vlan\_name

<b>Purpose</b>	Used to delete an entry from the switch's port security settings.
<b>Syntax</b>	<b>delete port_security_entry_vlan_name &lt;vlan_name 32&gt; mac_address &lt;macaddr&gt; port &lt;port&gt;</b>
<b>Description</b>	This command is used to remove an entry from the port security entries learned by the switch and entered into the forwarding database.
<b>Parameters</b>	<p><i>&lt;vlan_name 32&gt;</i> - Enter the corresponding vlan of the entry the user wishes to delete.</p> <p><i>mac_address &lt;macaddr&gt;</i> - Enter the corresponding MAC address of the entry the user wishes to delete.</p> <p><i>port &lt;port&gt;</i> - Enter the corresponding port of the entry to delete. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.</p>
<b>Restrictions</b>	Only administrator-level users can issue this command.

Example usage:

To delete an entry from the port security list:

```
DGS-3312SR:4#delete port_security_entry_vlan_name default
mac_address 00-0C-6E-73-2B-C9 port 1:1
```

```
Command: delete port_security_entry_vlan_name default
mac_address 00-0C-6E-73-2B-C9 port 1:1
```

```
Success
```

```
DGS-3312SR:4#
```

## clear port\_security\_entry port

<b>Purpose</b>	Used to clear MAC address entries learned from a specified port for the port security function.
<b>Syntax</b>	<b>clear port_security_entry port &lt;portlist&gt;</b>
<b>Description</b>	This command is used to clear MAC address entries which were learned by the switch by a specified port. This command only relates to the port security function.
<b>Parameters</b>	<i>&lt;portlist&gt;</i> – Specifies a port or port range the user wishes to clear. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.
<b>Restrictions</b>	Only administrator-level users can issue this command.

Example usage:

To clear a port security entry by port:

```
DGS-3312SR:4# clear port_security_entry port 6
```

```
Command: clear port_security_entry port 6
```

```
Success.
```

```
DGS-3312SR:4#
```

## NETWORK MANAGEMENT (SNMP) COMMANDS

The DGS-3312SR supports the Simple Network Management Protocol (SNMP) versions 1, 2c, and 3. You can specify which version of the SNMP you want to use to monitor and control the switch. The three versions of SNMP vary in the level of security provided between the management station and the network device. The following table lists the security features of the three SNMP versions:

The network management commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

SNMP Version	Authentication Method	Description
v1	Community String	Community String is used for authentication – NoAuthNoPriv
v2c	Community String	Community String is used for authentication – NoAuthNoPriv
v3	Username	Username is used for authentication – NoAuthNoPriv
v3	MD5 or SHA	Authentication is based on the HMAC-MD5 or HMAC-SHA algorithms – AuthNoPriv
v3	MD5 DES or SHA DES	Authentication is based on the HMAC-MD5 or HMAC-SHA algorithms – AuthPriv.  DES 56-bit encryption is added based on the CBC-DES (DES-56) standard

Each command is listed, in detail, in the following sections.

Command	Parameters
create snmp user	create snmp user <username 32> <groupname 32> {encrypted [by_password auth [md5 <auth_password 8-16>   sha <auth_password 8-20 >] priv [none   des <priv_password 8-16>]   by_key auth [md5 <auth_key 32-32>   sha <auth_key 40-40>] priv [none   des <priv_key 32-32> ]}]}
delete snmp user	<username 32>
show snmp user	
create snmp view	<view_name 32> <oid> view_type [included   excluded]
delete snmp view	<view_name 32> [all   oid]
show snmp view	<view_name 32>
create snmp community	<community_string 32> view <view_name 32> [read_only   read_write]
delete snmp community	<community_string 32>
show snmp community	<community_string 32>
config snmp engineID	<snmp_engineID>
show snmp engineID	

Command	Parameters
create snmp group	<groupname 32> {v1   v2c   v3 [noauth_nopriv   auth_nopriv   auth_priv ]} {read_view <view_name 32>   write_view <view_name 32>   notify_view <view_name 32>}
delete snmp group	<groupname 32>
show snmp groups	
create snmp host	<ipaddr> {v1   v2c   v3 [noauth_nopriv   auth_nopriv   auth_priv]} <auth_string 32>
delete snmp host	<ipaddr>
show snmp host	<ipaddr>
create trusted_host	<ipaddr>
delete trusted_host	<ipaddr>
show trusted_host	<ipaddr>
enable snmp traps	
enable snmp authenticate_traps	
disable snmp traps	
disable snmp authenticate_traps	
config snmp system contact	<sw_contact>
config snmp system location	<sw_location>
config snmp system name	<sw_name>
enable rmon	
disable rmon	

Each command is listed, in detail, in the following sections.

### create snmp user

Purpose	Used to create a new SNMP user and adds the user to an SNMP group that is also created by this command.
Syntax	<b>create snmp user &lt;username 32&gt; &lt;groupname 32&gt; {encrypted [by_password auth [md5 &lt;auth_password 8-16&gt;   sha &lt;auth_password 8-20&gt;] priv [none   des &lt;priv_password 8-16&gt; ]   by_key auth [md5 &lt;auth_key 32-32&gt;  sha &lt;auth_key 40-40&gt;] priv [none   des &lt;priv_key 32-32&gt; ]}]}</b>
Description	The <b>create snmp user</b> command creates a new SNMP user and adds the user to an SNMP group that is also created by this command. SNMP ensures:  Message integrity – Ensures that packets have not been tampered with during transit.

**create snmp user**

	<p>Authentication – Determines if an SNMP message is from a valid source.</p> <p>Encryption – Scrambles the contents of messages to prevent it being viewed by an unauthorized source.</p>
Parameters	<p><i>&lt;username 32&gt;</i> – An alphanumeric name of up to 32 characters that will identify the new SNMP user.</p> <p><i>&lt;groupname 32&gt;</i> – An alphanumeric name of up to 32 characters that will identify the SNMP group the new SNMP user will be associated with.</p> <p><i>by_password</i> – Requires the SNMP user to enter a password for authentication and privacy. The password is defined by specifying the <i>auth_password</i> below. This method is recommended.</p> <p><i>by_key</i> - Requires the SNMP user to enter a encryption key for authentication and privacy. The key is defined by specifying the <i>priv_password</i> below. This method is not recommended.</p> <p><i>encrypted</i> – Specifies that the password will be in an encrypted format.</p> <p><i>auth [md5   sha]</i> – Initiate an authentication-level setting session.</p> <ul style="list-style-type: none"> <li>▪ <i>md5</i> – Specifies that the HMAC-MD5-96 authentication level will be used.</li> <li>▪ <i>sha</i> – Specifies that the HMAC-SHA-96 authentication level will be used.</li> </ul> <p><i>&lt;auth_password 8-20&gt;</i> – An alphanumeric sting of between 8 and 20 characters that will be used to authorize the agent to receive packets for the host.</p> <p><i>des &lt;priv_password 8-16&gt;</i> – An alphanumeric string of between 8 and 16 characters that will be used to encrypt the contents of messages the host sends to the agent.</p>
Restrictions	Only administrator-level users can issue this command.

Example usage:

To create an SNMP user on the switch:

```
DGS-3312SR:4#create snmp user dlink default encrypted
by_password auth md5 auth_password priv none
Command: create snmp user dlink default encrypted by_password
auth md5 auth_password priv none

Success.

DGS-3312SR:4#
```

**delete snmp user**

<b>Purpose</b>	Used to remove an SNMP user from an SNMP group and also to delete the associated SNMP group.
<b>Syntax</b>	<b>delete snmp user &lt;username 32&gt;</b>
<b>Description</b>	The <b>delete snmp user</b> command removes an SNMP user from its SNMP group and then deletes the associated SNMP group.
<b>Parameters</b>	<username 32> – An alphanumeric string of up to 32 characters that identifies the SNMP user that will be deleted.
<b>Restrictions</b>	Only administrator-level users can issue this command.

Example usage:

To delete a previously entered SNMP user on the switch:

```
DGS-3312SR:4#delete snmp user dlink
Command: delete snmp user dlink

Success.

DGS-3312SR:4#
```

**show snmp user**

<b>Purpose</b>	Used to display information about each SNMP username in the SNMP group username table.
<b>Syntax</b>	<b>show snmp user</b>
<b>Description</b>	The <b>show snmp user</b> command displays information about each SNMP username in the SNMP group username table.
<b>Parameters</b>	None.
<b>Restrictions</b>	Only administrator-level users can issue this command.

Example usage:

To display the SNMP users currently configured on the switch:

```
DGS-3312SR:4#show snmp user
Command: show snmp user

Username      Group Name    SNMP Version  Auth-Protocol  PrivProtocol
-----
initial       initial       V3            None           None
```

**Total Entries: 1**

**DGS-3312SR:4#**

## create snmp view

Purpose	Used to assign views to community strings to limit which MIB objects and SNMP manager can access.
Syntax	<b>create snmp view &lt;view_name 32&gt; &lt;oid&gt; view_type [included   excluded]</b>
Description	The <b>create snmp view</b> command assigns views to community strings to limit which MIB objects an SNMP manager can access.
Parameters	<p><i>&lt;view_name 32&gt;</i> – An alphanumeric string of up to 32 characters that identifies the SNMP view that will be created.</p> <p><i>&lt;oid&gt;</i> – The object ID that identifies an object tree (MIB tree) that will be included or excluded from access by an SNMP manager.</p> <p><i>included</i> – Include this object in the list of objects that an SNMP manager can access.</p> <p><i>excluded</i> – Exclude this object from the list of objects that an SNMP manager can access.</p>
Restrictions	Only administrator-level users can issue this command.

Example usage:

To create an SNMP view:

```
DGS-3312SR:4#create snmp view dlinkview 1.3.6 view_type included
Command: create snmp view dlinkview 1.3.6 view_type included
```

```
Success.
```

```
DGS-3312SR:4#
```

## delete snmp view

Purpose	Used to remove an SNMP view entry previously created on the switch.
Syntax	<b>delete snmp view &lt;view_name 32&gt; [all   &lt;oid&gt;]</b>
Description	The <b>delete snmp view</b> command is used to remove an SNMP view previously created on the switch.
Parameters	<i>&lt;view_name 32&gt;</i> – An alphanumeric string of up to 32 characters that identifies the SNMP view to be deleted.

**delete snmp view**

that identifies the SNMP view to be deleted.

*all* – Specifies that all of the SNMP views on the switch will be deleted.

*<oid>* – The object ID that identifies an object tree (MIB tree) that will be deleted from the switch.

Restrictions Only administrator-level users can issue this command.

Example usage:

To delete a previously configured SNMP view from the switch:

```
DGS-3312SR:4#delete snmp view dlinkview all
Command: delete snmp view dlinkview all

Success.

DGS-3312SR:4#
```

**show snmp view**

Purpose Used to display an SNMP view previously created on the switch.

Syntax **show snmp view {<view\_name 32>}**

Description The **show snmp view** command displays an SNMP view previously created on the switch.

Parameters *<view\_name 32>* – An alphanumeric string of up to 32 characters that identifies the SNMP view that will be displayed.

Restrictions None.

Example usage:

To display SNMP view configuration:

```
DGS-3312SR:4#show snmp view
Command: show snmp view

Vacm View Table Settings
View Name          Subtree          View Type
-----
ReadView           1                Included
WriteView          1                Included
NotifyView         1.3.6            Included
restricted         1.3.6.1.2.1.1   Included
restricted         1.3.6.1.2.1.11  Included
restricted         1.3.6.1.6.3.10.2.1 Included
restricted         1.3.6.1.6.3.11.2.1 Included
restricted         1.3.6.1.6.3.15.1.1 Included
```

<b>CommunityView</b>	<b>1</b>	<b>Included</b>
<b>CommunityView</b>	<b>1.3.6.1.6.3</b>	<b>Excluded</b>
<b>CommunityView</b>	<b>1.3.6.1.6.3.1</b>	<b>Included</b>
<b>Total Entries: 11</b>		
<b>DGS-3312SR:4#</b>		

## create snmp community

Purpose	<p>Used to create an SNMP community string to define the relationship between the SNMP manager and an agent. The community string acts like a password to permit access to the agent on the switch. One or more of the following characteristics can be associated with the community string:</p> <p>An Access List of IP addresses of SNMP managers that are permitted to use the community string to gain access to the switch's SNMP agent.</p> <p>An MIB view that defines the subset of all MIB objects that will be accessible to the SNMP community.</p> <p>Read write or read-only level permission for the MIB objects accessible to the SNMP community.</p>
Syntax	<b>create snmp community &lt;community_string 32&gt; view &lt;view_name 32&gt; [read_only   read_write]</b>
Description	The <b>create snmp community</b> command is used to create an SNMP community string and to assign access-limiting characteristics to this community string.
Parameters	<p><i>&lt;community_string 32&gt;</i> – An alphanumeric string of up to 32 characters that is used to identify members of an SNMP community. This string is used like a password to give remote SNMP managers access to MIB objects in the switch's SNMP agent.</p> <p><i>&lt;view_name 32&gt;</i> – An alphanumeric string of up to 32 characters that is used to identify the group of MIB objects that a remote SNMP manager is allowed to access on the switch.</p> <p><i>read_only</i> – Specifies that SNMP community members using the community string created with this command can only read the contents of the MIBs on the switch.</p> <p><i>read_write</i> – Specifies that SNMP community members using the community string created with this command can read from and write to the contents of the MIBs on the switch.</p>
Restrictions	Only administrator-level users can issue this command.

Example usage:

To create the SNMP community string "dlink:"

```
DGS-3312SR:4#create snmp community dlink view ReadView read_write
Command: create snmp community dlink view ReadView read_write
```

```
Success.
```

```
DGS-3312SR:4#
```

## delete snmp community

Purpose	Used to remove a specific SNMP community string from the switch.
Syntax	<b>delete snmp community &lt;community_string 32&gt;</b>
Description	The <b>delete snmp community</b> command is used to remove a previously defined SNMP community string from the switch.
Parameters	<i>&lt;community_string 32&gt;</i> – An alphanumeric string of up to 32 characters that is used to identify members of an SNMP community. This string is used like a password to give remote SNMP managers access to MIB objects in the switch’s SNMP agent.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To delete the SNMP community string “dlink:”

```
DGS-3312SR:4#delete snmp community dlink
```

```
Command: delete snmp community dlink
```

```
Success.
```

```
DGS-3312SR:4#
```

## show snmp community

Purpose	Used to display SNMP community strings configured on the switch.
Syntax	<b>show snmp community {&lt;community_string 32&gt;}</b>
Description	The <b>show snmp community</b> command is used to display SNMP community strings that are configured on the switch.
Parameters	<i>&lt;community_string 32&gt;</i> – An alphanumeric string of up to 32 characters that is used to identify members of an SNMP community. This string is used like a password to give remote SNMP managers access to MIB objects in the switch’s SNMP

**show snmp community**

```

agent.
Restrictions      None.

```

Example usage:

To display the currently entered SNMP community strings:

```

DGS-3312SR:4#show snmp community
Command: show snmp community

SNMP Community Table
Community Name      View Name           Access Right
-----
dlink               ReadView            read_write
private            CommunityView       read_write
public             CommunityView       read_only

Total Entries: 3

DGS-3312SR:4#

```

**config snmp engineID**

Purpose	Used to configure a name for the SNMP engine on the switch.
Syntax	<b>config snmp engineID &lt;snmp_engineID&gt;</b>
Description	The <b>config snmp engineID</b> command configures a name for the SNMP engine on the switch.
Parameters	<snmp_engineID> – An alphanumeric string that will be used to identify the SNMP engine on the switch.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To give the SNMP agent on the switch the name “0035636666”

```

DGS-3312SR:4#config snmp engineID 0035636666
Command: config snmp engineID 0035636666

Success.

```

```
DGS-3312SR:4#
```

## show snmp engineID

Purpose	Used to display the identification of the SNMP engine on the switch.
Syntax	<b>show snmp engineID</b>
Description	The <b>show snmp engineID</b> command displays the identification of the SNMP engine on the switch.
Parameters	None.
Restrictions	None.

Example usage:

To display the current name of the SNMP engine on the switch:

```
DGS-3312SR:4#show snmp engineID
```

```
Command: show snmp engineID
```

```
SNMP Engine ID : 0035636666
```

```
DGS-3312SR:4#
```

## create snmp group

Purpose	Used to create a new SNMP group, or a table that maps SNMP users to SNMP views.
Syntax	<b>create snmp group &lt;groupname 32&gt; [v1   v2c   v3 [noauth_nopriv   auth_nopriv   auth_priv]] {read_view &lt;view_name 32&gt;   write_view &lt;view_name 32&gt;   notify_view &lt;view_name 32&gt;}</b>
Description	The <b>create snmp group</b> command creates a new SNMP group, or a table that maps SNMP users to SNMP views.
Parameters	<p><i>&lt;groupname 32&gt;</i> – An alphanumeric name of up to 32 characters that will identify the SNMP group the new SNMP user will be associated with.</p> <p><i>v1</i> – Specifies that SNMP version 1 will be used. The Simple Network Management Protocol (SNMP), version 1, is a network management protocol that provides a means to monitor and control network devices.</p> <p><i>v2c</i> – Specifies that SNMP version 2c will be used. The SNMP v2c supports both centralized and distributed network management strategies. It includes improvements in the Structure of Management Information (SMI) and adds some security</p>

**create snmp group**

features.

*v3* – Specifies that the SNMP version 3 will be used. SNMP v3 provides secure access to devices through a combination of authentication and encrypting packets over the network. SNMP v3 adds:

- Message integrity – Ensures that packets have not been tampered with during transit.
- Authentication – Determines if an SNMP message is from a valid source.
- Encryption – Scrambles the contents of messages to prevent it being viewed by an unauthorized source.

*noauth\_nopriv* – Specifies that there will be no authorization and no encryption of packets sent between the switch and a remote SNMP manager.

*auth\_nopriv* – Specifies that authorization will be required, but there will be no encryption of packets sent between the switch and a remote SNMP manager.

*auth\_priv* – Specifies that authorization will be required, and that packets sent between the switch and a remote SNMP manager will be encrypted.

*read\_view* – Specifies that the SNMP group being created can request SNMP messages.

*write\_view* – Specifies that the SNMP group being created has write privileges.

*<view\_name 32>* – An alphanumeric string of up to 32 characters that is used to identify the group of MIB objects that a remote SNMP manager is allowed to access on the switch.

*notify\_view* – Specifies that the SNMP group being created can receive SNMP trap messages generated by the switch's SNMP agent.

**Restrictions**

Only administrator-level users can issue this command.

Example usage:

To create an SNMP group named “sg1:”

```
DGS-3312SR:4#create snmp group sg1 v3 noauth_nopriv read_view v1
write_view v1 notify_view v1
Command: create snmp group sg1 v3 noauth_nopriv read_view v1
write_view v1 notify_view v1
Success.
```

```
DGS-3312SR:4#
```

## delete snmp group

Purpose	Used to remove an SNMP group from the switch.
Syntax	<b>delete snmp group &lt;groupname 32&gt;</b>
Description	The <b>delete snmp group</b> command is used to remove an SNMP group from the switch.
Parameters	<groupname 32> – An alphanumeric name of up to 32 characters that will identify the SNMP group to be deleted.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To delete the SNMP group named “sg1”.

```
DGS-3312SR:4#delete snmp group sg1
Command: delete snmp group sg1

Success.

DGS-3312SR:4#
```

## show snmp groups

Purpose	Used to display the group-names of SNMP groups currently configured on the switch. The security model, level, and status of each group are also displayed.
Syntax	<b>show snmp groups</b>
Description	The <b>show snmp groups</b> command displays the group-names of SNMP groups currently configured on the switch. The security model, level, and status of each group are also displayed.
Parameters	None.
Restrictions	None.

Example usage:

To display the currently configured SNMP groups on the switch:

```
DGS-3312SR:4#show snmp groups
Command: show snmp groups

Vacm Access Table Settings

Group Name      : Group3
```

```

ReadView Name      : ReadView
WriteView Name     : WriteView
Notify View Name   : NotifyView
Security Model     : SNMPv3
Security Level     : NoAuthNoPriv

```

```

Group Name        : Group4
ReadView Name     : ReadView
WriteView Name    : WriteView
Notify View Name  : NotifyView
Security Model    : SNMPv3
Security Level    : authNoPriv

```

```

Group Name        : Group5
ReadView Name     : ReadView
WriteView Name    : WriteView
Notify View Name  : NotifyView
Security Model    : SNMPv3
Security Level    : authNoPriv

```

Total Entries: 4

DGS-3312SR:4#

## create snmp host

Purpose	Used to create a recipient of SNMP traps generated by the switch's SNMP agent.
Syntax	<b>create snmp host &lt;ipaddr&gt; [v1   v2c   v3 [noauth_nopriv   auth_nopriv   auth_priv] &lt;auth_string 32&gt;]</b>
Description	The <b>create snmp host</b> command creates a recipient of SNMP traps generated by the switch's SNMP agent.
Parameters	<p><i>&lt;ipaddr&gt;</i> – The IP address of the remote management station that will serve as the SNMP host for the switch.</p> <p><i>v1</i> – Specifies that SNMP version 1 will be used. The Simple Network Management Protocol (SNMP), version 1, is a network management protocol that provides a means to monitor and control network devices.</p> <p><i>v2c</i> – Specifies that SNMP version 2c will be used. The SNMP v2c supports both centralized and distributed network management strategies. It includes improvements in the Structure of Management Information (SMI) and adds some security features.</p> <p><i>v3</i> – Specifies that the SNMP version 3 will be used. SNMP v3 provides secure access to devices through a combination of authentication and encrypting packets over the network. SNMP v3 adds:</p>

## create snmp host

- Message integrity – Ensures that packets have not been tampered with during transit.
- Authentication – Determines if an SNMP message is from a valid source.
- Encryption – Scrambles the contents of messages to prevent it being viewed by an unauthorized source.

*noauth\_nopriv* – Specifies that there will be no authorization and no encryption of packets sent between the switch and a remote SNMP manager.

*auth\_nopriv* – Specifies that authorization will be required, but there will be no encryption of packets sent between the switch and a remote SNMP manager.

*auth\_priv* – Specifies that authorization will be required, and that packets sent between the switch and a remote SNMP manager will be encrypted.

*<auth\_sting 32>* – An alphanumeric string used to authorize a remote SNMP manager to access the switch's SNMP agent.

### Restrictions

Only administrator-level users can issue this command.

Example usage:

To create an SNMP host to receive SNMP messages:

```
DGS-3312SR:4#create snmp host 10.48.74.100 v3 auth_priv public
Command: create snmp host 10.48.74.100 v3 auth_priv public

Success.

DGS-3312SR:4#
```

## delete snmp host

Purpose	Used to remove a recipient of SNMP traps generated by the switch's SNMP agent.
Syntax	<b>delete snmp host &lt;ipaddr&gt;</b>
Description	The <b>delete snmp host</b> command deletes a recipient of SNMP traps generated by the switch's SNMP agent.
Parameters	<i>&lt;ipaddr&gt;</i> – The IP address of a remote SNMP manager that will receive SNMP traps generated by the switch's SNMP agent.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To delete an SNMP host entry:

```
DGS-3312SR:4#delete snmp host 10.48.74.100
Command: delete snmp host 10.48.74.100

Success.

DGS-3312SR:4#
```

## show snmp host

Purpose	Used to display the recipient of SNMP traps generated by the switch's SNMP agent.
Syntax	<b>show snmp host {&lt;ipaddr&gt;}</b>
Description	The <b>show snmp host</b> command is used to display the IP addresses and configuration information of remote SNMP managers that are designated as recipients of SNMP traps that are generated by the switch's SNMP agent.
Parameters	<ipaddr> – The IP address of a remote SNMP manager that will receive SNMP traps generated by the switch's SNMP agent.
Restrictions	None.

Example usage:

To display the currently configured SNMP hosts on the switch:

```
DGS-3312SR:4#show snmp host
Command: show snmp host

SNMP Host Table
Host IP Address  SNMP Version  Community Name/SNMPv3 User Name
-----
10.48.76.23     V2c           private
10.48.74.100    V3  authpriv   public

Total Entries: 2

DGS-3312SR:4#
```

## create trusted\_host

**create trusted\_host**

Purpose	Used to create the trusted host.
Syntax	<b>create trusted_host &lt;ipaddr&gt;</b>
Description	The <b>create trusted_host</b> command creates the trusted host. The switch allows you to specify up to four IP addresses that are allowed to manage the switch via in-band SNMP or TELNET based management software. These IP addresses must be members of the Management VLAN. If no IP addresses are specified, then there is nothing to prevent any IP address from accessing the switch, provided the user knows the Username and Password.
Parameters	<ipaddr> – The IP address of the trusted host.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To create the trusted host:

```
DGS-3312SR:4#create trusted_host 10.48.74.121
Command: create trusted_host 10.48.74.121

Success.

DGS-3312SR:4#
```

**show trusted\_host**

Purpose	Used to display a list of trusted hosts entered on the switch using the <b>create trusted_host</b> command above.
Syntax	<b>show trusted_host</b>
Description	This command is used to display a list of trusted hosts entered on the switch using the <b>create trusted_host</b> command above.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To display the list of trust hosts:

```
DGS-3312SR:4#show trusted_host
Command: show trusted_host

Management Stations
```

**IP Address****10.53.13.94****Total Entries: 1****DGS-3312SR:4#****delete trusted\_host**

Purpose	Used to delete a trusted host entry made using the <b>create trusted_host</b> command above.
Syntax	<b>delete trusted_host &lt;ipaddr&gt;</b>
Description	This command is used to delete a trusted host entry made using the <b>create trusted_host</b> command above.
Parameters	<ipaddr> – The IP address of the trusted host.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To delete a trusted host with an IP address 10.48.74.121:

```
DGS-3312SR:4#delete trusted_host 10.48.74.121
```

```
Command: delete trusted_host 10.48.74.121
```

```
Success.
```

```
DGS-3312SR:4#
```

**enable snmp traps**

Purpose	Used to enable SNMP trap support.
Syntax	<b>enable snmp traps</b>
Description	The <b>enable snmp traps</b> command is used to enable SNMP trap support on the switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To enable SNMP trap support on the switch:

**DGS-3312SR:4#enable snmp traps**

**Command: enable snmp traps**

**Success.**

**DGS-3312SR:4#**

### enable snmp authenticate\_traps

Purpose	Used to enable SNMP authentication trap support.
Syntax	<b>enable snmp authenticate_traps</b>
Description	This command is used to enable SNMP authentication trap support on the Switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To turn on SNMP authentication trap support:

**DGS-3312SR:4#enable snmp authenticate\_traps**

**Command: enable snmp authenticate\_traps**

**Success.**

**DGS-3312SR:4#**

### disable snmp traps

Purpose	Used to disable SNMP trap support on the switch.
Syntax	<b>disable snmp traps</b>
Description	This command is used to disable SNMP trap support on the Switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To prevent SNMP traps from being sent from the Switch:

**DGS-3312SR:4#disable snmp traps**

**Command: disable snmp traps**

**Success.**

**DGS-3312SR:4#**

## disable snmp authenticate\_traps

Purpose	Used to disable SNMP authentication trap support.
Syntax	<b>disable snmp authenticate_traps</b>
Description	This command is used to disable SNMP authentication support on the Switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To disable the SNMP authentication trap support:

```
DGS-3312SR:4#disable snmp authenticate_traps
Command: disable snmp authenticate_traps

Success.

DGS-3312SR:4#
```

## config snmp system\_contact

Purpose	Used to enter the name of a contact person who is responsible for the switch.
Syntax	<b>config snmp system_contact{&lt;sw_contact&gt;}</b>
Description	The <b>config snmp system_contact</b> command is used to enter the name and/or other information to identify a contact person who is responsible for the switch. A maximum of 255 character can be used.
Parameters	<sw_contact> - A maximum of 255 characters is allowed. A NULL string is accepted if there is no contact.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure the switch contact to "MIS Department II":

```
DGS-3312SR:4#config snmp system_contact MIS Department II
Command: config snmp system_contact MIS Department II
```

```
Success.
```

```
DGS-3312SR:4#
```

## config snmp system\_location

Purpose	Used to enter a description of the location of the switch.
Syntax	<b>config snmp system_location {&lt;sw_location&gt;}</b>
Description	The <b>config snmp system_location</b> command is used to enter a description of the location of the switch. A maximum of 255 characters can be used.
Parameters	<sw_location> - A maximum of 255 characters is allowed. A NULL string is accepted if there is no location desired.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure the switch location for “HQ 5F”:

```
DGS-3312SR:4#config snmp system_location HQ 5F
Command: config snmp system_location HQ 5F
```

```
Success.
```

```
DGS-3312SR:4#
```

## config snmp system\_name

Purpose	Used to configure the name for the switch.
Syntax	<b>config snmp system_name {&lt;sw_name&gt;}</b>
Description	The <b>config snmp system_name</b> command configures the name of the switch.
Parameters	<sw_name> - A maximum of 255 characters is allowed. A NULL string is accepted if no name is desired.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure the switch name for “**DGS-3312SR Stackable Switch**”:

```
DGS-3312SR:4#config snmp system_name DGS-3312SR Stackable Switch
Command: config snmp system_name DGS-3312SR Stackable Switch

Success.

DGS-3312SR:4#
```

<b>enable rmon</b>	
Purpose	Used to enable RMON on the switch.
Syntax	<b>enable rmon</b>
Description	This command is used, in conjunction with the <b>disable rmon</b> command below, to enable and disable remote monitoring (RMON) on the switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To enable RMON:

```
DGS-3312SR:4#enable rmon
Command: enable rmon

Success.

DGS-3312SR:4#
```

<b>disable rmon</b>	
Purpose	Used to disable RMON on the switch.
Syntax	<b>disable rmon</b>
Description	This command is used, in conjunction with the <b>enable rmon</b> command above, to enable and disable remote monitoring (RMON) on the switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To disable RMON:

```
DGS-3312SR:4#disable rmon
```

```
Command: disable rmon
```

```
Success.
```

```
DGS-3312SR:4#
```

## SWITCH UTILITY COMMANDS

The switch utility commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
download	[ firmware <ipaddr> <path_filename 64> {unit [all   master   <unitid 1-13>]}   configuration <ipaddr> <path_filename 64> {increment} ]
upload	[ configuration   log ] <ipaddr> <path_filename 64> ]
ping	<ipaddr> {times <value 1-255>} {timeout <sec 1-99>}
traceroute	<ipaddr> {ttl <value 1-60>   port <value 30000-64900>   timeout <sec 1-65535>   probe <value <1-9>

Each command is listed, in detail, in the following sections.

### download

Purpose	Used to download and install new firmware or a switch configuration file from a TFTP server.
Syntax	<b>download [ firmware &lt;ipaddr&gt; &lt;path_filename 64&gt; {unit [all   master   &lt;unitid 1-13&gt;]}   configuration &lt;ipaddr&gt; &lt;path_filename 64&gt; {increment} ]</b>
Description	This command is used to download a new firmware or a switch configuration file from a TFTP server.
Parameters	<p><i>firmware</i> – Download and install new firmware on the switch from a TFTP server.</p> <p><i>configuration</i> - Download a switch configuration file from a TFTP server.</p> <p><i>unit [all   &lt;unitid 1-13&gt;]</i> – <i>all</i> specifies all units (switches), <i>&lt;unitid&gt;</i> is the unit ID of the switch that will receive the download.</p> <p><i>master</i> – specifies the master switch in a switch stack.</p> <p><i>&lt;ipaddr&gt;</i> – The IP address of the TFTP server.</p> <p><i>&lt;path_filename&gt;</i> – The DOS path and filename of the firmware or switch configuration file on a TFTP server. For example, C:\3226S.had.</p> <p><i>increment</i> – Allows the download of a partial switch configuration file. This allows a file to be downloaded that will change only the switch parameters explicitly stated in the configuration file. All other switch parameters will remain unchanged.</p>
Restrictions	The TFTP server must be on the same IP subnet as the switch. Only administrator-level users can issue this command.

Example usage:

To download a configuration file:

```
DGS-3312SR:4#download configuration 10.48.74.121 c:\cfg\setting.txt
Command: download configuration 10.48.74.121 c:\cfg\setting.txt

Connecting to server..... Done.
Download configuration..... Done.

DGS-3312SR:4#
```

<b>upload</b>	
Purpose	Used to upload the current switch settings or the switch history log to a TFTP server.
Syntax	<b>upload [ configuration   log ] &lt;ipaddr&gt; &lt;path_filename 64&gt; ]</b>
Description	This command is used to upload either the switch's current settings or the switch's history log to a TFTP server.
Parameters	<p><i>configuration</i> – Specifies that the switch's current settings will be uploaded to the TFTP server.</p> <p><i>log</i> – Specifies that the switch's current log will be uploaded to the TFTP server.</p> <p><i>&lt;ipaddr&gt;</i> – The IP address of the TFTP server. The TFTP server must be on the same IP subnet as the switch.</p> <p><i>&lt;path_filename 64&gt;</i> – Specifies the location of the switch configuration file on the TFTP server. This file will be replaced by the uploaded file from the switch.</p>
Restrictions	The TFTP server must be on the same IP subnet as the switch. Only administrator-level users can issue this command.

Example usage:

To upload a configuration file:

```
DGS-3312SR:4#upload configuration 10.48.74.121 c:\cfg\log.txt
Command: upload configuration 10.48.74.121 c:\cfg\log.txt

Connecting to server..... Done.
Upload configuration.....Done.

DGS-3312SR:4#
```

**ping**

Purpose	Used to test the connectivity between network devices.
Syntax	<b>ping &lt;ipaddr&gt; {times &lt;value 1-255&gt;} {timeout &lt;sec 1-99&gt;}</b>
Description	The ping command sends Internet Control Message Protocol (ICMP) echo messages to a remote IP address. The remote IP address will then “echo” or return the message. This is used to confirm connectivity between the switch and the remote device.
Parameters	<p><i>&lt;ipaddr&gt;</i> - Specifies the IP address of the host.</p> <p><i>times &lt;value 1-255&gt;</i> - The number of individual ICMP echo messages to be sent. The maximum value is 255. The default is 0.</p> <p><i>timeout &lt;sec 1-99&gt;</i> - Defines the time-out period while waiting for a response from the remote device. A value of 1 to 99 seconds can be specified. The default is 1 second.</p> <p>Pinging an IP address without the <i>times</i> parameter will ping the target device an infinite amount of times.</p>
Restrictions	Only administrator-level users can issue this command.

Example usage:

To ping the IP address 10.48.74.121 four times:

```
DGS-3312SR:4#ping 10.48.74.121 times 4
```

```
Command: ping 10.48.74.121
```

```
Reply from 10.48.74.121, time<10ms
```

```
Ping statistics for 10.48.74.121
```

```
Packets: Sent =4, Received =4, Lost =0
```

```
DGS-3312SR:4#
```

**traceroute**

Purpose	Used to trace the routed path between the switch and a destination endstation.
Syntax	<b>&lt;ipaddr&gt; {ttl &lt;value 1-60&gt;   port &lt;value 30000-64900&gt;   timeout &lt;sec 1-65535&gt;   probe &lt;value &lt;1-9&gt;</b>
Description	The <b>traceroute</b> command allows you to trace a route between the switch and a give host on the network.

**traceroute**

Parameters	<p><i>&lt;ipaddr&gt;</i> - Specifies the IP address of the host.</p> <p><i>ttl &lt;value 1-60&gt;</i> - The time to live value of the trace route request. This is the maximum number of routers the traceroute command will cross while seeking the network path between two devices.</p> <p><i>port &lt;value 30000-64900&gt;</i> The port number. Must be above 1024. The value range is from 30000 to 64900 .</p> <p><i>timeout &lt;sec 1-65535&gt;</i>- Defines the time-out period while waiting for a response from the remote device. The user may choose an entry between 1 and 65535 seconds.</p> <p><i>probe &lt;value 1-9&gt;</i> - The probe value is the number of times the switch will send probe packets to the next hop on the intended traceroute path. The default is 1.</p>
Restrictions	None.

Example usage:

To trace the routed path between the switch and 10.48.74.121.

```
DGS-3312SR:4#traceroute 10.48.74.121 probe 3
```

```
Command: traceroute 10.48.74.121 probe 3
```

```
1 <10ms 10.254.254.251
```

```
2 <10ms 10.55.25.35
```

```
3 <10ms 10.22.35.1
```

```
DGS-3312SR:4#
```

## NETWORK MONITORING COMMANDS

The network monitoring commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
show packet ports	<portlist>
show error ports	<portlist>
show utilization	[cpu   unit_id <int>]
clear counters	ports <portlist>
clear log	
show log	index <value>
enable syslog	
disable syslog	
show syslog	
create syslog host	<index 1-4> ipaddress <ipaddr> {severity [informational   warning   all]   facility [local0   local1   local2   local3   local4   local5   local6   local7]   udp_port <udp_port_number>   ipaddress <ipaddr>   state [enable   disable]}
config syslog host	[all   <index 1-4>] {severity [informational   warning   all]   facility [local0   local1   local2   local3   local4   local5   local6   local7]   udp_port <udp_port_number>   ipaddress <ipaddr>   state [enable   disable]}
delete syslog host	[<index 1-4   all > ]
show syslog host	[<index 1-4>]

Each command is listed, in detail, in the following sections.



**NOTE:** As a stand-alone switch or as a master switch in a switch stack, the switch number will be referred to as 15 for all configurations, graphs and tables.

### show packet ports

Purpose	Used to display statistics about the packets sent and received by the switch.
Syntax	<b>show packet ports &lt;portlist&gt;</b>
Description	This command is used to display statistics about packets sent and received by ports specified in the port list.
Parameters	<portlist> – Specifies a range of ports to be displayed. The port list is specified by listing the lowest switch number and the beginning

**show packet ports**

port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

Restrictions                      None.

Example usage:

To display the packets analysis for port 7 of module 2:

```
DGS-3312SR:4#show packet port 2:7
```

Port number : 2:7

Frame Size	Frame Counts	Frames/sec	Frame Type	Total	Total/sec
-----	-----	-----	-----	-----	-----
64	3275	10	RX Bytes	408973	1657
65-127	755	10	RX Frames	4395	19
128-255	316	1			
256-511	145	0	TX Bytes	7918	178
512-1023	15	0	TX Frames	111	2
1024-1518	0	0			
Unicast RX	152	1			
Multicast RX	557	2			
Broadcast RX	3686	16			

CTRL+C ESC q Quit SPACE n Next Page p Previous Page r Refresh

**show error ports**

Purpose	Used to display the error statistics for a range of ports.
Syntax	<b>show error ports &lt;portlist&gt;</b>
Description	This command will display all of the packet error statistics collected and logged by the switch for a given port list.
Parameters	<portlist> – Specifies a range of ports to be displayed. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash.

## show error ports

For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

Restrictions                      None.

Example usage:

To display the errors of the port 3 of module 1:

### DGS-3312SR:4#show errors port 1:3

Port number 1:3

Error Type	RX Frames	Error Type	TX Frames
-----	-----	-----	-----
CRC Error	19	Excessive Deferral	0
Undersize	0	CRC Error	0
Oversize	0	Late Collision	0
Fragment	0	Excessive Collision	0
Jabber	11	Single Collision	0
Drop Pkts	20837	Collision	0

CTRL+C ESC q Quit SPACE n Next Page p Previous Page r Refresh

## show utilization

Purpose	Used to display real-time port and cpu utilization statistics.
Syntax	<b>show utilization [cpu   unit_id &lt;int&gt;]</b>
Description	This command will display the real-time port and cpu utilization statistics for the switch.
Parameters	<p><i>cpu</i> – Entering this parameter will display the current cpu utilization of the switch, as a percentage.</p> <p><i>unit_id &lt;int&gt;</i> - Entering this parameter, along with the appropriate switch number, will display the current utilization of all ports on the switch of a switch stack.</p>
Restrictions	None.

Example usage:

To display the port utilization statistics:

```

DGS-3312SR:4#show utilization unit_id 1

Port    TX/sec    RX/sec    Util    Port    TX/sec    RX/sec    Util
----    -
1:1     0         0         0
1:2     0         0         0
1:3     0         0         0
1:4     0         0         0
1:5     0         0         0
1:6     0         0         0
1:7     0         0         0
1:8     0         0         0
1:9     0         0         0
1:10    0         0         0
1:11    0         0         0
1:12    0         0         0

CTRL+C ESC q Quit SPACE n Next Page p Previous Page r Refresh

```

To display the current cpu utilization:

```

DGS-3312SR:4#show utilization cpu

Command: show utilization cpu

CPU utilization :

-----

Five seconds - 15%    One minute - 25%    Five minutes - 14%

DGS-3312SR:4#

```

## clear counters

Purpose	Used to clear the switch's statistics counters.
Syntax	<b>clear counters {ports &lt;portlist&gt;}</b>
Description	This command will clear the counters used by the switch to compile statistics.
Parameters	<portlist> – Specifies a range of ports to be configured. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2,

**clear counters**

port 4 – in numerical order.

Restrictions Only administrator-level users can issue this command.

Example usage:

To clear the counters:

```
DGS-3312SR:4#clear counters ports 2:7-2:9
```

```
Command: clear counters ports 2:7-2:9
```

```
Success.
```

```
DGS-3312SR:4#
```

**clear log**

Purpose Used to clear the switch's history log.

Syntax **clear log**

Description This command will clear the switch's history log.

Parameters None.

Restrictions Only administrator-level users can issue this command.

Example usage:

To clear the log information:

```
DGS-3312SR:4#clear log
```

```
Command: clear log
```

```
Success.
```

```
DGS-3312SR:4#
```

**show log**

Purpose Used to display the switch history log.

Syntax **show log {index <value>}**

Description This command will display the contents of the switch's history log.

**show log**

Parameters	<i>index &lt;value&gt;</i> – Enter a value that corresponds to an entry made in the log. Multiple entries may be made in the form of <i>x-x</i> where <i>x</i> is the number of an entry in the log. The smallest number (and therefore the earlier entry) will be first.
Restrictions	None.

Example usage:

To display the switch history log:

```
DGS-3312SR:4#show log index 1-4
Command: show log index 1-4

Index  Time      Log Text
-----  -
4      01:54:53  Port 1:13 link up, 100Mbps FULL duplex
3      01:54:53  Spanning Tree Protocol is enabled
2      01:54:53  Unit 1, System started up
1      06:06:09  Spanning Tree Protocol is disabled

DGS-3312SR:4#
```

**enable syslog**

Purpose	Used to enable the system log to be sent to a remote host.
Syntax	<b>enable syslog</b>
Description	The <b>enable syslog</b> command enables the system log to be sent to a remote host.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To the syslog function on the switch:

```
DGS-3312SR:4#enable syslog
Command: enable syslog

Success.

DGS-3312SR:4#
```

## disable syslog

Purpose	Used to disable the system log function on the switch.
Syntax	<b>disable syslog</b>
Description	The <b>disable syslog</b> command disables the system log function on the switch. After disabling, Syslog entries will no longer be sent to a remote host.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To disable the syslog function on the switch:

```
DGS-3312SR:4#disable syslog
Command: disable syslog

Success.

DGS-3312SR:4#
```

## show syslog

Purpose	Used to display the syslog protocol status as enabled or disabled.
Syntax	<b>show syslog</b>
Description	The <b>show syslog</b> command displays the syslog status as enabled or disabled.
Parameters	None.
Restrictions	None.

Example usage:

To display the current status of the syslog function:

```
DGS-3312SR:4#show syslog
Command: show syslog

Syslog Global State: Enabled

DGS-3312SR:4#
```

## create syslog host

Purpose	Used to create a new syslog host.
Syntax	<b>create syslog host &lt;index 1-4&gt; ipaddress &lt;ipaddr&gt; {severity [informational   warning   all] facility [local0   local1   local2   local3   local4   local5   local6   local7]   udp_port&lt;int&gt;   state [enable   disable]}</b>
Description	The <b>create syslog host</b> command is used to create a new syslog host.

## create syslog host

### Parameters

*<index 1-4>* – Specifies that the command will be applied to an index of hosts. There are four available indexes, numbered 1 through 4.

*ipaddress <ipaddr>* – Specifies the IP address of the remote host where syslog messages will be sent.

*severity* – Severity level indicator. These are described in the following:

Bold font indicates that the corresponding severity level is currently supported on the switch.

Numerical Code	Severity
----------------	----------

0	Emergency: system is unusable
---	-------------------------------

1	Alert: action must be taken immediately
---	---

2	Critical: critical conditions
---	-------------------------------

3	Error: error conditions
---	-------------------------

<b>4</b>	<b>Warning: warning conditions</b>
----------	------------------------------------

5	Notice: normal but significant condition
---	--

<b>6</b>	<b>Informational: informational messages</b>
----------	--

7	Debug: debug-level messages
---	-----------------------------

*informational* – Specifies that informational messages will be sent to the remote host. This corresponds to number 6 from the list above.

*warning* – Specifies that warning messages will be sent to the remote host. This corresponds to number 4 from the list above.

*all* – Specifies that all of the currently supported syslog messages that are generated by the switch will be sent to the remote host.

## create syslog host

*facility* – Some of the operating system daemons and processes have been assigned Facility values. Processes and daemons that have not been explicitly assigned a Facility may use any of the "local use" facilities or they may use the "user-level" Facility. Those Facilities that have been designated are shown in the following: Bold font indicates the facility values that the switch currently supports.

Numerical Code	Facility
0	kernel messages
1	user-level messages
2	mail system
3	system daemons
4	security/authorization messages
5	messages generated internally by <b>syslog</b>
6	line printer subsystem
7	network news subsystem
8	UUCP subsystem
9	clock daemon
10	security/authorization messages
11	FTP daemon
12	NTP subsystem
13	log audit
14	log alert
15	clock daemon

**create syslog host**

- 16      local use 0 (local0)**
- 17      local use 1 (local1)**
- 18      local use 2 (local2)**
- 19      local use 3 (local3)**
- 20      local use 4 (local4)**
- 21      local use 5 (local5)**
- 22      local use 6 (local6)**
- 23      local use 7 (local7)**

*local0* – Specifies that local use 0 messages will be sent to the remote host. This corresponds to number 16 from the list above.

*local1* – Specifies that local use 1 messages will be sent to the remote host. This corresponds to number 17 from the list above.

*local2* – Specifies that local use 2 messages will be sent to the remote host. This corresponds to number 18 from the list above.

*local3* – Specifies that local use 3 messages will be sent to the remote host. This corresponds to number 19 from the list above.

*local4* – Specifies that local use 4 messages will be sent to the remote host. This corresponds to number 20 from the list above.

*local5* – Specifies that local use 5 messages will be sent to the remote host. This corresponds to number 21 from the list above.

*local6* – Specifies that local use 6 messages will be sent to the remote host. This corresponds to number 22 from the list above.

*local7* – Specifies that local use 7 messages will be sent to the remote host. This corresponds to number 23 from the list above.

*udp\_port <int>* – Specifies the UDP port number that the syslog protocol will use to send messages to the remote host.

*state [enable | disable]* – Allows the sending of syslog messages to the remote host, specified above, to be enabled and disabled.

**Restrictions**

Only administrator-level users can issue this command.

Example usage:

To create syslog host:

```
DGS-3312SR:4#create syslog host 1 ipaddress 10.53.13.200
severity all facility local0 state enable
```

```
Command: create syslog host 1 ipaddress 10.53.13.200 severity
all facility local0 state enable
```

```
Success.
```

```
DGS-3312SR:4#
```

## config syslog host

Purpose	Used to configure the syslog protocol to send system log data to a remote host.
Syntax	<b>config syslog host</b> [all   <index 1-4>] {severity [informational   warning   all]   facility [local0   local1   local2   local3   local4   local5   local6   local7]   udp_port<int>   ipaddress <ipaddr>   state [enable   disable]}
Description	The <b>config syslog host</b> command is used to configure the syslog protocol to send system log information to a remote host.

## config syslog host

### Parameters

*all* – Specifies that the command will be applied to all hosts.

*<index 1-4>* – Specifies that the command will be applied to an index of hosts. There are four available indexes, numbered 1 through 4.

*severity* – Severity level indicator. These are described in the following:

Bold font indicates that the corresponding severity level is currently supported on the switch.

Numerical	Severity
-----------	----------

Code	
------	--

0	Emergency: system is unusable
---	-------------------------------

1	Alert: action must be taken immediately
---	---

2	Critical: critical conditions
---	-------------------------------

3	Error: error conditions
---	-------------------------

<b>4</b>	<b>Warning: warning conditions</b>
----------	------------------------------------

5	Notice: normal but significant condition
---	--

<b>6</b>	<b>Informational: informational messages</b>
----------	--

7	Debug: debug-level messages
---	-----------------------------

*informational* – Specifies that informational messages will be sent to the remote host. This corresponds to number 6 from the list above.

*warning* – Specifies that warning messages will be sent to the remote host. This corresponds to number 4 from the list above.

*all* – Specifies that all of the currently supported syslog messages that are generated by the switch will be sent to the remote host.

**config syslog host**

*facility* – Some of the operating system daemons and processes have been assigned Facility values. Processes and daemons that have not been explicitly assigned a Facility may use any of the "local use" facilities or they may use the "user-level" Facility. Those Facilities that have been designated are shown in the following: Bold font indicates the facility values the switch currently supports.

Numerical Code	Facility
0	kernel messages
1	user-level messages
2	mail system
3	system daemons
4	security/authorization messages
5	messages generated internally by syslog
6	line printer subsystem
7	network news subsystem
8	UUCP subsystem
9	clock daemon
10	security/authorization messages
11	FTP daemon
12	NTP subsystem
13	log audit
14	log alert
15	clock daemon

**config syslog host**

- 16      local use 0 (local0)**
- 17      local use 1 (local1)**
- 18      local use 2 (local2)**
- 19      local use 3 (local3)**
- 20      local use 4 (local4)**
- 21      local use 5 (local5)**
- 22      local use 6 (local6)**
- 23      local use 7 (local7)**

*local0* – Specifies that local use 0 messages will be sent to the remote host. This corresponds to number 16 from the list above.

*local1* – Specifies that local use 1 messages will be sent to the remote host. This corresponds to number 17 from the list above.

*local2* – Specifies that local use 2 messages will be sent to the remote host. This corresponds to number 18 from the list above.

*local3* – Specifies that local use 3 messages will be sent to the remote host. This corresponds to number 19 from the list above.

*local4* – Specifies that local use 4 messages will be sent to the remote host. This corresponds to number 20 from the list above.

*local5* – Specifies that local use 5 messages will be sent to the remote host. This corresponds to number 21 from the list above.

*local6* – Specifies that local use 6 messages will be sent to the remote host. This corresponds to number 22 from the list above.

*local7* – Specifies that local use 7 messages will be sent to the remote host. This corresponds to number 23 from the list above.

*udp\_port <int>* – Specifies the UDP port number that the syslog protocol will use to send messages to the remote host.

*ipaddress <ipaddr>* – Specifies the IP address of the remote host where syslog messages will be sent.

*state [enable | disable]* – Allows the sending of syslog messages to the remote host, specified above, to be enabled and disabled.

**Restrictions**

Only administrator-level users can issue this command.

Example usage:

To configure a syslog host:

```
DGS-3312SR:4#config syslog host all severity all facility local0
```

```
Command: config syslog host all severity all facility local0
```

```
Success.
```

```
DGS-3312SR:4#
```

## delete syslog host

Purpose	Used to remove a syslog host, that has been previously configured, from the switch.
Syntax	<b>delete syslog host [&lt;index 1-4&gt;   all]</b>
Description	The <b>delete syslog host</b> command is used to remove a syslog host that has been previously configured from the switch.
Parameters	<p>&lt;index 1-4&gt; – Specifies that the command will be applied to an index of hosts. There are four available indexes, numbered 1 through 4.</p> <p>all – Specifies that the command will be applied to all hosts.</p>
Restrictions	Only administrator-level users can issue this command.

Example usage:

To delete a previously configured syslog host:

```
DGS-3312SR:4#delete syslog host 4
```

```
Command: delete syslog host 4
```

```
Success.
```

```
DGS-3312SR:4#
```

## show syslog host

Purpose	Used to display the syslog hosts currently configured on the switch.
Syntax	<b>show syslog host {&lt;index 1-4&gt;}</b>
Description	The <b>show syslog host</b> command is used to display the syslog hosts that are currently configured on the switch.
Parameters	<index 1-4> – Specifies that the command will be applied to an index of hosts. There are four available indexes, numbered 1 through 4.
Restrictions	None.

Example usage:

To show syslog host information:

```
DGS-3312SR:4#show syslog host
Command: show syslog host

Syslog Global State: Disabled

Host Id  Host IP Address  Severity  Facility  UDP port  Status
-----  -
1        10.1.1.2         All       Local0    514       Disabled
2        10.40.2.3        All       Local0    514       Disabled
3        10.21.13.1       All       Local0    514       Disabled

Total Entries : 3

DGS-3312SR:4#
```

## MULTIPLE SPANNING TREE PROTOCOL (MSTP) COMMANDS

This switch supports three versions of the Spanning Tree Protocol; 802.1d STP, 802.1w Rapid STP and 802.1s MSTP. Multiple Spanning Tree Protocol, or MSTP, is a standard defined by the IEEE community that allows multiple VLANs to be mapped to a single spanning tree instance, which will provide multiple pathways across the network. Therefore, these MSTP configurations will balance the traffic load, preventing wide scale disruptions when a single spanning tree instance fails. This will allow for faster convergences of new topologies for the failed instance. Frames designated for these VLANs will be processed quickly and completely throughout interconnected bridges utilizing either of the three spanning tree protocols (STP, RSTP or MSTP). This protocol will also tag BPDU packets so receiving devices can distinguish spanning tree instances, spanning tree regions and the VLANs associated with them. These instances will be classified by an *instance\_id*. MSTP will connect multiple spanning trees with a Common and Internal Spanning Tree (CIST). The CIST will automatically determine each MSTP region, its maximum possible extent and will appear as one virtual bridge that runs a single spanning tree. Consequentially, frames assigned to different VLANs will follow different data routes within administratively established regions on the network, continuing to allow simple and full processing of frames, regardless of administrative errors in defining VLANs and their respective spanning trees. Each switch utilizing the MSTP on a network will have a single MSTP configuration that will have the following three attributes:

- A configuration name defined by an alphanumeric string of up to 32 characters (defined in the *config stp mst\_config\_id* command as *name <string>*).
- A configuration revision number (named here as a *revision\_level*) and;
- A 4094 element table (defined here as a *vid\_range*) which will associate each of the possible 4094 VLANs supported by the Switch for a given instance.

To utilize the MSTP function on the Switch, three steps need to be taken:

- The Switch must be set to the MSTP setting (*config stp version*).
- VLANs that will be shared must be added to the MSTP Instance ID (*config stp instance\_id*).

The Multiple Spanning Tree Protocol commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
enable stp	
disable stp	
config stp version	[mstp   rstp   stp]
config stp	{maxage <value 6-40>   maxhops <value 1-20>   hellotime <value 1-10>   forwarddelay <value 4-30>  txholdcount <value 1-10>   fbpdu [enable   disable]}
config stp ports	<portlist> {externalCost [auto   <value 1-200000000>]   hellotime <value 1-10>   migrate [yes   no] edge [true   false]   p2p [true   false   auto]   state [enable   disable]}
create stp instance_id	<value 1-15>
config stp instance_id	<value 1-15> [add_vlan   remove_vlan] <vidlist>
delete stp instance_id	<value 1-15>

Command	Parameters
config stp priority	<value 0-61440> instance_id <value 0-15>
config stp mst_config_id	{revision_level <int 0-65535>   name <string>}
config stp mst_ports	<portlist> instance_id <value 0-15> {internalCost [auto   value 1-200000000]   priority <value 0-240>}
show stp	
show stp ports	{<portlist>}
show stp instance_id	{<value 0-15>}
show stp mst_config id	

Each command is listed, in detail, in the following sections.

### enable stp

Purpose	Used to globally enable STP on the Switch.
Syntax	<b>enable stp</b>
Description	This command allows the Spanning Tree Protocol to be globally enabled on the Switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To enable STP, globally, on the Switch:

```
DGS-3312SR:4#enable stp
Command: enable stp

Success.

DGS-3312SR:4#
```

### disable stp

Purpose	Used to globally disable STP on the Switch.
Syntax	<b>disable stp</b>
Description	This command allows the Spanning Tree Protocol to be globally disabled on the Switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To disable STP on the Switch:

```
DGS-3312SR:4#disable stp
```

```
Command: disable stp
```

```
Success.
```

```
DGS-3312SR:4#
```

## config stp version

Purpose	Used to globally set the version of STP on the Switch.
Syntax	<b>config stp version [mstp   rstp   stp]</b>
Description	This command allows the user to choose the version of the spanning tree to be implemented on the Switch.
Parameters	<p><i>mstp</i> – Selecting this parameter will set the Multiple Spanning Tree Protocol (MSTP) globally on the Switch.</p> <p><i>rstp</i> - Selecting this parameter will set the Rapid Spanning Tree Protocol (RSTP) globally on the Switch.</p> <p><i>stp</i> - Selecting this parameter will set the Spanning Tree Protocol (STP) globally on the Switch.</p>
Restrictions	Only administrator-level users can issue this command.

Example usage:

To set the Switch globally for the Multiple Spanning Tree Protocol (MSTP):

```
DGS-3312SR:4#config stp version mstp
```

```
Command: config stp version mstp
```

```
Success.
```

```
DGS-3312SR:4#
```

## config stp

Purpose	Used to setup STP, RSTP and MSTP on the Switch.
Syntax	<b>config stp {maxage &lt;value 6-40&gt;   maxhops &lt;value 1-20&gt;   hellotime &lt;1-10&gt;   forwarddelay &lt;value 4-30&gt;   txholdcount &lt;value 1-10&gt;   fbpdu [enable   disable]}</b>
Description	This command is used to setup the Spanning Tree Protocol (STP) for the entire switch. All commands here will be implemented for

**config stp**

## Parameters

the STP version that is currently set on the Switch.

*maxage* <value 6-40> – This value may be set to ensure that old information does not endlessly circulate through redundant paths in the network, preventing the effective propagation of the new information. Set by the Root Bridge, this value will aid in determining that the Switch has spanning tree configuration values consistent with other devices on the bridged LAN. If the value ages out and a BPDU has still not been received from the Root Bridge, the Switch will start sending its own BPDU to all other switches for permission to become the Root Bridge. If it turns out that your switch has the lowest Bridge Identifier, it will become the Root Bridge. The user may choose a time between 6 and 40 seconds. The default value is 20.

*maxhops* <value 1-20> - The number of hops between devices in a spanning tree region before the BPDU (bridge protocol data unit) packet sent by the Switch will be discarded. Each switch on the hop count will reduce the hop count by one until the value reaches zero. The Switch will then discard the BPDU packet and the information held for the port will age out. The user may set a hop count from 1 to 20. The default is 20.

*hellotime* <value 1-10> – The user may set the time interval between transmission of configuration messages by the root device in STP, or by the designated router in RSTP, thus stating that the Switch is still functioning. A time between 1 and 10 seconds may be chosen, with a default setting of 2 seconds.

In MSTP, the spanning tree is configured by port and therefore, the *hellotime* must be set using the **configure stp ports** command for switches utilizing the Multiple Spanning Tree Protocol.

*forwarddelay* <value 4-30> – The maximum amount of time (in seconds) that the root device will wait before changing states. The user may choose a time between 4 and 30 seconds. The default is 15 seconds.

*txholdcount* <value 1-10> - The maximum number of BPDU Hello packets transmitted per interval. Default value = 3.

*fbpdu* [*enable* | *disable*] – Allows the forwarding of STP BPDU packets from other network devices when STP is disabled on the Switch. The default is *enable*.

## Restrictions

Only administrator-level users can issue this command.

Example usage:

To configure STP with maxage 18 and maxhops of 15:

```
DGS-3312SR:4#config stp maxage 18 maxhops 15
```

```
Command: config stp maxage 18 maxhops 15
```

```
Success.
```

```
DGS-3312SR:4#
```

### config stp ports

Purpose	Used to setup STP on the port level.
Syntax	<b>config stp ports &lt;portlist&gt; {externalCost [auto   &lt;value 1-200000000&gt;]   hellotime &lt;value 1-10&gt;   migrate [yes   no] edge [true   false]   p2p [true   false   auto ]   state [enable   disable]</b>
Description	This command is used to create and configure STP for a group of ports.

## config stp ports

### Parameters

*<portlist>* – Specifies a range of ports to be configured. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

*externalCost* – This defines a metric that indicates the relative cost of forwarding packets to the specified port list. Port cost can be set automatically or as a metric value. The default value is *auto*.

- *auto* – Setting this parameter for the external cost will automatically set the speed for forwarding packets to the specified port(s) in the list for optimal efficiency. Default port cost: 100Mbps port = 200000. Gigabit port = 20000.
- *<value 1-200000000>* - Define a value between 1 and 200000000 to determine the external cost. The lower the number, the greater the probability the port will be chosen to forward packets.

*hellotime <value 1-10>* – The time interval between transmission of configuration messages by the designated port, to other devices on the bridged LAN, thus stating that the Switch is still functioning. The user may choose a time between 1 and 10 seconds. The default is 2 seconds.

*migrate [yes | no]* – Setting this parameter as “yes” will set the ports to send out BPDU packets to other bridges, requesting information on their STP setting. If the Switch is configured for RSTP, the port will be capable to migrate from 802.1d STP to 802.1w RSTP. If the Switch is configured for MSTP, the port is capable of migrating from 802.1d STP to 802.1s MSTP. RSTP and MSTP can coexist with standard STP, however the benefits of RSTP and MSTP are not realized on a port where an 802.1d network connects to an 802.1w or 802.1s enabled network. Migration should be set as *yes* on ports connected to network stations or segments that are capable of being upgraded to 802.1w RSTP or 802.1s MSTP on all or some portion of the segment.

*edge [true | false]* – *true* designates the port as an edge port. Edge ports cannot create loops, however an edge port can lose edge port status if a topology change creates a potential for a loop. An edge port normally should not receive BPDU packets. If a BPDU packet is received it automatically loses edge port status. *false* indicates that the port does not have edge port status.

*p2p [true | false | auto]* – *true* indicates a point-to-point (P2P)

**config stp ports**

shared link. P2P ports are similar to edge ports however they are restricted in that a P2P port must operate in full-duplex. Like edge ports, P2P ports transition to a forwarding state rapidly thus benefiting from RSTP. A p2p value of false indicates that the port cannot have p2p status. *auto* allows the port to have p2p status whenever possible and operate as if the p2p status were *true*. If the port cannot maintain this status (for example if the port is forced to half-duplex operation) the p2p status changes to operate as if the p2p value were *false*. The default setting for this parameter is *auto*.

*state [enable | disable]* – Allows STP to be enabled or disabled for the ports specified in the port list. The default is *enable*.

**Restrictions**

Only administrator-level users can issue this command.

Example usage:

To configure STP with path cost 19, hellotime set to 5 seconds, migration enable, and state enable for ports 1-5 of module 1.

```
DGS-3312SR:4#config stp ports 1:1-1:5 externalCost 19 hellotime
5 migrate yes state enable
```

```
Command: config stp ports 1:1-1:5 externalCost 19 hellotime 5
migrate yes state enable
```

```
Success.
```

```
DGS-3312SR:4#
```

**create stp instance\_id**

Purpose	Used to create a STP instance ID for MSTP.
Syntax	<b>create stp instance_id &lt;value 1-15&gt;</b>
Description	This command allows the user to create a STP instance ID for the Multiple Spanning Tree Protocol. There are 16 STP instances on the Switch (one internal CIST, unchangeable) and the user may create up to 15 instance IDs for the Switch.
Parameters	<value 1-15> - Enter a value between 1 and 15 to identify the Spanning Tree instance on the Switch.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To create a spanning tree instance 2:

```
DGS-3312SR:4#create stp instance_id 2
```

```
Command: create stp instance_id 2
```

```
Success.
```

```
DGS-3312SR:4#
```

## config stp instance\_id

Purpose	Used to add or delete an STP instance ID.
Syntax	<b>config stp instance_id &lt;value 1-15&gt; [add_vlan   remove_vlan] &lt;vidlist&gt;</b>
Description	<p>This command is used to map VIDs (VLAN IDs) to previously configured STP instances on the Switch by creating an <i>instance_id</i>. A STP instance may have multiple members with the same MSTP configuration. There is no limit to the number of STP regions in a network but each region only supports a maximum of 16 spanning tree instances (one unchangeable default entry). VIDs can belong to only one spanning tree instance at a time.</p> <p>Note that switches in the same spanning tree region having the same STP <i>instance_id</i> must be mapped identically, and have the same configuration <i>revision_level</i> number and the same <i>name</i>.</p>
Parameters	<p>&lt;value 1-15&gt; - Enter a number between 1 and 15 to define the <i>instance_id</i>. The Switch supports 16 STP instances with one unchangeable default instance ID set as 0.</p> <ul style="list-style-type: none"> <li>▪ <i>add_vlan</i> – Along with the <i>vid_range &lt;vidlist&gt;</i> parameter, this command will add VIDs to the previously configured STP <i>instance_id</i>.</li> <li>▪ <i>remove_vlan</i> – Along with the <i>vid_range &lt;vidlist&gt;</i> parameter, this command will remove VIDs to the previously configured STP <i>instance_id</i>.</li> <li>▪ <i>&lt;vidlist&gt;</i> – Specify the VID range from configured VLANs set on the Switch. Supported VIDs on the Switch range from ID number 1 to 4094.</li> </ul>
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure instance id 2 to add VID 10:

```
DGS-3312SR:4#config stp instance_id 2 add_vlan 10
Command : config stp instance_id 2 add_vlan 10

Success.

DGS-3312SR:4#
```

Example usage:

To remove VID 10 from instance id 2:

```
DGS-3312SR:4#config stp instance_id 2 remove_vlan 10
Command : config stp instance_id 2 remove_vlan 10

Success.

DGS-3312SR:4#
```

## delete stp instance\_id

Purpose	Used to delete a STP instance ID from the Switch.
Syntax	<b>delete stp instance_id &lt;value 1-15&gt;</b>
Description	This command allows the user to delete a previously configured STP instance ID from the Switch.
Parameters	<value 1-15> - Enter a value between 1 and 15 to identify the Spanning Tree instance on the Switch.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To delete stp instance id 2 from the Switch.

```
DGS-3312SR:4#delete stp instance_id 2
Command: delete stp instance_id 2

Success.

DGS-3312SR:4#
```

**config stp priority**

Purpose	Used to update the STP instance configuration.
Syntax	<b>config stp priority &lt;value 0-61440&gt; instance_id &lt;value 0-15&gt;</b>
Description	This command is used to update the STP instance configuration settings on the Switch. The MSTP will utilize the priority in selecting the root bridge, root port and designated port. Assigning higher priorities to STP regions will instruct the Switch to give precedence to the selected <i>instance_id</i> for forwarding packets. The lower the priority value set, the higher the priority.
Parameters	<p><i>priority &lt;value 0-61440&gt;</i> - Select a value between 0 and 61440 to specify the priority for a specified instance id for forwarding packets. The lower the value, the higher the priority. This entry must be divisible by 4096.</p> <p><i>instance_id &lt;value 0-15&gt;</i> - Enter the value corresponding to the previously configured instance id of which the user wishes to set the priority value. An instance id of 0 denotes the default <i>instance_id</i> (CIST) internally set on the Switch.</p>
Restrictions	Only administrator-level users can issue this command.

Example usage:

To set the priority value for *instance\_id* 2 as 4096:

```
DGS-3312SR:4#config stp priority 4096 instance_id 2
```

```
Command : config stp priority 4096 instance_id 2
```

```
Success.
```

```
DGS-3312SR:4#
```

**config stp mst\_config\_id**

Purpose	Used to update the MSTP configuration identification.
Syntax	<b>config stp mst_config_id {revision_level &lt;int 0-65535&gt;   name &lt;string&gt;}</b>
Description	This command will uniquely identify the MSTP configuration currently configured on the Switch. Information entered here will be attached to BPDU packets as an identifier for the MSTP region to which it belongs. Switches having the same <i>revision_level</i> and <i>name</i> will be considered as part of the same MSTP region.
Parameters	<i>revision_level &lt;int 0-65535&gt;</i> — Enter a number between 0 and 65535 to identify the MSTP region. This value, along with the name will identify the MSTP region configured on the Switch. The default setting is 0.

**config stp mst\_config\_id**

*name* <string> - Enter an alphanumeric string of up to 32 characters to uniquely identify the MSTP region on the Switch. This *name*, along with the *revision\_level* value will identify the MSTP region configured on the Switch. If no *name* is entered, the default name will be the MAC address of the device.

**Restrictions**

Only administrator-level users can issue this command.

Example usage:

To configure the MSTP region of the Switch with *revision\_level* 10 and the *name* "Trinity":

```
DGS-3312SR:4#config stp mst_config_id revision_level 10 name Trinity
```

```
Command : config stp mst_config_id revision_level 10 name Trinity
```

```
Success.
```

```
DGS-3312SR:4#
```

**config stp mst\_ports****Purpose**

Used to update the port configuration for a MSTP instance.

**Syntax**

```
config stp mst_ports <portlist> instance_id <value 0-15>  
{internalCost [auto | <value 1-2000000>] `priority <value 0-  
240>}
```

**Description**

This command will update the port configuration for a STP *instance\_id*. If a loop occurs, the MSTP function will use the port priority to select an interface to put into the forwarding state. Set a higher priority value for interfaces to be selected for forwarding first. In instances where the priority value is identical, the MSTP function will implement the lowest port number into the forwarding state and other interfaces will be blocked. Remember that lower priority values mean higher priorities for forwarding packets.

**Parameters**

*<portlist>* - Specifies a port or range of ports to be configured. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

*instance\_id* <value 0-15> - Enter a numerical value between 0 and 15 to identify the *instance\_id* previously configured on the Switch. An entry of 0 will denote the CIST (Common and Internal Spanning Tree).

*internalCost* – This parameter is set to represent the relative cost of forwarding packets to specified ports when an interface is selected within a STP instance. The default setting is *auto*. There

**config stp mst\_ports**

are two options:

- *auto* – Selecting this parameter for the *internalCost* will set quickest route automatically and optimally for an interface. The default value is derived from the media speed of the interface.
- *value 1-2000000* – Selecting this parameter with a value in the range of 1-2000000 will set the quickest route when a loop occurs. A lower *internalCost* represents a quicker transmission.

*priority <value 0-240>* - Enter a value between 0 and 240 to set the priority for the port interface. A higher priority will designate the interface to forward packets first. A lower number denotes a higher priority.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To designate ports 1 through 5 on module one, with instance ID 2, to have an auto internalCost and a priority of 16:

```
DGS-3312SR:4#config stp mst_config_id ports 1:1-1:5 instance_id
2 internalCost auto priority 16
```

```
Command : config stp mst_config_id ports 1:1-1:5 instance_id 2
internalCost auto priority 16
```

**Success.**

```
DGS-3312SR:4#
```

**show stp**

Purpose	Used to display the Switch's current STP configuration.
Syntax	<b>show stp</b>
Description	This command displays the Switch's current STP configuration.
Parameters	None.
Restrictions	None.

Example usage:

To display the status of STP on the Switch:

**Status 1: STP enabled with STP compatible version**

```
DGS-3312SR:4#show stp
Command: show stp

STP Status          : Enabled
STP Version          : STP Compatible
Max Age              : 20
Hello Time           : 2
Forward Delay        : 15
Max Age              : 20
TX Hold Count        : 3
Forwarding BPDU      : Enabled

DGS-3312SR:4#
```

**Status 2 : STP enabled for RSTP**

```
DGS-3312SR:4#show stp
Command: show stp

STP Status          : Enabled
STP Version          : RSTP
Max Age              : 20
Hello Time           : 2
Forward Delay        : 15
Max Age              : 20
TX Hold Count        : 3
Forwarding BPDU      : Enabled

DGS-3312SR:4#
```

**Status 3 : STP enabled for MSTP**

```
DGS-3312SR:4#show stp
Command: show stp

STP Status          : Enabled
STP Version          : MSTP
Max Age              : 20
Forward Delay        : 15
Max Age              : 20
TX Hold Count        : 3
Forwarding BPDU      : Enabled

DGS-3312SR:4#
```

## show stp ports

Purpose	Used to display the Switch's current <i>instance_id</i> configuration.
Syntax	<b>show stp ports &lt;portlist&gt;</b>

**show stp ports**

Description	This command displays the STP Instance Settings and STP Instance Operational Status currently implemented on the Switch.
Parameters	<i>&lt;portlist&gt;</i> – Specifies a range of ports to be viewed. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.
Restrictions	None.

Example usage:

To show stp ports 1 through 9 on switch one:

```
DGS-3312SR:4#show stp ports 1:1-1:9
Command: show stp ports 1:1-1:9

MSTP Port Information
-----
Port Index      : 1:1 ,      Hello Time: 2 /2 ,      Port STP enabled
External PathCost : Auto/200000 , Edge Port : No /No , P2P : Auto /Yes

Msti  Designated Bridge  Internal PathCost  Prio  Status  Role
----  -
0     8000/0050BA7120D6  200000             128   Forwarding  Root
1     8001/0053131A3324  200000             128   Forwarding  Master

CTRL+C ESC q Quit SPACE n Next Page p Previous Page r Refresh
```

**show stp instance\_id**

Purpose	Used to display the Switch's STP instance configuration
Syntax	<b>show stp instance_id &lt;value 0-15&gt;</b>
Description	This command displays the Switch's current STP Instance Settings and the STP Instance Operational Status.
Parameters	<i>&lt;value 0-15&gt;</i> - Enter a value defining the previously configured <i>instance_id</i> on the Switch. An entry of 0 will display the STP configuration for the CIST internally set on the Switch.
Restrictions	None.

Example usage:

To display the STP instance configuration for instance 0 (the internal CIST) on the Switch:

```

DGS-3312SR:4#show stp instance 0
Command: show stp instance 0

STP Instance Settings
-----
Instance Type           : CIST
Instance Status        : Enabled
Instance Priority       : 32768(bridge priority : 32768, sys ID ext : 0 )

STP Instance Operational Status
-----
Designated Root Bridge : 32766/00-90-27-39-78-E2
External Root Cost     : 200012
Regional Root Bridge   : 32768/00-53-13-1A-33-24
Internal Root Cost     : 0
Designated Bridge      : 32768/00-50-BA-71-20-D6
Root Port              : 1:1
Max Age                : 20
Forward Delay          : 15
Last Topology Change   : 856
Topology Changes Count : 2987

CTRL+C ESC q Quit SPACE n Next Page p Previous Page r Refresh

```

## show stp mst\_config\_id

Purpose	Used to display the MSTP configuration identification.
Syntax	<b>show stp mst_config_id</b>
Description	This command displays the Switch's current MSTP configuration identification.
Parameters	None.
Restrictions	None.

Example usage:

To show the MSTP configuration identification currently set on the Switch:

DGS-3312SR:4#show stp mst\_config\_id

Command: show stp mst\_config\_id

Current MST Configuration Identification

-----

Configuration Name : 00:53:13:1A:33:24

Revision Level :0

MSTI ID	Vid list
---------	----------

-----

CIST	2-4094
1	1

DGS-3312SR:4#

## FORWARDING DATABASE COMMANDS

The forwarding database commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
create fdb	<vlan_name 32> <macaddr> port <port>
create multicast_fdb	<vlan_name 32> <macaddr>
config multicast_fdb	<vlan_name 32> <macaddr> [add   delete] <portlist>
config fdb aging_time	<sec 10-1000000>
delete fdb	<vlan_name 32> <macaddr>
clear fdb	[vlan <vlan_name 32>   port <port>   all]
show multicast_fdb	{vlan <vlan_name 32>   mac_address <macaddr>}
show fdb	{port <port>   vlan <vlan_name 32>   mac_address <macaddr>   static   aging_time}
show ipfdb	{ip_address <ipaddr>   interface <ipif_name 12>   port <port>}

Each command is listed, in detail, in the following sections.



**NOTE:** As a stand-alone switch or as a master switch in a switch stack, the switch number will be referred to as 15 for all configurations, graphs and tables.

### create fdb

Purpose	Used to create a static entry to the unicast MAC address forwarding table (database).
Syntax	<b>create fdb &lt;vlan_name 32&gt; &lt;macaddr&gt; [port &lt;port&gt;]</b>
Description	This command will make an entry into the switch's unicast MAC address forwarding database.
Parameters	<p><i>&lt;vlan_name 32&gt;</i> – The name of the VLAN on which the MAC address resides.</p> <p><i>&lt;macaddr&gt;</i> – The MAC address that will be added to the forwarding table.</p> <p><i>port &lt;port&gt;</i> – The port number corresponding to the MAC destination address. The switch will always forward traffic to the specified device through this port.</p>
Restrictions	Only administrator-level users can issue this command.

Example usage:

To create a unicast MAC FDB entry:

```
DGS-3312SR:4#create fdb default 00-00-00-00-01-02 port 2:5
Command: create fdb default 00-00-00-00-01-02 port 2:5

Success.

DGS-3312SR:4#
```

## create multicast\_fdb

Purpose	Used to create a static entry to the multicast MAC address forwarding table (database)
Syntax	<b>create multicast_fdb &lt;vlan_name 32&gt; &lt;macaddr&gt;</b>
Description	This command will make an entry into the switch's multicast MAC address forwarding database.
Parameters	<p>&lt;vlan_name 32&gt; – The name of the VLAN on which the MAC address resides.</p> <p>&lt;macaddr&gt; – The MAC address that will be added to the forwarding table.</p>
Restrictions	Only administrator-level users can issue this command.

Example usage:

To create multicast MAC forwarding:

```
DGS-3312SR:4#create multicast_fdb default 01-00-00-00-00-01
Command: create multicast_fdb default 01-00-00-00-00-01

Success.

DGS-3312SR:4#
```

## config multicast\_fdb

Purpose	Used to configure the switch's multicast MAC address forwarding database.
Syntax	<b>config multicast_fdb &lt;vlan_name 32&gt; &lt;macaddr&gt; [add   delete] &lt;portlist&gt;</b>
Description	This command configures the multicast MAC address forwarding table.
Parameters	<p>&lt;vlan_name 32&gt; – The name of the VLAN on which the MAC address resides.</p>

**config multicast\_fdb**

address resides.

*<macaddr>* – The MAC address that will be added to the multicast forwarding table.

*[add | delete]* – Add will add ports to the forwarding table. Delete will remove ports from the multicast forwarding table.

- *<portlist>* – Specifies a range of ports to be configured. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To add multicast MAC forwarding:

```
DGS-3312SR:4#config multicast_fdb default 01-00-00-00-00-01 add 1:1-1:5
```

```
Command: config multicast_fdb default 01-00-00-00-00-01 add 1:1-1:5
```

```
Success.
```

```
DGS-3312SR:4#
```

**config fdb aging\_time**

Purpose	Used to set the aging time of the forwarding database.
Syntax	<b>config fdb aging_time &lt;sec 10-1000000&gt;</b>
Description	The aging time affects the learning process of the switch. Dynamic forwarding table entries, which are made up of the source MAC addresses and their associated port numbers, are deleted from the table if they are not accessed within the aging time. The aging time can be from 10 to 1000000 seconds with a default value of 300 seconds. A very long aging time can result in dynamic forwarding table entries that are out-of-date or no longer exist. This may cause incorrect packet forwarding decisions by the switch. If the aging time is too short however, many entries may be aged out too soon. This will result in a high percentage of received packets whose source addresses cannot be found in the forwarding table, in which case the switch will broadcast the packet to all ports, negating many of the benefits of having a switch.

**config fdb aging\_time**

Parameters	<sec 10-1000000> – The aging time for the MAC address forwarding database value. The value in seconds may be between 10 and 1000000 seconds. The default is 300 seconds.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To set the fdb aging time:

```
DGS-3312SR:4#config fdb aging_time 300
Command: config fdb aging_time 300

Success.

DGS-3312SR:4#
```

**delete fdb**

Purpose	Used to delete an entry to the switch's forwarding database.
Syntax	<b>delete fdb &lt;vlan_name 32&gt; &lt;macaddr&gt;</b>
Description	This command is used to delete a previous entry to the switch's MAC address forwarding database.
Parameters	<p>&lt;vlan_name 32&gt; – The name of the VLAN on which the MAC address resides.</p> <p>&lt;macaddr&gt; – The MAC address that will be deleted from the forwarding table.</p>
Restrictions	Only administrator-level users can issue this command.

Example usage:

To delete a permanent FDB entry:

```
DGS-3312SR:4#delete fdb default 00-00-00-00-01-02
Command: delete fdb default 00-00-00-00-01-02

Success.

DGS-3312SR:4#
```

Example usage:

To delete a multicast fdb entry:

```
DGS-3312SR:4#delete fdb default 01-00-00-00-01-02
```

```
Command: delete fdb default 01-00-00-00-01-02
```

```
Success.
```

```
DGS-3312SR:4#
```

## clear fdb

Purpose	Used to clear the switch's forwarding database of all dynamically learned MAC addresses.
Syntax	<b>clear fdb [vlan &lt;vlan_name 32&gt;   port &lt;port&gt;   all]</b>
Description	This command is used to clear dynamically learned entries to the switch's forwarding database.
Parameters	<p><i>vlan &lt;vlan_name 32&gt;</i> – The name of the VLAN on which the MAC address resides.</p> <p><i>port &lt;port&gt;</i> – The port number corresponding to the MAC destination address. The switch will always forward traffic to the specified device through this port. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.</p> <p><i>all</i> – Clears all dynamic entries to the switch's forwarding database.</p>
Restrictions	Only administrator-level users can issue this command.

Example usage:

To clear all FDB dynamic entries:

```
DGS-3312SR:4#clear fdb all
```

```
Command: clear fdb all
```

```
Success.
```

```
DGS-3312SR:4#
```

**show multicast\_fdb**

Purpose	Used to display the contents of the switch's multicast forwarding database.
Syntax	<b>show multicast_fdb [vlan &lt;vlan_name 32&gt;   mac_address &lt;macaddr&gt;]</b>
Description	This command is used to display the current contents of the switch's multicast MAC address forwarding database.
Parameters	<p>&lt;vlan_name 32&gt; – The name of the VLAN on which the MAC address resides.</p> <p>&lt;macaddr&gt; – The MAC address that is present in the forwarding database table.</p>
Restrictions	None.

Example usage:

To display multicast MAC address table:

```
DGS-3312SR:4#show multicast_fdb
Command: show multicast_fdb

VLAN Name      : default
MAC Address    : 01-00-5E-00-00-00
Egress Ports   : 1:1-1:5,1:12,2:12
Mode           : Static

Total Entries  : 1

DGS-3312SR:4#
```

**show fdb**

Purpose	Used to display the current unicast MAC address forwarding database.
Syntax	<b>show fdb {port &lt;port&gt;   vlan &lt;vlan_name 32&gt;   mac_address &lt;macaddr&gt;   static   aging_time}</b>
Description	This command will display the current contents of the switch's forwarding database.
Parameters	<i>port &lt;port&gt;</i> – The port number corresponding to the MAC destination address. The switch will always forward traffic to the specified device through this port. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also

**show fdb**

separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

*<vlan\_name 32>* – The name of the VLAN on which the MAC address resides.

*<macaddr>* – The MAC address that is present in the forwarding database table.

*static* – Displays the static MAC address entries.

*aging\_time* – Displays the aging time for the MAC address forwarding database.

Restrictions                      None.

Example usage:

To display unicast MAC address table:

```
DGS-3312SR:4#show fdb
Command: show fdb

Unicast MAC Address Aging Time = 300
```

VID	VLAN Name	MAC Address	Port	Type
1	default	00-00-39-34-66-9A	10	Dynamic
1	default	00-00-51-43-70-00	10	Dynamic
1	default	00-00-5E-00-01-01	10	Dynamic
1	default	00-00-74-60-72-2D	10	Dynamic
1	default	00-00-81-05-00-80	10	Dynamic
1	default	00-00-81-05-02-00	10	Dynamic
1	default	00-00-81-48-70-01	10	Dynamic
1	default	00-00-E2-4F-57-03	10	Dynamic
1	default	00-00-E2-61-53-18	10	Dynamic
1	default	00-00-E2-6B-BC-F6	10	Dynamic
1	default	00-00-E2-7F-6B-53	10	Dynamic
1	default	00-00-E2-82-7D-90	10	Dynamic
1	default	00-00-F8-7C-1C-29	10	Dynamic
1	default	00-01-02-03-04-00	CPU	Self
1	default	00-01-02-03-04-05	10	Dynamic
1	default	00-01-30-10-2C-C7	10	Dynamic
1	default	00-01-30-FA-5F-00	10	Dynamic
1	default	00-02-3F-63-DD-68	10	Dynamic

```
CTRL+C ESC q Quit SPACE n Next Page ENTER Next Entry a All
```

**show ipfdb**

Purpose	Used to display the current IP address forwarding database table.
Syntax	<b>show ipfdb {ip_address &lt;ipaddr&gt;   interface &lt;ipif_name 12&gt;   port &lt;port&gt;}</b>
Description	This command will display the current contents of the switch's IP forwarding database.
Parameters	<p>The user has three methods in which to view the table by, which are:</p> <p><i>ip_address &lt;ipaddr&gt;</i> - Use this parameter to view the table by an IP address entered here.</p> <p><i>interface &lt;ipif_name 12&gt;</i> - Use this parameter to view the table by an IP interface entered here, and set on the switch.</p> <p><i>port &lt;port&gt;</i> - Use this parameter to view the table by a port entered here. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.</p> <p>Adding no parameters will display all entries in the IP forwarding database.</p>
Restrictions	None.

Example usage:

To view the IP forwarding database table:

```
DGS-3312SR:4#show ipfdb
Command: show ipfdb

Interface  IP Address  Port  Learned
-----  -
System    10.0.0.1    1:1   Dynamic
System    10.0.0.2    1:1   Dynamic
System    10.0.0.3    1:1   Dynamic
System    10.0.0.4    1:1   Dynamic
System    10.0.0.7    1:1   Dynamic
System    10.0.0.30   1:1   Dynamic
System    10.0.34.1   1:1   Dynamic
System    10.0.51.1   1:1   Dynamic
System    10.0.58.4   1:1   Dynamic
```

<b>System</b>	<b>10.0.85.168</b>	<b>1:1</b>	<b>Dynamic</b>
<b>System</b>	<b>10.1.1.1</b>	<b>1:1</b>	<b>Dynamic</b>
<b>System</b>	<b>10.1.1.99</b>	<b>1:1</b>	<b>Dynamic</b>
<b>System</b>	<b>10.1.1.101</b>	<b>1:1</b>	<b>Dynamic</b>
<b>System</b>	<b>10.1.1.102</b>	<b>1:1</b>	<b>Dynamic</b>
<b>System</b>	<b>10.1.1.103</b>	<b>1:1</b>	<b>Dynamic</b>
<b>System</b>	<b>10.1.1.152</b>	<b>1:1</b>	<b>Dynamic</b>
<b>System</b>	<b>10.1.1.157</b>	<b>1:1</b>	<b>Dynamic</b>
<b>System</b>	<b>10.1.1.161</b>	<b>1:1</b>	<b>Dynamic</b>
<b>System</b>	<b>10.1.1.162</b>	<b>1:1</b>	<b>Dynamic</b>
<b>System</b>	<b>10.1.1.163</b>	<b>1:1</b>	<b>Dynamic</b>
<b>CTRL+C ESC q Quit SPACE n Next Page ENTER Next Entry a All</b>			

## BROADCAST STORM CONTROL COMMANDS

The broadcast storm control commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
config traffic control	[<storm_grouplist>   all ] {broadcast [enable   disable]   multicast [enable   disable]   dlf [enable   disable]   threshold <value 0-255> }
show traffic control	{group_list <storm_grouplist>}

Each command is listed, in detail, in the following sections.



**NOTE:** As a stand-alone switch or as a master switch in a switch stack, the switch number will be referred to as 15 for all configurations, graphs and tables.

### config traffic control

Purpose	Used to configure broadcast/multicast traffic control.
Syntax	<b>config traffic control</b> [<storm_grouplist>   all ] {broadcast [enable   disable]   multicast [enable   disable]   dlf [enable   disable]   threshold <value 0-255>}
Description	This command is used to configure broadcast storm control.
Parameters	<p><i>&lt;storm_grouplist&gt;</i> – Used to specify a broadcast storm control group. This is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.</p> <p><i>all</i> – Specifies all storm control groups on the switch.</p> <p><i>broadcast [enable   disable]</i> – Enables or disables broadcast storm control.</p> <p><i>multicast [enable   disable]</i> – Enables or disables multicast storm control.</p> <p><i>dlf [enable   disable]</i> – Enables or disables dlf traffic control.</p> <p><i>threshold &lt;value 0-255&gt;</i> – The upper threshold at which the specified traffic control is switched on. The &lt;value&gt; is the number of broadcast / multicast / dlf packets, in Kbps, received by the</p>

**config traffic control**

	switch that will trigger the storm traffic control measures.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure traffic control and enable broadcast storm control system wide:

```
DGS-3312SR:4#config traffic control all broadcast enable
Command: config traffic control all broadcast enable

Success.

DGS-3312SR:4#
```

**show traffic control**

Purpose	Used to display current traffic control settings.
Syntax	<b>show traffic control {group_list &lt;storm_groupplist&gt;}</b>
Description	This command displays the current storm traffic control configuration on the switch.
Parameters	<i>group_list &lt;storm_groupplist&gt;</i> – Used to specify a broadcast storm control group. This is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.
Restrictions	None.

Example usage:

To display traffic control setting:

```
DGS-3312SR:4#show traffic control 1:1-1:5
Command: show traffic control 1:1-1:5

Traffic Control
```

Module	Group [ports]	Threshold	Broadcast Storm	Multicast Storm	Destination Lookup Fail
1	1 [ 1 ]	128	Disabled	Disabled	Disabled
1	2 [ 2 ]	128	Disabled	Disabled	Disabled
1	3 [ 3 ]	128	Disabled	Disabled	Disabled

DGS-3312SR Layer 3 Gigabit Switch

---

<b>1</b>	<b>4</b>	<b>[ 4 ]</b>	<b>128</b>	<b>Disabled</b>	<b>Disabled</b>	<b>Disabled</b>
<b>1</b>	<b>5</b>	<b>[ 5 ]</b>	<b>128</b>	<b>Disabled</b>	<b>Disabled</b>	<b>Disabled</b>
<b>Total Entries: 5</b>						
<b>DGS-3312SR:4#</b>						

## QoS COMMANDS

The DGS-3312SR switch supports 802.1p priority queuing. The switch has nine hardware priority queues, one of which is internal and not configurable. These hardware priority queues are numbered from 7 (Class 7) — the highest hardware priority queue — to 0 (Class 0) — the lowest hardware priority queue. The eight priority tags specified in IEEE 802.1p (p0 to p7) are mapped to the switch's hardware priority queues as follows:

- Priority 0 is assigned to the Switch's Q2 queue.
- Priority 1 is assigned to the Switch's Q0 queue.
- Priority 2 is assigned to the Switch's Q1 queue.
- Priority 3 is assigned to the Switch's Q3 queue.
- Priority 4 is assigned to the Switch's Q4 queue.
- Priority 5 is assigned to the Switch's Q5 queue.
- Priority 6 is assigned to the Switch's Q6 queue.
- Priority 7 is assigned to the Switch's Q7 queue.

For strict priority-based scheduling, any packets residing in the higher priority queues are transmitted first. Multiple strict priority queues empty based on their priority tags. Only when these queues are empty, are packets of lower priority transmitted.

For round-robin queuing, the number of packets sent from each priority queue depends upon the assigned weight. For a configuration of 8 CoS queues, A~H with their respective weight value: 8~1, the packets are sent in the following sequence: A1, B1, C1, D1, E1, F1, G1, H1, A2, B2, C2, D2, E2, F2, G2, A3, B3, C3, D3, E3, F3, A4, B4, C4, D4, E4, A5, B5, C5, D5, A6, B6, C6, A7, B7, A8, A1, B1, C1, D1, E1, F1, G1, H1.

For round-robin queuing, if each CoS queue has the same weight value, then each CoS queue has an equal opportunity to send packets just like round-robin queuing.

For round-robin queuing, if the weight for a CoS is set to 0, then it will continue processing the packets from this CoS until there are no more packets for this CoS. The other CoS queues that have been given a nonzero value, and depending upon the weight, will follow a common round-robin scheme.

Remember that the switch has 8 priority queues (and eight Classes of Service) for each port on the Switch.

The commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.



**NOTE:** As a stand-alone switch or as a master switch in a switch stack, the switch number will be referred to as 15 for all configurations, graphs and tables.

Command	Parameters
config bandwidth_control	[<portlist>   all] {rx_rate [no_limit   <value 1-999>]   tx_rate [no_limit <value 1-999>]}
show	{<portlist>}

Command	Parameters
bandwidth_control	
config 802.1p user_priority	{<priority 0-7> <class_id 0-7>}
show 802.1p user_priority	
config 802.1p default_priority	[<portlist>   all]   <priority 0-7>
show 802.1p default_priority	{<portlist>}
config scheduling_mechanism	[strict   round_robin]
show scheduling_mechanism	

Each command is listed, in detail, in the following sections.

## config bandwidth\_control

Purpose	Used to configure bandwidth control on a by-port basis.
Syntax	<b>config bandwidth_control</b> [<portlist>   all] {rx_rate [no_limit   <value 1-1000>]   tx_rate [no_limit   <value 1-1000>]}
Description	The <b>config bandwidth_control</b> command is used to configure bandwidth on a by-port basis.
Parameters	<p><i>&lt;portlist&gt;</i> – Specifies a range of ports to be configured. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.</p> <p><i>all</i> – Choose this parameter to select all configurable ports.</p> <p><i>rx_rate</i> – Specifies that one of the parameters below (<i>no_limit</i> or <i>&lt;value 1-1000&gt;</i>) will be applied to the rate at which the above specified ports will be allowed to receive packets</p> <ul style="list-style-type: none"> <li>▪ <i>no_limit</i> – Specifies that there will be no limit on the rate of packets received by the above specified ports.</li> <li>▪ <i>&lt;value 1-1000&gt;</i> – Specifies the packet limit, in Mbps, that the above ports will be allowed to receive.</li> </ul> <p><i>tx_rate</i> – Specifies that one of the parameters below (<i>no_limit</i> or <i>&lt;value 1-1000&gt;</i>) will be applied to the rate at which the above specified ports will be allowed to transmit packets.</p> <ul style="list-style-type: none"> <li>▪ <i>no_limit</i> – Specifies that there will be no limit on the rate</li> </ul>

**config bandwidth\_control**

of packets received by the above specified ports.

- *<value 1-1000>* – Specifies the packet limit, in Mbps, that the above ports will be allowed to receive.

Restrictions Only administrator-level users can issue this command.

Example usage:

To configure bandwidth control:

```
DGS-3312SR:4#config bandwidth_control 1:1-1:10 tx_rate 10
```

```
Command: config bandwidth_control 1:1-1:10 tx_rate 10
```

```
Success.
```

```
DGS-3312SR:4#
```

**show bandwidth\_control**

Purpose Used to display the bandwidth control configuration on the switch.

Syntax **show bandwidth\_control {<portlist>}**

Description The **show bandwidth\_control** command displays the current bandwidth control configuration on the switch, on a port-by-port basis.

Parameters *<portlist>* – Specifies a range of ports to be configured. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

Using this command without adding a portlist entry will show the bandwidth control for all ports in the switch stack.

Restrictions None.

Example usage:

To display bandwidth control settings:

```
DGS-3312SR:4#show bandwidth_control 1:1-1:10
```

```
Command: show bandwidth_control 1:1-1:10
```

```
Bandwidth Control Table
```

Port	RX Rate (Mbit/sec)	TX_RATE (Mbit/sec)
----	-----	-----
1:1	no_limit	10
1:2	no_limit	10
1:3	no_limit	10
1:4	no_limit	10
1:5	no_limit	10
1:6	no_limit	10
1:7	no_limit	10
1:8	no_limit	10
1:9	no_limit	10
1:10	no_limit	10

DGS-3312SR:4#

### config 802.1p user\_priority

**Purpose** Used to map the 802.1p user priority tags of an incoming packet to one of the eight hardware queues available on the switch.

**Syntax** `config 802.1p user_priority <priority 0-7> <class_id 0-7>`

**Description** The `config 802.1p user_priority` command is used to configure the way the switch will map an incoming packet, based on its 802.1p user priority tag, to one of the eight hardware priority queues available on the switch. The switch's default is to map the incoming 802.1p priority values to the eight hardware priority queues according to the following chart:

802.1p Value	Switch Hardware Priority Queue
-----	-----
0	2
1	0
2	1
3	3
4	4
5	5

**config 802.1p user\_priority**

	6	6
	7	7
Parameters	<p><i>&lt;priority 0-7&gt;</i> – Specifies which of the eight 802.1p priority tags (0 through 7) you want to map to one of the switch's hardware priority queues (<i>&lt;class_id&gt;</i>, 0 through 7).</p> <p><i>&lt;class_id 0-7&gt;</i> – Specifies which of the switch's hardware priority queues the 802.1p priority tags (specified above) will be mapped to.</p>	
Restrictions	Only administrator-level users can issue this command.	

Example usage:

To configure 802.1 user priority on the switch:

```
DGS-3312SR:4# config 802.1p user_priority 1 3
Command: config 802.1p user_priority 1 3

Success.

DGS-3312SR:4#
```

**show 802.1p user\_priority**

Purpose	Used to display the current 802.1p user priority tags to hardware priority queue mapping in use by the switch.
Syntax	<b>show 802.1p user_priority</b>
Description	The <b>show 802.1p user_priority</b> command will display the current 802.1p user priority tags to hardware priority queue mapping in use by the switch.
Parameters	None.
Restrictions	None.

Example usage:

To show 802.1p user priority:

```
DGS-3312SR:4# show 802.1p user_priority
Command: show 802.1p user_priority

QOS Class of Traffic

Priority-0 -> <Class-2>
Priority-1 -> <Class-0>
```

```

Priority-2 -> <Class-1>
Priority-3 -> <Class-3>
Priority-4 -> <Class-4>
Priority-5 -> <Class-5>
Priority-6 -> <Class-6>
Priority-7 -> <Class-7>

```

```
DGS-3312SR:4#
```

## config 802.1p default\_priority

Purpose	Used to specify default priority settings on the switch. Untagged packets that are received by the switch will be assigned a priority tag in its priority field using this command.
Syntax	<b>config 802.1p default_priority [&lt;portlist&gt;   all] &lt;priority 0-7&gt;</b>
Description	The <b>config 802.1p default_priority</b> command allows you to specify the 802.1p priority value an untagged, incoming packet will be assigned before being forwarded to its destination.
Parameters	<p><i>&lt;portlist&gt;</i> – Specifies a range of ports to be configured. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.</p> <p><i>all</i> – Specifies that the <b>config 802.1p default_priority</b> command will be applied to all ports on the switch.</p> <p><i>&lt;priority 0-7&gt;</i> – Specifies the 802.1p priority tag that an untagged, incoming packet will be given before being forwarded to its destination.</p>
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure 802.1p default priority on the switch:

```

DGS-3312SR:4#config 802.1p default_priority all 5
Command: config 802.1p default_priority all 5

Success.

DGS-3312SR:4#

```

**show 802.1p default\_priority**

Purpose	Used to display the currently configured 802.1p priority tags that will be assigned to incoming, untagged packets before being forwarded to its destination.
Syntax	<b>show 802.1p default_priority {&lt;portlist&gt;}</b>
Description	The <b>show 802.1p default_priority</b> command displays the currently configured 802.1p priority tag that will be assigned to an incoming, untagged packet before being forwarded to its destination.
Parameters	<i>&lt;portlist&gt;</i> – Specifies a port or range of ports to be viewed. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.
Restrictions	None.

Example usage:

To display the current 802.1p default priority configuration on the switch:

```
DGS-3312SR:4# show 802.1p default_priority
Command: show 802.1p default_priority
```

Port	Priority
-----	-----
15:1	1
15:2	1
15:3	1
15:4	1
15:5	1
15:6	1
15:7	1
15:8	1
15:9	1
15:10	1
15:11	1
15:12	1
2:1	0
2:2	0
2:3	0
2:4	0
2:5	0
2:6	0
2:7	0
2:8	0
2:9	0
2:10	0
2:11	0
2:12	0

```
DGS-3312SR:4#
```

## config scheduling\_mechanism

Purpose	Used to configure the scheduling mechanism for the QoS function
Syntax	<b>config scheduling mechanism [strict   round_robin]</b>
Description	<p>The <b>config scheduling_mechanism</b> command allows the user to select between a <i>round_robin</i> and a <i>strict</i> mechanism for emptying the priority queues of the QoS function. The switch contains 9 hardware priority queues, one of which is internal and unoperational. Incoming packets must be mapped to one of these eight hardware priority queues. This command is used to specify the rotation by which these eight hardware priority queues are emptied.</p> <p>The switch's default is to empty the eight priority queues in order – from the highest priority queue (queue 7) to the lowest priority queue (queue 0). Each queue will transmit all of the packets in its buffer before allowing the next lower priority queue to transmit its packets. When the lowest priority queue has finished transmitting all of its packets, the highest hardware priority queue can again transmit any packets it may have received.</p>
Parameters	<p><i>strict</i> – Entering the <i>strict</i> parameter indicates that the highest queue is the first to be processed. That is, the highest queue should finish emptying before the others begin.</p> <p><i>round_robin</i> – Entering the <i>round_robin</i> parameter indicates that the priority queues will empty packets in a round-robin order. That is to say that they will be emptied in an even distribution.</p>
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure the traffic scheduling mechanism for each COS queue:

```
DGS-3312SR:4#config scheduling_mechanism strict
```

```
Command: config scheduling_mechanism strict
```

```
Success.
```

```
DGS-3312SR:4#
```

## show scheduling\_mechanism

Purpose	Used to display the current traffic scheduling mechanisms in use on the switch.
Syntax	<b>show scheduling_mechanism</b>

**show scheduling\_mechanism**

Description	This command will display the current traffic scheduling mechanisms in use on the switch.
Parameters	None.
Restrictions	None.

Example Usage:

To show the scheduling mechanism:

```
DGS-3312SR:4#show scheduling_mechanism
Command: show scheduling_mechanism

QOS scheduling_mechanism
CLASS ID Mechanism
-----
Class-0 strict
Class-1 strict
Class-2 strict
Class-3 strict
Class-4 strict
Class-5 strict
Class-6 strict
Class-7 strict

DGS-3312SR:4#
```

## PORT MIRRORING COMMANDS

The port mirroring commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
config mirror port	<port> [add   delete] source ports <portlist> [rx   tx   both]
enable mirror	
disable mirror	
show mirror	

Each command is listed, in detail, in the following sections.



**NOTE:** As a stand-alone switch or as a master switch in a switch stack, the switch number will be referred to as 15 for all configurations, graphs and tables.

### config mirror port

Purpose	Used to configure a mirror port – source port pair on the switch.
Syntax	<b>config mirror port &lt;port&gt; add source ports &lt;portlist&gt; [rx   tx   both]</b>
Description	This command allows a range of ports to have all of their traffic also sent to a designated port, where a network sniffer or other device can monitor the network traffic. In addition, you can specify that only traffic received by or sent by one or both is mirrored to the Target port.
Parameters	<p><i>port &lt;port&gt;</i> – This specifies the Target port (the port where mirrored packets will be sent). The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.</p> <p><i>add source ports</i> – The port or ports being mirrored. This cannot include the Target port.</p> <ul style="list-style-type: none"> <li>▪ <i>&lt;portlist&gt;</i> – This specifies a range of ports that will be mirrored. That is, the range of ports in which all traffic will be copied and sent to the Target port. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the</li> </ul>

**config mirror port**

highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

*rx* – Allows the mirroring of only packets received by (flowing into) the port or ports in the port list.

*tx* – Allows the mirroring of only packets sent to (flowing out of) the port or ports in the port list.

*both* – Mirrors all the packets received or sent by the port or ports in the port list.

**Restrictions**

The Target port cannot be listed as a source port. Only administrator-level users can issue this command.

Example usage:

To add the mirroring ports:

**DGS-3312SR:4# config mirror port 1:5 add source ports 1:1-1:5 both**

**Command: config mirror port 1:5 add source ports 1:1-1:5 both**

**Success.**

**DGS-3312SR:4#**

**config mirror delete**

Purpose	Used to delete a port mirroring configuration.
Syntax	<b>config mirror port &lt;port&gt; delete source port &lt;portlist&gt; [rx   tx   both]</b>
Description	This command is used to delete a previously entered port mirroring configuration.
Parameters	<i>port &lt;port&gt;</i> –This specifies the Target port (the port where mirrored packets will be sent). The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2,

## config mirror delete

port 4 – in numerical order.

*delete source port* – Adding this parameter will delete source ports according to ports entered using the *<portlist>*.

- *<portlist>* – This specifies a range of ports that will be mirrored. That is, the range of ports in which all traffic will be copied and sent to the Target port. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

*rx* – Allows the mirroring of only packets received by (flowing into) the port or ports in the port list.

*tx* – Allows the mirroring of only packets sent to (flowing out of) the port or ports in the port list.

*both* – Mirrors all the packets received or sent by the port or ports in the port list.

### Restrictions

Only administrator-level users can issue this command.

Example usage:

To delete the mirroring ports:

```
DGS-3312SR:4#config mirror port 1:5 delete source port 1:1-1:5 both
```

```
Command: config mirror 1:5 delete source 1:1-1:5 both
```

```
Success.
```

```
DGS-3312SR:4#
```

## enable mirror

**Purpose** Used to enable a previously entered port mirroring configuration.

**Syntax** **enable mirror**

**Description** This command, combined with the **disable mirror** command below, allows you to enter a port mirroring configuration into the switch, and then turn the port mirroring on and off without having to modify the port mirroring configuration.

**Parameters** None.

**enable mirror**

Restrictions	Only administrator-level users can issue this command.
--------------	--

Example usage:

To enable mirroring configurations:

```
DGS-3312SR:4#enable mirror
```

```
Command: enable mirror
```

```
Success.
```

```
DGS-3312SR:4#
```

**disable mirror**

Purpose	Used to disable a previously entered port mirroring configuration.
---------	--

Syntax	<b>disable mirror</b>
--------	-----------------------

Description	This command, combined with the <b>enable mirror</b> command above, allows you to enter a port mirroring configuration into the switch, and then turn the port mirroring on and off without having to modify the port mirroring configuration.
-------------	--

Parameters	None.
------------	-------

Restrictions	Only administrator-level users can issue this command.
--------------	--

Example usage:

To disable mirroring configurations:

```
DGS-3312SR:4#disable mirror
```

```
Command: disable mirror
```

```
Success.
```

```
DGS-3312SR:4#
```

**show mirror**

Purpose	Used to show the current port mirroring configuration on the switch.
---------	--

Syntax	<b>show mirror</b>
--------	--------------------

Description	This command displays the current port mirroring configuration on the switch.
-------------	---

**show mirror**

	on the switch.
Parameters	None
Restrictions	None.

Example usage:

To display mirroring configuration:

```
DGS-3312SR:4#show mirror
Command: show mirror

Current Settings
Mirror Status: Enabled
Target Port : 1:9
Mirrored Port:
    RX:
    TX: 1:1-1:5

DGS-3312SR:4#
```

## VLAN COMMANDS

The VLAN commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
create vlan	<vlan_name 32> {tag <vlanid 1-4094>   advertisement}
delete vlan	<vlan_name 32>
config vlan	<vlan_name 32> {[add [tagged   untagged   forbidden]   delete] <portlist>   advertisement [enable   disable]}
config gvrp	[<portlist>   all] {state [enable   disable]   ingress_checking [enable   disable]   acceptable_frame [tagged_only   admit_all]   pvid <vlanid 1-4094>}
enable gvrp	
disable gvrp	
show vlan	<vlan_name 32>
show gvrp	<portlist>

Each command is listed, in detail, in the following sections.



**NOTE:** As a stand-alone switch or as a master switch in a switch stack, the switch number will be referred to as 15 for all configurations, graphs and tables.

### create vlan

Purpose	Used to create a VLAN on the switch.
Syntax	<b>create vlan &lt;vlan_name 32&gt; {tag &lt;vlanid 1-4094&gt;   advertisement}</b>
Description	This command allows you to create a VLAN on the switch.
Parameters	<p>&lt;vlan_name 32&gt; – The name of the VLAN to be created.</p> <p>&lt;vlanid 1-4094&gt; – The VLAN ID of the VLAN to be created. Allowed values = 1-4094</p> <p><i>advertisement</i> – Specifies that the VLAN is able to join GVRP. If this parameter is not set, the VLAN cannot be configured to have forbidden ports.</p>
Restrictions	Each VLAN name can be up to 32 characters. If the VLAN is not given a tag, it will be a port-based VLAN. Only administrator-level users can issue this command.

Example usage:

To create a VLAN v1, tag 2:

```
DGS-3312SR:4#create vlan v1 tag 2
```

```
Command: create vlan v1 tag 2
```

```
Success.
```

```
DGS-3312SR:4#
```

## delete vlan

Purpose	Used to delete a previously configured VLAN on the switch.
Syntax	<b>delete vlan &lt;vlan_name 32&gt;</b>
Description	This command will delete a previously configured VLAN on the switch.
Parameters	<vlan_name 32> – The VLAN name of the VLAN you want to delete.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To remove the vlan “v1”:

```
DGS-3312SR:4#delete vlan v1
```

```
Command: delete vlan v1
```

```
Success.
```

```
DGS-3312SR:4#
```

## config vlan

Purpose	Used to add additional ports to a previously configured VLAN.
Syntax	<b>config vlan &lt;vlan_name 32&gt; { [ add [ tagged   untagged   forbidden ]   delete ] &lt;portlist&gt;   advertisement [ enable   disable]}</b>
Description	This command allows you to add ports to the port list of a previously configured VLAN. You can specify the additional ports as tagging, untagging, or forbidden. The default is to assign the ports as untagging.
Parameters	<vlan_name 32> – The name of the VLAN to be configured.  <i>add</i> – Used to add ports to the specified VLAN, in conjunction with

**config vlan**

the *portlist* parameter.

*tagged* – Specifies that the ports are to be VLAN tagged.

*untagged* – Specifies the ports as untagged.

*forbidden* – Specifies the ports as forbidden ports.

*delete* – Used to delete ports from the specified VLAN, in conjunction with the *portlist* parameter.

*<portlist>* – A range of ports to add to the VLAN. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

*advertisement [enable | disable ]* – Enables or disables GVRP on the specified VLAN.

**Restrictions**

Only administrator-level users can issue this command.

Example usage:

To add 4 through 8 of module 2 as tagged ports to the VLAN v1:

```
DGS-3312SR:4#config vlan v1 add tagged 2:4-2:8
```

```
Command: config vlan v1 add tagged 2:4-2:8
```

```
Success.
```

```
DGS-3312SR:4#
```

**config gvrp****Purpose**

Used to configure GVRP on the switch.

**Syntax**

```
config gvrp [<portlist> | all] {state [enable | disable] | ingress_checking [enable | disable] | acceptable_frame [tagged_only | admit_all] | pvid <vlanid 1-4094>}
```

**Description**

This command is used to configure the Group VLAN Registration Protocol on the switch. You can configure ingress checking, the sending and receiving of GVRP information, and the Port VLAN ID (PVID).

**Parameters**

*<portlist>* – A range of ports for which you want ingress checking. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon.

**config gvrp**

Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

*all* – Specifies all of the ports on the switch.

*state [enable | disable]* – Enables or disables GVRP for the ports specified in the port list.

*ingress\_checking [enable | disable]* – Enables or disables ingress checking for the specified port list.

*acceptable\_frame [tagged\_only | admit\_all]* – This parameter states the frame type that will be accepted by the switch for this function. *tagged\_only* implies that only VLAN tagged frames will be accepted, while *admit\_all* implies tagged and untagged frames will be accepted by the switch.

*pvid <vlanid 1-4094>*– Specifies the default VLAN associated with the port.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To set the ingress checking status, the sending and receiving GVRP information :

```
DGS-3312SR:4#config gvrp 1:1-1:4 state enable ingress_checking
enable acceptable_frame tagged_only pvid 2
Command: config gvrp 1:1-1:4 state enable ingress_checking enable
acceptable_frame tagged_only pvid 2

Success.

DGS-3312SR:4#
```

**enable gvrp**

Purpose	Used to enable GVRP on the switch.
Syntax	<b>enable gvrp</b>
Description	This command, along with <b>disable gvrp</b> below, is used to enable and disable GVRP on the switch, without changing the GVRP configuration on the switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To enable the generic VLAN Registration Protocol (GVRP):

```
DGS-3312SR:4#enable gvrp
```

```
Command: enable gvrp
```

```
Success.
```

```
DGS-3312SR:4#
```

## disable gvrp

Purpose	Used to disable GVRP on the switch.
Syntax	<b>disable gvrp</b>
Description	This command, along with <b>enable gvrp</b> above, is used to enable and disable GVRP on the switch, without changing the GVRP configuration on the switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To disable the Generic VLAN Registration Protocol (GVRP):

```
DGS-3312SR:4#disable gvrp
```

```
Command: disable gvrp
```

```
Success.
```

```
DGS-3312SR:4#
```

## show vlan

Purpose	Used to display the current VLAN configuration on the switch
Syntax	<b>show vlan {&lt;vlan_name 32&gt;}</b>
Description	This command displays summary information about each VLAN including the VLAN ID, VLAN name, the Tagging/Untagging status, and the Member/Non-member/Forbidden status of each port that is a member of the VLAN.
Parameters	<vlan_name 32> – The VLAN name of the VLAN for which you want to display a summary of settings.

**show vlan**

Restrictions	None.
--------------	-------

Example usage:

To display the switch's current VLAN settings:

```
DGS-3312SR:4#show vlan
Command: show vlan

VID          : 1          VLAN Name    : default
VLAN TYPE    : static    Advertisement : Enabled
Member ports : 1:1-1:11,2:1-2:11
Static ports : 1:1-1:11,2:1-2:11
Untagged ports : 1:1-1:11,2:1-2:11
Forbidden ports :

VID          : 2          VLAN Name    : v1
VLAN TYPE    : static    Advertisement : Disabled
Member ports : 1:12,2:12
Static ports : 1:12,2:12
Untagged ports :
Forbidden ports :

Total Entries : 2

DGS-3312SR:4#
```

**show gvrp**

Purpose	Used to display the GVRP status for a port list on the switch.
Syntax	<b>show gvrp {&lt;portlist&gt;}</b>
Description	This command displays the GVRP status for a port list on the switch
Parameters	<portlist> – Specifies a range of ports for which the GVRP status is to be displayed. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in

**show gvrp**

numerical order.

Restrictions           None.

Example usage:

To display GVRP port status:

```

DGS-3312SR:4#show gvrp
Command: show gvrp

Global GVRP : Disabled

Port  PVID  GVRP      Ingress Checking  Acceptable Frame Type
-----  ----  -
1:1   1      Disabled   Enabled           All Frames
1:2   1      Disabled   Enabled           All Frames
1:3   1      Disabled   Enabled           All Frames
1:4   1      Disabled   Enabled           All Frames
1:5   1      Disabled   Enabled           All Frames
1:6   1      Disabled   Enabled           All Frames
1:7   1      Disabled   Enabled           All Frames
1:8   1      Disabled   Enabled           All Frames
1:9   1      Disabled   Enabled           All Frames
1:10  1      Disabled   Enabled           All Frames
1:11  1      Disabled   Enabled           All Frames
1:12  1      Disabled   Enabled           All Frames
2:1   1      Disabled   Enabled           All Frames
2:2   1      Disabled   Enabled           All Frames
2:3   1      Disabled   Enabled           All Frames
2:4   1      Disabled   Enabled           All Frames
2:5   1      Disabled   Enabled           All Frames
2:6   1      Disabled   Enabled           All Frames
2:7   1      Disabled   Enabled           All Frames
2:8   1      Disabled   Enabled           All Frames
2:9   1      Disabled   Enabled           All Frames
2:10  1      Disabled   Enabled           All Frames
2:11  1      Disabled   Enabled           All Frames
2:12  1      Disabled   Enabled           All Frames

Total Entries : 24

DGS-3312SR:4#

```

## LINK AGGREGATION COMMANDS

The link aggregation commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
create link_aggregation	group_id <value 1-6> {type [lacp   static]}
delete link_aggregation	group_id <value 1-6>
config link_aggregation	group_id <value 1-6> {master_port <port>   ports <portlist> state [enable   disable]}
config link_aggregation algorithm	[mac_source   mac_destination   mac_source_dest   ip_source   ip_destination   ip_source_dest]
show link_aggregation	{group_id <value 1-6>   algorithm}
config lacp_port	<portlist> mode [active   passive]
show lacp_port	{<portlist>}

Each command is listed, in detail, in the following sections.



**NOTE:** As a stand-alone switch or as a master switch in a switch stack, the switch number will be referred to as 15 for all configurations, graphs and tables.

### create link\_aggregation

Purpose	Used to create a link aggregation group on the switch.
Syntax	<b>create link_aggregation group_id &lt;value 1-6&gt; {type [lacp   static]}</b>
Description	This command will create a link aggregation group with a unique identifier.
Parameters	<p>&lt;value 1-6&gt; – Specifies the group ID. The switch allows up to 6 link aggregation groups to be configured. The group number identifies each of the groups.</p> <p><i>type</i> – Specify the type of link aggregation used for the group. If the type is not specified the default type is static.</p> <ul style="list-style-type: none"> <li>▪ <i>lacp</i> – This designates the port group as LACP compliant. LACP allows dynamic adjustment to the aggregated port group. LACP compliant ports may be further configured (see config lacp_ports). LACP compliant must be connected to LACP compliant devices.</li> </ul>

**create link\_aggregation**

- *static* – This designates the aggregated port group as static. Static port groups can not be changed as easily as LACP compliant port groups since both linked devices must be manually configured if the configuration of the trunked group is changed. If static link aggregation is used, be sure that both ends of the connection are properly configured and that all ports have the same speed/duplex settings.

Restrictions                      Only administrator-level users can issue this command.

Example usage:

To create a link aggregation group:

```
DGS-3312SR:4#create link_aggregation group_id 1
Command: create link_aggregation group_id 1

Success.

DGS-3312SR:4#
```

**delete link\_aggregation group\_id**

Purpose	Used to delete a previously configured link aggregation group.
Syntax	<b>delete link_aggregation group_id &lt;value 1-6&gt;</b>
Description	This command is used to delete a previously configured link aggregation group.
Parameters	<value 1-6> – Specifies the group ID. The switch allows up to 6 link aggregation groups to be configured. The group number identifies each of the groups.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To delete link aggregation group:

```
DGS-3312SR:4#delete link_aggregation group_id 6
Command: delete link_aggregation group_id 6

Success.

DGS-3312SR:4#
```

**config link\_aggregation**

Purpose	Used to configure a previously created link aggregation group.
Syntax	<b>config link_aggregation group_id &lt;value 1-6&gt; {master_port &lt;port&gt;   ports &lt;portlist&gt;   state [enable   disable]}</b>
Description	This command allows you to configure a link aggregation group that was created with the <b>create link_aggregation</b> command above. The DGS-3312SR supports link aggregation cross box which specifies that link aggregation groups may be spread over multiple switches in the switching stack.
Parameters	<p><i>group_id &lt;value 1-6&gt;</i> – Specifies the group ID. The switch allows up to 6 link aggregation groups to be configured. The group number identifies each of the groups.</p> <p><i>master_port&lt;port&gt;</i> – Master port ID. Specifies which port (by port number) of the link aggregation group will be the master port. All of the ports in a link aggregation group will share the port configuration with the master port.</p> <p><i>ports &lt;portlist&gt;</i> – Specifies a range of ports that will belong to the link aggregation group. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.</p> <p><i>state [enable   disable]</i> – Allows you to enable or disable the specified link aggregation group.</p>
Restrictions	Only administrator-level users can issue this command. Link aggregation groups may not overlap.

Example usage:

To define a load-sharing group of ports, group-id 1, master port 5 of module 1 with group members ports 5-7 plus port 9:

```
DGS-3312SR:4#config link_aggregation group_id 1 master_port 1:5
ports 1:5-1:7, 1:9
Command: config link_aggregation group_id 1 master_port 1:5 ports
1:5-1:7, 1:9

Success.

DGS-3312SR:4#
```

## config link\_aggregation algorithm

Purpose	Used to configure the link aggregation algorithm.
Syntax	<b>config link_aggregation algorithm [mac_source   mac_destination   mac_source_dest   ip_source   ip_destination   ip_source_dest]</b>
Description	This command configures to part of the packet examined by the switch when selecting the egress port for transmitting load-sharing data. This feature is only available using the address-based load-sharing algorithm.
Parameters	<p><i>mac_source</i> – Indicates that the switch should examine the MAC source address.</p> <p><i>mac_destination</i> – Indicates that the switch should examine the MAC destination address.</p> <p><i>mac_source_dest</i> – Indicates that the switch should examine the MAC source and destination addresses</p> <p><i>ip_source</i> – Indicates that the switch should examine the IP source address.</p> <p><i>ip_destination</i> – Indicates that the switch should examine the IP destination address.</p> <p><i>ip_source_dest</i> – Indicates that the switch should examine the IP source address and the destination address.</p>
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure link aggregation algorithm for mac-source-dest:

```
DGS-3312SR:4#config link_aggregation algorithm mac_source_dest
Command: config link_aggregation algorithm mac_source_dest

Success.

DGS-3312SR:4#
```

## show link\_aggregation

Purpose	Used to display the current link aggregation configuration on the switch.
Syntax	<b>show link_aggregation {group_id &lt;value 1-6&gt;   algorithm}</b>
Description	This command will display the current link aggregation configuration of the switch.

## show link\_aggregation

Parameters	<p><i>group_id</i> &lt;value 1-6&gt; – Specifies the group ID. The switch allows up to 6 link aggregation groups to be configured. The group number identifies each of the groups.</p> <p><i>algorithm</i> – Allows you to specify the display of link aggregation by the algorithm in use by that group.</p>
Restrictions	None.

Example usage:

To display Link Aggregation configuration:

```
DGS-3312SR:4#show link_aggregation
Command: show link_aggregation

Link Aggregation Algorithm = MAC-source-dest
Group ID      : 1
Master Port   : 2:10
Member Port   : 1:5-1:10,2:10
Active Port:
Status        : Disabled
Flooding Port : 1:5

DGS-3312SR:4
```

## config lacp\_ports

Purpose	Used to configure settings for LACP compliant ports.
Syntax	<b>config lacp_ports &lt;portlist&gt; mode [active   passive]</b>
Description	This command is used to configure ports that have been previously designated as LACP ports (see create link_aggregation).
Parameters	<p>&lt;portlist&gt; – Specifies a range of ports to be configured. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.</p> <p><i>mode</i> – Select the mode to determine if LACP ports will process LACP control frames.</p>

**config lacp\_ports**

- *active* – Active LACP ports are capable of processing and sending LACP control frames. This allows LACP compliant devices to negotiate the aggregated link so the group may be changed dynamically as needs require. In order to utilize the ability to change an aggregated port group, that is, to add or subtract ports from the group, at least one of the participating devices must designate LACP ports as active. Both devices must support LACP.
- *passive* – LACP ports that are designated as passive cannot process LACP control frames. In order to allow the linked port group to negotiate adjustments and make changes dynamically, at one end of the connection must have “active” LACP ports (see above).

Restrictions

Only administrator-level users can issue this command.

Example usage:

To configure LACP port mode settings:

**DGS-3312SR:4#config lacp\_port 1:1-1:12 mode active****Command: config lacp\_port 1:1-1:12 mode active****Success.****DGS-3312SR:4#****show lacp\_port**

Purpose	Used to display current LACP port mode settings.
Syntax	<b>show lacp_port {&lt;portlist&gt;}</b>
Description	This command will display the LACP mode settings as they are currently configured.
Parameters	<i>&lt;portlist&gt;</i> - Specifies a range of ports that will be viewed. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To display LACP port mode settings:

```
DGS-3312SR:4#show lacp_port 1:1-1:11  
Command: show lacp_port 1:1-1:11
```

Port	Activity
1:1	Active
1:2	Active
1:3	Active
1:4	Active
1:5	Active
1:6	Active
1:7	Active
1:8	Active
1:9	Active
1:10	Active
1:11	Active

```
DGS-3312SR:4#
```

**BASIC IP COMMANDS**

The IP interface commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
enable ipif	{<ipif_name 12>   all}
create ipif	<ipif_name12> <network_address> <vlan_name 32> {state [enable   disable]}
config ipif	<ipif_name12> [{ipaddress <network_address>   {vlan <vlan_name 32>   state [enable   disable]}   bootp   dhcp]
show ipif	<ipif_name 12>
delete ipif	<ipif_name 12>   all
disable ipif	<ipif_name 12>   all

Each command is listed, in detail, in the following sections.



**NOTE:** As a stand-alone switch or as a master switch in a switch stack, the switch number will be referred to as 15 for all configurations, graphs and tables.

**enable ipif**

Purpose	Used to enable an IP interface on the switch.
Syntax	<b>enable ipif {&lt;ipif_name 12&gt;   all}</b>
Description	This command will enable the IP interface function on the switch.
Parameters	<p><i>&lt;ipif_name 12&gt;</i> – The name for the IP interface to be created. This name cannot exceed 12 characters.</p> <p><i>all</i> – Entering this parameter will delete all the IP interfaces currently configured on the switch.</p>
Restrictions	none

Example usage:

To enable the ipif function on the switch:

```
DGS-3312SR:4#enable ipif s2
```

```
Command: enable ipif s2
```

```
Success.
```

```
DGS-3312SR:4#
```

## create ipif

Purpose	Used to create an IP interface on the switch.
Syntax	<b>create ipif &lt;ipif_name12&gt; &lt;network_address&gt; &lt;vlan_name 32&gt; {state [enable   disable]}</b>
Description	This command will create an IP interface.
Parameters	<p><i>&lt;ipif_name 12&gt;</i> – The name for the IP interface to be created.</p> <p><i>&lt;network_address&gt;</i> – IP address and netmask of the IP interface to be created. You can specify the address and mask information using the traditional format (for example, 10.1.2.3/255.0.0.0 or in CIDR format, 10.1.2.3/8).</p> <p><i>&lt;vlan_name 32&gt;</i> – The name of the VLAN that will be associated with the above IP interface.</p> <p><i>state [enable   disable]</i> – Allows you to enable or disable the IP interface.</p>
Restrictions	Only administrator-level users can issue this command.

Example usage:

To create an IP interface on the switch:

```
DGS-3312SR:4#create ipif System ipaddress 10.48.74.122/8 v2 state enable
```

```
Command: create ipif System ipaddress 10.48.74.122/8 v2 state enable
```

```
Success.
```

```
DGS-3312SR:4#
```

## config ipif

Purpose	Used to configure the System IP interface.
---------	--

**config ipif**

Syntax	<b>config ipif &lt;ipif_name 12&gt; [{ipaddress &lt;network_address&gt;   {vlan &lt;vlan_name 32&gt;   state [enable   disable]}   bootp   dhcp]</b>
Description	This command is used to configure the System IP interface on the switch.
Parameters	<p><i>&lt;ipif_name 12&gt;</i> – The name for the IP interface previously created, that is to be configured.</p> <p><i>ipaddress &lt;network_address&gt;</i> – IP address and netmask of the IP interface to be configured. You can specify the address and mask information using the traditional format (for example, 10.1.2.3/255.0.0.0 or in CIDR format, 10.1.2.3/8).</p> <p><i>vlan &lt;vlan_name 32&gt;</i> – The name of the VLAN corresponding to the System IP interface.</p> <p><i>state [enable   disable]</i> – Allows you to enable or disable the IP interface.</p> <p><i>bootp</i> – Allows the selection of the BOOTP protocol for the assignment of an IP address to the switch's System IP interface.</p> <p><i>dhcp</i> – Allows the selection of the DHCP protocol for the assignment of an IP address to the switch's System IP interface.</p>
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure the IP interface System:

```
DGS-3312SR:4#config ipif System ipaddress 10.48.74.122/8
Command: config ipif System ipaddress 10.48.74.122/8

Success.

DGS-3312SR:4#
```

**show ipif**

Purpose	Used to display the configuration of an IP interface on the switch.
Syntax	<b>show ipif &lt;ipif_name 12&gt;</b>
Description	This command will display the configuration of an IP interface on the switch.
Parameters	<i>&lt;ipif_name 12&gt;</i> – The name created for the IP interface to view.
Restrictions	None.

Example usage:

To display IP interface settings.

```
DGS-3312SR:4#show ipif System
Command: show ipif System

IP Interface Settings

Interface Name   : System
IP Address      : 10.48.74.122 (MANUAL)
Subnet Mask     : 255.0.0.0
VLAN Name       : default
Admin. State    : Disabled
Link Status     : Link UP
Member Ports    : 1:1-1:12

DGS-3312SR:4#
```

## delete ipif

Purpose	Used to delete the configuration of an IP interface on the switch.
Syntax	<b>delete ipif &lt;ipif_name 12   all&gt;</b>
Description	This command will delete the configuration of an IP interface on the switch.
Parameters	<p><i>&lt;ipif_name&gt;</i> – The name created for the IP interface.</p> <p><i>all</i> – Entering this parameter will delete all the IP interfaces currently configured on the switch.</p>
Restrictions	None.

Example usage:

To delete the IP interface named s2:

```
DGS-3312SR:4#delete ipif s2
Command: delete ipif s2

Success.

DGS-3312SR:4#
```

**disable ipif**

Purpose	Used to disable the configuration of an IP interface on the switch.
Syntax	<b>disable ipif &lt;ipif_name 12&gt;   all</b>
Description	This command will disable the configuration of an IP interface on the switch.
Parameters	<i>&lt;ipif_name 12&gt;</i> – The name created for the IP interface.  <i>all</i> – Entering this parameter will delete all the IP interfaces currently configured on the switch.
Restrictions	None.

Example usage:

To disable the IP interface named “s2”:

```
DGS-3312SR:4#disable ipif s2
```

```
Command: disable ipif s2
```

```
Success.
```

```
DGS-3312SR:4#
```

**IGMP COMMANDS**

The IGMP commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
config igmp	[ipif <ipif_name 12>   all] {version <value 1-2>   query_interval <sec 1-65535> max_response_time <sec 1-25>   robustness_variable <value 1-255>   last_member_query_interval <sec 1-25>   state [enable   disable]}
show igmp	{ipif <ipif_name 12>}
show igmp group	{group <group>} {ipif <ipif_name 12>}

Each command is listed, in detail, in the following sections.

<b>config igmp</b>	
Purpose	Used to configure IGMP on the switch.
Syntax	<b>config igmp [ipif &lt;ipif_name 12&gt;   all] {version &lt;value 1-2&gt;   {query_interval &lt;sec 1-65535&gt;   max_response_time &lt;sec 1-25&gt;   robustness_variable &lt;value 1-255&gt;   last_member_query_interval &lt;sec 1-25&gt;   state [enable   disable]}</b>
Description	This command allows you to configure IGMP on the switch.
Parameters	<p><i>&lt;ipif_name 12&gt;</i> – The name of the IP interface for which you want to configure IGMP.</p> <p><i>all</i> – Specifies all the IP interfaces on the switch.</p> <p><i>version &lt;value 1-2&gt;</i> – The IGMP version number.</p> <p><i>query_interval &lt;sec 1-25&gt;</i> – The time in seconds between general query transmissions, in seconds.</p> <p><i>max_response_time &lt;sec 1-25&gt;</i> – Enter the maximum time in seconds that the switch will wait for reports from members.</p> <p><i>robustness_variable &lt;value 1-255&gt;</i> – This value states the permitted packet loss that guarantees IGMP.</p> <p><i>last_member_query_interval &lt;value 1-25&gt;</i> – The Max Response Time inserted into Group-Specific Queries sent in response to Leave Group messages, and is also the amount of time between Group-Specific Query messages. The default is 1 second</p> <p><i>state [enable   disable]</i> – Enables or disables IGMP for the specified IP interface.</p>
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To configure the IGMP for the IP interface System.

```
DGS-3312SR:4#config igmp all version 1 state enable
Command: config igmp all version 1 state enable

Success.

DGS-3312SR:4#
```

## show igmp

Purpose	Used to display the IGMP configuration for the switch of for a specified IP interface.
Syntax	<b>show igmp {ipif &lt;ipif_name 12&gt;}</b>
Description	This command will display the IGMP configuration for the switch if no IP interface name is specified. If an IP interface name is specified, the command will display the IGMP configuration for that IP interface.
Parameters	<ipif_name 12> – The name of the IP interface for which the IGMP configuration will be displayed.
Restrictions	None.

Example Usage:

To display IGMP configurations:

```
DGS-3312SR:4#show igmp
Command: show igmp

IGMP Interface Configurations
QI : Query Interval           MRT : Maximum Response Time
RV : Robustness Value        LMQI : Last Member Query Interval
Interface IP Address/Netmask  Version  QI   MRT  RV   LMQI  State
-----  -
System   10.53.13.12/8           1        25   2    2    2     Enabled

Total Entries: 1

DGS-3312SR:4#
```

## show igmp group

Purpose	Used to display the switch's IGMP group table.
---------	--

**show igmp group**

Syntax	<b>show igmp group {group &lt;group&gt;} {ipif &lt;ipif_name 12&gt;}</b>
Description	This command will display the IGMP group configuration.
Parameters	<i>group &lt;group&gt;</i> – The multicast group ID which the user wishes to display.  <i>&lt;ipif_name 12&gt;</i> – The name of the IP interface the IGMP group is part of.
Restrictions	None.

Example Usage:

To display IGMP group table:

```
DGS-3312SR:4#show igmp group
Command: show igmp group
```

Interface Name	Multicast Group	Last Reporter	IP Querier	IP Expire
System	224.0.0.2	10.42.73.111	10.48.74.122	260
System	224.0.0.9	10.20.53.1	10.48.74.122	260
System	224.0.1.24	10.18.1.3	10.48.74.122	259
System	224.0.1.41	10.1.43.252	10.48.74.122	259
System	224.0.1.149	10.20.63.11	10.48.74.122	259

```
Total Entries: 5
DGS-3312SR:4#
```

## IGMP SNOOPING COMMANDS

The switch port commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
config igmp_snooping	[<vlan_name 32>   all] {host_timeout <sec 1-16711450>   router_timeout <sec 1-16711450>   leave_timer <sec 0-6711450> state [enable   disable]}
config igmp_snooping querier	[<vlan_name 32>   all] {query_interval <sec 1-65535>   max_response_time <sec 1-25>   robustness_variable <value 1-255>   last_member_query_interval <sec 1-25>   state [enable   disable]}
enable igmp snooping	{forward_mcrouter_only}
disable igmp snooping	
config router_ports	{<vlan_name 32>} [add   delete] <portlist>
show router_ports	{vlan <vlan_name 32>} {static   dynamic}
show igmp_snooping	{vlan <vlan_name 32>}
show igmp_snooping group	{vlan <vlan_name 32>}
show igmp_snooping forwarding	{vlan <vlan_name 32>}

Each command is listed, in detail, in the following sections.



**NOTE:** As a stand-alone switch or as a master switch in a switch stack, the switch number will be referred to as 15 for all configurations, graphs and tables.

### config igmp\_snooping

Purpose	Used to configure IGMP snooping on the switch.
Syntax	<b>config igmp_snooping [&lt;vlan_name 32&gt;   all] {host_timeout &lt;sec 1-16711450&gt;   router_timeout &lt;sec 1-16711450&gt;   leave_timer &lt;sec 0-16711450&gt;   state [enable   disable]}</b>
Description	This command allows you to configure IGMP snooping on the switch.
Parameters	<p>&lt;vlan_name 32&gt; – The name of the VLAN for which IGMP snooping is to be configured.</p> <p>all – Selecting this parameter will configure IGMP snooping for all VLANs on the switch.</p>

## config igmp\_snooping

*host\_timeout* <sec 1-16711450> – Specifies the maximum amount of time a host can be a member of a multicast group without the switch receiving a host membership report. The default is 260 seconds.

*router\_timeout* <sec 1-16711450> – Specifies the maximum amount of time a route can be a member of a multicast group without the switch receiving a host membership report. The default is 260 seconds.

*leave\_timer* <sec 0-16711450> – Leave timer. The default is 2 seconds.

*state* [*enable* | *disable*] – Allows you to enable or disable IGMP snooping for the specified VLAN.

### Restrictions

Only administrator-level users can issue this command.

Example usage:

To configure the igmp snooping:

```
DGS-3312SR:4#config igmp_snooping default host_timeout 250 state enable
```

```
Command: config igmp_snooping default host_timeout 250 state enable
```

```
Success.
```

```
DGS-3312SR:4#
```

## config igmp\_snooping querier

Purpose	This command configures IGMP snooping querier.
Syntax	<b>config igmp_snooping querier</b> [ <i>&lt;vlan_name 32&gt;</i>   <i>all</i> ] <b>{</b> <i>query_interval</i> <sec 1-65535>   <i>max_response_time</i> <sec 1-25>   <i>robustness_variable</i> <value 1-255>   <i>last_member_query_interval</i> <sec 1-25>   <i>state</i> [ <i>enable</i>   <i>disable</i> ] <b>}</b>
Description	Used to configure the time in seconds between general query transmissions, the maximum time in seconds to wait for reports from members and the permitted packet loss that guarantees IGMP snooping.
Parameters	<i>&lt;vlan_name 32&gt;</i> – The name of the VLAN for which IGMP snooping querier is to be configured.  <i>all</i> – Selecting this parameter will configure the IGMP snooping querier for all VLANs on the switch.  <i>query_interval</i> <sec 1-65535> – Specifies the amount of time in seconds between general query transmissions. The default

**config igmp\_snooping querier**

setting is 125 seconds.

*max\_response\_time* <sec 1-25> – Specifies the maximum time in seconds to wait for reports from members. The default setting is 10 seconds.

*robustness\_variable* <value 1-255> – Provides fine-tuning to allow for expected packet loss on a subnet. The value of the robustness variable is used in calculating the following IGMP message intervals:

- Group member interval—Amount of time that must pass before a multicast router decides there are no more members of a group on a network. This interval is calculated as follows: (robustness variable x query interval) + (1 x query response interval).
- Other querier present interval—Amount of time that must pass before a multicast router decides that there is no longer another multicast router that is the querier. This interval is calculated as follows: (robustness variable x query interval) + (0.5 x query response interval).
- Last member query count—Number of group-specific queries sent before the router assumes there are no local members of a group. The default number is the value of the robustness variable.
- By default, the robustness variable is set to 2. You might want to increase this value if you expect a subnet to be lossy.

*last\_member\_query\_interval* <sec 1-25> – The maximum amount of time between group-specific query messages, including those sent in response to leave-group messages. You might lower this interval to reduce the amount of time it takes a router to detect the loss of the last member of a group.

*state* [*enable* | *disable*] – Allows the switch to be specified as an IGMP Querier or Non-querier.

**Restrictions**

Only administrator-level users can issue this command.

Example usage:

To configure the igmp snooping:

```
DGS-3312SR:4#config igmp_snooping querier default query_interval 125
state enable

Command: config igmp_snooping querier default query_interval 125
state enable

Success.

DGS-3312SR:4#
```

**enable igmp\_snooping**

Purpose	Used to enable IGMP snooping on the switch.
Syntax	<b>enable igmp_snooping {forward_mcrouter_only}</b>
Description	This command allows you to enable IGMP snooping on the switch. If <i>forward_mcrouter_only</i> is specified, the switch will only forward all multicast traffic to the multicast router, only. Otherwise, the switch forwards all multicast traffic to any IP router.
Parameters	<i>forward_mcrouter_only</i> – Specifies that the switch should only forward all multicast traffic to a multicast-enabled router. Otherwise, the switch will forward all multicast traffic to any IP router.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To enable IGMP snooping on the switch:

```
DGS-3312SR:4#enable igmp_snooping
Command: enable igmp_snooping

Success.

DGS-3312SR:4#
```

**disable igmp\_snooping**

Purpose	Used to enable IGMP snooping on the switch.
Syntax	<b>disable igmp_snooping</b>
Description	This command disables IGMP snooping on the switch. IGMP snooping can be disabled only if IP multicast routing is not being used. Disabling IGMP snooping allows all IGMP and IP multicast traffic to flood within a given IP interface.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To disable IGMP snooping on the switch:

```
DGS-3312SR:4#disable igmp_snooping
```

```
Command: disable igmp_snooping
```

```
Success.
```

```
DGS-3312SR:4#
```

## config router\_ports

Purpose	Used to configure ports as router ports.
Syntax	<b>config router_ports &lt;vlan_name 32&gt; [add   delete] &lt;portlist&gt;</b>
Description	This command allows you to designate a range of ports as being connected to multicast-enabled routers. This will ensure that all packets with such a router as its destination will reach the multicast-enabled router – regardless of protocol, etc.
Parameters	<p><b>&lt;vlan_name 32&gt;</b> – The name of the VLAN on which the router port resides.</p> <p><b>[add   delete]</b> – Specify if you wish to add or delete the following ports as router ports.</p> <p><b>&lt;portlist&gt;</b> – Specifies a range of ports that will be configured as router ports. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.</p>
Restrictions	Only administrator-level users can issue this command.

Example usage:

To set up static router ports:

```
DGS-3312SR:4#config router_ports default add 2:1-2:10
```

```
Command: config router_ports default add 2:1-2:10
```

```
Success.
```

```
DGS-3312SR:4#
```

## show router\_ports

**show router\_ports**

Purpose	Used to display the currently configured router ports on the switch.
Syntax	<b>show router_ports {vlan &lt;vlan_name 32&gt;} {static   dynamic}</b>
Description	This command will display the router ports currently configured on the switch.
Parameters	<p>&lt;vlan_name 32&gt; – The name of the VLAN on which the router port resides.</p> <p><i>static</i> – Displays router ports that have been statically configured.</p> <p><i>dynamic</i> – Displays router ports that have been dynamically configured.</p>
Restrictions	None.

Example usage:

To display the router ports.

```
DGS-3312SR:4#show router_ports
```

```
Command: show router_ports
```

```
VLAN Name      : default
```

```
Static router port : 2:1-2:10
```

```
Dynamic router port :
```

```
VLAN Name      : vlan2
```

```
Static router port :
```

```
Dynamic router port :
```

```
Total Entries: 2
```

```
DGS-3312SR:4#
```

**show igmp\_snooping**

Purpose	Used to show the current status of IGMP snooping on the switch.
Syntax	<b>show igmp_snooping {vlan &lt;vlan_name 32&gt;}</b>
Description	This command will display the current IGMP snooping configuration on the switch.
Parameters	<vlan_name 32> – The name of the VLAN for which you want to view the IGMP snooping configuration.

**show igmp\_snooping**

Restrictions	None.
--------------	-------

Example usage:

To show igmp snooping:

```
DGS-3312SR:4#show igmp_snooping
Command: show igmp_snooping

IGMP Snooping Global State : Disabled
Multicast router Only      : Disabled

VLAN Name                   : default
Query Interval              : 125
Max Response Time          : 10
Robustness Value           : 2
Last Member Query Interval : 1
Host Timeout                : 260
Route Timeout              : 260
Leave Timer                  : 2
Querier State               : Disabled
Querier Router Behavior    : Non-Querier
State                       : Disabled

VLAN Name                   : vlan2
Query Interval              : 125
Max Response Time          : 10
Robustness Value           : 2
Last Member Query Interval : 1
Host Timeout                : 260
Route Timeout              : 260
Leave Timer                  : 2
Querier State               : Disabled
Querier Router Behavior    : Non-Querier
State                       : Disabled

Total Entries: 2

DGS-3312SR:4#
```

**show igmp\_snooping group**

Purpose	Used to display the current IGMP snooping group configuration on the switch.
---------	--

**show igmp\_snooping group**

	the switch.
Syntax	<b>show igmp_snooping group {vlan &lt;vlan_name 32&gt;}</b>
Description	This command will display the current IGMP snooping group configuration on the switch.
Parameters	<i>vlan &lt;vlan_name 32&gt;</i> – The name of the VLAN for which you want to view IGMP snooping group configuration information.
Restrictions	None.

Example usage:

To show igmp snooping group:

```
DGS-3312SR:4#show igmp_snooping group
```

```
Command: show igmp_snooping group
```

```
VLAN Name      : default
Multicast group: 224.0.0.2
MAC address    : 01-00-5E-00-00-02
Reports       : 1
Port Member   : 1:2,2:7
```

```
VLAN Name      : default
Multicast group: 224.0.0.9
MAC address    : 01-00-5E-00-00-09
Reports       : 1
Port Member   : 1:5,2:4
```

```
VLAN Name      : default
Multicast group: 234.5.6.7
MAC address    : 01-00-5E-05-06-07
Reports       : 1
Port Member   : 1:6,2:9
```

```
VLAN Name      : default
Multicast group: 236.54.63.75
MAC address    : 01-00-5E-36-3F-4B
Reports       : 1
Port Member   : 1:10,2:2
```

```
VLAN Name      : default
```

```

Multicast group: 239.255.255.250
MAC address   : 01-00-5E-7F-FF-FA
Reports       : 2
Port Member   : 1:8,2:4

```

```

VLAN Name     : default
Multicast group: 239.255.255.254
MAC address   : 01-00-5E-7F-FF-FE
Reports       : 1
Port Member   : 1:5,2:5

```

```

Total Entries : 6

```

```

DGS-3312SR:4#

```

## show igmp\_snooping forwarding

Purpose	Used to display the IGMP snooping forwarding table entries on the switch.
Syntax	<b>show igmp_snooping forwarding {vlan &lt;vlan_name 32&gt;}</b>
Description	This command will display the current IGMP snooping forwarding table entries currently configured on the switch.
Parameters	<vlan_name 32> – The name of the VLAN for which you want to view IGMP snooping forwarding table information.
Restrictions	None.

Example usage:

To view the IGMP snooping forwarding table for VLAN “Trinity”:

**DGS-3312SR:4#show igmp\_snooping forwarding vlan Trinity**

**Command: show igmp\_snooping forwarding vlan Trinity**

**VLAN Name : Trinity**

**Multicast group : 224.0.0.2**

**MAC address : 01-00-5E-00-00-02**

**Port Member : 1:11**

**Total Entries: 1**

**DGS-3312SR:4#**

## MAC NOTIFICATION COMMANDS

The MAC Notification Commands in the Command Line Interface (CLI) are listed, in the following table, along with their appropriate parameters.

Command	Parameters
enable mac_notification	
disable mac_notification	
config mac_notification	{interval <int 1-2147483647>   historysize <int 1-500>}
config mac_notification ports	[<portlist>   all] [enable   disable]
show mac_notification	
show mac_notification ports	<portlist>

Each command is listed, in detail, in the following sections.

### enable mac\_notification

Purpose	Used to enable global MAC address table notification on the switch.
Syntax	<b>enable mac_notification</b>
Description	This command is used to enable MAC Address Notification without changing configuration.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To enable MAC notification without changing basic configuration:

```
DGS-3312SR:4#enable mac_notification
Command: enable mac_notification

Success.

DGS-3312SR:4#
```

### disable mac\_notification

Purpose	Used to disable global MAC address table notification on the switch.
Syntax	<b>disable mac_notification</b>
Description	This command is used to disable MAC Address Notification without changing configuration.

**disable mac\_notification**

	changing configuration.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To disable MAC notification without changing basic configuration:

```
DGS-3312SR:4#disable mac_notification
Command: disable mac_notification

Success.

DGS-3312SR:4#
```

**config mac\_notification**

Purpose	Used to configure MAC address notification.
Syntax	<b>config mac_notification {interval &lt;int 1-2147483647&gt;   historysize &lt;int 1-500&gt;</b>
Description	MAC address notification is used to monitor MAC addresses learned and entered into the FDB.
Parameters	<i>interval</i> <int 1-2147483647> - The time in seconds between notifications. The user may choose an interval between 1 and 2,147,483,647 seconds.  <i>historysize</i> <1 - 500> - The maximum number of entries listed in the history log used for notification.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure the switch's MAC address table notification global settings:

```
DGS-3312SR:4#config mac_notification interval 1 historysize 500
Command: config mac_notification interval 1 historysize 500

Success.

DGS-3312SR:4#
```

**config mac\_notification ports**

Purpose	Used to configure MAC address notification status settings.
Syntax	<b>config mac_notification ports [&lt;portlist   all] [enable   disable]</b>
Description	MAC address notification is used to monitor MAC addresses learned and entered into the FDB.
Parameters	<p><i>&lt;portlist&gt;</i> - Specify a port or range of ports to be configured. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.</p> <p><i>all</i> – Entering this command will set all ports on the system.</p> <p><i>[enable   disable]</i> – These commands will enable or disable MAC address table notification on the switch.</p>
Restrictions	Only administrator-level users can issue this command.

Example usage:

To enable port 7 for MAC address table notification:

```
DGS-3312SR:4#config mac_notification ports 7 enable
Command: config mac_notification ports 7 enable

Success.

DGS-3312SR:4#
```

**show mac\_notification**

Purpose	Used to display the switch's MAC address table notification global settings
Syntax	<b>show mac_notification</b>
Description	This command is used to display the switch's MAC address table notification global settings.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To view the switch's MAC address table notification global settings:

**DGS-3312SR:4#show mac\_notification**

**Command: show mac\_notification**

**Global Mac Notification Settings**

**State : Enabled**

**Interval : 1**

**History Size : 1**

**DGS-3312SR:4#**

## show mac\_notification ports

Purpose	Used to display the switch's MAC address table notification status settings
Syntax	<b>show mac_notification ports &lt;portlist&gt;</b>
Description	This command is used to display the switch's MAC address table notification status settings.
Parameters	<p><i>&lt;portlist&gt;</i> - Specify a port or group of ports to be viewed. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.</p> <p>Entering this command without the parameter will display the MAC notification table for all ports.</p>
Restrictions	None

Example usage:

To display all port's MAC address table notification status settings:

**DGS-3312SR:4#show mac\_notification ports**

**Command: show mac\_notification ports**

**Port # MAC Address Table Notification State**

```

-----
1:1          Disabled
1:2          Disabled
1:3          Disabled
1:4          Disabled

```

<b>1:5</b>	<b>Disabled</b>
<b>1:6</b>	<b>Disabled</b>
<b>1:7</b>	<b>Disabled</b>
<b>1:8</b>	<b>Disabled</b>
<b>1:9</b>	<b>Disabled</b>
<b>1:10</b>	<b>Disabled</b>
<b>1:11</b>	<b>Disabled</b>
<b>1:12</b>	<b>Disabled</b>

**CTRL+C ESC q Quit SPACE n Next Page p Previous Page r Refresh**

## ACCESS AUTHENTICATION CONTROL COMMANDS

The TACACS / XTACACS / TACACS+ / RADIUS commands let you secure access to the switch using the TACACS / XTACACS / TACACS+ / RADIUS protocols. When a user logs in to the switch or tries to access the administrator level privilege, he or she is prompted for a password. If TACACS / XTACACS / TACACS+ / RADIUS authentication is enabled on the switch, it will contact a TACACS / XTACACS / TACACS+ / RADIUS server to verify the user. If the user is verified, he or she is granted access to the switch.

There are currently three versions of the TACACS security protocol, each a separate entity. The switch's software supports the following versions of TACACS:

- TACACS (Terminal Access Controller Access Control System) — Provides password checking and authentication, and notification of user actions for security purposes utilizing via one or more centralized TACACS servers, utilizing the UDP protocol for packet transmission.
- Extended TACACS (XTACACS) — An extension of the TACACS protocol with the ability to provide more types of authentication requests and more types of response codes than TACACS. This protocol also uses UDP to transmit packets.
- TACACS+ (Terminal Access Controller Access Control System plus) — Provides detailed access control for authentication for network devices. TACACS+ is facilitated through Authentication commands via one or more centralized servers. The TACACS+ protocol encrypts all traffic between the switch and the TACACS+ daemon, using the TCP protocol to ensure reliable delivery

In order for the TACACS / XTACACS / TACACS+ / RADIUS security function to work properly, a TACACS / XTACACS / TACACS+ / RADIUS server must be configured on a device other than the switch, called a *server host* and it must include usernames and passwords for authentication. When the user is prompted by the switch to enter usernames and passwords for authentication, the switch contacts the TACACS / XTACACS / TACACS+ / RADIUS server to verify, and the server will respond with one of three messages:

- A) The server verifies the username and password, and the user is granted normal user privileges on the switch.
- B) The server will not accept the username and password and the user is denied access to the switch.
- C) The server doesn't respond to the verification query. At this point, the switch receives the timeout from the server and then moves to the next method of verification configured in the method list.

The Switch also supports the RADIUS protocol for authentication using the Access Authentication Control commands. RADIUS or Remote Authentication Dial In User Server also uses a remote server for authentication and can be responsible for receiving user connection requests, authenticating the user and returning all configuration information necessary for the client to deliver service through the user. RADIUS may be facilitated on this Switch using the commands listed in this section.

The switch has four built-in *server groups*, one for each of the TACACS, XTACACS and TACACS+ / RADIUS protocols. These built-in *server groups* are used to authenticate users trying to access the switch. The users will set *server hosts* in a preferable order in the built-in *server group* and when a user tries to gain access to the switch, the switch will ask the first *server host* for authentication. If no authentication is made, the second *server host* in the list will be queried, and so on. The built-in *server group* can only have hosts that are running the specified protocol. For example, the TACACS *server group* can only have TACACS *server hosts*.

The administrator for the switch may set up 6 different authentication techniques per user-defined *method list* (TACACS / XTACACS / TACACS+ / RADIUS / local / none) for authentication. These techniques will be listed in an order preferable, and defined by the user for normal user authentication on the switch, and may contain up to eight authentication techniques. When a user attempts to access the switch, the switch will select the first technique listed for authentication. If the first technique goes through its *server hosts* and no authentication is returned, the switch will then go to the next technique listed in the server group for authentication, until the authentication has been verified or denied, or the list is exhausted.

Please note that user granted access to the switch will be granted normal user privileges on the switch. To gain access to admin level privileges, the user must enter the *enable admin* command and then enter a password, which was previously configured by the administrator of the switch.



**NOTE:** TACACS, XTACACS and TACACS+ are separate entities and are not compatible. The switch and the server must be configured exactly the same, using the same protocol. (For example, if the switch is set up for TACACS authentication, so must be the host server.)

The Access Authentication Control commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
enable authen_policy	
disable authen_policy	
show authen_policy	
create authen_login method_list_name	<string 15>
config authen_login	[default   method_list_name <string 15>] method {tacacs   xtacacs   tacacs+   radius   server_group <string 15>   local   none}
delete authen_login method_list_name	<string 15>
show authen_login	{default   method_list_name <string 15>   all}
create authen_enable method_list_name	<string 15>
config authen_enable	[default   method_list_name <string 15>] method {tacacs   xtacacs   tacacs+   radius   server_group <string 15>   local_enable   none}
delete authen_enable method_list_name	<string 15>
show authen_enable	[default   method_list_name <string 15>   all]
config authen application	{console   telnet   ssh   http   all} [login   enable] [default   method_list_name <string 15>]
show authen application	
create authen server_group	<string 15>
config authen server_group	[tacacs   xtacacs   tacacs+   radius   <string 15>] [add   delete] server_host <ipaddr> protocol [tacacs   xtacacs   tacacs+   radius]
delete authen server_group	<string 15>
show authen server_group	{<string 15>}
create authen server_host	<ipaddr> protocol [tacacs   xtacacs   tacacs+   radius] {port <int 1-65535>   key [<key_string 254>   none]   timeout <int 1-255>   retransmit <int 1-255>}
config authen server_host	<ipaddr> protocol [tacacs   xtacacs   tacacs+   radius] {port <int 1-65535>   key [<key_string 254>   none]   timeout <int 1-255>   retransmit <int 1-255>}
delete authen server_host	<ipaddr> protocol [tacacs   xtacacs   tacacs+

Command	Parameters
	radius]
show authen server_host	
config authen parameter response_timeout	<int 1-255>
config authen parameter attempt	<int 1-255>
show authen parameter	
enable admin	
config admin local_enable	<password 15>

Each command is listed, in detail, in the following sections.

<b>enable authen_policy</b>	
Purpose	Used to enable system access authentication policy.
Syntax	<b>enable authen_policy</b>
Description	This command will enable an administrator-defined authentication policy for users trying to access the switch. When enabled, the device will check the method list and choose a technique for user authentication upon login.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To enable the system access authentication policy:

```
DGS-3312SR:4#enable authen_policy
Command: enable authen_policy

Success.

DGS-3312SR:4#
```

<b>disable authen_policy</b>	
Purpose	Used to disable system access authentication policy.
Syntax	<b>disable authen_policy</b>
Description	This command will disable the administrator-defined authentication policy for users trying to access the switch. When disabled, the switch will access the local user account database for username and password verification. In addition, the switch will now accept the local enable password as the authentication for normal users attempting to access administrator level privileges.

**disable authen\_policy**

Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To disable the system access authentication policy:

```
DGS-3312SR:4#disable authen_policy
```

```
Command: disable authen_policy
```

```
Success.
```

```
DGS-3312SR:4#
```

**show authen\_policy**

Purpose	Used to display the system access authentication policy status on the switch.
Syntax	<b>show authen_policy</b>
Description	This command will show the current status of the access authentication policy on the switch
Parameters	None.
Restrictions	None.

Example usage:

To display the system access authentication policy:

```
DGS-3312SR:4#show authen_policy
```

```
Command: show authen_policy
```

```
Authentication Policy: Enabled
```

```
DGS-3312SR:4#
```

**create authen\_login method\_list\_name**

Purpose	Used to create a user defined method list of authentication methods for users logging on to the switch.
Syntax	<b>create authen_login method_list_name &lt;string 15&gt;</b>

**create authen\_login method\_list\_name**

Description	This command is used to create a list for authentication techniques for user login. The switch can support up to eight method lists, but one is reserved as a default and cannot be deleted. Multiple method lists must be created and configured separately.
Parameters	< <i>string 15</i> > - Enter an alphanumeric string of up to 15 characters to define the given <i>method list</i> .
Restrictions	Only administrator-level users can issue this command.

Example usage:

To create the method list “Trinity.”:

```
DGS-3312SR:4#create authen_login method_list_name Trinity
Command: create authen_login method_list_name Trinity

Success.

DGS-3312SR:4#
```

**config authen\_login**

Purpose	Used to configure a user-defined or default <i>method list</i> of authentication methods for user login.
Syntax	<b>config authen_login [default   method_list_name &lt;string 15&gt;] method {tacacs   xtacacs   tacacs+   radius   server_group &lt;string 15&gt;   local   none}</b>
Description	<p>This command will configure a user-defined or default <i>method list</i> of authentication methods for users logging on to the switch. The sequence of methods implemented in this command will affect the authentication result. For example, if a user enters a sequence of methods like <i>tacacs – xtacacs – local</i>, the switch will send an authentication request to the first <i>tacacs</i> host in the server group. If no response comes from the server host, the switch will send an authentication request to the second <i>tacacs</i> host in the server group and so on, until the list is exhausted. At that point, the switch will restart the same sequence with the following protocol listed, <i>xtacacs</i>. If no authentication takes place using the <i>xtacacs</i> list, the <i>local</i> account database set in the switch is used to authenticate the user. When the local method is used, the privilege level will be dependant on the local account privilege configured on the switch.</p> <p>Successful login using any of these methods will give the user a “user” privilege only. If the user wishes to upgrade his or her status to the administrator level, the user must implement the <i>enable admin</i> command, followed by a previously configured password. (See the <b><i>enable admin</i></b> part of this section for more detailed information, concerning the <b><i>enable admin</i></b> command.)</p>

## config authen\_login

### Parameters

*default* – The default method list for access authentication, as defined by the user. The user may choose one or a combination of up to four (4) of the following authentication methods:

- *tacacs* – Adding this parameter will require the user to be authenticated using the TACACS protocol from the remote TACACS *server hosts* of the TACACS *server group* list.
- *xtacacs* – Adding this parameter will require the user to be authenticated using the XTACACS protocol from the remote XTACACS *server hosts* of the XTACACS *server group* list.
- *tacacs+* – Adding this parameter will require the user to be authenticated using the TACACS+ protocol from the remote TACACS+ *server hosts* of the TACACS+ *server group* list.
- *radius* – Adding this parameter will require the user to be authenticated using the RADIUS protocol from the remote RADIUS *server hosts* of the RADIUS *server group* list.
- *server\_group <string 15>* - Adding this parameter will require the user to be authenticated using a user-defined server group previously configured on the switch.
- *local* - Adding this parameter will require the user to be authenticated using the local *user account* database on the switch.
- *none* – Adding this parameter will require no authentication to access the switch.

## config\_authen\_login

*method\_list\_name* – Enter a previously implemented method list name defined by the user. The user may add one, or a combination of up to four (4) of the following authentication methods to this method list:

- *tacacs* – Adding this parameter will require the user to be authenticated using the TACACS protocol from a remote TACACS server.
- *xtacacs* – Adding this parameter will require the user to be authenticated using the XTACACS protocol from a remote XTACACS server.
- *tacacs+* – Adding this parameter will require the user to be authenticated using the TACACS protocol from a remote TACACS server.
- *radius* – Adding this parameter will require the user to be authenticated using the RADIUS protocol from a remote RADIUS server.
- *server\_group <string 15>* - Adding this parameter will require the user to be authenticated using a user-defined server group previously configured on the switch.
- *local* - Adding this parameter will require the user to be authenticated using the local *user account* database on the switch.
- *none* – Adding this parameter will require no authentication to access the switch.



**NOTE:** Entering *none* or *local* as an authentication protocol will override any other authentication that follows it on a method list or on the default method list.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To configure the user defined method list “Trinity” with authentication methods tacacs, xtacacs and local, in that order.

```
DGS-3312SR:4#config_authen_login method_list_name Trinity method
tacacs xtacacs local

Command: config_authen_login method_list_name Trinity method tacacs
xtacacs local

Success.

DGS-3312SR:4#
```

Example usage:

To configure the default method list with authentication methods `xtacacs`, `tacacs+` and `local`, in that order:

```
DGS-3312SR:4#config authen_login default method xtacacs tacacs+ local
```

```
Command: config authen_login default method xtacacs tacacs+ local
```

```
Success.
```

```
DGS-3312SR:4#
```

## delete authen\_login method\_list\_name

Purpose	Used to delete a previously configured user defined method list of authentication methods for users logging on to the switch.
Syntax	<b>delete authen_login method_list_name &lt;string 15&gt;</b>
Description	This command is used to delete a list for authentication methods for user login.
Parameters	<string 15> - Enter an alphanumeric string of up to 15 characters to define the given <i>method list</i> the user wishes to delete.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To delete the method list name “Trinity”:

```
DGS-3312SR:4#delete authen_login method_list_name Trinity
```

```
Command: delete authen_login method_list_name Trinity
```

```
Success.
```

```
DGS-3312SR:4#
```

## show authen\_login

Purpose	Used to display a previously configured user defined method list of authentication methods for users logging on to the switch.
Syntax	<b>show authen_login [default   method_list_name &lt;string 15&gt;   all]</b>
Description	This command is used to show a list of authentication methods for user login. The window will display the following parameters: <ul style="list-style-type: none"> <li>▪ Method List Name – The name of a previously configured method list name.</li> <li>▪ Priority – Defines which order the method list protocols will be queried for authentication when a user attempts to log on</li> </ul>

**show authen\_login**

to the switch. Priority ranges from 1 (highest) to 4 (lowest).

- Method Name – Defines which security protocols are implemented, per method list name.
- Comment – Defines the type of Method. *User-defined Group* refers to server group defined by the user. *Built-in Group* refers to the TACACS, XTACACS, TACACS+ or RADIUS security protocols which are permanently set in the switch. *Keyword* refers to authentication using a technique *instead* of TACACS/XTACACS/TACACS+ or RADIUS, which are local (authentication through the user account on the switch) and none (no authentication necessary to access any function on the switch).

**Parameters**      *default* – Entering this parameter will display the default method list for users logging on to the switch.

*method\_list\_name* <string 15> - Enter an alphanumeric string of up to 15 characters to define the given *method list* the user wishes to view.

*all* – Entering this parameter will display all the authentication login methods currently configured on the switch.

**Restrictions**      Only administrator-level users can issue this command.

Example usage:

To view all method list configurations:

```
DGS-3312SR:4#show authen_login method_list_name all
Command: show authen_login method_list_name all

Method List Name Priority Method Name Comment
-----
                    1      tacacs+   Built-in Group
GoHabs!           2      radius   Built-in Group
Trinity           3      Darren   User-defined Group
default           4      local    Keyword

DGS-3312SR:4#
```

**create authen\_enable method\_list\_name**

**Purpose**      Used to create a user-defined method list of authentication methods for promoting normal user level privileges to Administrator level privileges on the switch.

**create authen\_enable method\_list\_name**

Syntax	<b>create authen_enable method_list_name &lt;string 15&gt;</b>
Description	This command is used to promote users with normal level privileges to Administrator level privileges using authentication methods on the switch. Once a user acquires normal user level privileges on the switch, he or she must be authenticated by a method on the switch to gain administrator privileges on the switch, which is defined by the Administrator. A maximum of eight (8) enable method lists can be implemented on the switch.
Parameters	<string 15> - Enter an alphanumeric string of up to 15 characters to define the given <i>enable method list</i> the user wishes to create.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To create a user-defined method list, named “Permit” for promoting user privileges to Administrator privileges:

```
DGS-3312SR:4#create authen_enable method_list_name Permit
```

```
Command: show authen_login method_list_name Permit
```

```
Success.
```

```
DGS-3312SR:4#
```

**config authen\_enable**

Purpose	Used to configure a user-defined method list of authentication methods for promoting normal user level privileges to Administrator level privileges on the switch.
Syntax	<b>config authen_enable [default   method_list_name &lt;string 15&gt;] method {tacacs   xtacacs   tacacs+   radius   server_group &lt;string 15&gt;   local_enable   none}</b>
Description	<p>This command is used to promote users with normal level privileges to Administrator level privileges using authentication methods on the switch. Once a user acquires normal user level privileges on the switch, he or she must be authenticated by a method on the switch to gain administrator privileges on the switch, which is defined by the Administrator. A maximum of eight (8) enable method lists can be implemented on the switch.</p> <p>The sequence of methods implemented in this command will affect the authentication result. For example, if a user enters a sequence of methods like <i>tacacs</i> – <i>xtacacs</i> – <i>local_enable</i>, the switch will send an authentication request to the first <i>tacacs</i> host in the server group. If no verification is found, the switch will send an authentication request to the second <i>tacacs</i> host in the server group and so on, until the list is exhausted. At that point, the switch will restart the same sequence with the following protocol listed, <i>xtacacs</i>. If no authentication takes place using the <i>xtacacs</i> list, the <i>local_enable</i></p>

## **config authn\_enable**

password set in the switch is used to authenticate the user.

Successful authentication using any of these methods will give the user a "Admin" privilege.

## config\_authen\_enable

### Parameters

*default* – The default method list for administration rights authentication, as defined by the user. The user may choose one or a combination of up to four (4) of the following authentication methods:

- *tacacs* – Adding this parameter will require the user to be authenticated using the TACACS protocol from the remote TACACS *server hosts* of the TACACS *server group* list.
- *xtacacs* – Adding this parameter will require the user to be authenticated using the XTACACS protocol from the remote XTACACS *server hosts* of the XTACACS *server group* list.
- *tacacs+* – Adding this parameter will require the user to be authenticated using the TACACS+ protocol from the remote TACACS+ *server hosts* of the TACACS+ *server group* list.
- *radius* – Adding this parameter will require the user to be authenticated using the RADIUS protocol from the remote RADIUS *server hosts* of the RADIUS *server group* list.
- *server\_group <string 15>* - Adding this parameter will require the user to be authenticated using a user-defined server group previously configured on the switch.
- *local\_enable* - Adding this parameter will require the user to be authenticated using the local *user account* database on the switch.
- *none* – Adding this parameter will require no authentication to access the switch.

*method\_list\_name* – Enter a previously implemented method list name defined by the user (*create\_authen\_enable*). The user may add one, or a combination of up to four (4) of the following authentication methods to this method list:

- *tacacs* – Adding this parameter will require the user to be authenticated using the TACACS protocol from a remote TACACS server.
- *xtacacs* – Adding this parameter will require the user to be authenticated using the XTACACS protocol from a remote XTACACS server.
- *tacacs+* – Adding this parameter will require the user to be authenticated using the TACACS+ protocol from a remote TACACS+ server.
- *radius* – Adding this parameter will require the user to be authenticated using the RADIUS protocol from a remote RADIUS server.
- *server\_group <string 15>* - Adding this parameter will require the user to be authenticated using a user-defined server group previously configured on the switch.

## config authen\_enable

- *local\_enable* - Adding this parameter will require the user to be authenticated using the local *user account* database on the switch. The local enable password of the device can be configured using the “*config admin local\_password*” command.
- *none* – Adding this parameter will require no authentication to access the administration level privileges on the switch.

Restrictions            Only administrator-level users can issue this command.

Example usage:

To configure the user defined method list “Permit” with authentication methods tacacs, xtacacs and local, in that order.

```
DGS-3312SR:4#config authen_enable method_list_name Trinity method
tacacs xtacacs local
Command: config authen_enable method_list_name Trinity method tacacs
xtacacs local

Success.

DGS-3312SR:4#
```

Example usage:

To configure the default method list with authentication methods xtacacs, tacacs+ and local, in that order:

```
DGS-3312SR:4#config authen_enable default method xtacacs tacacs+ local
Command: config authen_enable default method xtacacs tacacs+ local

Success.

DGS-3312SR:4#
```

## delete authen\_enable method\_list\_name

Purpose	Used to delete a user-defined method list of authentication methods for promoting normal user level privileges to Administrator level privileges on the switch.
Syntax	<b>delete authen_enable method_list_name &lt;string 15&gt;</b>
Description	This command is used to delete a user-defined method list of authentication methods for promoting user level privileges to Administrator level privileges.
Parameters	<string 15> Enter an alphanumeric string of up to 15 characters to define the given enable method list the user wishes to delete.

**delete authn\_enable method\_list\_name**

define the given *enable method list* the user wishes to delete.

Restrictions Only administrator-level users can issue this command.

Example usage:

To delete the user-defined method list “Permit”

```
DGS-3312SR:4#delete authn_enable method_list_name Permit
```

```
Command: delete authn_enable method_list_name Permit
```

```
Success.
```

```
DGS-3312SR:4#
```

**show authn\_enable**

**Purpose** Used to display the method list of authentication methods for promoting normal user level privileges to Administrator level privileges on the switch.

**Syntax** **show authn\_enable [default | method\_list\_name <string 15> | all]**

**Description** This command is used to delete a user-defined method list of authentication methods for promoting user level privileges to Administrator level privileges. The window will display the following parameters:

- Method List Name – The name of a previously configured method list name.
- Priority – Defines which order the method list protocols will be queried for authentication when a user attempts to log on to the switch. Priority ranges from 1(highest) to 4 (lowest).
- Method Name – Defines which security protocols are implemented, per method list name.
- Comment – Defines the type of Method. *User-defined Group* refers to *server groups* defined by the user. *Built-in Group* refers to the TACACS/XTACACS/TACACS+/RADIUS security protocols which are permanently set in the switch. *Keyword* refers to authentication using a technique INSTEAD of TACACS/XTACACS/TACACS+/RADIUS which are local (authentication through the *local\_enable* password on the switch) and none (no authentication necessary to access any function on the switch).

**Parameters** *default* – Entering this parameter will display the default method list for users attempting to gain access to Administrator level privileges on the switch.

*method\_list\_name <string 15>* Enter an alphanumeric string of up to

**show authn\_enable**

15 characters to define the given *method list* the user wishes to view.

*all* – Entering this parameter will display all the authentication login methods currently configured on the switch.

Restrictions      None

Example usage:

To display all method lists for promoting user level privileges to administrator level privileges.

```
DGS-3312SR:4#show authn_enable all
Command: show authn_enable all

Method List Name  Priority  Method Name  Comment
-----
Permit            1        tacacs+      Built-in Group
                  2        tacacs       Built-in Group
                  3        Darren       User-defined Group
                  4        local        Keyword

default           1        tacacs+      Built-in Group
                  2        local        Keyword

Total Entries : 2

DGS-3312SR:4#
```

**config authn application**

Purpose	Used to configure various applications on the switch for authentication using a previously configured method list.
Syntax	<b>config authn application [console   telnet   ssh   http   all] [login   enable] [default   method_list_name &lt;string 15&gt;]</b>
Description	This command is used to configure switch configuration applications (console, telnet, ssh, web) for login at the user level and at the administration level ( <i>authn_enable</i> ) utilizing a previously configured method list.
Parameters	<p><i>application</i> – Choose the application to configure. The user may choose one of the following four applications to configure.</p> <ul style="list-style-type: none"> <li>▪ <i>console</i> – Choose this parameter to configure the command line interface login method.</li> <li>▪ <i>telnet</i> – Choose this parameter to configure the telnet login</li> </ul>

## config authen application

method.

- *ssh* – Choose this parameter to configure the ssh login method.
- *http* – Choose this parameter to configure the web interface login method.
- *all* – Choose this parameter to configure all applications (console, telnet, web) login method.

*login* – Use this parameter to configure an application for normal login on the user level, using a previously configured method list.

*enable* - Use this parameter to configure an application for upgrading a normal user level to administrator privileges, using a previously configured method list.

*default* – Use this parameter to configure an application for user authentication using the default method list.

*method\_list\_name* <string 15> - Use this parameter to configure an application for user authentication using a previously configured method list. Enter a alphanumeric string of up to 15 characters to define a previously configured method list.

Restrictions      Only administrator-level users can issue this command.

Example usage:

To configure the default method list for the web interface:

```
DGS-3312SR:4#config authen application http login default
```

```
Command: config authen application http login default
```

```
Success.
```

```
DGS-3312SR:4#
```

## show authen application

Purpose	Used to display authentication methods for the various applications on the switch.
Syntax	<b>show authen application</b>
Description	This command will display all of the authentication method lists (login, enable administrator privileges) for switch configuration applications (console, telnet, ssh, web) currently configured on the switch.
Parameters	None.
Restrictions	None.

Example usage:

To display the login and enable method list for all applications on the switch:

```
DGS-3312SR:4#show authen application
Command: show authen application

Application  Login Method List  Enable Method List
-----
Console      default             default
Telnet       Trinity             default
SSH          default             default
HTTP         default             default

DGS-3312SR:4#
```

## create authen server\_host

Purpose	Used to create an authentication server host.
Syntax	<b>create authen server_host &lt;ipaddr&gt; protocol [tacacs   xtacacs   tacacs+   radius] {port &lt;int 1-65535&gt;   key [&lt;key_string 254&gt;   none]   timeout &lt;int 1-255&gt;   retransmit &lt;1-255&gt;}</b>
Description	This command will create an authentication server host for the TACACS/XTACACS/TACACS+/RADIUS security protocols on the switch. When a user attempts to access the switch with authentication protocol enabled, the switch will send authentication packets to a remote TACACS/XTACACS/TACACS+/RADIUS server host on a remote host. The TACACS/XTACACS/TACACS+/RADIUS server host will then verify or deny the request and return the appropriate message to the switch. More than one authentication protocol can be run on the same physical server host but, remember that TACACS/XTACACS/TACACS+/RADIUS are separate entities and are not compatible with each other. The maximum supported number of server hosts is 16.
Parameters	<p><i>server_host</i> &lt;ipaddr&gt; - The IP address of the remote server host the user wishes to add.</p> <p><i>protocol</i> – The protocol used by the server host. The user may choose one of the following:</p> <ul style="list-style-type: none"> <li>▪ <i>tacacs</i> – Enter this parameter if the server host utilizes the TACACS protocol.</li> <li>▪ <i>xtacacs</i> - Enter this parameter if the server host utilizes the XTACACS protocol.</li> <li>▪ <i>tacacs+</i> - Enter this parameter if the server host utilizes the TACACS+ protocol.</li> </ul>

**create authen server\_host**

- *radius* - Enter this parameter if the server host utilizes the RADIUS protocol.

*port* <int 1-65535> - Enter a number between 1 and 65535 to define the virtual port number of the authentication protocol on a server host. The default port number is 49 for TACACS/XTACACS/TACACS+ servers but the user may set a unique port number for higher security. The default port number of the authentication protocol on the RADIUS server is 1812

*key* <key\_string 254> - Authentication key to be shared with a configured TACACS+ server only. Specify an alphanumeric string up to 254 characters.

*timeout* <int 1-255> - Enter the time in seconds the switch will wait for the server host to reply to an authentication request. The default value is 5 seconds.

*retransmit* <int 1-255> - Enter the value in the retransmit field to change how many times the device will resend an authentication request when the TACACS/XTACACS/TACACS+ or RADIUS server does not respond.

**Restrictions**

Only administrator-level users can issue this command.

Example usage:

To create a TACACS+ authentication server host, with port number 1234, a timeout value of 10 seconds and a retransmit count of 5.

```
DGS-3312SR:4#create authen server_host 10.1.1.121 protocol tacacs+ port
1234 timeout 10 retransmit 5
```

```
Command: create authen server_host 10.1.1.121 protocol tacacs+ port 1234
timeout 10 retransmit 5
```

```
Success.
```

```
DGS-3312SR:4#
```

**config authen server\_host**

Purpose	Used to configure a user-defined authentication server host.
Syntax	<b>config authen server_host &lt;ipaddr&gt; protocol [tacacs   xtacacs   tacacs+] {port &lt;int 1-65535&gt;   key [&lt;key_string 254&gt;   none]   timeout &lt;int 1-255&gt;   retransmit &lt; 1-255&gt;}</b>
Description	This command will configure a user-defined authentication server host for the TACACS/XTACACS/TACACS+/RADIUS security protocols on the switch. When a user attempts to access the switch with authentication protocol enabled, the switch will send authentication packets to a remote TACACS/XTACACS/TACACS+/RADIUS server host on a remote

**config authn server\_host**

host. The TACACS/XTACACS/TACACS+/RADIUS server host will then verify or deny the request and return the appropriate message to the switch. More than one authentication protocol can be run on the same physical server host but, remember that TACACS/XTACACS/TACACS+/RADIUS are separate entities and are not compatible with each other. The maximum supported number of server hosts is 16.

**Parameters**

*server\_host* <ipaddr> - The IP address of the remote server host the user wishes to alter.

*protocol* – The protocol used by the server host. The user may choose one of the following:

- *tacacs* – Enter this parameter if the server host utilizes the TACACS protocol.
- *xtacacs* - Enter this parameter if the server host utilizes the XTACACS protocol.
- *tacacs+* - Enter this parameter if the server host utilizes the TACACS+ protocol.
- *radius*- Enter this parameter if the server host utilizes the RADIUS protocol.

*port* <int 1-65535> Enter a number between 1 and 65535 to define the virtual port number of the authentication protocol on a server host. The default port number is 49 for TACACS/XTACACS/TACACS+ servers but the user may set a unique port number for higher security.

*key* <key\_string 254> - Authentication key to be shared with a configured TACACS+ server only. Specify an alphanumeric string up to 254 characters or choose none.

*timeout* <int 1-255> - Enter the time in seconds the switch will wait for the server host to reply to an authentication request. The default value is 5 seconds.

*retransmit* <int 1-255> - Enter the value in the retransmit field to change how many times the device will resend an authentication request when the TACACS, XTACACS server does not respond. This field is inoperable for the TACACS+ protocol.

**Restrictions**

Only administrator-level users can issue this command.

**Example usage:**

To configure a TACACS authentication server host, with port number 4321, a timeout value of 12 seconds and a retransmit count of 4.

```
DGS-3312SR:4#config authn server_host 10.1.1.121 protocol tacacs port 4321 timeout 12 retransmit 4
Command: config authn server_host 10.1.1.121 protocol tacacs port 4321 timeout 12 retransmit 4
```

**Success.**

**DGS-3312SR:4#**

## delete authen server\_host

Purpose	Used to delete a user-defined authentication server host.
Syntax	<b>delete authen server_host &lt;ipaddr&gt; protocol [tacacs   xtacacs   tacacs+]</b>
Description	This command is used to delete a user-defined authentication server host previously created on the switch.
Parameters	<p><i>server_host</i> &lt;ipaddr&gt; - The IP address of the remote server host the user wishes to delete.</p> <p><i>protocol</i> – The protocol used by the server host the user wishes to delete. The user may choose one of the following:</p> <ul style="list-style-type: none"> <li>▪ <i>tacacs</i> – Enter this parameter if the server host utilizes the TACACS protocol.</li> <li>▪ <i>xtacacs</i> - Enter this parameter if the server host utilizes the XTACACS protocol.</li> <li>▪ <i>tacacs+</i> - Enter this parameter if the server host utilizes the TACACS+ protocol.</li> <li>▪ <i>radius</i> - Enter this parameter if the server host utilizes the RADIUS protocol.</li> </ul>
Restrictions	Only administrator-level users can issue this command.

Example usage:

To delete a user-defined TACACS+ authentication server host:

**DGS-3312SR:4#delete authen server\_host 10.1.1.121 protocol tacacs+**

**Command: delete authen server\_host 10.1.1.121 protocol tacacs+**

**Success.**

**DGS-3312SR:4#**

## show authen server\_host

Purpose	Used to view a user-defined authentication server host.
Syntax	<b>show authen server_host</b>

**show authen server\_host**

Description	<p>This command is used to view user-defined authentication server hosts previously created on the switch.</p> <p>The following parameters are displayed:</p> <p>IP address – The IP address of the authentication server host.</p> <p>Protocol – The protocol used by the server host. Possible results will include tacacs, xtacacs, tacacs+ and radius.</p> <p>Port – The virtual port number on the server host. The default value is 49.</p> <p>Timeout - The time in seconds the switch will wait for the server host to reply to an authentication request.</p> <p>Retransmit - The value in the retransmit field denotes how many times the device will resend an authentication request when the TACACS server does not respond. This field is inoperable for the tacacs+ protocol.</p> <p>Key - Authentication key to be shared with a configured TACACS+ server only.</p>
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To view authentication server hosts currently set on the switch:

```

DGS-3312SR:4#show authen server_host
Command: show authen server_host

IP Address  Protocol  Port  Timeout  Retransmit  Key
-----
10.53.13.94  TACACS   49    5         2           No Use

Total Entries : 1

DGS-3312SR:4#

```

**create authen server\_group**

Purpose	Used to create a user-defined authentication server group.
Syntax	<b>create authen server_group &lt;string 15&gt;</b>
Description	This command will create an authentication server group. A server group is a technique used to group

**create authn server\_group**

	TACACS/XTACACS/TACACS+/RADIUS server hosts into user defined categories for authentication using method lists. The user may add up to eight (8) authentication server hosts to this group using the <b>config authn server_group</b> command.
Parameters	<string 15> Enter an alphanumeric string of up to 15 characters to define the newly created server group.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To create the server group “group\_1”:

```
DGS-3312SR:4#create server_group group_1
```

```
Command: create server_group group_1
```

```
Success.
```

```
DGS-3312SR:4#
```

**config authn server\_group**

Purpose	Used to create a user-defined authentication server group.
Syntax	<b>config authn server_group [tacacs   xtacacs   tacacs+   radius &lt;string 15&gt;] [add   delete] server_host &lt;ipaddr&gt; protocol [tacacs   xtacacs   tacacs+   radius]</b>
Description	This command will configure an authentication server group. A server group is a technique used to group TACACS/XTACACS/TACACS+/RADIUS server hosts into user defined categories for authentication using method lists. The user may define the type of server group by protocol or by previously defined server group. Up to eight (8) authentication server hosts may be added to any particular group
Parameters	<p><i>server_group</i> - The user may define the group by protocol groups built into the switch (TACACS/XTACACS/TACACS+/RADIUS), or by a user-defined group previously created using the <b>create authn server_group</b> command.</p> <ul style="list-style-type: none"> <li>▪ <i>tacacs</i> – Use this parameter to utilize the built-in TACACS server protocol on the switch. Only server hosts utilizing the TACACS protocol may be added to this group.</li> <li>▪ <i>xtacacs</i> – Use this parameter to utilize the built-in XTACACS server protocol on the switch. Only server hosts utilizing the XTACACS protocol may be added to this group.</li> <li>▪ <i>tacacs+</i> – Use this parameter to utilize the built-in TACACS+ server protocol on the switch. Only server hosts utilizing the TACACS+ protocol may be added to this group.</li> </ul>

**config authen server\_group**

- *radius* – Use this parameter to utilize the built-in RADIUS server protocol on the switch. Only server hosts utilizing the RADIUS protocol may be added to this group.
- *<string 15>* Enter an alphanumeric string of up to 15 characters to define the previously created server group. This group may add any combination of server hosts to it, regardless of protocol.

*[add | delete]* – Enter the correct parameter to add or delete a server host from a server group.

*server\_host <ipaddr>* - Enter the IP address of the previously configured server host the user wishes to add or delete.

*protocol* – Enter the protocol utilized by the server host. There are three options:

- *tacacs* – Use this parameter to define the protocol if the server host is using the TACACS authentication protocol.
- *xtacacs* – Use this parameter to define the protocol if the server host is using the XTACACS authentication protocol.
- *tacacs+* – Use this parameter to define the protocol if the server host is using the TACACS+ authentication protocol.
- *radius* – Use this parameter to define the protocol if the server host is using the RADIUS authentication protocol.

Restrictions                      Only administrator-level users can issue this command.

Example usage:

To add an authentication host to server group “group\_1”:

```
DGS-3312SR:4#config authen server_group group_1 add server_host
10.1.1.121 protocol tacacs+
```

```
Command: config authen server_group group_1 add server_host
10.1.1.121 protocol tacacs+
```

```
Success.
```

```
DGS-3312SR:4#
```

**delete authen server\_group**

Purpose                              Used to delete a user-defined authentication server group.

Syntax                              **delete authen server\_group <string 15>**

Description                        This command will delete an authentication server group.

**delete authn server\_group**

Parameters	<string 15> - Enter an alphanumeric string of up to 15 characters to define the previously created server group the user wishes to delete.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To delete the server group “group\_1”:

```
DGS-3312SR:4#delete server_group group_1
```

```
Command: delete server_group group_1
```

```
Success.
```

```
DGS-3312SR:4#
```

**show authn server\_group**

Purpose	Used to view authentication server groups on the switch.
Syntax	<b>show authn server_group &lt;string 15&gt;</b>
Description	This command will display authentication server groups currently configured on the switch.  This command will display the following fields:  Group Name: The name of the server group currently configured on the switch, including built in groups and user defined groups.  IP Address: The IP address of the server host.  Protocol: The authentication protocol used by the server host.
Parameters	<string 15> - Enter an alphanumeric string of up to 15 characters to define the previously created server group the user wishes to view.  Entering this command without the <string> parameter will display all authentication server groups on the switch.
Restrictions	None.

```
DGS-3312SR:4#show authn server_group
```

```
Command: show authn server_group
```

Group Name	IP Address	Protocol
-----	-----	-----
Darren	10.53.13.2	TACACS

<b>tacacs</b>	<b>10.53.13.94</b>	<b>TACACS</b>
<b>tacacs+</b>	<b>(This group has no entry)</b>	
<b>xtacacs</b>	<b>(This group has no entry)</b>	
<b>Total Entries : 4</b>		
<b>DGS-3312SR:4#</b>		

### config authen parameter response\_timeout

Purpose	Used to configure the amount of time the switch will wait for a user to enter authentication before timing out.
Syntax	<b>config authen parameter response_timeout &lt;int 1-255&gt;</b>
Description	This command will set the time the switch will wait for a response of authentication from the user.
Parameters	<i>response_timeout &lt;int 1-255&gt;</i> - Set the time, in seconds, the switch will wait for a response of authentication from the user attempting to log in from the command line interface or telnet interface.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure the response timeout for 60 seconds:

```
DGS-3312SR:4# config authen parameter response_timeout 60
Command: config authen parameter response_timeout 60

Success.

DGS-3312SR:4#
```

### config authen parameter attempt

Purpose	Used to configure the maximum number of times the switch will accept authentication attempts.
Syntax	<b>config authen parameter attempt &lt;int 1-255&gt;</b>
Description	This command will configure the maximum number of times the switch will accept authentication attempts. Users failing to be authenticated after the set amount of attempts will be denied access to the switch and will be locked out of further authentication attempts. Command line interface users will have to wait 60 seconds before another authentication attempt. Telnet users will be disconnected from the switch.

## config authen parameter attempt

Parameters	<i>parameter attempt &lt;int 1-255&gt;</i> - Set the maximum number of attempts the user may try to become authenticated by the switch, before being locked out.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To set the maximum number of authentication attempts at 5:

```
DGS-3312SR:4#config authen parameter attempt 5
```

```
Command: config authen parameter attempt 5
```

```
Success.
```

```
DGS-3312SR:4#
```

## show authen parameter

Purpose	Used to display the authentication parameters currently configured on the switch.
Syntax	<b>show authen parameter</b>
Description	<p>This command will display the authentication parameters currently configured on the switch, including the response timeout and user authentication attempts.</p> <p>This command will display the following fields:</p> <p>Response timeout – The configured time allotted for the switch to wait for a response of authentication from the user attempting to log in from the command line interface or telnet interface.</p> <p>User attempts – The maximum number of attempts the user may try to become authenticated by the switch, before being locked out.</p>
Parameters	None.
Restrictions	None.

```
DGS-3312SR:4#show authen parameter
```

```
Command: show authen parameter
```

```
Response timeout: 60 seconds
```

```
User attempts      : 5
```

DGS-3312SR:4#

**enable admin**

Purpose	Used to promote user level privileges to administrator level privileges
Syntax	<b>enable admin</b>
Description	This command is for users who have logged on to the switch on the normal user level, to become promoted to the administrator level. After logging on to the switch users, will have only user level privileges. To gain access to administrator level privileges, the user will enter this command and will have to enter an authentication password. Possible authentication methods for this function include TACACS/XTACACS/TACACS+/RADIUS, user defined server groups, local enable (local account on the switch), or no authentication (none). Because XTACACS and TACACS do not support the enable function, the user must create a special account on the server host which has the username "enable", and a password configured by the administrator that will support the "enable" function. This function becomes inoperable when the authentication policy is disabled.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To enable administrator privileges on the switch:

```
DGS-3312SR:4#enable admin
```

```
Password: *****
```

```
DGS-3312SR:4#
```

**config admin local\_enable**

Purpose	Used to configure the local enable password for administrator level privileges.
Syntax	<b>config admin local_enable</b>
Description	This command will configure the locally enabled password for the <i>enable admin</i> command. When a user chooses the “ <i>local_enable</i> ” method to promote user level privileges to administrator privileges, he or she will be prompted to enter the password configured here, that is set locally on the switch.
Parameters	<password 15> - After entering this command, the user will be prompted to enter the old password, then a new password in an alphanumeric string of no more than 15 characters, and finally prompted to enter the new password again to confirm. See the example below.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure the password for the “local\_enable” authentication method.

```
DGS-3312SR:4#config admin local_enable
Command: config admin local_enable

Enter the old password: *****
Enter the case-sensitive new password:*****
Enter the new password again for confirmation:*****

Success.

DGS-3312SR:4#
```

## SSH COMMANDS

The steps required to use the SSH protocol for secure communication between a remote PC (the SSH Client) and the Switch (the SSH Server), are as follows:

- Create a user account with admin-level access using the *create account admin <username> <password>* command. This is identical to creating any other admin-level User account on the Switch, including specifying a password. This password is used to login to the Switch, once secure communication has been established using the SSH protocol.
- Configure the user account to use a specified authorization method to identify users that are allowed to establish SSH connections with the Switch using the *config ssh user authmode* command. There are three choices as to the method SSH will use to authorize the user, and they are password, publickey and hostbased.
- Configure the encryption algorithm that SSH will use to encrypt and decrypt messages sent between the SSH Client and the SSH Server.
- Finally, enable SSH on the Switch using the *enable ssh* command.
- After following the above steps, you can configure an SSH Client on the remote PC and manage the Switch using secure, in-band communication.

The Secure Shell (SSH) commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
enable ssh	
disable ssh	
config ssh authmode	[password   publickey   hostbased] [enable   disable]
show ssh authmode	
config ssh server	{maxsession <int 1-8>   contimeout <sec 120-600>   authfail <int 2-20>   rekey [10min   30min   60min   never] port <tcp_port_number 1-65535>}
show ssh server	
config ssh user	<username> authmode {Hostbased [hostname <string>   hostname_IP <string> <ipaddr>}   Password   Publickey   None]
show ssh user authmode	
config ssh algorithm	[3DES   AES128   AES192   AES256   arcfour   blowfish   cast128   twofish128   twofish192   twofish256   MD5   SHA1   DSA   RSA ] [enable   disable]
show ssh algorithm	

Each command is listed, in detail, in the following sections.

### enable ssh

Purpose	Used to enable SSH.
---------	---------------------

**enable ssh**

Syntax	<b>enable ssh</b>
Description	This command allows you to enable SSH on the switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Usage Example:

To enable SSH:

```
DGS-3312SR:4#enable ssh
Command: enable ssh

Success.

DGS-3312SR:4#
```

**disable ssh**

Purpose	Used to disable SSH.
Syntax	<b>disable ssh</b>
Description	This command allows you to disable SSH on the switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Usage Example:

To disable SSH:

```
DGS-3312SR:4# disable ssh
Command: disable ssh

Success.

DGS-3312SR:4#
```

**config ssh authmode**

Purpose	Used to configure the SSH authentication mode setting.
Syntax	<b>config ssh authmode [password   publickey   hostbased] [enable   disable]</b>

**config ssh authmode**

	<b>[enable   disable]</b>
Description	This command will allow you to configure the SSH authentication mode for users attempting to access the switch.
Parameters	<p><i>password</i> – This parameter may be chosen if the administrator wishes to use a locally configured password for authentication on the switch.</p> <p><i>publickey</i> - This parameter may be chosen if the administrator wishes to use a publickey configuration set on a SSH server, for authentication.</p> <p><i>hostbased</i> - This parameter may be chosen if the administrator wishes to use a host computer for authentication. This parameter is intended for Linux users requiring SSH authentication techniques and the host computer is running the Linux operating system with a SSH program previously installed.</p> <p><i>[enable   disable]</i> - This allows you to enable or disable SSH authentication on the switch.</p>
Restrictions	Only administrator-level users can issue this command.

Example usage:

To enable the SSH authentication mode by password:

```
DGS-3312SR:4#config ssh authmode password enable
Command: config ssh authmode password enable

Success.

DGS-3312SR:4#
```

**show ssh authmode**

Purpose	Used to display the SSH authentication mode setting.
Syntax	<b>show ssh authmode</b>
Description	This command will allow you to display the current SSH authentication set on the switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To view the current authentication mode set on the switch:

**DGS-3312SR:4#show ssh authmode**

**Command: show ssh authmode**

**The SSH authmode**

**Password : Enable**

**Publickey : Enable**

**Hostbased : Enable**

**DGS-3312SR:4#**

## config ssh server

Purpose	Used to configure the SSH server.
Syntax	<b>config ssh server {maxsession &lt;int 1-8&gt;   contimeout &lt;sec 120-600&gt;   authfail &lt;int 2-20&gt;   rekey [10min   30min   60min   never]   port &lt;tcp_port_number 1-65535&gt;}</b>
Description	This command allows you to configure the SSH server.
Parameters	<p><i>maxsession &lt;int 1-8&gt;</i> - Allows the user to set the number of users that may simultaneously access the switch. The default is 8.</p> <p><i>contimeout &lt;sec 120-600&gt;</i> - Allows the user to set the connection timeout. The user may set a time between 120 and 600 seconds. The default is 300 seconds.</p> <p><i>authfail &lt;int 2-20&gt;</i> - Allows the administrator to set the maximum number of attempts that a user may try to log on utilizing SSH authentication. After the maximum number of attempts is exceeded, the switch will be disconnected and the user must reconnect to the switch to attempt another login.</p> <p><i>rekey [10min   30min   60min   never]</i> - Sets the time period that the switch will change the security shell encryptions.</p> <p><i>port &lt;tcp_port_number 1-65535&gt;</i> - Enter the TCP port number associated with this function. The default TCP port number for SSH is 22.</p>
Restrictions	Only administrator-level users can issue this command.

Usage Example:

To configure the SSH server:

**DGS-3312SR:4# config ssh server maxsession 2 contimeout 300 authfail 2**

**Command: config ssh server maxsession 2 contimeout 300 authfail 2**

**Success.**

DGS-3312SR:4#

**show ssh server**

Purpose	Used to display the SSH server setting.
Syntax	<b>show ssh server</b>
Description	This command allows you to display the current SSH server setting.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Usage Example:

To display the SSH server:

```
DGS-3312SR:4# show ssh server
Command: show ssh server
The SSH server configuration
max Session           : 8
Connection timeout   : 300 (sec)
Authfail attempts    : 2
Rekey timeout        : never
SSH server status    : Disable
Listened Port Number : 22
```

DGS-3312SR:4#

**config ssh user**

Purpose	Used to configure the SSH user.
Syntax	<b>config ssh user &lt;username&gt; authmode {Hostbased [hostname &lt;string&gt;   hostname_IP &lt;string&gt; &lt;ipaddr&gt;}   Password   Publickey   None]</b>
Description	This command allows you to configure the SSH user authentication method.
Parameters	<p>&lt;username&gt; - Enter a username of no more than 15 characters to identify the SSH user.</p> <p><i>authmode</i> – Specifies the authentication mode of the SSH user wishing to log on to the switch. The administrator may choose between:</p> <ul style="list-style-type: none"> <li>▪ <i>Hostbased</i> – This parameter should be chosen if the user</li> </ul>

**config ssh user**

wishes to use a remote SSH server for authentication purposes. Choosing this parameter requires the user to input the following information to identify the SSH user.

- *hostname* <string> - Enter an alphanumeric string of up to 31 characters identifying the remote SSH user.
- *hostname\_IP* <string> <ipaddr> - Enter the hostname and the corresponding IP address of the SSH user.
  - *Password* – This parameter should be chosen if the user wishes to use an administrator defined password for authentication. Upon entry of this command, the switch will prompt the user for a password, and then to retype the password for confirmation.
  - *Publickey* – This parameter should be chosen if the user wishes to use the publickey on a SSH server for authentication.
  - *None* – Choose this parameter if no authentication is desired.

Restrictions                      Only administrator-level users can issue this command.

Example usage:

To configure the SSH user:

```
DGS-3312SR:4# config ssh user Trinity authmode Password
Command: config ssh user Trinity authmode Password

Success.

DGS-3312SR:4#
```

**show ssh user authmode**

Purpose	Used to display the SSH user setting.
Syntax	<b>show ssh user authmode</b>
Description	This command allows you to display the current SSH user setting.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To display the SSH user:

```
DGS-3312SR:4#show ssh user authmode
```

```
Command: show ssh user authmode
```

```
Current Accounts: Authentication
```

```
UserName
```

```
-----
```

```
Trinity
```

```
Publickey
```

```
DGS-3312SR:4#
```



**Note:** To configure the SSH user, the administrator must create a user account on the switch. For information concerning configuring a user account, please see the section of this manual entitled **Basic Switch Commands** and then the command, **create user account**.

## config ssh algorithm

Purpose	Used to configure the SSH algorithm.
Syntax	<b>config ssh algorithm [3DES   AES128   AES192   AES256   arcfour   blowfish   cast128   twofish128   twofish192   twofish256   MD5   SHA1   RSA   DSA] [enable   disable]</b>
Description	This command allows you to configure the desired type of SSH algorithm used for authentication encryption.
Parameters	<p><i>3DES</i> – This parameter will enable or disable the Triple_Data Encryption Standard encryption algorithm.</p> <p><i>AES128</i> - This parameter will enable or disable the Advanced Encryption Standard AES128 encryption algorithm.</p> <p><i>AES192</i> - This parameter will enable or disable the Advanced Encryption Standard AES192 encryption algorithm.</p> <p><i>AES256</i> - This parameter will enable or disable the Advanced Encryption Standard AES256 encryption algorithm.</p> <p><i>arcfour</i> - This parameter will enable or disable the Arcfour encryption algorithm.</p> <p><i>blowfish</i> - This parameter will enable or disable the Blowfish encryption algorithm.</p> <p><i>cast128</i> - This parameter will enable or disable the Cast128 encryption algorithm.</p> <p><i>twofish128</i> - This parameter will enable or disable the twofish128 encryption algorithm.</p> <p><i>twofish192</i> - This parameter will enable or disable the twofish192</p>

**config ssh algorithm**

encryption algorithm.

*MD5* - This parameter will enable or disable the MD5 Message Digest encryption algorithm.

*SHA1* - This parameter will enable or disable the Secure Hash Algorithm encryption.

*DSA* - This parameter will enable or disable the Digital Signature Algorithm encryption.

*RSA* - This parameter will enable or disable the RSA encryption algorithm.

*[enable | disable]* – This allows you to enable or disable algorithms entered in this command, on the switch.

Restrictions      Only administrator-level users can issue this command.

Usage Example:

To configure SSH algorithm:

**DGS-3312SR:4# config ssh algorithm blowfish enable**

**Command: config ssh algorithm blowfish enable**

**Success.**

**DGS-3312SR:4#**

**show ssh algorithm**

Purpose	Used to display the SSH algorithm setting.
Syntax	<b>show ssh algorithm</b>
Description	This command will display the current SSH algorithm setting status.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Usage Example:

To display SSH algorithms currently set on the switch:

**DGS-3312SR:4#show ssh algorithm**

**Command: show ssh algorithm**

**Encryption Algorithm**

**3DES            :Enable**

<b>AES128</b>	<b>:Enable</b>
<b>AES192</b>	<b>:Enable</b>
<b>AES256</b>	<b>:Enable</b>
<b>ARC4</b>	<b>:Enable</b>
<b>Blowfish</b>	<b>:Enable</b>
<b>Cast128</b>	<b>:Enable</b>
<b>Twofish128</b>	<b>:Enable</b>
<b>Twofish192</b>	<b>:Enable</b>
<b>Twofish256</b>	<b>:Enable</b>
<b>MD5</b>	<b>:Enable</b>
<b>SHA</b>	<b>:Enable</b>
<b>RSA</b>	<b>:Enable</b>
<b>DSA</b>	<b>:Enable</b>

**DGS-3312SR:4#**

## SSL COMMANDS

*Secure Sockets Layer* or *SSL* is a security feature that will provide a secure communication path between a host and client through the use of authentication, digital signatures and encryption. These security functions are implemented through the use of a *ciphersuite*, which is a security string that determines the exact cryptographic parameters, specific encryption algorithms and key sizes to be used for an authentication session and consists of three levels:

1. **Key Exchange:** The first part of the cyphersuite string specifies the public key algorithm to be used. This switch utilizes the Rivest Shamir Adleman (RSA) public key algorithm and the Digital Signature Algorithm (DSA), specified here as the *DHE\_DSS* Diffie-Hellman (DHE) public key algorithm. This is the first authentication process between client and host as they “exchange keys” in looking for a match and therefore authentication to be accepted to negotiate encryptions on the following level.
2. **Encryption:** The second part of the ciphersuite that includes the encryption used for encrypting the messages sent between client and host. The switch supports two types of cryptology algorithms:
  - Stream Ciphers – There are two types of stream ciphers on the switch, *RC4 with 40-bit keys* and *RC4 with 128-bit keys*. These keys are used to encrypt messages and need to be consistent between client and host for optimal use.
  - CBC Block Ciphers – CBC refers to Cipher Block Chaining, which means that a portion of the previously encrypted block of encrypted text is used in the encryption of the current block. The switch supports the *3DES\_EDE* encryption code defined by the Data Encryption Standard (DES) to create the encrypted text.
3. **Hash Algorithm:** This part of the ciphersuite allows the user to choose a message digest function which will determine a Message Authentication Code. This Message Authentication Code will be encrypted with a sent message to provide integrity and prevent against replay attacks. The switch supports two hash algorithms, *MD5* (Message Digest 5) and *SHA* (Secure Hash Algorithm).

These three parameters are uniquely assembled in four choices on the switch to create a three-layered encryption code for secure communication between the server and the host. The user may implement any one or combination of the ciphersuites available, yet different ciphersuites will affect the security level and the performance of the secured connection. The information included in the ciphersuites is not included with the switch and requires downloading from a third source in a file form called a *certificate*. This function of the switch cannot be executed without the presence and implementation of the certificate file and can be downloaded to the switch by utilizing a TFTP server. The switch supports SSLv3 and TLSv1. Other versions of SSL may not be compatible with this switch and may cause problems upon authentication and transfer of messages from client to host.

The SSL commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
enable ssl	[ciphersuite {RSA_with_RC4_128_MD5   RSA_with_3DES_EDE_CBC_SHA   DHE_DSS_with_3DES_EDE_CBC_SHA   RSA_EXPORT_with_RC4_40_MD5}}
disable ssl	[ciphersuite {RSA_with_RC4_128_MD5   RSA_with_3DES_EDE_CBC_SHA   DHE_DSS_with_3DES_EDE_CBC_SHA   RSA_EXPORT_with_RC4_40_MD5}}
show ssl	
download certificate	<ipaddr> certfilename <path_filename 64> keyfilename <path_filename 64>

Command	Parameters
show certificate	

Each command is listed, in detail, in the following sections.

<b>enable ssl</b>	
Purpose	To enable the SSL function on the switch.
Syntax	<b>enable ssl {ciphersuite {RSA_with_RC4_128_MD5   RSA_with_3DES_EDE_CBC_SHA   DHE_DSS_with_3DES_EDE_CBC_SHA   RSA_EXPORT_with_RC4_40_MD5}}</b>
Description	This command will enable SSL on the switch by implementing any one or combination of listed ciphersuites on the switch. Entering this command without a parameter will enable the SSL status on the switch. Enabling SSL will disable the web-manager on the switch.
Parameters	<p><i>ciphersuite</i> - A security string that determines the exact cryptographic parameters, specific encryption algorithms and key sizes to be used for an authentication session. The user may choose any combination of the following:</p> <ul style="list-style-type: none"> <li>▪ <i>RSA_with_RC4_128_MD5</i> – This ciphersuite combines the RSA key exchange, stream cipher RC4 encryption with 128-bit keys and the MD5 Hash Algorithm.</li> <li>▪ <i>RSA_with_3DES_EDE_CBC_SHA</i> - This ciphersuite combines the RSA key exchange, CBC Block Cipher 3DES_EDE encryption and the SHA Hash Algorithm.</li> <li>▪ <i>DHE_DSS_with_3DES_EDE_CBC_SHA</i> - This ciphersuite combines the DSA Diffie Hellman key exchange, CBC Block Cipher 3DES_EDE encryption and SHA Hash Algorithm.</li> <li>▪ <i>RSA_EXPORT_with_RC4_40_MD5</i> - This ciphersuite combines the RSA Export key exchange, stream cipher RC4 encryption with 40-bit keys.</li> </ul> <p>The ciphersuites are enabled by default on the switch, yet the SSL status is disabled by default.</p>
Restrictions	Only administrator-level users can issue this command.

Example usage:

To enable SSL on the switch for all ciphersuites:

```
DGS-3312SR:4#enable ssl
```

```
Command: enable ssl
```

```
Success.
```

```
DGS-3312SR:4#
```



**NOTE:** Enabling the SSL function on the switch will disable the port for the web manager (port 80). To log on to the web based manager, the entry of your URL must begin with *https://*. (ex. *https://10.90.90.90*)

## disable ssl

Purpose	To disable the SSL function on the switch.
Syntax	<b>disable ssl {ciphersuite {RSA_with_RC4_128_MD5   RSA_with_3DES_EDE_CBC_SHA   DHE_DSS_with_3DES_EDE_CBC_SHA   RSA_EXPORT_with_RC4_40_MD5}}</b>
Description	This command will disable SSL on the switch and can be used to disable any one or combination of listed ciphersuites on the switch.
Parameters	<p><i>ciphersuite</i> - A security string that determines the exact cryptographic parameters, specific encryption algorithms and key sizes to be used for an authentication session. The user may choose any combination of the following:</p> <ul style="list-style-type: none"> <li>▪ <i>RSA_with_RC4_128_MD5</i> – This ciphersuite combines the RSA key exchange, stream cipher RC4 encryption with 128-bit keys and the MD5 Hash Algorithm.</li> <li>▪ <i>RSA_with_3DES_EDE_CBC_SHA</i> - This ciphersuite combines the RSA key exchange, CBC Block Cipher 3DES_EDE encryption and the SHA Hash Algorithm.</li> <li>▪ <i>DHE_DSS_with_3DES_EDE_CBC_SHA</i> - This ciphersuite combines the DSA Diffie Hellman key exchange, CBC Block Cipher 3DES_EDE encryption and SHA Hash Algorithm.</li> <li>▪ <i>RSA_EXPORT_with_RC4_40_MD5</i> - This ciphersuite combines the RSA Export key exchange, stream cipher RC4 encryption with 40-bit keys.</li> </ul>
Restrictions	Only administrator-level users can issue this command.

Example usage:

To disable the SSL status on the switch:

```
DGS-3312SR:4#disable ssl
```

```
Command: disable ssl
```

```
Success.
```

```
DGS-3312SR:4#
```

To disable ciphersuite *RSA\_EXPORT\_with\_RC4\_40\_MD5* only:

```
DGS-3312SR:4#disable ssl ciphersuite RSA_EXPORT_with_RC4_40_MD5
Command: disable ssl ciphersuite RSA_EXPORT_with_RC4_40_MD5
```

Success.

```
DGS-3312SR:4#
```

## show ssl

Purpose	Used to view the SSL status and the certificate file status on the switch.
Syntax	<b>show ssl</b>
Description	This command is used to view the SSL status on the switch.
Parameters	None.
Restrictions	None.

Example usage:

To view the SSL status on the switch:

```
DGS-3312SR:4#show ssl
Command: show ssl

SSL Status                               Disabled
RSA_WITH_RC4_128_MD5                     0x0004 Enabled
RSA_WITH_3DES_EDE_CBC_SHA                0x000A Enabled
DHE_DSS_WITH_3DES_EDE_CBC_SHA            0x0013 Enabled
RSA_EXPORT_WITH_RC4_40_MD5                0x0003 Enabled

DGS-3312SR:4#
```

## download certificate

Purpose	Used to download a certificate file for the SSL function on the switch.
Syntax	<b>download certificate &lt;ipaddr&gt; certfilename &lt;path_filename 64&gt; keyfilename &lt;path_filename 64&gt;</b>
Description	This command is used to download a certificate file for the SSL function on the switch from a TFTP server. The certificate file is a data record used for authenticating devices on the network. It contains information on the owner, keys for authentication and digital signatures. Both the server and the client must have consistent

## download certificate

	certificate files for optimal use of the SSL function. The switch only supports certificate files with .der file extensions.
Parameters	<p><i>&lt;ipaddr&gt;</i> - Enter the IP address of the TFTP server.</p> <p><i>certfilename &lt;path_filename 64&gt;</i> - Enter the path and the filename of the certificate file you wish to download.</p> <p><i>keyfilename &lt;path_filename 64&gt;</i> - Enter the path and the filename of the key exchange file you wish to download.</p>
Restrictions	Only administrator-level users can issue this command.

Example usage:

To download a certificate file and key file to the switch:

```
DGS-3312SR:4# DGS-3312SR:4#download certificate 10.53.13.94
certfilename c:/cert.der keyfilename c:/pkey.der
Command: download certificate 10.53.13.94 certfilename
c:/cert.der keyfilename c:/pkey.der

Certificate Loaded Successfully!

DGS-3312SR:4#
```

## show certificate

Purpose	Used to view the certificate files for the SSL function on the switch.
Syntax	<b>show certificate</b>
Description	This command is used to view the SSL certificate currently in use on the switch.
Parameters	None.
Restrictions	None.

Example usage:

To view the SSL certificate:

```
DGS-3312SR:4# show certificate
Command: show certificate

Loaded with RSA Certificate!

DGS-3312SR:4#
```

## 802.1X COMMANDS

The DGS-3312SR implements the server-side of the IEEE 802.1x Port-based Network Access Control. This mechanism is intended to allow only authorized users, or other network devices, access to network resources by establishing criteria for each port on the switch that a user or network device must meet before allowing that port to forward or receive frames.

The 802.1X commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
enable 802.1x	
disable 802.1x	
show 802.1x auth_state	ports [<portlist>]
show 802.1x auth_configuration	ports [<portlist>]
config 802.1x auth_mode	[port_based   mac_based]
config 802.1x capability	[ports <portlist>   all] [authenticator   none]
config 802.1x auth_parameter ports	[<portlist>   all] [default   {direction [both   in]   port_control [force_unauth   auto   force_auth]   quiet_period <sec 0-65535>   tx_period <sec 1-65535>   supp_timeout <sec 1-65535>   server_timeout <sec 1-65535>   max_req <value 1-10>   reauth_period <sec 1-65535>   enable_reauth [enable   disable]}]
config 802.1x init	{port_based ports [<portlist>   all]}   mac_based [ports [<portlist>   all] {mac_address <macaddr>}]
config 802.1x reauth	{port_based ports [<portlist>   all]} [<portlist>   all] {mac_address <macaddr>}
config radius add	<server_index 1-3> <server_ip> key <passwd 32> [default {auth_port <udp_port_number 1-65535>   acct_port <udp_port_number 1-65535>}]
config radius delete	<server_index 1-3>
config radius	<server_index 1-3> {ipaddress <server_ip>   key <passwd 32> [auth_port <udp_port_number 1-65535> acct_port <udp_port_number 1-65535>}]
show radius	

Each command is listed, in detail, in the following sections.



**NOTE:** As a stand-alone switch or as a master switch in a switch stack, the switch number will be referred to as 15 for all configurations, graphs and tables.

**enable 802.1x**

Purpose	Used to enable the 802.1x server on the switch.
Syntax	<b>enable 802.1x</b>
Description	The <b>enable 802.1x</b> command enables the 802.1x Port-based Network Access control server application on the switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To enable 802.1x switch wide:

```
DGS-3312SR:4#enable 802.1x
Command: enable 802.1x

Success.

DGS-3312SR:4#
```

**disable 802.1x**

Purpose	Used to disable the 802.1x server on the switch.
Syntax	<b>disable 802.1x</b>
Description	The <b>disable 802.1x</b> command is used to disable the 802.1x Network Access control server application on the switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To disable 802.1x on the switch:

```
DGS-3312SR:4#disable 802.1x
Command: disable 802.1x

Success.

DGS-3312SR:4#
```

## **show 802.1x auth\_configuration**

Purpose	Used to display the current configuration of the 802.1x server on the switch.
Syntax	<b>show 802.1x auth_configuration {ports [&lt;portlist&gt;}</b>
Description	The show 802.1x command is used to display the current configuration of the 802.1x Port-based Network Access Control server application on the switch.

**show 802.1x auth\_configuration****Parameters**

*ports <portlist>* – Specifies a range of ports. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

The following details what is displayed:

802.1x Enabled/Disabled – Shows the current status of 802.1x functions on the switch.

Authentication Protocol: Radius\_Eap – Shows the authentication protocol suite in use between the switch and a Radius server.

Port number – Shows the physical port number on the switch.

Capability: Authenticator/None – Shows the capability of 802.1x functions on the port number displayed above. There are two 802.1x capabilities that can be set on the switch: Authenticator and None.

AdminCtlDir: Both/In – Shows whether a controlled Port that is unauthorized will exert control over communication in both receiving and transmitting directions, or just the receiving direction.

OpenCtlDir: Both/In – Shows whether a controlled Port that is unauthorized will exert control over communication in both receiving and transmitting directions, or just the receiving direction.

Port Control: ForceAuth/ForceUnauth/Auto – Shows the administrative control over the port's authorization status. ForceAuth forces the Authenticator of the port to become Authorized. ForceUnauth forces the port to become Unauthorized.

QuietPeriod – Shows the time interval between authentication failure and the start of a new authentication attempt.

TxPeriod – Shows the time to wait for a response from a supplicant (user) to send EAP Request/Identity packets.

SuppTimeout – Shows the time to wait for a response from a supplicant (user) for all EAP packets, except for the Request/Identity packets.

ServerTimeout – Shows the length of time to wait for a response from a RADIUS server.

MaxReq – Shows the maximum number of times to retry sending packets to the supplicant.

**show 802.1x auth\_configuration**

ReAuthPeriod – Shows the time interval between successive re-authentications.

ReAuthenticate: Enabled/Disabled – Shows whether or not to re-authenticate.

Restrictions            Only administrator-level users can issue this command.

Example usage:

To display the 802.1x authentication states (stacking disabled):

```
DGS-3312SR:4#show 802.1x auth_configuration ports 1
```

```
Command: show 802.1x auth_configuration ports 1
```

```

802.1X                    : Enabled
Authentication Mode     : None
Authentication Protocol : Radius_EAP

Port number            : 1:1
Capability             : None
AdminCrIDir            : Both
OpenCrIDir             : Both
Port Control            : Auto
QuietPeriod            : 60 sec
TxPeriod               : 30 sec
SuppTimeout            : 30 sec
ServerTimeout         : 30 sec
MaxReq                 : 2 times
ReAuthPeriod           : 3600 sec
ReAuthenticate         : Disabled

```

```
CTRL+C ESC q Quit SPACE n Next Page Enter Next Entry a All
```

**show 802.1x auth\_state**

Purpose                    Used to display the current authentication state of the 802.1x server on the switch.

Syntax                    **show 802.1x auth\_state {ports [<portlist>}**

Description              The **show 802.1x auth\_state** command is used to display the current authentication state of the 802.1x Port-based Network Access Control server application on the switch.

**show 802.1x auth\_state****Parameters**

*ports <portlist>* – Specifies a range of ports. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 3 would specify port 3. 4 specifies port 4. 3-4 specifies all of the ports between port 3 and port 4 – in numerical order.

The following details what is displayed:

Port number – Shows the physical port number on the switch.

Auth PAE State: Initialize / Disconnected / Connecting / Authenticating / Authenticated / Held / ForceAuth / ForceUnauth – Shows the current state of the Authenticator PAE.

Backend State: Request / Response / Fail / Idle / Initialize / Success / Timeout – Shows the current state of the Backend Authenticator.

Port Status: Authorized / Unauthorized – Shows the result of the authentication process. Authorized means that the user was authenticated, and can access the network. Unauthorized means that the user was not authenticated, and cannot access the network.

**Restrictions**

Only administrator-level users can issue this command.

Example usage:

To display the 802.1x auth state:

```
DGS-3312SR:4#show 802.1x auth_state 1:1-1:12
Command: show 802.1x auth_state 1:1-1:12
```

Port	Auth PAE State	Backend State	Port Status
1:1	ForceAuth	Success	Authorized
1:2	ForceAuth	Success	Authorized
1:3	ForceAuth	Success	Authorized
1:4	ForceAuth	Success	Authorized
1:5	ForceAuth	Success	Authorized
1:6	ForceAuth	Success	Authorized
1:7	ForceAuth	Success	Authorized
1:8	ForceAuth	Success	Authorized
1:9	ForceAuth	Success	Authorized
1:10	ForceAuth	Success	Authorized
1:11	ForceAuth	Success	Authorized

1:12	ForceAuth	Success	Authorized
------	-----------	---------	------------

<b>CTRL+C</b>	<b>ESC</b>	<b>q</b> Quit	<b>SPACE</b>	<b>n</b> Next Page	<b>Enter</b>	Next Entry	<b>a</b> All
---------------	------------	---------------	--------------	--------------------	--------------	------------	--------------

## config 802.1x auth\_mode

Purpose	Used to configure the 802.1x authentication mode on the switch.
Syntax	<b>config 802.1x auth_mode [port_based   mac_based]</b>
Description	The <b>config 802.1x auth_mode</b> command is used to enable either the port-based or MAC-based 802.1x authentication feature on the switch.
Parameters	<i>[port_based   mac_based ports]</i> – The switch allows you to authenticate 802.1x by either port or MAC address.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure 802.1x authentication by MAC address:

```
DGS-3312SR:4#config 802.1x auth_mode mac_based
Command: config 802.1x auth_mode mac_based

Success.

DGS-3312SR:4#
```

## config 802.1x capability ports

Purpose	Used to configure the 802.1x capability of a range of ports on the switch.
Syntax	<b>config 802.1x capability ports [&lt;portlist&gt;   all] [authenticator   none]</b>
Description	The <b>config 802.1x capability ports</b> command has four capabilities that can be set for each port. Authenticator, Supplicant, Authenticator and Supplicant, and None.
Parameters	<i>&lt;portlist&gt;</i> – Specifies a range of ports. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

**config 802.1x capability ports**

*all* – Specifies all of the ports on the switch.

*authenticator* – A user must pass the authentication process to gain access to the network.

*none* – The port is not controlled by the 802.1x functions.

Restrictions                      Only administrator-level users can issue this command.

Example usage:

To configure 802.1x capability on ports 1-10 on switch 1:

```
DGS-3312SR:4#config 802.1x capability ports 1:1 – 1:10 authenticator
Command: config 802.1x capability ports 1:1 – 1:10 authenticator

Success.

DGS-3312SR:4#
```

**config 802.1x auth\_parameter**

Purpose                              Used to configure the 802.1x Authentication parameters on a range of ports. The default parameter will return all ports in the specified range to their default 802.1x settings.

Syntax                              **config 802.1x auth\_parameter ports [<portlist> | all] [default | {direction [both | in] | port\_control [force\_unauth | auto | force\_auth] | quiet\_period <sec 0-65535> | tx\_period <sec 1-65535> | supp\_timeout <sec 1-65535> | server\_timeout <sec 1-65535> | max\_req <value 1-10> | reauth\_period <sec 1-65535> | enable\_reauth [enable | disable]]}**

Description                        The **config 802.1x auth\_parameter** command is used to configure the 802.1x Authentication parameters on a range of ports. The default parameter will return all ports in the specified range to their default 802.1x settings.

## config 802.1x auth\_parameter

### Parameters

*<portlist>* – Specifies a range of ports. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

*all* – Specifies all of the ports on the switch.

*default* – Returns all of the ports in the specified range to their 802.1x default settings.

*direction [both | in]* – Determines whether a controlled port blocks communication in both the receiving and transmitting directions, or just the receiving direction.

*port\_control* – Configures the administrative control over the authentication process for the range of ports. The user has the following authentication options:

- *force\_auth* – Forces the Authenticator for the port to become authorized. Network access is allowed.
- *auto* – Allows the port's status to reflect the outcome of the authentication process.
- *force\_unauth* – Forces the Authenticator for the port to become unauthorized. Network access will be blocked.

*quiet\_period <sec 0-65535>* – Configures the time interval between authentication failure and the start of a new authentication attempt.

*tx\_period <sec 1-65535>* – Configures the time to wait for a response from a supplicant (user) to send EAP Request/Identity packets.

*supp\_timeout <sec 1-65535>* – Configures the time to wait for a response from a supplicant (user) for all EAP packets, except for the Request/Identity packets.

*server\_timeout <sec 1-65535>* – Configure the length of time to wait for a response from a RADIUS server.

*max\_req <value 1-10>* – Configures the number of times to retry sending packets to a supplicant (user).

*reauth\_period <sec 1-65535>* – Configures the time interval between successive re-authentications.

**config 802.1x auth\_parameter**

*enable\_reauth* [*enable* | *disable*] – Determines whether or not the switch will re-authenticate. Enabled causes re-authentication of users at the time interval specified in the Re-authentication Period field, above.

Restrictions                      Only administrator-level users can issue this command.

Example usage:

To configure 802.1x authentication parameters for ports 1 – 20 of switch 1:

```
DGS-3312SR:4#config 802.1x auth_parameter ports 1:1 – 1:20 direction both
```

```
Command: config 802.1x auth_parameter ports 1:1-1:20 direction both
```

```
Success.
```

```
DGS-3312SR:4#
```

**config 802.1x init**

Purpose	Used to initialize the 802.1x function on a range of ports.
Syntax	<b>config 802.1x init</b> [ <b>port_based</b> ports [ <b>&lt;portlist</b>   <b>all</b> >]   <b>mac_based</b> [ports] [ <b>&lt;portlist</b> >   <b>all</b> ] { <b>mac_address</b> <b>&lt;macaddr</b> >}
Description	The <b>config 802.1x init</b> command is used to immediately initialize the 802.1x functions on a specified range of ports or for specified MAC addresses operating from a specified range of ports.
Parameters	<p><i>port_based</i> – This instructs the switch to initialize 802.1x functions based only on the port number. Ports approved for initialization can then be specified.</p> <ul style="list-style-type: none"> <li>▪ <i>&lt;portlist&gt;</i> – Specifies a range of ports. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.</li> <li>▪ <i>all</i> – Specifies all of the ports on the switch.</li> </ul> <p><i>mac_based</i> - This instructs the switch to initialize 802.1x functions based on the MAC address of a device on a specific port or range of ports. MAC address approved for initialization can then be specified.</p> <ul style="list-style-type: none"> <li>▪ <i>&lt;portlist&gt;</i> – Specifies a range of ports. The port list is specified by listing the lowest switch number and the</li> </ul>

**config 802.1x init**

beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

- *all* – Specifies all of the ports on the switch.

*mac\_address* <macaddr> - Specifies the MAC address of the client the user wishes to add.

**Restrictions**

Only administrator-level users can issue this command.

Example usage:

To initialize the authentication state machine of some or all:

```
DGS-3312SR:4# config 802.1x init port_based ports all
Command: config 802.1x init port_based ports all

Success.

DGS-3312SR:4#
```

**config 802.1x reauth ports****Purpose**

Used to configure the 802.1x re-authentication feature of the switch.

**Syntax**

**config 802.1x reauth [port\_based ports [<portlist | all>] | mac\_based [ports] [<portlist> | all] {mac\_address <macaddr>}]**

**Description**

The **config 802.1x reauth** command is used to re-authenticate a previously authenticated device based on port number or MAC address.

**Parameters**

*port\_based* – This instructs the switch to re-authorize 802.1x function based only on the port number. Ports approved for re-authorization can then be specified.

- *ports* <portlist> – Specifies a range of ports. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4

## config 802.1x reauth ports

specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

- *all* – Specifies all of the ports on the switch.

*mac-based* - This instructs the switch to re-authorize 802.1x function based on a specific MAC address. Ports approved for re-authorization can then be specified.

- *<portlist>* – Specifies a range of ports. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

- *all* – Specifies all of the ports on the switch.

*mac\_address <macaddr>* - Specifies the MAC address of the client the user wishes to add.

### Restrictions

Only administrator-level users can issue this command.

Example usage:

To configure 802.1x reauthentication for ports 1-10:

```
DGS-3312SR:4#config 802.1x reauth port_based ports 1:1-1:18
Command: config 802.1x reauth port_based ports 1:1-1:18

Success.

DGS-3312SR:4#
```

## config radius add

Purpose	Used to add a new RADIUS server.
Syntax	<b>config radius add &lt;server_index 1-3&gt; &lt;server_ip&gt; key &lt;passwd 32&gt; [default   {auth_port &lt;udp_port_number 1-65535&gt;   acct_port &lt;udp_port_number 1-65535&gt;}]</b>
Description	The <b>config radius add</b> command is used to add RADIUS servers to the switch.
Parameters	<i>&lt;server_index 1-3&gt;</i> – Assigns a number to the current set of RADIUS server settings. Up to 3 groups of RADIUS server settings can be entered on the switch. The lowest index number

**config radius add**

will have a higher authenticative priority

*<server\_ip>* – The IP address of the RADIUS server.

*key* – Specifies that a password and encryption key will be used between the switch and the RADIUS server.

- *<passwd 32>* – The shared-secret key used by the RADIUS server and the switch. Up to 32 characters can be used.

*default* – Uses the default udp port number in both the “auth\_port” and “acct\_port” settings.

*auth\_port <udp\_port\_number>* – The UDP port number for authentication requests. The default is 1812.

*acct\_port <udp\_port\_number>* – The UDP port number for accounting requests. The default is 1813.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To configure the RADIUS server communication settings:

```
DGS-3312SR:4#config radius add 1 10.48.74.121 key dlink default
```

```
Command: config radius add 1 10.48.74.121 key dlink default
```

```
Success.
```

```
DGS-3312SR:4#
```

**config radius delete**

**Purpose** Used to delete a previously entered RADIUS server configuration.

**Syntax** **config radius delete <server\_index 1-3>**

**Description** The **config radius delete** command is used to delete a previously entered RADIUS server configuration.

**Parameters** *<server\_index 1-3>* – A number identifying the current set of RADIUS server settings the user wishes to delete. Up to 3 groups of RADIUS server settings can be entered on the switch.

**Restrictions** Only administrator-level users can issue this command.

Example usage:

To delete previously configured RADIUS server communication settings:

```
DGS-3312SR:4#config radius delete 1
```

```
Command: config radius delete 1
```

```
Success.
```

```
DGS-3312SR:4#
```

## config radius

Purpose	Used to configure the switch's RADIUS settings.
Syntax	<b>config radius &lt;server_index 1-3&gt; {ipaddress &lt;server_ip&gt;   key &lt;passwd 32&gt;   auth_port &lt;udp_port_number 1-65535&gt;   acct_port &lt;udp_port_number 1-65535&gt;}</b>
Description	The <b>config radius</b> command is used to configure the switch's RADIUS settings.
Parameters	<p><i>&lt;server_index 1-3&gt;</i> – Assigns a number to the current set of RADIUS server settings. Up to 3 groups of RADIUS server settings can be entered on the switch.</p> <p><i>ipaddress &lt;server_ip&gt;</i> – The IP address of the RADIUS server.</p> <p><i>key</i> – Specifies that a password and encryption key will be used between the switch and the RADIUS server.</p> <ul style="list-style-type: none"> <li>▪ <i>&lt;passwd 32&gt;</i> – The shared-secret key used by the RADIUS server and the switch. Up to 32 characters can be used.</li> </ul> <p><i>auth_port &lt;udp_port_number&gt;</i> – The UDP port number for authentication requests. The default is 1812.</p> <p><i>acct_port &lt;udp_port_number&gt;</i> – The UDP port number for accounting requests. The default is 1813.</p>
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure the RADIUS settings:

```
DGS-3312SR:4#config radius 1 10.48.74.121 key dlink default
```

```
Command: config radius 1 10.48.74.121 key dlink default
```

```
Success.
```

```
DGS-3312SR:4#
```

**show radius**

Purpose	Used to display the current RADIUS configurations on the switch.
Syntax	<b>show radius</b>
Description	The <b>show radius</b> command is used to display the current RADIUS configurations on the switch.
Parameters	None.
Restrictions	None.

Example usage:

To display RADIUS settings on the switch:

```
DGS-3312SR:4#show radius
Command: show radius

Index  IP Address      Auth-Port  Acct-Port  Status  Key
      -----
      Number      Number
-----
1      10.1.1.1        1812      1813      Active  switch
2      20.1.1.1        1800      1813      Active  des3226
3      30.1.1.1        1812      1813      Active  dlink

Total Entries : 3

DGS-3312SR:4#
```

## ACCESS CONTROL LIST (ACL) COMMANDS

The DGS-3312SR implements Access Control Lists that enable the switch to deny network access to specific devices or device groups based on IP settings or MAC address. The ACL commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
create access_profile	[ethernet {vlan   source_mac <macmask>   destination_mac <macmask>   802.1p   ethernet_type}   ip {vlan   source_ip_mask <netmask>   destination_ip_mask <netmask>   dscp   [icmp {type   code }   igmp {type }   tcp {src_port_mask <hex 0x0-0xffff>   dst_port_mask <hex 0x0-0xffff>   flag_mask [all   {urg   ack   psh   rst   syn   fin}]}   udp {src_port_mask <hex 0x0-0xffff>   dst_port_mask <hex 0x0-0xffff>}   protocol_id {user_mask <hex 0x0-0xffffffff>}   packet_content_mask {offset_0-15 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff>   offset_16-31 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff>   offset_32-47 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff>   offset_48-63 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff>   offset_64-79 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff>} {port [<portlist>   all]} [profile_id <value 1-255>]
delete access_profile profile_id	<value 1-255>
config access_profile profile_id	<value 1-255>[ add access_id <value 1-255> [ethernet {vlan <vlan_name 32>   source_mac <macaddr>   destination_mac <macaddr>   802.1p <value 0-7>   ethernet_type <hex 0x0-0xffff> [permit {priority <value 0-7> {replace_priority }}   deny ]   ip {vlan <vlan_name 32>   source_ip <ipaddr>   destination_ip <ipaddr>   dscp <value 0-63>   [icmp {type <value 0-255> code <value 0-255>}   igmp {type <value 0-255>}   tcp {src_port <value 0-65535>   dst_port <value 0-65535>   flag_mask [all   {urg   ack   psh   rst   syn   fin}]}   udp {src_port <value 0-65535>   dst_port <value 0-65535>}   protocol_id <value 0 - 255> {user_define <hex 0x0-0xffffffff>}] [permit {priority <value 0-7> {replace_priority }}   deny ]   packet_content {offset_0-15 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff>   offset_16-31 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff>   offset_32-47 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff>   offset_48-63 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff>   offset_64-79 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff>} [permit {priority <value 0-7> {replace_priority }}   deny ]   delete access_id <value 1-255>]
show access_profile	{profile_id <value 1-255>}

Access profiles allow you to establish criteria to determine whether or not the switch will forward packets based on the information contained in each packet's header. These criteria can be specified on a VLAN-by-VLAN basis.

Creating an access profile is divided into two basic parts. First, an access profile must be created using the **create access\_profile** command. For example, if you want to deny all traffic to the subnet 10.42.73.0 to 10.42.73.255, you must first **create** an access profile that instructs the switch to examine all of the relevant fields of each frame:

**create access\_profile ip source\_ip\_mask 255.255.255.0 profile\_id 1**

Here we have created an access profile that will examine the IP field of each frame received by the switch. Each source IP address the switch finds will be combined with the **source\_ip\_mask** with a logical AND operation. The **profile\_id** parameter is used to give the access profile an identifying number – in this case, **1**. The **deny** parameter instructs the switch to filter any frames that meet the criteria – in this case, when a logical AND operation between an IP address specified in the next step and the **ip\_source\_mask** match.

The default for an access profile on the switch is to **permit** traffic flow. If you want to restrict traffic, you must use the **deny** parameter.

Now that an access profile has been created, you must add the criteria the switch will use to decide if a given frame should be forwarded or filtered. Here, we want to filter any packets that have an IP source address between 10.42.73.0 and 10.42.73.255:

**config access\_profile profile\_id 1 add access\_id 1 ip source\_ip 10.42.73.1 deny**

Here we use the **profile\_id 1** which was specified when the access profile was created. The **add** parameter instructs the switch to add the criteria that follows to the list of rules that are associated with access profile 1. For each rule entered into the access profile, you can assign an **access\_id** that both identifies the rule and establishes a priority within the list of rules. A lower **access\_id** gives the rule a higher priority.

The **ip** parameter instructs the switch that this new rule will be applied to the IP addresses contained within each frame's header. **source\_ip** tells the switch that this rule will apply to the source IP addresses in each frame's header. Finally, the IP address **10.42.73.1** will be combined with the **source\_ip\_mask 255.255.255.0** to give the IP address 10.42.73.0 for any source IP address between 10.42.73.0 to 10.42.73.255.

Each command is listed, in detail, in the following sections.



**NOTE:** As a stand-alone switch or as a master switch in a switch stack, the switch number will be referred to as 15 for all configurations, graphs and tables.

## create access\_profile

Purpose	Used to create an access profile on the switch and to define which parts of each incoming frame's header the switch will examine. Masks can be entered that will be combined with the values the switch finds in the specified frame header fields. Specific values for the rules are entered using the <b>config access_profile</b> command, below.
Syntax	<b>[ethernet {vlan   source_mac &lt;macmask&gt;   destination_mac &lt;macmask&gt;   802.1p   ethernet_type}   ip {vlan   source_ip_mask &lt;netmask&gt;   destination_ip_mask &lt;netmask&gt;   dscp   icmp {type   code}   igmp {type}   tcp {src_port_mask &lt;hex 0x0-0xffff&gt;   dst_port_mask &lt;hex 0x0-0xffff&gt;   flag_mask [all   {urg   ack   psh   rst   syn   fin}]}   udp {src_port_mask &lt;hex 0x0-0xffff&gt;   dst_port_mask &lt;hex 0x0-0xffff&gt;}   protocol_id {user_mask &lt;hex 0x0-0xffffffff&gt;} ]   packet_content_mask {offset_0-15 &lt;hex 0x0-0xffffffff&gt; &lt;hex 0x0-0xffffffff&gt; &lt;hex 0x0-0xffffffff&gt;   offset_16-31 &lt;hex 0x0-0xffffffff&gt; &lt;hex 0x0-0xffffffff&gt; &lt;hex 0x0-0xffffffff&gt; &lt;hex 0x0-0xffffffff&gt;   offset_32-47 &lt;hex 0x0-0xffffffff&gt; &lt;hex 0x0-0xffffffff&gt; &lt;hex 0x0-0xffffffff&gt; &lt;hex 0x0-0xffffffff&gt;   offset_48-63 &lt;hex 0x0-0xffffffff&gt; &lt;hex 0x0-0xffffffff&gt; &lt;hex 0x0-0xffffffff&gt; &lt;hex 0x0-0xffffffff&gt;   offset_64-79 &lt;hex 0x0-0xffffffff&gt; &lt;hex 0x0-0xffffffff&gt; &lt;hex 0x0-0xffffffff&gt; &lt;hex 0x0-0xffffffff&gt;}   port [&lt;portlist&gt;   all]} [profile_id &lt;value</b>

**create access\_profile****1-255>]**

## Description

The **create access\_profile** command is used to create an access profile on the switch and to define which parts of each incoming frame's header the switch will examine. Masks can be entered that will be combined with the values the switch finds in the specified frame header fields. Specific values for the rules are entered using the **config access\_profile** command, below.

**create access\_profile**

## Parameters

*ethernet* – Specifies that the switch will examine the layer 2 part of each packet header.

- *vlan* – Specifies that the switch will examine the VLAN part of each packet header.
- *source\_mac <macmask>* – Specifies a MAC address mask for the source MAC address. This mask is entered in the following hexadecimal format:
- *destination\_mac <macmask>* – Specifies a MAC address mask for the destination MAC address.
- *802.1p* – Specifies that the switch will examine the 802.1p priority value in the frame's header.
- *ethernet\_type* – Specifies that the switch will examine the Ethernet type value in each frame's header.

*ip* – Specifies that the switch will examine the IP address in each frame's header.

- *vlan* – Specifies a VLAN mask.
- *source\_ip\_mask <netmask>* – Specifies an IP address mask for the source IP address.
- *destination\_ip\_mask <netmask>* – Specifies an IP address mask for the destination IP address.
- *dscp* – Specifies that the switch will examine the DiffServ Code Point (DSCP) field in each frame's header.
- *icmp* – Specifies that the switch will examine the Internet Control Message Protocol (ICMP) field in each frame's header.
  - *type* – Specifies that the switch will examine each frame's ICMP Type field.
  - *code* – Specifies that the switch will examine each frame's ICMP Code field.
- *igmp* – Specifies that the switch will examine each frame's Internet Group Management Protocol (IGMP) field.
  - *type* – Specifies that the switch will examine each frame's IGMP Type field.

## create access\_profile

- *tcp* – Specifies that the switch will examine each frames Transport Control Protocol (TCP) field.
  - *src\_port\_mask* <hex 0x0-0xffff> – Specifies a TCP port mask for the source port.
  - *dst\_port\_mask* <hex 0x0-0xffff> – Specifies a TCP port mask for the destination port.
- *flag\_mask* [ *all* | {*urg* | *ack* | *psh* | *rst* | *syn* | *fin*} ] – Enter the appropriate flag\_mask parameter. All incoming packets have TCP port numbers contained in them as the forwarding criterion. These numbers have flag bits associated with them which are parts of a packet that determine what to do with the packet. The user may deny packets by denying certain flag bits within the packets. The user may choose between **all**, **urg** (urgent), **ack** (acknowledgement), **psh** (push), **rst** (reset), **syn** (synchronize) and **fin** (finish).
- *udp* – Specifies that the switch will examine each frame's Universal Datagram Protocol (UDP) field.
  - *src\_port\_mask* <hex 0x0-0xffff> – Specifies a UDP port mask for the source port.
  - *dst\_port\_mask* <hex 0x0-0xffff> – Specifies a UDP port mask for the destination port.
- *protocol\_id* – Specifies that the switch will examine each frame's Protocol ID field.
  - *user\_define\_mask* <hex 0x0-0xffffffff> – Specifies that the rule applies to the IP protocol ID and the mask options behind the IP header.
- *packet\_content\_mask* – Specifies that the switch will mask the packet header beginning with the offset value specified as follows:
  - *offset\_0-15* – Enter a value in hex form to mask the packet from the beginning of the packet to the 16<sup>th</sup> byte.
  - *offset\_16-31* - Enter a value in hex form to mask the packet from byte 16 to byte 31.
  - *offset\_32-47* - Enter a value in hex form to mask the packet from byte 32 to byte 47.
  - *offset\_48-63* - Enter a value in hex form to mask the packet from byte 48 to byte 63.
  - *offset\_64-79* - Enter a value in hex form to mask the packet from byte 64 to byte 79.

**create access\_profile**

*port <portlist>* - Specifies a port or range of ports to be configured. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

*all* – denotes all ports on the switch.

*profile\_id <value 1-255>* – Specifies an index number that will identify the access profile being created with this command.

**Restrictions**

Only administrator-level users can issue this command.

Example usage:

To create an access profile that will deny service to the subnet ranging from 10.42.73.0 to 10.42.73.255:

```
DGS-3312SR:4#create access_profile ip vlan source_ip_mask 20.0.0.0
destination_ip_mask 10.0.0.0 dscp icmp type code permit profile_id 101

Command: create access_profile ip vlan source_ip_mask 20.0.0.0
destination_ip_mask 10.0.0.0 dscp icmp type code permit profile_id 101

Success.

DGS-3312SR
```

**delete access\_profile**

Purpose	Used to delete a previously created access profile.
Syntax	<b>delete access_profile [profile_id &lt;value 1-255&gt;]</b>
Description	The <b>delete access_profile</b> command is used to delete a previously created access profile on the switch.
Parameters	<i>profile_id &lt;value 1-255&gt;</i> – Enter an integer between 1 and 255 that is used to identify the access profile that will be deleted with this command. This value is assigned to the access profile when it is created with the <b>create access_profile</b> command.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To delete the access profile with a profile ID of 1:

```
DGS-3312SR:4# delete access_profile profile_id 1
```

Command: delete access\_profile profile\_id 1

Success.

DGS-3312SR:4#

## config access\_profile

Purpose	Used to configure an access profile on the switch and to define specific values that will be used to by the switch to determine if a given packet should be forwarded or filtered. Masks entered using the <b>create access_profile</b> command will be combined, using a logical AND operation, with the values the switch finds in the specified frame header fields. Specific values for the rules are entered using the <b>config access_profile</b> command, below.
Syntax	<pre>&lt;value 1-255&gt;[ add access_id &lt;value 1-255&gt; [ethernet {vlan &lt;vlan_name 32&gt;   source_mac &lt;macaddr&gt;   destination_mac &lt;macaddr&gt;   802.1p &lt;value 0-7&gt;   ethernet_type &lt;hex 0x0-0xffff&gt; [permit {priority &lt;value 0-7&gt; {replace_priority }}   deny ]   ip {vlan &lt;vlan_name 32&gt;   source_ip &lt;ipaddr&gt;   destination_ip &lt;ipaddr&gt;   dscp &lt;value 0-63&gt;   [icmp {type &lt;value 0-255&gt; code &lt;value 0- 255&gt;}   igmp {type &lt;value 0-255&gt;}   tcp {src_port &lt;value 0-65535&gt;   dst_port &lt;value 0-65535&gt;   flag_mask [all   {urg   ack   psh   rst   syn   fin}]]   udp {src_port &lt;value 0-65535&gt;   dst_port &lt;value 0- 65535&gt;}   protocol_id &lt;value 0 - 255&gt; {user_define &lt;hex 0x0- 0xffffffff&gt;}}] [permit {priority &lt;value 0-7&gt; {replace_priority }}   deny ]   packet_content {offset_0-15 &lt;hex 0x0-0xffffffff&gt; &lt;hex 0x0- 0xffffffff&gt; &lt;hex 0x0-0xffffffff&gt; &lt;hex 0x0-0xffffffff&gt;   offset_16-31 &lt;hex 0x0-0xffffffff&gt; &lt;hex 0x0-0xffffffff&gt; &lt;hex 0x0-0xffffffff&gt; &lt;hex 0x0-0xffffffff&gt;   offset_32-47 &lt;hex 0x0-0xffffffff&gt; &lt;hex 0x0- 0xffffffff&gt; &lt;hex 0x0-0xffffffff&gt; &lt;hex 0x0-0xffffffff&gt;   offset_48-63 &lt;hex 0x0-0xffffffff&gt; &lt;hex 0x0-0xffffffff&gt; &lt;hex 0x0-0xffffffff&gt; &lt;hex 0x0-0xffffffff&gt;   offset_64-79 &lt;hex 0x0-0xffffffff&gt; &lt;hex 0x0- 0xffffffff&gt; &lt;hex 0x0-0xffffffff&gt; &lt;hex 0x0-0xffffffff&gt;}] [permit {priority &lt;value 0-7&gt; {replace_priority}   deny]   delete access_id &lt;value 1-255&gt;]</pre>
Description	The <b>config access_profile</b> command is used to configure an access profile on the switch and to enter specific values that will be combined, using a logical AND operation, with masks entered with the <b>create access_profile</b> command, above.

## config access\_profile

### Parameters

*profile\_id* <value 1-255> – Enter an integer between 1 and 255 that is used to identify the access profile that will be deleted with this command. This value is assigned to the access profile when it is created with the **create access\_profile** command.

*add access\_id* <value 1-255> – Adds an additional rule to the above specified access profile. The value specifies the relative priority of the additional rule. The lower access ID, the higher the priority the rule will be given.

*ethernet* – Specifies that the switch will look only into the layer 2 part of each packet.

- *vlan* <vlan\_name 32> – Specifies that the access profile will apply to only to this VLAN.
- *source\_mac* <macaddr> – Specifies that the access profile will apply to only packets with this source MAC address.
- *destination\_mac* <macaddr> – Specifies that the access profile will apply to only packets with this destination MAC address.
- *802.1p* <value 0-7> – Specifies that the access profile will apply only to packets with this 802.1p priority value.
- *ethernet\_type* <hex 0x0-0xffff> – Specifies that the access profile will apply only to packets with this hexadecimal 802.1Q Ethernet type value in the packet header.

*ip* – Specifies that the switch will look into the IP fields in each packet.

- *vlan* <vlan\_name 32> – Specifies that the access profile will apply to only to this VLAN.
- *source\_ip* <ipaddr> – Specifies that the access profile will apply to only packets with this source IP address.
- *destination\_ip* <ipaddr> – Specifies that the access profile will apply to only packets with this destination IP address.
- *dscp* <value 0-63> – Specifies that the access profile will apply only to packets that have this value in their Type-of-Service (DiffServ code point, DSCP) field in their IP packet header.
- *icmp* – Specifies that the switch will examine the Internet Control Message Protocol (ICMP) field within each packet.
  - *type* <value 0-255> – Specifies that the access profile will apply to this ICMP type value.
  - *code* <value 0-255> – Specifies that the access profile will apply to this ICMP code.

## config access\_profile

- *igmp* – Specifies that the switch will examine the Internet Group Management Protocol (IGMP) field within each packet.
  - *type* <value 0-255> – Specifies that the access profile will apply to packets that have this IGMP type value.
- *tcp* – Specifies that the switch will examine the Transmission Control Protocol (TCP) field within each packet.
  - *src\_port* <value 0-65535> – Specifies that the access profile will apply only to packets that have this TCP source port in their TCP header.
  - *dst\_port* <value 0-65535> – Specifies that the access profile will apply only to packets that have this TCP destination port in their TCP header.
- *flag\_mask* – Enter the type of TCP flag to be masked. The choices are:
  - *urg*: TCP control flag (urgent)
  - *ack*: TCP control flag (acknowledgement)
  - *psh*: TCP control flag (push)
  - *rst*: TCP control flag (reset)
  - *syn*: TCP control flag (synchronize)
  - *fin*: TCP control flag (finish)
- *udp* – Specifies that the switch will examine the Universal Datagram Protocol (UDP) field in each packet.
  - *src\_port* <value 0-65535> – Specifies that the access profile will apply only to packets that have this UDP source port in their header.
  - *dst\_port* <value 0-65535> – Specifies that the access profile will apply only to packets that have this UDP destination port in their header.
- *protocol\_id* <value 0-255> – Specifies that the switch will examine the Protocol field in each packet and if this field contains the value entered here, apply the following rules.
- *user\_define* <hex 0x0-0xffffffff> – Specifies a mask to be combined with the value found in the frame header using a logical AND operation.

**config access\_profile**

- *packet\_content* – Specifies that the switch will mask the packet header beginning with the offset value specified as follows:
  - *offset\_0-15* – Enter a value in hex form to mask the packet from the beginning of the packet to the 15<sup>th</sup> byte.
  - *offset\_16-31* – Enter a value in hex form to mask the packet from byte 16 to byte 32.
  - *offset\_32-47* – Enter a value in hex form to mask the packet from byte 32 to byte 47.
  - *offset\_48-63* – Enter a value in hex form to mask the packet from byte 48 to byte 63.
  - *offset\_64-79* – Enter a value in hex form to mask the packet from byte 64 to byte 79.

*permit* – Specifies that packets that match the access profile are permitted to be forwarded by the Switch.

- *priority <value 0-7>* – Specify the 802.1p priority value included in the packet that will be forwarded by the Switch. Only packets that have this priority value will be permitted.
- *{replace\_priority}* – This parameter is specified if you want to change the 802.1p user priority of a packet that meets the specified criteria. Otherwise, a packet will have its incoming 802.1p user priority re-written to its original value before being transmitted from the Switch.

*replace\_dscp with <value 0-63>* – Allows you to specify a value to be written to the DSCP field of an incoming packet that meets the criteria specified in the first part of the command. This value will over-write the value in the DSCP field of the packet.

*deny* – Specifies that packets that do not match the access profile are not permitted to be forwarded by the Switch and will be filtered.

*delete access\_id <value 1-255>* – Specifies the access ID of a rule to delete.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To configure the access profile with the profile ID of 1 to filter frames that have IP addresses in the range between 10.42.73.0 to 10.42.73.255:

```
DGS-3312SR:4# config access_profile profile_id 2 add access_id 1 ip
source_ip 10.42.73.1 deny
```

```
Command: config access_profile profile_id 1 add access_id 1 ip
source_ip 10.42.73.1 deny
```

```
Success.
```

DGS-3312SR:4#

**show access\_profile**

Purpose	Used to display the currently configured access profiles on the switch.
Syntax	<b>show access_profile {profile_id &lt;value 1-255&gt;}</b>
Description	The <b>show access_profile</b> command is used to display the currently configured access profiles
Parameters	<i>profile_id &lt;value 1-255&gt;</i> - Enter this parameter, along with the appropriate value between 1 and 255, to view a specific access profile.  Entering this command without a parameter will display all access profiles currently set on the switch.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To display all of the currently configured access profiles on the switch:

```
DGS-3312SR:4#show access_profile
```

```
Command: show access_profile
```

```
Access Profile Table
```

```
Access Profile ID: 2
```

```
TYPE : Ethernet Frame Filter
```

```
Ports: 1:1
```

```
Masks : VLAN      802.1P
```

```
-----
```

```
ID  Mode
```

```
----
```

```
3  Permit 0      0-x
```

```
DGS-3312SR:4#
```

## TRAFFIC SEGMENTATION COMMANDS

Traffic segmentation allows you to further sub-divide VLANs into smaller groups of ports that will help to reduce traffic on the VLAN. The VLAN rules take precedence, and then the traffic segmentation rules are applied. The traffic segmentation commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
config traffic_segmentation	<portlist> forward_list [null   <portlist>]
show traffic_segmentation	{<portlist>}

Each command is listed, in detail, in the following sections.



**NOTE:** As a stand-alone switch or as a master switch in a switch stack, the switch number will be referred to as 15 for all configurations, graphs and tables.

### config traffic\_segmentation

Purpose	Used to configure traffic segmentation on the switch.
Syntax	<b>config traffic_segmentation &lt;portlist&gt; forward_list [null   &lt;portlist&gt;]</b>
Description	The <b>config traffic_segmentation</b> command is used to configure traffic segmentation on the switch.
Parameters	<p><i>&lt;portlist&gt;</i> – Specifies a range of ports that will be configured for traffic segmentation. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.</p> <p><i>forward_list</i> – Specifies a range of ports that will receive forwarded frames from the ports specified in the portlist, above.</p> <p><i>null</i> – no ports are specified</p> <p><i>&lt;portlist&gt;</i> – Specifies a range of ports for the forwarding list. This list must be on the same switch previously specified for traffic segmentation (i.e. following the <i>&lt;portlist&gt;</i> specified above for config traffic_segmentation).</p>
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure ports 1 through 9 to be able to forward frames to port 10 through 12:

```
DGS-3312SR:4# config traffic_segmentation 1:1-1:9 forward_list 1:10-1:12
Command: config traffic_segmentation 1:1-1:9 forward_list 1:10-1:12

Note: If a port in forward_list belongs to a different slave form
source_port, all ports on the slave will be added in forward_list.

Success.

DGS-3312SR:4#
```

## show traffic\_segmentation

Purpose	Used to display the current traffic segmentation configuration on the switch.
Syntax	<b>show traffic_segmentation &lt;portlist&gt;</b>
Description	The <b>show traffic_segmentation</b> command is used to display the current traffic segmentation configuration on the switch.
Parameters	<i>&lt;portlist&gt;</i> – Specifies a range of ports for which the current traffic segmentation configuration on the switch will be displayed. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.
Restrictions	The port lists for segmentation and the forward list must be on the same switch.

Example usage:

To display the current traffic segmentation configuration on the switch.

```
DGS-3312SR:4#show traffic_segmentation 1:1-1:12
Command: show traffic_segmentation 1:1-1:12

Traffic Segmentation Table

Port Forward Portlist
----
1:1 1:1-1:12,2:1-2:12
```

**1:2 1:1-1:12,2:1-2:12**  
**1:3 1:1-1:12,2:1-2:12**  
**1:4 1:1-1:12,2:1-2:12**  
**1:5 1:1-1:12,2:1-2:12**  
**1:6 1:1-1:12,2:1-2:12**  
**1:7 1:1-1:12,2:1-2:12**  
**1:8 1:1-1:12,2:1-2:12**  
**1:9 1:1-1:12,2:1-2:12**  
**1:10 1:1-1:12,2:1-2:12**  
**1:11 1:1-1:12,2:1-2:12**  
**1:12 1:1-1:12,2:1-2:12**

**DGS-3312SR:4#**

## STACKING COMMANDS

The stacking configuration commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
config stacking mode	[ disable {ports [<portlist>   <int>]}   enable {ports [<portlist>   <int>}]]
show stacking	mode

Each command is listed, in detail, in the following sections.



**NOTE:** As a stand-alone switch or as a master switch in a switch stack, the switch number will be referred to as 15 for all configurations, graphs and tables.

### config stacking mode

Purpose	Used to configure the stacking mode.
Syntax	<b>config stacking mode [ disable {ports [&lt;portlist&gt;]}   enable {ports [&lt;portlist&gt;}]]</b>
Description	This command is used to configure the stacking function for the switch by enabling or disabling stacking, along with a list of ports.
Parameters	<p><i>disable</i> - To disable the switch to function in a stacked group. The user may disable this stacking function by port, by adding the <i>ports</i> parameter along with the appropriate port to be disabled.</p> <ul style="list-style-type: none"> <li>▪ <i>&lt;portlist&gt;</i> - Specifies a range of ports for which the stacking mode on the switch will be enabled. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.</li> </ul> <p><i>enable</i> – To enable the switch to function in a stacked group. The user may employ this stacking function by port, by adding the <i>ports</i> parameter along with the appropriate port to be enabled.</p> <ul style="list-style-type: none"> <li>▪ <i>&lt;portlist&gt;</i> - Specifies a range of ports for which the stacking mode on the switch will be enabled. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon.</li> </ul>

**config stacking mode**

Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

**Restrictions**

Only administrator-level users can issue this command.

## Usage Example

To globally enable stacking:

**DGS-3312SR:4#config stacking mode enable**

**Command: config stacking mode enable**

**The new stacking mode configuration must be saved and the system restarted to put the new settings into effect.**

**If you do not save the changes now, they will be lost.**

**Do you want to save the new system configuration to NV-RAM and restart now?(y/n)**

It is necessary to save the stacking mode settings and restart the system. If you want to save and restart press Y. It will take a few minutes for the system to reboot.

It is also possible to use any of the built-in combination ports for stacking. Follow the example below to enable stacking for a built-in port.

To configure built-in port number 4 to function as a stacking port:

**DGS-3312SR:4#config stacking mode enable ports 4**

**Command: config stacking mode enable ports 4**

**The new stacking mode configuration must be saved and the system restarted to put the new settings into effect.**

**If you do not save the changes now, they will be lost.**

**Do you want to save the new system configuration to NV-RAM and restart now?(y/n)**

**Success.**

**DGS-3312SR:4#**

It is necessary to save the stacking mode settings and restart the system. If you want to save and restart press Y. It will take a few minutes for the system to reboot.

**show stacking**

Purpose	Used to display the current stacking mode.
Syntax	<b>show stacking {mode}</b>
Description	This command will display the current stacking configurations, and mode, if specified.
Parameters	<i>mode</i> – Displays the current stacking mode.
Restrictions	None.

Usage Example:

To show stacking:

```
DGS-3312SR:4#show stacking
Command: show stacking

ID  MAC Address          Port Range  Mode      Version  RPS Status  Model Name
---  -
*15 00-01-02-03-04-00  1 - 12     MASTER    3.00-B12  Not Present  DGS-3312SR
*2  01-02-03-04-05-00  1 - 12     SLAVE     4.02-B03  Not Present  DES-3226S

Total Entries :1

DGS-3312SR:4#
```

To show stacking mode:

```
DGS-3312SR:4#show stacking mode
Command: show stacking mode

Stacking Topology : Disable
Setting           : STANDALONE
Current           : STANDALONE

DGS-3312SR:4#
```

## D-LINK SINGLE IP MANAGEMENT COMMANDS

Simply put, D-Link Single IP Management is a concept that will stack switches together over Ethernet instead of using stacking ports or modules. Switches using Single IP Management (labeled here as SIM) must conform to the following rules:

- SIM is an optional feature on the switch and can easily be enabled or disabled. SIM grouping has no effect on the normal operation of the switch in the user's network.
- There are three classifications for switches using SIM. The **Commander Switch (CS)**, which is the master switch of the group, **Member Switch (MS)**, which is a switch that is recognized by the CS as a member of a SIM group, and a **Candidate Switch (CaS)**, which is a switch that has a physical link to the SIM group but has not been recognized by the CS as a member of the SIM group.
- A SIM group can only have one Commander Switch (CS).
- All switches in a particular SIM group must be in the same IP subnet (broadcast domain). Members of a SIM group cannot cross a router.
- A SIM group accepts up to 32 switches (numbered 0-31), including the Commander Switch (numbered 0).
- There is no limit to the number of SIM groups in the same IP subnet (broadcast domain), however a single switch can only belong to one group.
- If multiple VLANs are configured, the SIM group will only utilize the default VLAN on any switch.
- SIM allows intermediate devices that do not support SIM. This enables the user to manage a switch that is more than one hop away from the CS.

The SIM group is a group of switches that are managed as a single entity. The switch may take on three different roles:

**Commander Switch(CS)** – This is a switch that has been manually configured as the controlling device for a group, and takes on the following characteristics:

- It has an IP Address.
- It is not a command switch or member switch of another Single IP group.
- It is connected to the member switches through its management VLAN.

**Member Switch(MS)** – This is a switch that has joined a single IP group and is accessible from the CS, and it takes on the following characteristics:

- It is not a CS or MS of another IP group.
- It is connected to the CS through the CS management VLAN.

**Candidate Switch(CaS)** – This is a switch that is ready to join a SIM group but is not yet a member of the SIM group. The Candidate Switch may join the SIM group through an automatic function of the switch, or by manually configuring it to be a MS of a SIM group. A switch configured as a CaS is not a member of a SIM group and will take on the following characteristics:

- It is not a CS or MS of another Single IP group.
- It is connected to the CS through the CS management VLAN

The following rules also apply to the above roles:

1. Each device begins in a Commander state.
2. CS's must change their role to CaS and then to MS, to become a MS of a SIM group. Thus, the CS cannot directly be converted to a MS.
3. The user can manually configure a CS to become a CaS.
4. A MS can become a CaS by:
  - a. Being configured as a CaS through the CS.
  - b. If report packets from the CS to the MS time out.
5. The user can manually configure a CaS to become a CS
6. The CaS can be configured through the CS to become a MS.

After configuring one switch to operate as the CS of a SIM group, additional switches may join the group by either an automatic method or by manually configuring the switch to be a MS. The CS will then serve as the in band entry point for access to the MS. The CS's IP address will become the path to all MS's of the group and the CS's Administrator's password, and/or authentication will control access to all MS's of the SIM group.

With SIM enabled, the applications in the CS will redirect the packet instead of executing the packets. The applications will decode the packet from the administrator, modify some data, and then send it to the MS. After execution, the CS may receive a response packet from the MS, which it will encode and send it back to the administrator.

When a CS becomes a MS, it automatically becomes a member of first SNMP community (include read/write and read only) to which the CS belongs. However, if a MS has its own IP address, it can belong to SNMP communities to which other switches in the group, including the CS, do not belong.

The switch port commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
enable sim	
disable sim	
show sim	{[candidates {<candidate_id 1-32>}   members { <member_id 1-32> }   group {commander_mac <macaddr>}   neighbor]}
reconfig	{member_id <value 1-32>   exit}
config sim_group	[ add <candidate_id 1-32> {<password>}   delete <member_id 1-32> ]
config sim	{[ commander { group_name <groupname 64>   candidate]   dp_interval <sec 30-90>   hold_time <sec 100-255>}
download sim_ms	[firmware   configuration] <ipaddr> <path_filename> [members <mclist>   all]
upload sim_ms	[configuration] <ipaddr> <path_filename> <member_id 1-32>

Each command is listed, in detail, in the following sections.

<b>enable sim</b>	
Purpose	Used to enable Single IP Management (SIM) on the switch
Syntax	<b>enable sim</b>

**enable sim**

Description	This command will enable SIM globally on the switch. SIM features and functions will not function properly unless this function is enabled.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To enable SIM on the switch:

```
DGS-3312SR:4#enable sim
Command: enable sim

Success.

DGS-3312SR:4#
```

**disable sim**

Purpose	Used to disable Single IP Management (SIM) on the switch
Syntax	<b>disable sim</b>
Description	This command will disable SIM globally on the switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To disable SIM on the switch:

```
DGS-3312SR:4#disable sim
Command: disable sim

Success.

DGS-3312SR:4#
```

**show sim**

Purpose	Used to view the current information regarding the SIM group on the switch.
---------	---

**show sim**

Syntax	<b>show sim</b> <b>{[candidates {&lt;candidate_id 1-32&gt;}   members {&lt;member_id 1-32&gt;}   group {commander_mac &lt;macaddr&gt;} neighbor]}</b>
Description	<p>This command will display the current information regarding the SIM group on the switch, including the following:</p> <p>SIM Version - Displays the current Single IP Management version on the switch.</p> <p>Firmware Version - Displays the current Firmware version on the switch.</p> <p>Device Name - Displays the user-defined device name on the switch.</p> <p>MAC Address - Displays the MAC Address of the switch.</p> <p>Capabilities – Displays the type of switch, be it Layer 2 (L2) or Layer 3 (L3).</p> <p>Platform – Switch Description including name and model number.</p> <p>SIM State –Displays the current Single IP Management State of the switch, whether it be enabled or disabled.</p> <p>Role State – Displays the current role the switch is taking, including Commander, Member or Candidate. A stand-alone switch will always have the candidate role.</p> <p>Discovery Interval - Time in seconds the switch will send discovery packets out over the network.</p> <p>Hold time – Displays the time in seconds the switch will hold discovery results before dropping it or utilizing it.</p>
Parameters	<p><i>candidates</i> &lt;candidate_id 1-32&gt; - Entering this parameter will display information concerning candidates of the SIM group. To view a specific candidate, include that candidate's id number, listed from 1 to 32.</p> <p><i>members</i> &lt;member_id 1-32&gt; - Entering this parameter will display information concerning members of the SIM group. To view a specific member, include that member's id number, listed from 1 to 32.</p> <p><i>group commander_mac</i> &lt;macaddr&gt; - Entering this parameter will display information concerning the SIM group of a commander device, identified by its MAC address.</p> <p><i>neighbor</i> – Entering this parameter will display neighboring devices of the switch. A SIM neighbor is defined as a switch that is physically connected to the switch but is not part of the SIM group. This screen will produce the following results:</p> <ul style="list-style-type: none"> <li>▪ Port – Displays the physical port number of the commander switch where the uplink to the neighbor switch is</li> </ul>

**show sim**

located.

- MAC Address – Displays the MAC Address of the neighbor switch.
- Role – Displays the role (CS, CaS, MS) of the neighbor switch.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To show the SIM information in detail:

```
DGS-3312SR:4#show sim
Command: show sim

SIM Version      : VER-1
Firmware Version : Build 2.00-B17
Device Name      :
MAC Address      : 00-35-26-11-11-00
Capabilities     : L3
Platform        : DGS-3312SR L3 Switch
SIM State       : Enabled
Role State      : Commander
Discovery Interval : 30 sec
Hold Time       : 100 sec

DGS-3312SR:4#
```

To show the candidate information in summary, if the candidate ID is specified:

```
DGS-3312SR:4#show sim candidates
Command: show sim candidates

ID  MAC Address      Platform /
    -----      -
    Capability
    -----      -----
    Hold   Firmware   Device Name
    Time   Version
    -----      -----
1  00-01-02-03-04-00 DGS-3212SR L2 Switch  40   3.00-B09   The Man
2  00-55-55-00-55-00 DGS-3212SR L2 Switch  140  3.00-B09   default master

Total Entries: 2

DGS-3312SR:4#
```

To show the member information in summary, if the member id is specified:

DGS-3312SR:4#show sim member

Command: show sim member

ID	MAC Address	Platform / Capability	Hold Time	Firmware Version	Device Name
---	-----	-----	---	-----	-----
1	00-01-04-03-04-00	DGS-3212SR L2 Switch	40	3.00-B09	The Man
2	00-55-35-00-55-00	DGS-3212SR L2 Switch	140	3.00-B09	default master

Total Entries: 2

DGS-3312SR:4#

To show other groups information in summary, if group is specified:

DGS-3312SR:4#show sim group

Command: show sim group

SIM Group Name : default

ID	MAC Address	Platform / Capability	Hold Time	Firmware Version	Device Name
---	-----	-----	---	-----	-----
*1	00-01-02-03-04-00	DGS-3212SR L2 Switch	40	3.00-B09	Trinity

SIM Group Name : default

ID	MAC Address	Platform / Capability	Hold Time	Firmware Version	Device Name
---	-----	-----	---	-----	-----
2	00-55-55-00-55-00	DGS-3212SR L2 Switch	140	3.00-B09	Enrico

SIM Group Name : SIM2

ID	MAC Address	Platform / Capability	Hold Time	Firmware Version	Device Name
---	-----	-----	---	-----	-----
*1	00-01-02-03-04-00	DGS-3212SR L2 Switch	40	3.00-B09	Neo
2	00-55-55-00-55-00	DGS-3212SR L2 Switch	140	3.00-B09	default master

\*\* means commander switch.

```
DGS-3312SR:4#
```

Example usage:

To view SIM neighbors:

```
DGS-3312SR:4#show sim neighbor
```

```
Command: show sim neighbor
```

#### Neighbor Info Table

Port	MAC Address	Role
23	00-35-26-00-11-99	Commander
23	00-35-26-00-11-91	Member
24	00-35-26-00-11-90	Candidate

```
Total Entries: 3
```

```
DGS-3312SR:4#
```

## reconfig

Purpose	Used to connect to a member switch, through the commander switch using telnet.
Syntax	<b>reconfig {member_id &lt;value 1-32   exit}</b>
Description	This command is used to reconnect to a member switch using telnet.
Parameters	<i>member_id</i> <value 1-32> - Select the id number of the member switch the user desires to configure.  <i>exit</i> – This command is used to exit from managing the member switch and will return to managing the commander switch.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To connect to the MS, with member id 2, through the CS, using the command line interface:

```
DGS-3312SR:4#reconfig member_id 2
```

```
Command: reconfig member_id 2
```

```
DGS-3312SR:4#
```

```
Login:
```

**config sim\_group**

Purpose	Used to add candidates and delete members from the SIM group.
Syntax	<b>config sim [add &lt;candidate_id 1-32&gt; {&lt;password&gt;}   delete &lt;member_id 1-32&gt;]</b>
Description	This command is used to add candidates and delete members from the SIM group by id number.
Parameters	<p><i>add &lt;candidate_id&gt; &lt;password&gt;</i> - Use this parameter to change a candidate switch (CaS) to a member switch (MS) of a SIM group. The CaS may be defined by its ID number and a password (if necessary).</p> <p><i>delete &lt;member_id 1-32&gt;</i> - Use this parameter to delete a member switch of a SIM group. The member switch should be defined by its ID number.</p>
Restrictions	Only administrator-level users can issue this command.

Example usage:

To add a member:

```
DGS-3312SR:4#config sim_group add 2
```

```
Command: config sim_group add 2
```

```
Please wait for ACK...
```

```
SIM Config Success !!!
```

```
Success.
```

```
DGS-3312SR:4#
```

To delete a member:

```
DGS-3312SR:4#config sim delete 1
```

```
Command: config sim delete 1
```

```
Please wait for ACK...
```

```
Success.
```

```
DGS-3312SR:4#
```

<b>config sim</b>	
Purpose	Used to configure role parameters for the SIM protocol on the switch.
Syntax	<b>config sim</b> <b>[{[ commander {group_name &lt;groupname 64&gt;   candidate]   dp_interval &lt;30-90&gt;   hold_time &lt;sec 100-255&gt;}]</b>
Description	This command is used to configure parameters of switches of the SIM.
Parameters	<p><i>commander</i> – Use this parameter to configure the commander switch for the following parameters:</p> <ul style="list-style-type: none"> <li>▪ <i>group_name &lt;groupname 64&gt;</i> - Used to update the name of the group. Enter an alphanumeric string of up to 64 characters to rename the SIM group.</li> <li>▪ <i>dp_interval &lt;30-90&gt;</i> – The user may set the discovery protocol interval, in seconds that the switch will send out discovery packets. Returning information to the commander switch will include information about other switches connected to it. (Ex. MS, CaS). The user may set the discovery protocol interval from 30 to 90 seconds.</li> <li>▪ <i>hold time &lt;sec 100-255&gt;</i> – Using this parameter, the user may set the time, in seconds, the switch will hold information sent to it from other switches, utilizing the discovery interval protocol. The user may set the hold time from 100 to 300 seconds.</li> </ul> <p><i>candidate</i> – Used to change the role of a commander switch to a candidate switch.</p> <ul style="list-style-type: none"> <li>▪ <i>dp_interval &lt;30-90&gt;</i>– The user may set the discovery protocol interval, in seconds that the switch will send out discovery packets. Returning information to the commander switch will include information about other switches connected to it. (Ex. MS, CaS). The user may set the dp interval from 30 to 90 seconds.</li> <li>▪ <i>hold time &lt;sec 100-255&gt;</i>– Using this parameter, the user may set the time, in seconds, the switch will hold information sent to it from other switches, utilizing the discovery interval protocol. The user may set the hold time from 100 to 300 seconds.</li> </ul>
Restrictions	Only administrator-level users can issue this command.

To change the time interval of the discovery protocol:

```
DGS-3312SR:4#config sim commander dp_interval 30
Command:config sim commander dp_interval 30

Success.
```

```
DGS-3312SR:4#
```

To change the hold time of the discovery protocol:

```
DGS-3312SR:4# config sim commander hold_time 120
Command: config sim commander hold_time 120

Success.

DGS-3312SR:4#
```

To transfer the switch to be a commander:

```
DGS-3312SR:4#config sim commander
Command: config sim commander

Success.

DGS-3312SR:4#
```

To update the name of a group:

```
DGS-3312SR:4#config sim commander group_name Trinity
Command: config sim commander group_name Trinity

Success.

DGS-3312SR:4#
```

## download sim\_ms

Purpose	Used to download firmware or configuration file to an indicated device.
Syntax	<b>download sim_ms [ firmware   configuration] &lt;ipaddr&gt; &lt;path_filename&gt; {members &lt;mslist&gt;   all}</b>
Description	This command will download a firmware file or configuration file to a specified device from a TFTP server.
Parameters	<p><i>firmware</i> – Specify this parameter if the user wishes to download firmware to members of a SIM group.</p> <p><i>configuration</i> - Specify this parameter if the user wishes to download a switch configuration to members of a SIM group.</p> <p><i>ipaddr</i> – Enter the IP address of the TFTP server.</p> <p><i>path_filename</i> – Enter the path and the filename of the firmware or switch on the TFTP server.</p>

**download sim\_ms**

*members* – Enter this parameter to specify the members the user prefers to download firmware or switch configuration files to. The user may specify a member or members by adding one of the following:

- *<mslist>* - Enter a value, or values to specify which members of the SIM group will receive the firmware or switch configuration.
- *all* – Add this parameter to specify all members of the SIM group will receive the firmware or switch configuration.

Restrictions                      Only administrator-level users can issue this command.

Example usage:

To download firmware:

```
DGS-3312SR:4# download sim_ms firmware 10.53.13.94
c:/dgssri.had members all

Command: download sim_ms firmware 10.53.13.94 c:/dgssri.had
members all

This device is updating firmware. Please wait...

Download Status :
```

ID	MAC Address	Result
---	-----	-----
1	00-01-02-03-04-00	Success
2	00-07-06-05-04-03	Success
3	00-07-06-05-04-04	Success

```
DGS-3312SR:4#
```

To download configuration files:

```
DGS-3312SR:4#download sim_ms configuration 10.53.13.94
c:/dgssri.txt members all

Command: download sim_ms configuration 10.53.13.94
c:/dgssri.txt members all

This device is updating configuration. Please wait...

Download Status :
```

ID	MAC Address	Result
---	-----	-----

```

1 00-01-02-03-04-00 Success
2 00-07-06-05-04-03 Success
3 00-07-06-05-04-04 Success

```

```
DGS-3312SR:4#
```

## upload sim\_ms

Purpose	User to upload a configuration file to a TFTP server from a specified member of a SIM group.
Syntax	<b>upload sim_ms [configuration] &lt;ipaddr&gt; &lt;path_filename&gt; &lt;member_id 1-32&gt;</b>
Description	This command will upload a configuration file to a TFTP server from a specified member of a SIM group.
Parameters	<p>&lt;ipaddr&gt; Enter the IP address of the TFTP server the user wishes to upload a configuration file to.</p> <p>&lt;path_filename&gt; – Enter a user-defined path and file name on the TFTP server the user wishes to upload configuration files to.</p> <p>&lt;member_id 1-32&gt; Enter this parameter to specify the member the user prefers to upload a switch configuration file to. The user may specify a member or members by adding the ID number of the specified member.</p>
Restrictions	Only administrator-level users can issue this command.

Example usage:

To upload configuration files to a TFTP server:

```

DGS-3312SR:4#upload sim_ms configuration 10.55.47.1 D:\configuration.txt 1
Command: upload sim_ms configuration 10.55.47.1 D:\configuration.txt 1

Success.

DGS-3312SR:4#

```

## TIME AND SNTP COMMANDS

The Simple Network Time Protocol (SNTP) (an adaptation of the Network Time Protocol (NTP)) commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
config sntp	{primary <ipaddr>   secondary <ipaddr>   poll-interval <int 30-99999>}
show sntp	
enable sntp	
disable sntp	
config time	<date ddmmyyyy > <time hh:mm:ss>
config time_zone	{operator [+   -]   hour <gmt_hour 0-13>   min <minute 0-59>}
config dst	[disable   repeating {s_week <start_week 1-4,last>   s_day <start_day sun-sat>   s_mth <start_mth 1-12>   s_time <start_time hh:mm>   e_week <end_week 1-4,last>   e_day <end_day sun-sat>   e_mth <end_mth 1-12>   e_time <end_time hh:mm>   offset [30   60   90   120]}   annual {s_date <start_date 1-31>   s_mth <start_mth 1-12>   s_time <start_time hh:mm>   e_date <end_date 1-31>   e_mth <end_mth 1-12>   e_time <end_time hh:mm>   offset [30   60   90   120]}]
show time	

Each command is listed, in detail, in the following sections.

<b>config sntp</b>	
Purpose	Used to setup SNTP service.
Syntax	<b>config sntp {primary &lt;ipaddr&gt;   secondary &lt;ipaddr&gt;   poll-interval &lt;int 30-99999&gt;}</b>
Description	Use this command to configure SNTP service from an SNTP server. SNTP must be enabled for this command to function (See enable sntp).
Parameters	<p><i>primary</i> – This is the primary server the SNTP information will be taken from.</p> <ul style="list-style-type: none"> <li>▪ <i>&lt;ipaddr&gt;</i> – The IP address of the primary server.</li> </ul> <p><i>secondary</i> – This is the secondary server the SNTP information will be taken from in the event the primary server is unavailable.</p> <ul style="list-style-type: none"> <li>▪ <i>&lt;ipaddr&gt;</i> – The IP address for the secondary server.</li> </ul> <p><i>poll-interval &lt;int 30-99999&gt;</i> – This is the interval between requests for updated SNTP information. The polling interval ranges from 30 to 99,999 seconds.</p>

**config sntp**

Restrictions	Only administrator-level users can issue this command. SNTP service must be enabled for this command to function (enable sntp).
--------------	---

Example usage:

To configure SNTP settings:

```
DGS-3312SR:4#config sntp primary 10.1.1.1 secondary 10.1.1.2 poll-interval 30
Command: config sntp primary 10.1.1.1 secondary 10.1.1.2 poll-interval 30

Success.

DGS-3312SR:4#
```

**show sntp**

Purpose	Used to display the SNTP information.
Syntax	<b>show sntp</b>
Description	This command will display SNTP settings information including the source IP address, time and poll interval.
Parameters	None.
Restrictions	None.

Example usage:

To display SNTP configuration information:

```
DGS-3312SR:4#show sntp
Command: show sntp

Current Time Source : System Clock
SNTP : Disabled
SNTP Primary Server   : 10.1.1.1
SNTP Secondary Server : 10.1.1.2
SNTP Poll Interval   : 720 sec

DGS-3312SR:4#
```

**enable sntp**

Purpose	Enables SNTP server support.
Syntax	<b>enable sntp</b>
Description	This will enable SNTP support. SNTP service must be separately configured (see <b>config sntp</b> ). Enabling and configuring SNTP support will override any manually configured system time settings.
Parameters	None.
Restrictions	Only administrator-level users can issue this command. SNTP settings must be configured for SNTP to function (config sntp).

Example usage:

To enable the SNTP function:

```
DGS-3312SR:4#enable sntp
Command: enable sntp

Success.

DGS-3312SR:4#
```

**disable sntp**

Purpose	Disables SNTP server support.
Syntax	<b>disable sntp</b>
Description	This will disable SNTP support. SNTP service must be separately configured (see <b>config sntp</b> ).
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example:

To stop SNTP support:

```
DGS-3312SR:4#disable sntp
Command: disable sntp

Success.

DGS-3312SR:4#
```

**config time**

Purpose	Used to manually configure system time and date settings.
Syntax	<b>config time date &lt;date ddmmyyyy&gt; &lt;time hh:mm:ss&gt;</b>
Description	This will configure the system time and date settings. These will be overridden if SNTP is configured and enabled.
Parameters	<p><i>date</i> – Express the date using two numerical characters for the day of the month, three alphabetical characters for the name of the month, and four numerical characters for the year. For example: 03aug2003.</p> <p><i>time</i> – Express the system time using the format hh:mm:ss, that is, two numerical characters each for the hour using a 24-hour clock, the minute and second. For example: 19:42:30.</p>
Restrictions	Only administrator-level users can issue this command. Manually configured system time and date settings are overridden if SNTP support is enabled.

Example usage:

To manually set system time and date settings:

```
DGS-3312SR:4#config time 30jun2003 16:30:30
```

```
Command: config time 30jun2003 16:30:30
```

```
Success.
```

```
DGS-3312SR:4#
```

**config time zone**

Purpose	Used to determine the time zone used in order to adjust the system clock.
Syntax	<b>config time_zone {operator [+   -]   hour &lt;gmt_hour 0-13&gt;   min &lt;minute 0-59&gt;}</b>
Description	This will adjust system clock settings according to the time zone. Time zone settings will adjust SNTP information accordingly.
Parameters	<p><i>operator</i> – Choose to add (+) or subtract (-) time to adjust for time zone relative to GMT.</p> <p><i>hour</i> – Select the number hours different from GMT.</p> <p><i>min</i> – Select the number of minutes difference added or subtracted to adjust the time zone.</p>
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure time zone settings:

```
DGS-3312SR:4#config time_zone operator + hour 2 min 30
```

```
Command: config time_zone operator + hour 2 min 30
```

```
Success.
```

```
DGS-3312SR:4#
```

## config dst

Purpose	Used to enable and configure time adjustments to allow for the use of Daylight Savings Time (DST).
Syntax	<b>config dst [disable   repeating {s_week &lt;start_week 1-4,last&gt;   s_day &lt;start_day sun-sat&gt;  s_mth &lt;start_mth 1-12&gt;   s_time &lt;start_time hh:mm&gt;   e_week &lt;end_week 1-4,last&gt;   e-day &lt;end_day sun-sat&gt;   e_mth &lt;end_mth 1-12&gt;   e_time &lt;end_time hh:mm&gt;   offset [30   60   90   120]}   annual {s_date &lt;start_date 1-31&gt;   s_mth &lt;start_mth 1-12&gt;   s_time &lt;start_time hh:mm&gt;   e_date &lt;end_date 1-31&gt;   e_mth &lt;end_mth 1-12&gt;   e_time &lt;end_time hh:mm&gt;   offset [30   60   90   120]}]</b>
Description	DST can be enabled and configured using this command. When enabled this will adjust the system clock to comply with any DST requirement. DST adjustment effects system time for both manually configured time and time set using SNTP service.

**config dst**

Parameters	<p><i>disable</i> - Disable the DST seasonal time adjustment for the Switch.</p> <p><i>repeating</i> - Using repeating mode will enable DST seasonal time adjustment. Repeating mode requires that the DST beginning and ending date be specified using a formula. For example, specify to begin DST on Saturday during the second week of April and end DST on Sunday during the last week of October.</p> <p><i>annual</i> - Using annual mode will enable DST seasonal time adjustment. Annual mode requires that the DST beginning and ending date be specified concisely. For example, specify to begin DST on April 3 and end DST on October 14.</p> <p><i>s_week</i> - Configure the week of the month in which DST begins.</p> <ul style="list-style-type: none"> <li>• <i>&lt;start_week 1-4,last&gt;</i> - The number of the week during the month in which DST begins where 1 is the first week, 2 is the second week and so on, last is the last week of the month.</li> </ul> <p><i>e_week</i> - Configure the week of the month in which DST ends.</p> <ul style="list-style-type: none"> <li>• <i>&lt;end_week 1-4,last&gt;</i> - The number of the week during the month in which DST ends where 1 is the first week, 2 is the second week and so on, last is the last week of the month.</li> </ul> <p><i>s_day</i> - Configure the day of the week in which DST begins.</p> <ul style="list-style-type: none"> <li>• <i>&lt;start_day sun-sat&gt;</i> - The day of the week in which DST begins expressed using a three character abbreviation (sun, mon, tue, wed, thu, fri, sat)</li> </ul> <p><i>e_day</i> - Configure the day of the week in which DST ends.</p> <ul style="list-style-type: none"> <li>• <i>&lt;end_day sun-sat&gt;</i> - The day of the week in which DST ends expressed using a three character abbreviation (sun, mon, tue, wed, thu, fri, sat)</li> </ul> <p><i>s_mth</i> - Configure the month in which DST begins.</p> <ul style="list-style-type: none"> <li>• <i>&lt;start_mth 1-12&gt;</i> - The month to begin DST expressed as a number.</li> </ul> <p><i>e_mth</i> - Configure the month in which DST ends.</p> <ul style="list-style-type: none"> <li>• <i>&lt;end_mth 1-12&gt;</i> - The month to end DST expressed as a number.</li> </ul> <p><i>s_time</i> - Configure the time of day to begin DST.</p> <ul style="list-style-type: none"> <li>• <i>&lt;start_time hh:mm&gt;</i> - Time is expressed using a 24-hour clock, in hours and minutes.</li> </ul> <p><i>e_time</i> - Configure the time of day to end DST.</p> <ul style="list-style-type: none"> <li>• <i>&lt;end_time hh:mm&gt;</i> - Time is expressed using a 24-hour clock, in hours and minutes.</li> </ul>
------------	--

**config dst**

*s\_date* - Configure the specific date (day of the month) to begin DST.

- *<start\_date 1-31>* - The start date is expressed numerically.

*e\_date* - Configure the specific date (day of the month) to begin DST.

- *<end\_date 1-31>* - The end date is expressed numerically.

*offset [30 | 60 | 90 | 120]* - Indicates number of minutes to add or to subtract during the summertime. The possible offset times are 30,60,90,120. The default value is 60.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To configure daylight savings time on the switch:

```
DGS-3312SR:4#config dst repeating s_week 2 s_day tue s_mth 4
s_time 15:00 e_week 2 e_day wed e_mth 10 e_time 15:30 offset 30

Command: config dst repeating s_week 2 s_day tue s_mth 4 s_time
15:00 e_week 2 e_day wed e_mth 10 e_time 15:30 offset 30

Success.

DGS-3312SR:4#
```

**show time**

Purpose	Used to display the current time settings and status.
Syntax	<b>show time</b>
Description	This will display system time and date configuration as well as display current system time.
Parameters	None.
Restrictions	None.

Example usage:

To show the time currently set on the switch's System clock:

**DGS-3312SR:4#show time**

**Command: show time**

**Current Time Source : System Clock**  
**Current Time : 10 Jul 2003 01:43:41**  
**Time Zone : GMT +02:30**  
**Daylight Saving Time : Repeating**  
**Offset in Minutes : 60**  
**Repeating From : Apr 2nd Tue 15:00**  
**To : Oct 2nd Wed 15:30**  
**Annual From : 29 Apr 00:00**  
**To : 012 Oct 00:00**

**DGS-3312SR:4#**

**ARP COMMANDS**

The ARP commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
create arpentry	<ipaddr> <macaddr>
delete arpentry	[<ipaddr>   all]
show arpentry	{ipif <ipif_name 12>   ipaddress <ipaddr>   static}
config arp_aging time	<value 0-65535>
clear arptable	

Each command is listed, in detail, in the following sections.

<b>create arpentry</b>	
Purpose	Used to make a static entry into the ARP table.
Syntax	<b>create arpentry &lt;ipaddr&gt; &lt;macaddr&gt;</b>
Description	This command is used to enter an IP address and the corresponding MAC address into the switch's ARP table.
Parameters	<p>&lt;ipaddr&gt; – The IP address of the end node or station.</p> <p>&lt;macaddr&gt; – The MAC address corresponding to the IP address above.</p>
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To create a static ARP entry for the IP address 10.48.74.121 and MAC address 00:50:BA:00:07:36:

```
DGS-3312SR:4#create arpentry 10.48.74.121 00-50-BA-00-07-36
Command: create arpentry 10.48.74.121 00-50-BA-00-07-36

Success.

DGS-3312SR:4#
```

**delete arpentry**

Purpose	Used to delete a static entry into the ARP table.
Syntax	<b>delete arpentry {&lt;ipaddr&gt;   all}</b>
Description	This command is used to delete a static ARP entry, made using the <b>create arpentry</b> command above, by specifying either the IP address of the entry or all. Specifying <i>all</i> clears the switch's ARP table.
Parameters	<i>&lt;ipaddr&gt;</i> – The IP address of the end node or station.  <i>all</i> – Deletes all ARP entries.
Restrictions	Only administrator-level users can issue this command.

## Example Usage:

To delete an entry of IP address 10.48.74.121 from the ARP table:

```
DGS-3312SR:4#delete arpentry 10.48.74.121
Command: delete arpentry 10.48.74.121

Success.

DGS-3312SR:4#
```

**config arp\_aging**

Purpose	Used to configure the age-out timer for ARP table entries on the switch.
Syntax	<b>config arp_aging time &lt;value 0-65535 &gt;</b>
Description	This command sets the maximum amount of time, in minutes, that an ARP entry can remain in the switch's ARP table, without being accessed, before it is dropped from the table.
Parameters	<i>time &lt;value 0-65535&gt;</i> – The ARP age-out time, in minutes. The value may be set in the range of 0-65535 minutes with a default setting of 20 minutes.
Restrictions	Only administrator-level users can issue this command.

## Example Usage:

To configure ARP aging time:

```
DGS-3312SR:4#config arp_aging time 30
Command: config arp_aging time 30

Success.
```

DGS-3312SR:4#

**show arpentry**

Purpose	Used to display the ARP table.
Syntax	<b>show arpentry {ipif &lt;ipif_name 12&gt;   ipaddress &lt;ipaddr&gt;   static}</b>
Description	This command is used to display the current contents of the switch's ARP table.
Parameters	<p>&lt;ipif_name 12&gt; – The name of the IP interface the end node or station for which the ARP table entry was made, resides on.</p> <p>&lt;ipaddr&gt; – The network address corresponding to the IP interface name above.</p> <p>static – Displays the static entries of the ARP table.</p>
Restrictions	None.

Example Usage:

To display the ARP table:

```
DGS-3312SR:4#show arpentry
Command: show arpentry

ARP Aging Time : 30

Interface      IP Address      MAC Address      Type
-----
System        10.0.0.0        FF-FF-FF-FF-FF-FF  Local/Broadcast
System        10.1.1.169      00-50-BA-70-E4-4E  Dynamic
System        10.1.1.254      00-01-30-FA-5F-00  Dynamic
System        10.9.68.1       00-A0-C9-A4-22-5B  Dynamic
System        10.9.68.4       00-80-C8-2E-C7-45  Dynamic
System        10.10.27.51     00-80-C8-48-DF-AB  Dynamic
System        10.11.22.145    00-80-C8-93-05-6B  Dynamic
System        10.11.94.10     00-10-83-F9-37-6E  Dynamic
System        10.14.82.24     00-50-BA-90-37-10  Dynamic
System        10.15.1.60      00-80-C8-17-42-55  Dynamic
System        10.17.42.153    00-80-C8-4D-4E-0A  Dynamic
System        10.19.72.100    00-50-BA-38-7D-5E  Dynamic
System        10.21.32.203    00-80-C8-40-C1-06  Dynamic
System        10.40.44.60     00-50-BA-6B-2A-1E  Dynamic
System        10.42.73.221    00-01-02-03-04-00  Dynamic
System        10.44.67.1      00-50-BA-DA-02-51  Dynamic
System        10.47.65.25     00-50-BA-DA-03-2B  Dynamic
System        10.50.8.7       00-E0-18-45-C7-28  Dynamic
System        10.90.90.90     00-01-02-03-04-00  Local
System        10.255.255.255  FF-FF-FF-FF-FF-FF  Local/Broadcast

Total Entries = 20
```

**DGS-3312SR:4#****clear arptable**

Purpose	Used to remove all dynamic ARP table entries.
Syntax	<b>clear arptable</b>
Description	This command is used to remove dynamic ARP table entries from the switch's ARP table. Static ARP table entries are not affected.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

## Example Usage:

To remove dynamic entries in the ARP table:

**DGS-3312SR:4#clear arptable****Command: clear arptable****Success.****DGS-3312SR:4#**



## VRRP COMMANDS

*VRRP* or *Virtual Routing Redundancy Protocol* is a function on the switch that dynamically assigns responsibility for a virtual router to one of the VRRP routers on a LAN. The VRRP router that controls the IP address associated with a virtual router is called the Master, and will forward packets sent to this IP address. This will allow any Virtual Router IP address on the LAN to be used as the default first hop router by end hosts. Utilizing VRRP, the administrator can achieve a higher available default path cost without needing to configure every end host for dynamic routing or routing discovery protocols.

Statically configured default routes on the LAN are prone to a single point of failure. VRRP is designed to eliminate these failures by setting an election protocol that will assign a responsibility for a virtual router to one of the VRRP routers on the LAN. When a virtual router fails, the election protocol will select a virtual router with the highest priority to be the Master router on the LAN. This retains the link and the connection is kept alive, regardless of the point of failure.

To configure VRRP for virtual routers on the switch, an IP interface must be present on the system and it must be a part of a VLAN. VRRP IP interfaces may be assigned to every VLAN, and therefore IP interface, on the switch. VRRP routers within the same VRRP group must be consistent in configuration settings for this protocol to function optimally.

The VRRP commands in the Command Line Interface (CLI) are listed, along with the appropriate parameters, in the following table.

Command	Parameters
enable vrrp	{ping}
disable vrrp	{ping}
create vrrp ipif	<ipif_name 12> vrid <vrid 1-255> ipaddress <ipaddr> {state [enable   disable]   priority <int 1-254>   advertisement_interval <int 1-255>   preempt [true   false]   critical_ip <ipaddr>   critical_ip_state [enable   disable]}
config vrrp ipif	<ipif_name 12>   vrid <vrid 1-255> {state [enable   disable]   priority <int 1-254>   ipaddress <ipaddr>   advertisement_interval <int 1-255>   preempt [true   false]   critical_ip <ipaddr>   critical_ip_state [enable   disable]}
config vrrp ipif authtype	<ipif_name 12> [authtype [none   simple authdata <string 8>   ip authdata <string 16>]
show vrrp	{ipif <ipif_name 12> {vrid <vrid 1-255>}}
delete vrrp	{ipif <ipif_name 12> {vrid <vrid 1-255>}}

Each command is listed, in detail, in the following sections.

<b>enable vrrp</b>	
Purpose	To enable a VRRP interface configuration.
Syntax	<b>enable vrrp {ping}</b>
Description	This command will enable the VRRP interface configuration on the switch.
Parameters	{ping} – Adding this parameter to the command will allow the virtual IP address to be pinged from other host end nodes to verify connectivity. This will only enable the ping connectivity check

**enable vrrp**

function. To enable the VRRP protocol on the switch, omit this parameter. This command is disabled by default.

**Restrictions** Only administrator-level users can issue this command.

Example Usage:

To enable VRRP globally on the switch:

**DGS-3312SR:4#enable vrrp**

**Command: enable vrrp**

**Success.**

**DGS-3312SR:4#**

Example usage:

To enable the virtual IP address to be pinged:

**DGS-3312SR:4#enable vrrp ping**

**Command: enable vrrp ping**

**Success.**

**DGS-3312SR:4#**

**disable vrrp**

**Purpose** To disable a VRRP interface configuration.

**Syntax** **disable vrrp {ping}**

**Description** This command will disable the VRRP interface configuration on the switch.

**Parameters** *{ping}* - Adding this parameter to the command will stop the virtual IP address from being pinged from other host end nodes to verify connectivity. This will only disable the ping connectivity check function. To disable the VRRP protocol on the switch, omit this parameter.

**Restrictions** Only administrator-level users can issue this command.

Example usage:

To disable the VRRP function globally on the switch:

**DGS-3312SR:4#disable vrrp**

**Command: disable vrrp**

**Success.**

**DGS-3312SR:4#**

Example usage:

To disable the virtual IP address from being pinged:

**DGS-3312SR:4#disable vrrp ping**

**Command: disable vrrp ping**

**Success.**

**DGS-3312SR:4#**

### create vrrp ipif

Purpose	To create a VRRP IP interface on the switch.
Syntax	<b>&lt;ipif_name 12&gt; vrid &lt;vrid 1-255&gt; ipaddress &lt;ipaddr&gt; {state [enable   disable]   priority &lt;int 1-254&gt;   advertisement_interval &lt;int 1-255&gt;   preempt [true   false]   critical_ip &lt;ipaddr&gt;   critical_ip_state [enable   disable]}</b>
Description	This command is used to create a VRRP interface on the switch.

## create vrrp ipif

Parameters	<p><i>&lt;ipif_name 12&gt;</i> - Enter the name of a previously configured IP interface that you wish to create a VRRP entry for. This IP interface must be assigned to a VLAN on the switch.</p> <p><i>vrid &lt;vrid 1-255&gt;</i> - Enter a value between 1 and 255 to uniquely identify this VRRP group on the switch. All routers participating in this group must be assigned the same <i>vrid</i> value. This value <b>MUST</b> be different from other VRRP groups set on the switch.</p> <p><i>ipaddress &lt;ipaddr&gt;</i> - Enter the virtual IP address that will be assigned to the VRRP entry. This IP address is also the default gateway that will be statically assigned to end hosts and must be set for all routers that participate in this group.</p> <p><i>state [enable   disable]</i> – Used to enable and disable the VRRP IP interface on the switch.</p> <p><i>priority &lt;int 1-254&gt;</i> - Enter a value between 1 and 254 to indicate the router priority. The VRRP Priority value may determine if a higher priority VRRP router overrides a lower priority VRRP router. A higher priority will increase the probability that this router will become the Master router of the group. A lower priority will increase the probability that this router will become the backup router. VRRP routers that are assigned the same priority value will elect the highest physical IP address as the Master router. The default value is 100. (The value of 255 is reserved for the router that owns the IP address associated with the virtual router and is therefore set automatically.)</p> <p><i>advertisement_interval &lt;int 1-255&gt;</i> - Enter a time interval value, in seconds, for sending VRRP message packets. This value must be consistent with all routers participating within the same VRRP group and is used to troubleshoot misconfigured routers. The default is 1 second.</p> <p><i>preempt [true   false]</i> – This entry will determine the behavior of backup routers within the VRRP group by controlling whether a higher priority backup router will preempt a lower priority Master router. A <i>true</i> entry, along with having the backup router's priority set higher than the masters priority, will set the backup router as the Master router. A <i>false</i> entry will disable the backup router from becoming the Master router. This setting must be consistent with all routers participating within the same VRRP group. The default setting is <i>true</i>.</p> <p><i>critical_ip &lt;ipaddr&gt;</i> - Enter the IP address of the physical device that will provide the most direct route to the Internet or other critical network connections from this virtual router. This must be a real IP address of a real device on the network. If the connection from the virtual router to this IP address fails, a new Master will be elected from the backup routers participating in the VRRP group. If the connection to the backup fails, this backup router cannot assume the Master router role. Different critical IP addresses may be assigned to different routers participating in the VRRP group, and can therefore define multiple routes to the Internet or other critical network connections.</p>
------------	---

**create vrrp ipif**

*critical\_ip\_state [enable | disable]* – This parameter is used to enable or disable the critical IP address entered above. The default is *disable*.

Restrictions            Only administrator-level users can issue this command.

Example usage:

To create a VRRP entry:

```
DGS-3312SR:4#create vrrp ipif Darren vrid ipaddress 11.1.1.1 state enable
priority 200 advertisement_interval 1 preempt true critical_ip 10.53.13.224
critical_ip_state enable
```

```
Command: create vrrp ipif Darren vrid ipaddress 11.1.1.1 state enable
priority 200 advertisement_interval 1 preempt true critical_ip 10.53.13.224
critical_ip_state enable
```

**Success.**

```
DGS-3312SR:4#
```

**config vrrp ipif**

Purpose	To configure a VRRP IP interface on the switch.
Syntax	<b>&lt;ipif_name 12&gt; [authtype [none   simple authdata &lt;string 8&gt;   ip authdata &lt;string 16&gt;]   vrid &lt;vrid 1-255&gt; {state [enable   disable]   priority &lt;int 1-254&gt;   ipaddress &lt;ipaddr&gt;   advertisement_interval &lt;int 1-255&gt;   preempt [true   false]   critical_ip &lt;ipaddr&gt;   critical_ip_state [enable   disable]}</b>
Description	This command is used to configure a previously configured VRRP interface on the switch.

**config vrrp ipif**

## Parameters

*<ipif\_name 12>* - Enter the name of a previously configured IP interface that you wish to configure the VRRP entry for. This IP interface must be assigned to a VLAN on the switch.

*vrid <vrid 1-255>* - Enter a value between 1 and 255 that uniquely identifies the VRRP group you wish to configure. All routers participating in this group must be assigned the same *vrid* value. This value MUST be different from other VRRP groups set on the switch.

*state [enable | disable]* – Used to enable and disable the VRRP IP interface on the switch.

*priority <int 1-254>* - Enter a value between 1 and 254 to indicate the router priority. The VRRP Priority value may determine if a higher priority VRRP router overrides a lower priority VRRP router. A higher priority will increase the probability that this router will become the Master router of the group. A lower priority will increase the probability that this router will become the backup router. VRRP routers that are assigned the same priority value will elect the highest physical IP address as the Master router. The default value is 100. (The value of 255 is reserved for the router that owns the IP address associated with the virtual router and is therefore set automatically.)

*ipaddress <ipaddr>* - Enter the virtual IP address that will be assigned to the VRRP entry. This IP address is also the default gateway that will be statically assigned to end hosts and must be set for all routers that participate in this group.

*advertisement\_interval <int 1-255>* - Enter a time interval value, in seconds, for sending VRRP message packets. This value must be consistent with all routers participating within the same VRRP group and is used to troubleshoot misconfigured routers. The default is 1 second.

*preempt [true | false]* – This entry will determine the behavior of backup routers within the VRRP group by controlling whether a higher priority backup router will preempt a lower priority Master router. A *true* entry, along with having the backup router's priority set higher than the masters priority, will set the backup router as the Master router. A *false* entry will disable the backup router from becoming the Master router. This setting must be consistent with all routers participating within the same VRRP group. The default setting is *true*.

*critical\_ip <ipaddr>* - Enter the IP address of the physical device that will provide the most direct route to the Internet or other critical network connections from this virtual router. This must be a real IP address of a real device on the network. If the connection from the virtual router to this IP address fails, a new Master will be elected from the backup routers participating in the VRRP group. If the connection to the backup fails, this backup router cannot assume the Master router role. Different critical IP addresses may be assigned to different routers participating in the VRRP group, and can therefore define multiple routes to the Internet or other critical network connections.

**config vrrp ipif**

*critical\_ip\_state* [*enable* | *disable*] – This parameter is used to enable or disable the critical IP address entered above. The default is *disable*.

Restrictions            Only administrator-level users can issue this command.

Example usage:

To configure a VRRP entry:

```
DGS-3312SR:4#config vrrp ipif Trinity vrid 1 state enable priority
100 advertisement_interval 2
```

```
Command: config vrrp ipif Trinity vrid 1 state enable priority 100
advertisement_interval 2
```

Success.

```
DGS-3312SR:4#
```

**config vrrp ipif authtype**

Purpose	To configure the authentication type for a VRRP entry.
Syntax	<b>config vrrp ipif authtype &lt;ipif_name 12&gt; [none   simple authdata &lt;string 8&gt;   ip authdata &lt;string 16&gt;]</b>
Description	This command is used to set the authentication type for a VRRP entry on the switch.
Parameters	<p>&lt;<i>ipif_name 12</i>&gt; - Enter the name of a previously configured IP interface that you wish to configure the VRRP entry for. This IP interface must be assigned to a VLAN on the switch.</p> <p><i>authtype</i> – Specifies the type of authentication used. The authtype must be consistent with all routers participating within the VRRP group. The user may choose between:</p> <ul style="list-style-type: none"> <li>▪ <i>none</i> – Entering this parameter indicates that VRRP protocol exchanges will not be authenticated.</li> <li>▪ <i>simple authdata &lt;string 8&gt;</i> - This parameter, along with an alphanumeric string of no more than eight characters, to set a simple password for comparing VRRP message packets received by a router. If the two passwords are not exactly the same, the packet will be dropped.</li> <li>▪ <i>ip authdata &lt;string 16&gt;</i> - This parameter will require the user to set an alphanumeric authentication string of no more than 16 characters to generate a MD5 message digest for authentication in comparing VRRP messages received by the router. If the two values are inconsistent, the packet will be dropped.</li> </ul>

**config vrrp ipif authtype**

Restrictions	Only administrator-level users can issue this command.
--------------	--

Example usage:

To set the authentication type for a VRRP entry:

```
DGS-3312SR:4#config vrrp ipif Trinity authtype simple authdata tomato
```

```
Command: config vrrp ipif Trinity authtype simple authdata tomato
```

```
Success.
```

```
DGS-3312SR:4#
```

**delete vrrp**

Purpose	Used to delete a vrrp entry from the switch.
Syntax	<b>delete vrrp {ipif &lt;ipif_name 12&gt; vrid &lt;vrid 1-255&gt;}</b>
Description	This command is used to remove a VRRP router running on a local device.
Parameters	<p><i>ipif &lt;ipif_name 12&gt;</i> - Enter the name of the IP interface which holds the VRRP router to delete.</p> <p><i>vrid &lt;vrid 1-255&gt;</i> - Enter the VRRP ID of the virtual router to be deleted.</p>
Restrictions	Only administrator-level users can issue this command.

Example usage:

To delete a VRRP entry:

```
DGS-3312SR:4#delete vrrp ipif Trinity vrid 2
```

```
Command: delete vrrp ipif Trinity vrid 2
```

```
Success.
```

```
DGS-3312SR:4#
```

## ROUTING TABLE COMMANDS

The routing table commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
create iproute	<network_address> <ipaddr> {<metric 1-65535>} {[primary   backup]}
create iproute default	<ipaddr> {<metric 1-65535>}
delete iproute default	
delete iproute	<network_address> <ipaddr> {[primary   backup]}
show iproute	{<network_address>} {[static   rip   ospf]}

Each command is listed, in detail, in the following sections.

create iproute	
Purpose	Used to create IP route entries to the switch's IP routing table.
Syntax	<b>create iproute &lt;network_address&gt; &lt;ipaddr&gt; {&lt;metric 1-65535&gt;} {[primary   backup]}</b>
Description	This command is used to create a primary and backup IP route entry to the switch's IP routing table.
Parameters	<p>&lt;network_address&gt; – IP address and netmask of the IP interface that is the destination of the route. You can specify the address and mask information using the traditional format (for example, 10.1.2.3/255.0.0.0 or in CIDR format, 10.1.2.3/8).</p> <p>&lt;ipaddr&gt; – The gateway IP address for the next hop router.</p> <p>&lt;metric 1-65535&gt; – Allows the entry of a routing protocol metric entry, representing the number of routers between the Switch and the IP address above. The default setting is 1.</p> <p>[primary   backup] - The user may choose between <i>Primary</i> and <i>Backup</i>. If the Primary Static/Default Route fails, the Backup Route will support the entry. Please take note that the Primary and Backup entries cannot have the same Gateway.</p>
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To add a single static address 10.48.74.121, mask 255.0.0.0 and gateway 10.1.1.254 to the routing table:

```
DGS-3312SR:4#create iproute 10.48.74.121/255.0.0.0 10.1.1.254 1
```

```
Command: create iproute 10.48.74.121/8 10.1.1.254 1
```

```
Success.
```

```
DGS-3312SR:4#
```

## create iproute default

Purpose	Used to create IP route entries to the switch's IP routing table.
Syntax	<b>create iproute default &lt;ipaddr&gt; {&lt;metric&gt;}</b>
Description	This command is used to create a default static IP route entry to the switch's IP routing table.
Parameters	<p>&lt;ipaddr&gt; – The gateway IP address for the next hop router.</p> <p>&lt;metric&gt; – Allows the entry of a routing protocol metric entry representing the number of routers between the Switch and the IP address above. The default setting is 1.</p>
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To add the default static address 10.48.74.121, with a metric setting of 1, to the routing table:

```
DGS-3312SR:4#create iproute default 10.48.74.121 1
```

```
Command: create iproute default 10.48.74.121 1
```

```
Success.
```

```
DGS-3312SR:4#
```

## delete iproute

Purpose	Used to delete an IP route entry from the switch's IP routing table.
Syntax	<b>delete iproute &lt;network_address&gt; &lt;ipaddr&gt; [primary   backup]</b>
Description	This command will delete an existing entry from the switch's IP routing table.
Parameters	<p>&lt;network_address&gt; – IP address and netmask of the IP interface that is the destination of the route. You can specify the address and mask information using the traditional format (for example, 10.1.2.3/255.0.0.0 or in CIDR format, 10.1.2.3/8).</p> <p>&lt;ipaddr&gt; – The gateway IP address for the next hop router.</p>

**delete iproute**

*[primary | backup]* – The user may choose between *Primary* and *Backup*. If the Primary Static/Default Route fails, the Backup Route will support the entry. Please take note that the Primary and Backup entries cannot have the same Gateway.

Restrictions                      Only administrator-level users can issue this command.

## Example Usage:

To delete a backup static address 10.48.75.121, mask 255.0.0.0 and gateway (ipaddr) entry of 10.1.1.254 from the routing table:

```
DGS-3312SR:4#delete iproute 10.48.74.121/8 10.1.1.254
```

```
Command: delete iproute 10.48.74.121/8 10.1.1.254
```

```
Success.
```

```
DGS-3312SR:4#
```

**delete iproute default**

Purpose                              Used to delete a default IP route entry from the switch's IP routing table.

Syntax                             **delete iproute default**

Description                      This command will delete an existing default entry from the switch's IP routing table.

Parameters                      None.

Restrictions                      Only administrator-level users can issue this command.

## Example usage:

To delete the default IP route 10.53.13.254:

```
DGS-3312SR:4#delete iproute default
```

```
Command: delete iproute default
```

```
Success.
```

```
DGS-3312SR:4#
```

**show iproute**

Purpose                              Used to display the switch's current IP routing table.

**show iproute**

Syntax	<b>show iproute {&lt;network_address&gt;} {[static   rip   ospf]}</b>
Description	This command will display the switch's current IP routing table.
Parameters	<p><i>&lt;network_address&gt;</i> – IP address and netmask of the IP interface that is the destination of the route. You can specify the address and mask information using the traditional format (for example, 10.1.2.3/255.0.0.0 or in CIDR format, 10.1.2.3/8).</p> <p><i>static</i> – Use this parameter to display static iproute entries.</p> <p><i>rip</i> – Use this parameter to display RIP iproute entries.</p> <p><i>ospf</i> – Use this parameter to display OSPF iproute entries.</p>
Restrictions	None.

## Example Usage:

To display the contents of the IP routing table:

```

DGS-3312SR:4#show iproute
Command: show iproute

IP Address/Netmask  Gateway          Interface        Hops  Protocol
-----
0.0.0.0             10.1.1.254      System           1     Default
10.0.0.0            10.48.74.122   System           1     Local

Total Entries: 2

DGS-3312SR:4#

```

## ROUTE REDISTRIBUTION COMMANDS

The route redistribution commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
create route redistribute dst ospf src	[static   rip   local] {mettype [1   2]   metric <value>}
create route redistribute dst rip src	[local   static   ospf {all   internal   external   type_1   type_2   inter+e1   inter+e2}] {metric <value>}
config route redistribute dst ospf src	[static   rip   local] {mettype [1   2]   metric <value>}
config route redistribute dst rip src	[local   static   ospf {all   internal   external   type_1   type_2   inter+e1   inter+e2}] {metric <value>}
delete route redistribute	{dst [rip   ospf] src [rip   local   static   ospf]}
show route redistribute	{dst [rip   ospf]   src [rip   static   local   ospf]}

Each command is listed, in detail, in the following sections.

### create route redistribute dst ospf src

Purpose	Used to add route redistribution settings for the exchange of RIP routes to OSPF routes on the switch.
Syntax	<b>create route redistribute dst ospf src [static   rip   local] {mettype [1   2]   metric &lt;value&gt;}</b>
Description	This command will redistribute routing information between the OSPF and RIP routing protocols to all routers on the network that are running OSPF or RIP. Routing information entered into the Static Routing Table on the local DGS-3312SR switch is also redistributed.
Parameters	<p><i>src</i> [static   rip   local] – Allows for the selection of the protocol for the source device.</p> <p><i>mettype</i> [1   2] – Allows for the selection of one of two methods of calculating the metric value. Type-1 calculates (for RIP to OSPF) by adding the destination's interface cost to the metric entered in the Metric field. Type-2 uses the metric entered in the Metric field without change. This field applies only when the destination field is OSPF.</p> <p><i>metric &lt;value&gt;</i> – Allows the entry of an OSPF interface cost. This is analogous to a Hop Count in the RIP routing protocol.</p>
Restrictions	Only administrator-level users can issue this command.

Routing information source – RIP, the Static Route table, and the Local interface routing information. Routing information will be redistributed to OSPF.

Route Source	Metric	Metric Type
RIP	0 to 16777214	mettype 1 mettype 2
Static	0 to 16777214	mettype 1 mettype 2
Local	0 to 16777214	mettype 1 mettype 2

Allowed Metric Type combinations are **mettype 1** or **mettype 2**. The metric value **0** above will be redistributed in OSPF as the metric **20**.

Example Usage:

To add route redistribution settings:

```
DGS-3312SR:4#create route redistribute dst ospf src rip
Command: create route redistribute dst ospf src rip

Success.

DGS-3312SR:4#
```

<b>create route redistribute dst rip src</b>	
Purpose	Used to add route redistribution settings for the exchange of OSPF routes to RIP routes on the switch.
Syntax	<b>create route redistribute dst rip src {all   internal   external   type_1   type_2   inter+e1   inter+e2}] {metric &lt;value&gt;}</b>
Description	This command will redistribute routing information between the OSPF and RIP routing protocols to all routers on the network that are running OSPF or RIP. Routing information entered into the Static Routing Table on the local DGS-3312SR switch is also redistributed
Parameters	<i>src {all   internal   external   type_1   type_2   inter+e1   inter+e2}</i> – Allows the selection of the protocol of the source device.  <i>metric &lt;value&gt;</i> – Allows the entry of an OSPF interface cost. This is analogous to a HOP Count in the RIP routing protocol.
Restrictions	Only administrator-level users can issue this command.

Routing information source – OSPF and the Static Route table. Routing information will be redistributed to RIP. The following table lists the allowed values for the routing metrics and the types (or forms) of the routing information that will be redistributed.

Route Source	Metric	Type
OSPF	0 to 16	all type_1 type_2 inter+e1 inter+e2 external internal
Static	0 to 16	not applicable

Entering the **Type** combination – **internal type\_1 type\_2** is functionally equivalent to **all**. Entering the combination **type\_1 type\_2** is functionally equivalent to **external**. Entering the combination **internal external** is functionally equivalent to **all**.

Entering the metric **0** specifies transparency.

Example Usage:

To add route redistribution settings:

```
DGS-3312SR:4#create route redistribute dst rip src ospf all metric 2
Command: create route redistribute dst rip src ospf all metric 2

Success.

DGS-3312SR:4#
```

<b>config route redistribute dst ospf src</b>	
Purpose	Used configure route redistribution settings for the exchange of RIP routes to OSPF routes on the switch.
Syntax	<b>config route redistribute dst ospf src [static   rip   local] {mettype [1   2]   metric &lt;value&gt;}</b>
Description	Route redistribution allows routers on the network – that are running different routing protocols to exchange routing information. This is accomplished by comparing the routes stored in the various router's routing tables and assigning appropriate metrics. This information is then exchanged among the various routers according to the individual routers current routing protocol. The switch can redistribute routing information between the OSPF and RIP routing protocols to all routers on the network that are running OSPF or RIP. Routing information entered into the Static Routing Table on the local switch is also redistributed.
Parameters	<i>src</i> [static   rip   local] – Allows the selection of the protocol of the source device.  <i>mettype</i> – Allows the selection of one of the methods for calculating

**config route redistribute dst ospf src**

the metric value. Type-1 calculates the metric (for RIP to OSPF) by adding the destination's interface cost to the metric entered in the Metric field. Type-2 uses the metric entered in the Metric field without change. This field applies only when the destination field is OSPF.

*metric <value>* – Allows the entry of an OSPF interface cost. This is analogous to a Hop Count in the RIP routing protocol.

**Restrictions**

Only administrator-level users can issue this command.

Routing information source – RIP: the Static Route table, and the Local interface routing information. Routing information will be redistributed to OSPF. The following table lists the allowed values for the routing metrics and the types (or forms) of the routing information that will be redistributed.

Route Source	Metric	Metric Type
RIP	0 to 16777214	mettype 1
		mettype 2
Static	0 to 16777214	mettype 1
		mettype 2
Local	0 to 16777214	mettype 1
		mettype 2

Allowed Metric Type combinations are **mettype 1** or **mettype 2**. The metric value **0** above will be redistributed in OSPF as the metric **20**.

Example Usage:

To configure route redistributions:

```
DGS-3312SR:4#config route redistribute dst ospf src all metric 2
```

```
Command: config route redistribute dst ospf src all metric 2
```

```
Success.
```

```
DGS-3312SR:4#
```

**config route redistribute dst rip src**

**Purpose** Used configure route redistribution settings for the exchange of RIP routes to OSPF routes on the switch.

**Syntax** **config route redistribute dst rip src [local | static | ospf | [all | internal | external | type\_1 | type\_2 | inter+e1 | inter+e2]] {metric <value>}**

**Description** Route redistribution allows routers on the network that are running different routing protocols to exchange routing information. This is

**config route redistribute dst rip src**

accomplished by comparing the routes stored in the various router's routing tables and assigning appropriate metrics. This information is then exchanged among the various routers according to the individual routers current routing protocol. The switch can redistribute routing information between the OSPF and RIP routing protocols to all routers on the network that are running OSPF or RIP. Routing information entered into the Static Routing Table on the local switch is also redistributed.

**Parameters** *src {all | internal | external | type\_1 | type\_2 | inter+e1 | inter+e2}* – Allows the selection of the protocol of the source device.

*metric <value>* – Allows the entry of an OSPF interface cost. This is analogous to a Hop Count in the RIP routing protocol.

**Restrictions** Only administrator-level users can issue this command.

Example Usage:

To configure route redistributions:

```
DGS-3312SR:4#config route redistribute dst ospf src rip mettype
type_1 metric 2
```

```
Command: config route redistribute dst ospf src rip mettype
type_1 metric 2
```

```
Success.
```

```
DGS-3312SR:4#
```

**delete route redistribute**

**Purpose** Used to delete an existing route redistribute configuration on the switch.

**Syntax** **delete route redistribute {dst [rip | ospf] src [rip | static | local | ospf]}**

**Description** This command will delete the route redistribution settings on this switch.

**Parameters** *dst [rip | ospf]* – Allows the selection of the protocol on the destination device.

*src [rip | static | local | ospf]* – Allows the selection of the protocol on the source device.

**Restrictions** Only administrator-level users can issue this command.

Example Usage:

To delete route redistribution settings:

**DGS-3312SR:4#delete route redistribute dst rip src ospf**

**Command: delete route redistribute dst rip src ospf**

**Success.**

**DGS-3312SR:4#**

## show route redistribute

Purpose	Used to display the route redistribution on the switch.
Syntax	<b>show route redistribute {dst [rip   ospf]   src [rip   static   local   ospf]}</b>
Description	Displays the current route redistribution settings on the switch.
Parameters	<p><i>src [rip   static   local   ospf]</i> – Allows the selection of the routing protocol on the source device.</p> <p><i>dst [rip   ospf]</i> – Allows the selection of the routing protocol on the destination device.</p>
Restrictions	none.

Example Usage:

To display route redistributions:

```

DGS-3312SR:4#show route redistribute
Command: show route redistribute

Source Protocol  Destination Protocol  Type      Metric
-----
STATIC  RIP              All       1
LOCAL   OSPF             Type-2    20

Total Entries : 2

DGS-3312SR:4#

```

## BOOTP RELAY COMMANDS

The BOOTP relay commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
config bootp_relay	{hops <value 1-16>   time <sec 0-65535>}
config bootp_relay add ipif	<ipif_name 12> <ipaddr>
config bootp_relay delete ipif	<ipif_name 12> <ipaddr>
enable bootp_relay	
disable bootp_relay	
show bootp_relay	{ipif <ipif_name 12>}

Each command is listed, in detail, in the following sections.

### config bootp\_relay

Purpose	Used to configure the BOOTP relay feature of the switch.
Syntax	<b>config bootp_relay {hops &lt;value 1-16&gt;} {time &lt;sec 0-65535&gt;}</b>
Description	This command is used to configure the BOOTP relay feature.
Parameters	<p><i>hops &lt;value 1-16&gt;</i> – Specifies the maximum number of relay agent hops that the BOOTP packets can cross.</p> <p><i>time &lt;sec 0-65535&gt;</i> – If this time is exceeded, the switch will relay the BOOTP packet.</p>
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To configure bootp relay status.

```
DGS-3312SR:4#config bootp_relay hops 4 time 2
Command: config bootp_relay hops 4 time 2

Success.

DGS-3312SR:4#
```

**config bootp\_relay add**

Purpose	Used to add an IP destination address to the switch's BOOTP relay table.
Syntax	<b>config bootp_relay add ipif &lt;ipif_name 12&gt; &lt;ipaddr&gt;</b>
Description	This command adds an IP address as a destination to forward (relay) BOOTP packets to.
Parameters	<p>&lt;ipif_name 12&gt; – The name of the IP interface in which BOOTP relay is to be enabled.</p> <p>&lt;ipaddr&gt; – The BOOTP server IP address.</p>
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To add a BOOTP relay.

```
DGS-3312SR:4#config bootp_relay add ipif System 10.43.21.12
Command: config bootp_relay add ipif System 10.43.21.12

Success.

DGS-3312SR:4#
```

**config bootp\_relay delete**

Purpose	Used to delete an IP destination addresses from the switch's BOOTP relay table.
Syntax	<b>config bootp_relay delete ipif &lt;ipif_name 12&gt; &lt;ipaddr&gt;</b>
Description	This command is used to delete an IP destination addresses in the switch's BOOTP relay table.
Parameters	<p>&lt;ipif_name 12&gt; – The name of the IP interface that contains the IP address below.</p> <p>&lt;ipaddr&gt; – The BOOTP server IP address.</p>
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To delete a BOOTP relay:

```
DGS-3312SR:4#config bootp_relay delete ipif System 10.43.21.12
Command: config bootp_relay delete ipif System 10.43.21.12

Success.

DGS-3312SR:4#
```

### enable bootp\_relay

Purpose	Used to enable the BOOTP relay function on the switch.
Syntax	<b>enable bootp_relay</b>
Description	This command, in combination with the <b>disable bootp_relay</b> command below, is used to enable and disable the BOOTP relay function on the switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To enable the BOOTP relay function:

```
DGS-3312SR:4#enable bootp_relay
Command: enable bootp_relay

Success.

DGS-3312SR:4#
```

### disable bootp\_relay

Purpose	Used to disable the BOOTP relay function on the switch.
Syntax	<b>disable bootp_relay</b>
Description	This command, in combination with the <b>enable bootp_relay</b> command above, is used to enable and disable the BOOTP relay function on the switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To disable the BOOTP relay function:

```
DGS-3312SR:4#disable bootp_relay
```

```
Command: disable bootp_relay
```

```
Success.
```

```
DGS-3312SR:4#
```

## show bootp\_relay

Purpose	Used to display the current BOOTP relay configuration.
Syntax	<b>show bootp_relay {ipif &lt;ipif_name 12&gt;}</b>
Description	This command will display the current BOOTP relay configuration for the switch, or if an IP interface name is specified, the BOOTP relay configuration for that IP interface.
Parameters	<ipif_name 12> – The name of the IP interface for which you want to display the current BOOTP relay configuration.
Restrictions	None.

Example Usage:

To display bootp relay status:

```
DGS-3312SR:4#show bootp_relay
```

```
Command: show bootp_relay
```

```
Bootp Relay Status      : Disabled
```

```
Bootp Hops Count Limit  : 4
```

```
Bootp Relay Time Threshold : 0
```

Interface	Server 1	Server 2	Server 3	Server 4
-----	-----	-----	-----	-----
System	10.48.74.122	10.23.12.34	10.12.34.12	10.48.75.121

```
Total Entries: 1
```

```
DGS-3312SR:4#
```

## DNS RELAY COMMANDS

The DNS relay commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
config dnsr	{[primary   secondary] nameserver <ipaddr>   [add   delete] static <domain_name 32> <ipaddr>}
enable dnsr	{cache   static}
disable dnsr	{cache   static}
show dnsr	{static}

Each command is listed, in detail, in the following sections.

<b>config dnsr</b>	
Purpose	Used to configure the DNS relay function.
Syntax	<b>config dnsr {[primary   secondary] nameserver &lt;ipaddr&gt;   [add   delete] static &lt;domain_name 32&gt; &lt;ipaddr&gt;}</b>
Description	This command is used to configure the DNS relay function on the switch.
Parameters	<p><i>primary</i> – Indicates that the IP address below is the address of the primary DNS server.</p> <p><i>secondary</i> – Indicates that the IP address below is the address of the secondary DNS server.</p> <p><i>nameserver &lt;ipaddr&gt;</i> – The IP address of the DNS nameserver.</p> <p><i>[add   delete]</i> – Indicates if the user wishes to add or delete the DNS relay function.</p> <p><i>&lt;domain_name 32&gt;</i> – The domain name of the entry.</p> <p><i>&lt;ipaddr&gt;</i> – The IP address of the entry.</p>
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To set IP address 10.43.21.12 of primary.

```
DGS-3312SR:4#config dnsr primary 10.43.21.12
Command: config dnsr primary 10.43.21.12

Success

DGS-3312SR:4#
```

Example Usage:

To add an entry domain name dns1, IP address 10.43.21.12 to DNS static table:

```
DGS-3312SR:4#config dnsr add static dns1 10.43.21.12
Command: config dnsr add static dns1 10.43.21.12

Success.

DGS-3312SR:4#
```

Example Usage:

To delete an entry domain name dns1, IP address 10.43.21.12 from DNS static table.

```
DGS-3312SR:4#config dnsr delete static dns1 10.43.21.12
Command: config dnsr delete static dns1 10.43.21.12

Success.

DGS-3312SR:4#
```

## enable dnsr

Purpose	Used to enable DNS relay.
Syntax	<b>enable dnsr {cache   static}</b>
Description	This command is used, in combination with the <b>disable dnsr</b> command below, to enable and disable DNS Relay on the switch.
Parameters	<p><i>cache</i> - This parameter will allow the user to enable the cache lookup for the DNS rely on the switch.</p> <p><i>static</i> - This parameter will allow the user to enable the static table lookup for the DNS rely on the switch.</p>
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To enable status of DNS relay:

```
DGS-3312SR:4#enable dnsr
Command: enable dnsr

Success.

DGS-3312SR:4#
```

Example Usage:

To enable cache lookup for DNS relay.

```
DGS-3312SR:4#enable dnsr cache
Command: enable dnsr cache

Success.

DGS-3312SR:4#
```

Example Usage:

To enable static table lookup for DNS relay.

```
DGS-3312SR:4#enable dnsr static
Command: enable dnsr static

Success.

DGS-3312SR:4#
```

## disable dnsr

Purpose	Used to disable DNS relay on the switch.
Syntax	<b>disable dnsr {cache   static}</b>
Description	This command is used, in combination with the <b>enable dnsr</b> command above, to enable and disable DNS Relay on the switch.
Parameters	<p><i>cache</i> – This parameter will allow the user to disable the cache lookup for the DNS rely on the switch.</p> <p><i>static</i> - This parameter will allow the user to disable the static table lookup for the DNS rely on the switch.</p>
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To disable status of DNS relay.

```
DGS-3312SR:4#disable dnsr
```

```
Command: disable dnsr
```

```
Success.
```

```
DGS-3312SR:4#
```

Example Usage:

To disable cache lookup for DNS relay.

```
DGS-3312SR:4#disable dnsr cache
```

```
Command: disable dnsr cache
```

```
Success.
```

```
DGS-3312SR:4#
```

Example Usage:

To disable static table lookup for DNS relay.

```
DGS-3312SR:4#disable dnsr static
```

```
Command: disable dnsr static
```

```
Success.
```

```
DGS-3312SR:4#
```

## show dnsr

Purpose	Used to display the current DNS relay status.
Syntax	<b>show dnsr {static}</b>
Description	This command is used to display the current DNS relay status.
Parameters	<i>static</i> – Allows the display of only the static entries into the DNS relay table. If this parameter is omitted, the entire DNS relay table will be displayed.
Restrictions	none.

Example Usage:

To display DNS relay status:

```
DGS-3312SR:4#show dnsr
Command: show dnsr

DNSR Status           : Disabled
Primary Name Server   : 0.0.0.0
Secondary Name Server : 0.0.0.0
DNSR Cache Status     : Disabled
DNSR Static Cache Table Status : Disabled

DNS Relay Static Table

Domain Name           IP Address
-----
www.123.com.tw       10.12.12.123
bbs.ntu.edu.tw       140.112.1.23

Total Entries: 2

DGS-3312SR:4#
```

## RIP COMMANDS

The RIP commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
config rip	[ipif <ipif_name 12>   all] {authentication [enable <password 16>   disable]   tx_mode [disable   v1_only   v1_compatible   v2_only]   rx_mode [v1_only   v2_only   v1_or_v2   disable] state [enable   disable]}
enable rip	
disable rip	
show rip	ipif <ipif_name 12>

Each command is listed, in detail, in the following sections.

### config rip

Purpose	Used to configure RIP on the switch.
Syntax	<b>config rip [ipif &lt;ipif_name 12&gt;   all] {authentication [enable &lt;password 16&gt;   disable]   tx_mode [disable   v1_only   v1_compatible   v2_only]   rx_mode [v1_only   v2_only   v1_or_v2   disable] state [enable   disable]}</b>
Description	This command is used to configure RIP on the switch.
Parameters	<p>&lt;ipif_name 12&gt; – The name of the IP interface.</p> <p><i>all</i> – To configure all RIP receiving mode for all IP interfaces.</p> <p><i>authentication [enable   disable]</i> – Enables or disables authentication for RIP on the switch.</p> <ul style="list-style-type: none"> <li>▪ &lt;password 16&gt; – Allows the specification of a case-sensitive password.</li> </ul> <p><i>tx_mode</i> – Determines how received RIP packets will be interpreted – as RIP version <b>V1 only</b>, <b>V2 Only</b>, or <b>V1 Compatible (V1 and V2)</b>. This entry specifies which version of the RIP protocol will be used to transfer RIP packets. The Disabled entry prevents the reception of RIP packets.</p> <ul style="list-style-type: none"> <li>▪ <i>disable</i> – Prevents the transmission of RIP packets.</li> <li>▪ <i>v1_only</i> – Specifies that only RIP v1 packets will be transmitted.</li> <li>▪ <i>v1_compatible</i> – Specifies that only RIP v1 compatible packets will be transmitted.</li> <li>▪ <i>v2_only</i> - Specifies that only RIP v2 packets will be</li> </ul>

**config rip**

transmitted.

*rx\_mode* – Determines how received RIP packets will be interpreted – as RIP version **V1 only**, **V2 Only**, or **V1 or V2**. This entry specifies which version of the RIP protocol will be used to receive RIP packets. The Disabled entry prevents the reception of RIP packets.

- *v1\_only* – Specifies that only RIP v1 packets will be transmitted.
- *v2\_only* - Specifies that only RIP v2 packets will be transmitted.
- *v1\_or\_v2* - Specifies that only RIP v1 or v2 packets will be transmitted.

*state [enable | disable]* – Allows RIP to be enabled and disabled on the switch.

Restrictions

Only administrator-level users can issue this command.

Example Usage:

To change the RIP receive mode for the IP interface System:

```
DGS-3312SR:4#config rip ipif System rx_mode v1_only
```

```
Command: config rip ipif System rx_mode v1_only
```

```
Success.
```

```
DGS-3312SR:4#
```

**enable rip**

Purpose	Used to enable RIP.
Syntax	<b>enable rip</b>
Description	This command is used to enable RIP on the switch.
Parameters	none.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To enable RIP:

```
DGS-3312SR:4#enable rip
```

```
Command: enable rip
```

```
Success.
```

```
DGS-3312SR:4#
```

## disable rip

Purpose	Used to disable RIP.
Syntax	<b>disable rip</b>
Description	This command is used to disable RIP on the switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To disable rip:

```
DGS-3312SR:4#disable rip
```

```
Command: disable rip
```

```
Success.
```

```
DGS-3312SR:4#
```

## show rip

Purpose	Used to display the RIP configuration and statistics for the switch.
Syntax	<b>show rip {ipif &lt;ipif_name 12&gt;}</b>
Description	This command will display the RIP configuration and statistics for a given IP interface or for all IP interfaces.
Parameters	<i>ipif &lt;ipif_name 12&gt;</i> – The name of the IP interface for which you want to display the RIP configuration and settings. If this parameter is not specified, the <b>show rip</b> command will display the global RIP configuration for the switch.
Restrictions	None.

Example Usage:

To display RIP configuration:

DGS-3312SR:4#show rip

Command: show rip

RIP Global State : Disabled

RIP Interface Settings

Interface	IP Address	TX Mode	RX Mode	Authen- tication	State
-----	-----	-----	-----	-----	-----
System	10.41.44.33/8	Disabled	Disabled	Disabled	Disabled

Total Entries : 1

DGS-3312SR:4#

**DVMRP COMMANDS**

The DVMRP commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
config dvmrp	[ipif <ipif_name 12>   all] {metric <value 1-31>   probe <sec 1-65535>   neighbor_timeout <sec 1-65535>   state [enable   disable]}
enable dvmrp	
disable dvmrp	
show dvmrp neighbor	{ipif <ipif_name 12>   ipaddress <network_address>}
show dvmrp nexthop	{ipaddress <network_address>   ipif <ipif_name 12>}
show dvmrp routing_table	{ipaddress <network_address>}
show dvmrp	{ipif <ipif_name 12>}

Each command is listed, in detail, in the following sections.

**config dvmrp**

Purpose	Used to configure DVMRP on the switch.
Syntax	<b>config dvmrp [ipif &lt;ipif_name 12&gt;   all] {metric &lt;value 1-31&gt;   probe &lt;sec 1-65535&gt;   neighbor_timeout &lt;sec 1-65535&gt;   state [enable   disable]}</b>
Description	This command is used to configure DVMRP on the switch.
Parameters	<p><i>&lt;ipif_name 12&gt;</i> – The name of the IP interface for which DVMRP is to be configured.</p> <p><i>all</i> – Specifies that DVMRP is to be configured for all IP interfaces on the switch.</p> <p><i>metric &lt;value 1-31&gt;</i> – Allows the assignment of a DVMRP route cost to the above IP interface. A DVMRP route cost is a relative number that represents the real cost of using this route in the construction of a multicast delivery tree. It is similar to, but not defined as, the hop count in RIP. The default is 1.</p> <p><i>probe &lt;second 1-65535&gt;</i> – DVMRP defined an extension to IGMP that allows routers to query other routers to determine if a DVMRP neighbor is present on a given subnetwork or not. This is referred to as a 'probe'. This entry will set an intermittent probe (in seconds) on the device that will transmit dvmrp messages, depending on the time specified. This probe is also used to "keep alive" the connection between DVMRP enabled devices. The default value is 10 seconds.</p>

**config dvmrp**

*neighbor\_timeout* <second 1-65535> – The time period for which DVMRP will hold Neighbor Router reports before issuing poison route messages. The default value is 35 seconds.

*state* [*enable* | *disable*] – Allows DVMRP to be enabled or disabled.

**Restrictions**

Only administrator-level users can issue this command.

Example Usage:

To configure DVMRP configurations of IP interface System:

```
DGS-3312SR:4#config dvmrp ipif System neighbor_timeout 30 metric 1
probe 5
Command: config dvmrp ipif System neighbor_timeout 30 metric 1 probe
5
Success
DGS-3312SR:4#
```

**enable dvmrp**

**Purpose** Used to enable DVMRP.

**Syntax** **enable dvmrp**

**Description** This command, in combination with the **disable dvmrp** below, to enable and disable DVMRP on the switch.

**Parameters** None.

**Restrictions** Only administrator-level users can issue this command.

Example Usage:

To enable DVMRP:

```
DGS-3312SR:4#enable dvmrp
Command: enable dvmrp
Success.
DGS-3312SR:4#
```

**disable dvmrp**

Purpose	Used to disable DVMRP.
Syntax	<b>disable dvmrp</b>
Description	This command, in combination with the <b>enable dvmrp</b> above, to enable and disable DVMRP on the switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To disable DVMRP:

```
DGS-3312SR:4#disable dvmrp
```

```
Command: disable dvmrp
```

```
Success.
```

```
DGS-3312SR:4#
```

**show dvmrp routing\_table**

Purpose	Used to display the current DVMRP routing table.
Syntax	<b>show dvmrp routing table [ipaddress &lt;network_address&gt;]</b>
Description	The command is used to display the current DVMRP routing table.
Parameters	<i>ipaddress &lt;network_address&gt;</i> – The IP address and netmask of the destination. You can specify the IP address and netmask information using the traditional format or the CIDR format. For example, 10.1.2.3/255.255.0.0 or 10.2.3.4/16.
Restrictions	None.

Example Usage:

To display DVMRP routing table:

DGS-3312SR:4#show dvmrp routing\_table

Command: show dvmrp routing\_table

#### DVMRP Routing Table

Source Address/Netmask	Upstream Neighbor	Metric	Learned	Interface	Expire
-----	-----	---	-----	-----	-----
10.0.0.0/8	10.90.90.90	2	Local	System	-
20.0.0.0/8	20.1.1.1	2	Local	ip2	117
30.0.0.0/8	30.1.1.1	2	Dynamic	ip3	106

Total Entries: 3

DGS-3312SR:4#

### show dvmrp neighbor

Purpose	Used to display the DVMRP neighbor table.
Syntax	<b>show dvmrp neighbor {ipif &lt;ipif_name 12&gt;   ipaddress &lt;network_address&gt;}</b>
Description	This command will display the current DVMRP neighbor table.
Parameters	<p>&lt;ipif_name 12&gt; – The name of the IP interface for which you want to display the DVMRP neighbor table.</p> <p>ipaddress &lt;network_address&gt; – The IP address and netmask of the destination. You can specify the IP address and netmask information using the traditional format or the CIDR format. For example, 10.1.2.3/255.255.0.0 or 10.2.3.4/16.</p>
Restrictions	None.

Example Usage:

To display DVMRP neighbor table:

```
DGS-3312SR:4#show dvmrp neighbor
Command: show dvmrp neighbor

DVMRP Neighbor Address Table

Interface      Neighbor Address  Generation ID  Expire Time
-----
System        10.2.1.123       2              250

Total Entries: 1

DGS-3312SR:4#
```

## show dvmrp nexthop

Purpose	Used to display the current DVMRP routing next hop table.
Syntax	<b>show dvmrp nexthop {ipaddress &lt;network_address&gt;   ipif &lt;ipif_name 12&gt;}</b>
Description	This command will display the DVMRP routing next hop table.
Parameters	<p><i>&lt;ipif_name 12&gt;</i> – The name of the IP interface for which you want to display the current DVMRP routing next hop table.</p> <p><i>ipaddress &lt;network_address&gt;</i> – The IP address and netmask of the destination. You can specify the IP address and netmask information using the traditional format or the CIDR format. For example, 10.1.2.3/255.255.0.0 or 10.2.3.4/16.</p>
Restrictions	None.

Example Usage:

To display DVMRP routing next hop table:

```
DGS-3312SR:4#show dvmrp nexthop
Command: show dvmrp nexthop

Source IP Address/Netmask  Interface Name  Type
-----
10.0.0.0/8                 ip2            Leaf
10.0.0.0/8                 ip3            Leaf
20.0.0.0/8                 System         Leaf
20.0.0.0/8                 ip3            Leaf
30.0.0.0/8                 System         Leaf
30.0.0.0/8                 ip2            Leaf

Total Entries: 6
```

```
DGS-3312SR:4#
```

## show dvmrp

Purpose	Used to display the current DVMRP routing table.
Syntax	<b>show dvmrp {&lt;ipif_name 12&gt;}</b>
Description	The command will display the current DVMRP routing table.
Parameters	<ipif_name 12> – The name of the IP interface for which you want to display the DVMRP routing table.
Restrictions	None.

Example Usage:

To show DVMRP configurations:

```
DGS-3312SR:4#show dvmrp
Command: show dvmrp

DVMRP Global State : Disabled

Interface  IP Address      Neighbor Timeout  Probe  Metric  State
-----  -
System    10.90.90.90/8   35                10    1       Disabled

Total Entries: 1

DGS-3312SR:4#
```

**PIM COMMANDS**

The PIM commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
config pim	[ipif <ipif_name 12>   all ] { hello <sec 1-18724>   jp_interval <sec 1-18724>   state [ enable   disable ]}
enable pim	
disable pim	
show pim neighbor	{ipif <ipif_name 12>   ipaddress <network_address>}
show pim	{ipif <ipif_name 12>}

Each command is listed, in detail, in the following sections.

**config pim**

Purpose	Used to configure PIM settings for the switch or for specified IP interfaces.
Syntax	<b>config pim [ipif &lt;ipif_name 12&gt;   all ] { hello &lt;sec 1-18724&gt;   jp_interval &lt;sec 1-18724&gt;   state [enable   disable]}</b>
Description	The config pim command is used to configure PIM settings and enable or disable PIM settings for specified IP interfaces. PIM must also be globally enabled to function (see <b>enable pim</b> ).
Parameters	<p><i>ipif &lt;ipif_name 12&gt;</i> – Name assigned to the specific IP interface being configured for PIM settings.</p> <p><i>all</i> – Used to configure PIM settings for all IP interfaces.</p> <p><i>hello &lt;sec 1-18724&gt;</i> - The time, in seconds, between issuing hello packets to find neighboring routers.</p> <p><i>jp_interval &lt;sec 1-18724&gt;</i> – The join/prune interval is the time value (seconds) between transmitting (flooding to all interfaces) multicast messages to downstream routers, and automatically ‘pruning’ a branch from the multicast delivery tree. The <i>jp_interval</i> is also the interval used by the router to automatically remove prune information from a branch of a multicast delivery tree and begin to flood multicast messages to all branches of that delivery tree. These two actions are equivalent. The range is between 1 and 18724 seconds. The default is 60 seconds.</p> <p><i>state [enable   disable]</i> – This can enable or disable PIM for the specified IP interface. The default is disabled. Note that PIM settings must also be enabled globally for the switch with the <b>enable pim</b> described below for PIM to operate on any configured IP interfaces.</p>

**config pim**

Restrictions	Only administrator-level users can issue this command.
--------------	--

Usage Example:

To configure PIM settings for IP interface “System”:

```
DGS-3312SR:4#config pim ipif System hello 35 jp_interval 70 state
enable
Command: config pim ipif System hello 35 jp_interval 70 state enable

Success.

DGS-3312SR:4#
```

**enable pim**

Purpose	Used to enable PIM function on the switch.
Syntax	<b>enable pim</b>
Description	This command will enable PIM for the switch. PIM settings must first be configured for specific IP interfaces using the <b>config pim</b> command.
Parameters	None.
Restrictions	Only administrator-level users can use this command.

Usage Example:

To enable PIM as previously configured on the switch:

```
DGS-3312SR:4#enable pim
Command: enable pim

Success.

DGS-3312SR:4#
```

**disable pim**

Purpose	Used to disable PIM function on the switch.
Syntax	<b>disable pim</b>
Description	This command will disable PIM for the switch. Any previously configured PIM settings will remain unchanged and may be enabled

**disable pim**

	at a later time with the <b>enable pim</b> command.
Parameters	None.
Restrictions	Only administrator-level users can use this command.

Usage Example:

To disable PIM on the switch:

```
DGS-3312SR:4#disable pim
Command: disable pim

Success.

DGS-3312SR:4#
```

**show pim neighbor**

Purpose	Used to display PIM neighbor router table entries.
Syntax	<b>show pim neighbor {ipif &lt;ipif_name 12&gt;   ipaddress &lt;network_address&gt;}</b>
Description	This command will list current entries in the PIM neighbor table for a specified IP interface or destination router IP address.
Parameters	<p><i>ipif &lt;ipif_name 12&gt;</i> – The name of an IP interface for which you want to view the PIM neighbor router table.</p> <p><i>ipaddress &lt;network_address&gt;</i>- The IP address and netmask of the destination routing device for which you want to view the neighbor router table. You can specify the IP address and netmask information using the traditional format or the CIDR format. For example, 10.1.2.3/255.255.0.0 or 10.2.3.4/16.</p> <p>If no parameters are specified, all PIM neighbor router tables are displayed.</p>
Restrictions	None.

Example usage:

To display PIM settings as configured on the switch:

```

DGS-3312SR:4#show pim neighbor
Command: show pim neighbor

PIM Neighbor Address Table

Interface Name  Neighbor Address  Expire Time
-----
System         10.48.74.122     5

Total Entries : 1

DGS-3312SR:4#

```

## show pim

Purpose	Used to display current PIM configuration.
Syntax	<b>show pim {ipif &lt;ipif_name 12&gt;}</b>
Description	This command will list current PIM configuration settings for a specified IP interface or all IP interfaces.
Parameters	<i>ipif &lt;ipif_name 12&gt;</i> – The name of an IP interface for which PIM settings are listed.  If no parameters are specified, all PIM settings are displayed for all interfaces.
Restrictions	None.

Usage Example:

To display PIM settings as configured on the switch:

DGS-3312SR:4#show pim

Command: show pim

PIM Global State : Disabled

PIM-DM Interface Table

Interface	IP Address	Hello Interval	Join/Prune Interval	State
-----	-----	-----	-----	-----
System	10.90.90.90/8	35	60	Enabled

Total Entries : 1

DGS-3312SR:4#

## IP MULTICASTING COMMANDS

The IP multicasting commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
show ipmc cache	{group <group>} {ipaddress <network_address>}
show ipmc	{ipif <ipif_name 12>   protocol [dvmrp   pim]}

Each command is listed, in detail, in the following sections.

### show ipmc cache

Purpose	Used to display the current IP multicast forwarding cache.
Syntax	<b>show ipmc cache {group &lt;group&gt;} {ipaddress &lt;network_address&gt;}</b>
Description	This command will display the current IP multicast forwarding cache.
Parameters	<p><i>&lt;group&gt;</i> – The multicast group ID.</p> <p><i>ipaddress &lt;network_address&gt;</i> – The IP address and netmask of the destination. You can specify the IP address and netmask information using the traditional format or the CIDR format. For example, 10.1.2.3/255.255.0.0 or 10.2.3.4/16.</p>
Restrictions	None.

Usage Example:

To display the current IP multicast forwarding cache:

```

DGS-3312SR:4#show ipmc cache
Command: show ipmc cache

Multicast      Source Address/Netmask  Upstream  Expire  Routing
Group          -----
                224.1.1.1               10.48.74.121/32      10.48.75.63   30      dvmrp
                224.1.1.1               20.48.74.25 /32      20.48.75.25   20      dvmrp
                224.1.2.3               10.48.75.3 /3        10.48.76.6    30      dvmrp

Total Entries: 3

DGS-3312SR:4#

```

## show ipmc

Purpose	Used to display the IP multicast interface table.
Syntax	<b>show ipmc {ipif &lt;ipif_name 12&gt;   protocol [dvmrp   pim]}</b>
Description	This command will display the current IP multicast interface table.
Parameters	<p><i>&lt;ipif_name 12&gt;</i> – The name of the IP interface for which you want to display the IP multicast interface table for.</p> <p><i>protocol [dvmrp   pim]</i> – Allows the user to specify whether or not to use the DVMRP or PIM protocol to display the IP multicast interface table. For example, if DVMRP is specified, the table will display only those entries that are related to the DVMRP protocol.</p>
Restrictions	None.

### Usage Example

To display the current IP multicast interface table by DVMRP entry:

```

DGS-3312SR:4#show ipmc ipif System protocol dvmrp
Command: show ipmc ipif System protocol dvmrp

Interface Name  IP Address  Multicast Routing
-----
System         10.90.90.90  DVMRP

Total Entries: 1

DGS-3312SR:4#

```

## MD5 CONFIGURATION COMMANDS

The MD5 configuration commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
create md5 key	<key_id 1-255> <password 16>
config md5 key	<key_id 1-255> <password 16>
delete md5 key	<key_id 1-255>
show md5 key	<key_id 1-255>

Each command is listed, in detail, in the following sections.

<b>create md5 key</b>	
Purpose	Used to create a new entry in the MD5 key table.
Syntax	<b>create md5 key &lt;key_id 1-255&gt; &lt;password 16&gt;</b>
Description	This command is used to create an entry for the MD5 key table.
Parameters	<p>&lt;key_id 1-255&gt; – The MD5 key ID. The user may enter a key ranging from 1 to 255.</p> <p>&lt;password&gt; – An MD5 password of up to 16 bytes.</p>
Restrictions	Only administrator-level users can issue this command.

### Usage Example

To create an entry in the MD5 key table:

```
DGS-3312SR:4# create md5 key 1 dlink
Command: create md5 key 1 dlink

Success.

DGS-3312SR:4#
```

<b>config md5 key</b>	
Purpose	Used to enter configure the password for an MD5 key.
Syntax	<b>config md5 key &lt;key_id 1-255&gt; &lt;password 16&gt;</b>
Description	This command is used to configure an MD5 key and password.

**config md5 key**

Parameters	<p>&lt;key_id 1-255&gt; – The previously defined MD5 key ID.</p> <p>&lt;password 16&gt; – The user may change the MD5 password for the md5 key. A new password of up to 16 characters can be created.</p>
Restrictions	Only administrator-level users can issue this command.

## Usage Example

To configure an MD5 Key password:

```
DGS-3312SR:4#config md5 key 1 taboo
Command: config md5 key 1 taboo

Success.

DGS-3312SR:4#
```

**delete md5 key**

Purpose	Used to delete an entry in the MD5 key table.
Syntax	<b>delete md5 key &lt;key_id 1-255&gt;</b>
Description	This command is used to delete a specific entry in the MD5 key table.
Parameters	<key_id 1-255> – The MD5 key ID the user wishes to delete.
Restrictions	Only administrator-level users can issue this command.

## Usage Example

The delete an entry in the MD5 key table:

```
DGS-3312SR:4# delete md5 key 1
Command: delete md5 key 1

Success.

DGS-3312SR:4#
```

**show md5 key**

Purpose	Used to display an MD5 key table.
---------	-----------------------------------

**show md5 key**

Syntax	<b>show md5 {key &lt;key_id 1-255&gt;}</b>
Description	This command will display the current MD5 key table.
Parameters	<key_id 1-255> – The MD5 key ID.
Restrictions	None.

## Usage Example

To display the current MD5 key:

```
DGS-3312SR:4#show md5
Command: show md5

MD5 Key Table Configurations

Key-ID   Key
-----  -
1        dlink
2        develop
3        fireball
4        intelligent

Total Entries: 4

DGS-3312SR:4#
```

## OSPF CONFIGURATION COMMANDS

The OSPF configuration commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
config ospf router_id	<ipaddr>
enable ospf	
disable ospf	
show ospf	
create ospf area	<area_id> type [normal   stub {stub_summary [enable   disable]   metric <value 0-65535>}]
delete ospf area	<area_id>
config ospf area	<area_id> type [normal   stub {stub_summary [enable   disable]   metric <value 0-65535>}]
show ospf area	{<area_id>}
create ospf host_route	<ipaddr> {area <area_id>   metric <value 1-65535>}
delete ospf host_route	<ipaddr>
config ospf host_route	<ipaddr> {area <area_id>   metric <value 1-65535>}
show ospf host_route	<ipaddr>
create ospf aggregation	<area_id> <network_address> lsdb_type summary {advertise [enable   disable]}
delete ospf aggregation	<area_id> <network_address> lsdb_type summary
config ospf aggregation	<area_id> <network_address> lsdb_type summary {advertise [enable   disable]}
show ospf aggregation	<area_id>
show ospf lsdb	{area <area_id>   advertise_router <ipaddr>   type [rtrlink   netlink   summary   asummary   asextlink]}
show ospf neighbor	<ipaddr>
show ospf virtual_neighbor	{<area_id> <neighbor_id>}
config ospf ipif	<ipif_name 12> {area <area_id>   priority <value>   hello_interval <sec 1-65535 >   dead_interval <sec 1-65535>   authentication [none   simple <password 8>   md5 <key_id 1-255>]   metric <value 1-65535> state [enable   disable]}
config ospf all	{area <area_id>   priority <value>   hello_interval <1-65535 sec>   dead_interval <1-65535 sec>   authentication [none   simple <password 8>   md5 <key_id 1-255>]   metric <value 1-65535> state [enable   disable]}
show ospf ipif	<ipif_name 12>

Command	Parameters
show ospf all	
create ospf virtual_link	<area_id> <neighbor_id> {hello_interval <sec 1-65535>   dead_interval <sec 1-65535>   authentication [none   simple <password 8>   md5 <key_id 1-255>]}
config ospf virtual_link	<area_id> <neighbor_id> {hello_interval <sec 1-65535>   dead_interval <sec 1-65535>   authentication [none   simple <password 8>   md5 <key_id 1-255>]}
delete ospf virtual_link	<area_id> <neighbor_id>
show ospf virtual_link	<area_id> <neighbor_id>

Each command is listed, in detail, in the following sections.

<b>config ospf router_id</b>	
Purpose	Used to configure the OSPF router ID.
Syntax	<b>config ospf router_id &lt;ipaddr&gt;</b>
Description	This command is used to configure the OSPF router ID.
Parameters	<ipaddr> – The IP address of the OSPF router.
Restrictions	Only administrator-level users can issue this command.

#### Usage Example

To configure the OSPF router ID:

```
DGS-3312SR:4#config ospf router_id 10.48.74.122
Command: config ospf router_id 10.48.74.122

Success.

DGS-3312SR:4#
```

<b>enable ospf</b>	
Purpose	Used to enable OSPF on the switch.
Syntax	<b>enable ospf</b>
Description	This command, in combination with the <b>disable ospf</b> command below, is used to enable and disable OSPF on the switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

#### Usage Example

To enable OSPF on the switch:

```
DGS-3312SR:4#enable ospf
```

```
Command: enable ospf
```

```
Success.
```

```
DGS-3312SR:4#
```

## disable ospf

Purpose	Used to disable OSPF on the switch.
Syntax	<b>disable ospf</b>
Description	This command, in combination with the <b>enable ospf</b> command above, is used to enable and disable OSPF on the switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

### Usage Example

To disable OSPF on the switch:

```
DGS-3312SR:4#disable ospf
```

```
Command: disable ospf
```

```
Success.
```

```
DGS-3312SR:4#
```

## show ospf

Purpose	Used to display the current OSPF state on the switch.
Syntax	<b>show ospf</b>
Description	This command will display the current state of OSPF on the switch, divided into the following categories: <ul style="list-style-type: none"> <li>General OSPF settings</li> <li>OSPF Interface settings</li> <li>OSPF Area settings</li> <li>OSPF Virtual Interface settings</li> </ul>

```

show ospf
                                OSPF Area Aggregation settings
                                OSPF Host Route settings
Parameters                       None.
Restrictions                      None.
    
```

Usage Example:

To show OSPF state:

```

DGS-3312SR:4#show ospf
Command: show ospf

OSPF Router ID  : 10.1.1.2
State           : Enabled
OSPF Interface Settings
Interface  IP Address   Area ID  State   Link      Metric
          -----
System    10.90.90.90/8  0.0.0.0  Disabled Link DOWN  1
ip2       20.1.1.1/8   0.0.0.0  Disabled Link DOWN  1
ip3       30.1.1.1/8   0.0.0.0  Disabled Link DOWN  1

Total Entries : 3
OSPF Area Settings
Area ID    Type   Stub Import Summary LSA  Stub Default Cost
-----
0.0.0.0    Normal None
10.0.0.0   Normal None
10.1.1.1   Normal None
20.1.1.1   Stub   Enabled                  1

Total Entries : 4
Virtual Interface Configuration
Transit   Virtual   Hello   Dead   Authentication  Link      Area ID
Neighbor Router Interval Interval          Status
-----
10.0.0.0  20.0.0.0   10     60     None            DOWN
10.1.1.1  20.1.1.1   10     60     None            DOWN

Total Entries : 2
OSPF Area Aggregation Settings
Area ID    Aggregated   LSDB   Advertise
          Network Address Type
    
```

```

-----
Total Entries : 0
OSPF Host Route Settings
Host Address  Metric  Area ID    TOS
-----
10.3.3.3      1       10.1.1.1
Total Entries : 1
DGS-3312SR:4#

```

## create ospf area

Purpose	Used to configure OSPF area settings.
Syntax	<b>create ospf area &lt;area_id&gt; type [normal   stub {stub_summary [enable   disable]   metric &lt;value 0-65535&gt;}]</b>
Description	This command is used to create an OSPF area and configure its settings.
Parameters	<p><i>&lt;area_id&gt;</i> – The OSPF area ID. The user may enter a 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain.</p> <p><i>type [normal   stub]</i> – The OSPF area mode of operation – stub or normal.</p> <p><i>stub_summary [enable   disable]</i> – Enables or disables the OSPF area to import summary LSA advertisements.</p> <p><i>metric &lt;value 0-65535&gt;</i> – The OSPF area cost between 0 and 65535. 0 denotes that the value will be automatically assigned. The default setting is 0.</p>
Restrictions	Only administrator-level users can issue this command.

Usage Example:

To create an OSPF area:

```

DGS-3312SR:4#create ospf area 10.48.74.122 type normal
Command: create ospf area 10.48.74.122 type normal

Success.

DGS-3312SR:4#

```

**delete ospf area**

Purpose	Used to delete an OSPF area.
Syntax	<b>delete ospf area &lt;area_id&gt;</b>
Description	This command is used to delete an OSPF area.
Parameters	<i>&lt;area_id&gt;</i> – A 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain.
Restrictions	Only administrator-level users can issue this command.

## Usage Example:

To delete an OSPF area:

```
DGS-3312SR:4#delete ospf area 10.48.74.122
Command: delete ospf area 10.48.74.122

Success.

DGS-3312SR:4#
```

**config ospf area**

Purpose	Used to configure an OSPF area's settings.
Syntax	<b>config ospf area &lt;area_id&gt; type [normal   stub {stub_summary [enable   disable]   metric &lt;value 0-65535&gt;}]</b>
Description	This command is used to configure an OSPF area's settings.
Parameters	<p><i>&lt;area_id&gt;</i> – The OSPF area ID. The user may enter a 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain.</p> <p><i>type [normal   stub]</i> – Allows the specification of the OSPF mode of operation – stub or normal.</p> <p><i>stub_summary [enable   disable]</i> – Allows the OSPF area import of LSA advertisements to be enabled or disabled.</p> <p><i>metric &lt;value 0-65535&gt;</i> – The OSPF area stub default cost.</p>
Restrictions	Only administrator-level users can issue this command.

## Usage Example

To configure an OSPF area's settings:

```
DGS-3312SR:4#config ospf area 10.48.74.122 type stub stub_summary
enable metric 1
Command: config ospf area 10.48.74.122 type stub stub_summary enable
metric 1
Success.
DGS-3312SR:4#
```

## show ospf area

Purpose	Used to display an OSPF area's configuration.
Syntax	<b>show ospf area {&lt;area_id&gt;}</b>
Description	This command will display the current OSPF area configuration.
Parameters	<area_id> – A 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain.
Restrictions	None.

### Usage Example

To display an OSPF area's settings:

```
DGS-3312SR:4#show ospf area
Command: show ospf area

Area ID      Type      Stub Import Summary LSA  Stub      Default Cost
-----
0.0.0.0      Normal    None
10.48.74.122 Stub      Enabled

Total Entries: 2
DGS-3312SR:4#
```

## create ospf host\_route

Purpose	Used to configure OSPF host route settings.
Syntax	<b>create ospf host_route &lt;ipaddr&gt; {area &lt;area_id&gt;   metric &lt;value 1-65535&gt;}</b>
Description	This command is used to configure the OSPF host route settings.

**create ospf host\_route**

Parameters	<p><i>&lt;ipaddr&gt;</i> – The host's IP address.</p> <p><i>&lt;area_id&gt;</i> – A 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain.</p> <p><i>metric &lt;value 1-65535&gt;</i> – A metric between 1 and 65535, which will be advertised.</p>
Restrictions	Only administrator-level users can issue this command.

## Usage Example

To configure the OSPF host route settings:

```
DGS-3312SR:4#create ospf host_route 10.48.74.122 area 10.1.1.1 metric 2
Command: create ospf host_route 10.48.74.122 area 10.1.1.1 metric 2

Success.

DGS-3312SR:4#
```

**delete ospf host\_route**

Purpose	Used to delete an OSPF host route.
Syntax	<b>delete ospf host_route &lt;ipaddr&gt;</b>
Description	This command is used to delete an OSPF host route.
Parameters	<i>&lt;ipaddr&gt;</i> – The IP address of the OSPF host.
Restrictions	Only administrator-level users can issue this command.

## Usage Example

To delete an OSPF host route:

```
DGS-3312SR:4#delete ospf host_route 10.48.74.122
Command: delete ospf host_route 10.48.74.122

Success.

DGS-3312SR:4#
```

**config ospf host\_route**

Purpose	Used to configure OSPF host route settings.
Syntax	<b>config ospf host_route &lt;ipaddr&gt; {area &lt;area_id&gt;   metric &lt;value&gt;}</b>
Description	This command is used to configure an OSPF host route settings.
Parameters	<p><i>&lt;ipaddr&gt;</i> – The IP address of the host.</p> <p><i>&lt;area_id&gt;</i> – A 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain.</p> <p><i>&lt;value&gt;</i> – A metric value between 1 and 65535 that will be advertised for the route.</p>
Restrictions	Only administrator-level users can issue this command.

## Usage Example

To configure an OSPF host route:

```
DGS-3312SR:4#config ospf host_route 10.48.74.122 area 10.1.1.1 metric 2
Command: config ospf host_route 10.48.74.122 area 10.1.1.1 metric 2

Success.

DGS-3312SR:4#
```

**show ospf host\_route**

Purpose	Used to display the current OSPF host route table.
Syntax	<b>show ospf host_route {&lt;ipaddr&gt;}</b>
Description	This command will display the current OSPF host route table.
Parameters	<i>&lt;ipaddr&gt;</i> – The IP address of the host.
Restrictions	None.

## Usage Example:

To display the current OSPF host route table:

```
DGS-3312SR:4#show ospf host_route
```

```
Command: show ospf host_route
```

Host Address	Metric	Area_ID	TOS
-----	-----	-----	-----
10.48.73.21	2	10.1.1.1	
10.48.74.122	1	10.1.1.1	

```
Total Entries: 2
```

```
DGS-3312SR:4#
```

## create ospf aggregation

Purpose	Used to configure OSPF area aggregation settings.
Syntax	<b>create ospf aggregation &lt;area_id&gt; &lt;network_address&gt; lsdb_type summary {advertise [enable   disable]}</b>
Description	This command is used to create an OSPF area aggregation.
Parameters	<p><b>&lt;area_id&gt;</b> – A 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain.</p> <p><b>&lt;network_address&gt;</b> – The 32-bit number in the form of an IP address that uniquely identifies the network that corresponds to the OSPF Area.</p> <p><b>lsdb_type summary</b> – The type of address aggregation.</p> <p><b>advertise [enable   disable]</b> – Allows for the advertisement trigger to be enabled or disabled.</p>
Restrictions	Only administrator-level users can issue this command.

Usage Example:

To create an OSPF area aggregation:

```
DGS-3312SR:4#create ospf aggregation 10.1.1.1 10.48.76.122/16  
lsdb_type summary advertise enable
```

```
Command: create ospf aggregation 10.1.1.1 10.48.76.122/16  
lsdb_type summary advertise enable
```

```
Success.
```

```
DGS-3312SR:4#
```

**delete ospf aggregation**

Purpose	Used to delete an OSPF area aggregation configuration.
Syntax	<b>delete ospf aggregation &lt;area_id&gt; &lt;network_address&gt; lsdb_type summary</b>
Description	This command is used to delete an OSPF area aggregation configuration.
Parameters	<p><i>&lt;area_id&gt;</i> – A 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain.</p> <p><i>&lt;network_address&gt;</i> – The 32-bit number in the form of an IP address that uniquely identifies the network that corresponds to the OSPF Area.</p> <p><i>lsdb_type summary</i> – Specifies the type of address aggregation.</p>
Restrictions	Only administrator-level users can issue this command.

## Usage Example

To configure the OSPF area aggregation settings:

```
DGS-3312SR:4#delete ospf aggregation 10.1.1.1 10.48.76.122/16 lsdb_type
summary
Command: delete ospf aggregation 10.1.1.1 10.48.76..122/16 lsdb_type
summary

Success.

DGS-3312SR:4#
```

**config ospf aggregation**

Purpose	Used to configure the OSPF area aggregation settings.
Syntax	<b>config ospf aggregation &lt;area_id&gt; &lt;network_address&gt; lsdb_type summary {advertise [enable   disable]}</b>
Description	This command is used to configure the OSPF area aggregation settings.
Parameters	<p><i>&lt;area_id&gt;</i> – A 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain.</p> <p><i>&lt;network_address&gt;</i> – The 32-bit number in the form of an IP address that uniquely identifies the network that corresponds to the OSPF Area.</p> <p><i>lsdb_type summary</i> – Specifies the type of address aggregation.</p>

## config ospf aggregation

*advertise [enable | disable]* – Allows for the advertisement trigger to be enabled or disabled.

### Restrictions

Only administrator-level users can issue this command.

### Usage Example

To configure the OSPF area aggregation settings:

```
DGS-3312SR:4#config ospf aggregation 10.1.1.1 10.48.76.122/16
lsdb_type summary advertise enable
Command: config ospf aggregation 10.1.1.1 10.48.76.122/16 lsdb_type
summary advertise enable

Success.

DGS-3312SR:4#
```

## show ospf aggregation

Purpose	Used to display the current OSPF area aggregation settings.
Syntax	<b>show ospf aggregation {&lt;area_id&gt;}</b>
Description	This command will display the current OSPF area aggregation settings.
Parameters	<i>&lt;area_id&gt;</i> – Enter this parameter if you wish to view this table by a specific OSPF area ID.
Restrictions	None.

### Usage Example

To display OSPF area aggregation settings:

```

DGS-3312SR:4#show ospf aggregation
Command: show ospf aggregation

OSPF Area Aggregation Settings

Area ID      Aggregated      LSDB      Advertise
             Network Address Type
-----
10.1.1.1     10.0.0.0/8      Summary   Enabled
10.1.1.1     20.2.0.0/16     Summary   Enabled

Total Entries: 2

DGS-3312SR:4#

```

## show ospf lsdb

Purpose	Used to display the OSPF Link State Database (LSDB).
Syntax	<b>show ospf lsdb {area_id &lt;area_id&gt;   advertise_router &lt;ipaddr&gt;   type [rtrlink   netlink   summary   assummary   asextlink]}</b>
Description	This command will display the current OSPF Link State Database (LSDB).
Parameters	<p><i>area_id &lt;area_id&gt;</i> – A 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain.</p> <p><i>advertise_router &lt;ipaddr&gt;</i> – The router ID of the advertising router.</p> <p><i>type [rtrlink   netlink   summary   assummary   asextlink]</i> – The type of link.</p>
Restrictions	None.



**NOTE:** When this command displays a “\*” (a star symbol) in the OSPF LSDB table for the *area\_id* or the *Cost*, this is interpreted as “no area ID” for external LSAs, and as “no cost given” for the advertised link.

Usage Example:

To display the link state database of OSPF:

DGS-3312SR:4#show ospf lsdb

Command: show ospf lsdb

Area ID	LSDB Type	Advertising Router ID	Link State ID	Cost	Sequence Number
0.0.0.0	RTRLink	50.48.75.73	50.48.75.73	*	0x80000002
0.0.0.0	Summary	50.48.75.73	10.0.0.0/8	1	0x80000001
1.0.0.0	RTRLink	50.48.75.73	50.48.75.73	*	0x80000001
1.0.0.0	Summary	50.48.75.73	40.0.0.0/8	1	0x80000001
1.0.0.0	Summary	50.48.75.73	50.0.0.0/8	1	0x80000001
*	ASExtLink	50.48.75.73	1.2.0.0/16	20	0x80000001

Total Entries: 5

DGS-3312SR:4#

## show ospf neighbor

Purpose	Used to display the current OSPF neighbor router table.
Syntax	<b>show ospf neighbor {&lt;ipaddr&gt;}</b>
Description	This command will display the current OSPF neighbor router table.
Parameters	<ipaddr> – The IP address of the neighbor router.
Restrictions	None.

### Usage Example

To display the current OSPF neighbor router table:

DGS-3312SR:4#show ospf neighbor

Command: show ospf neighbor

IP Address of Neighbor	Router ID of Neighbor	Neighbor Priority	Neighbor State
10.48.74.122	10.2.2.2	1	Initial

DGS-3312SR:4#

**show ospf virtual\_neighbor**

Purpose	Used to display the current OSPF virtual neighbor router table.
Syntax	<b>show ospf virtual_neighbor {&lt;area_id&gt; &lt;neighbor id&gt;}</b>
Description	This command will display the current OSPF virtual neighbor router table.
Parameters	<p><i>&lt;area_id&gt;</i> – A 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain.</p> <p><i>&lt;neighbor_id&gt;</i> – The OSPF router ID for the neighbor. This is a 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the remote area's Area Border Router.</p>
Restrictions	None.

## Usage Example

To display the current OSPF virtual neighbor table:

```
DGS-3312SR:4#show ospf virtual_neighbor
Command: show ospf virtual_neighbor
```

Transit Area ID	Router ID of Virtual Neighbor	IP Address of Virtual Neighbor	Virtual Neighbor State
-----	-----	-----	-----
10.1.1.1	10.2.3.4	10.48.74.111	Exchange

```
Total Entries : 1

DGS-3312SR:4#
```

**config ospf ipif**

Purpose	Used to configure the OSPF interface settings.
Syntax	<b>config ospf ipif &lt;ipif_name 12&gt; {area &lt;area_id&gt;   priority &lt;value&gt;   hello_interval &lt;sec 1-65535&gt;   dead_interval &lt;sec 1-65535&gt;   authentication [none   simple &lt;password 8&gt;   md5 &lt;key_id 1-255&gt;]   metric &lt;value 1-65535&gt;   state [enable   disable]}</b>
Description	This command is used to configure the OSPF interface settings.
Parameters	<p><i>&lt;ipif_name 12&gt;</i> – The name of the IP interface.</p> <p><i>area &lt;area_id&gt;</i> - A 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain.</p>

**config ospf ipif**

*priority <value>* – The priority used in the election of the Designated Router (DR). A number between 0 and 255.

*hello\_interval <sec 1-65535>* – Allows the specification of the interval between the transmission of OSPF Hello packets, in seconds. Between 1 and 65535 seconds can be specified. The Hello Interval, Dead Interval, Authorization Type, and Authorization Key should be the same for all routers on the same network.

*dead\_interval <sec 1-65535>* – Allows the specification of the length of time between the receipt of Hello packets from a neighbor router before the selected area declares that router down. An interval between 1 and 65535 seconds can be specified. The *dead interval* must be evenly divisible by the Hello Interval.

*metric <value 1-65535 >* – The interface metric (1 to 65535). Entering a 0 will allow automatic calculation of the metric.

*authentication* – Enter the type of authentication preferred. The user may choose between:

- *none* – Choosing this parameter will require no authentication.
- *simple <password 8>* – Choosing this parameter will set a simple authentication which includes a case-sensitive password of no more than 8 characters.
- *md5 <key\_id 1-255>* – Choosing this parameter will set authentication based on md5 encryption. A previously configured MD5 key ID (1 to 255) is required.

*metric <value 1-65535>* – This field allows the entry of a number between 1 and 65,535 that is representative of the OSPF cost of reaching the selected OSPF interface. The default metric is 1.

*state [enable | disable]* – Used to enable or disable this function.

Restrictions

Only administrator-level users can issue this command.

## Usage Example

To configure OSPF interface settings:

```
DGS-3312SR:4#config ospf ipif System priority 2 hello_interval 15
metric 2 state enable
```

```
Command: config ospf ipif System priority 2 hello_interval 15
metric 2 state enable
```

```
Success.
```

```
DGS-3312SR:4#
```

**config ospf all**

Purpose	Used to configure all of the OSPF interfaces on the switch at one time.
Syntax	<b>config ospf all {area &lt;area_id&gt;   priority &lt;value&gt;   hello_interval &lt;sec 1-65535&gt;   dead_interval &lt;sec 1-65535&gt;   authentication [none   simple &lt;password 8&gt;   md5 &lt;key_id 1-255&gt;]   metric &lt;value 1-65535&gt;   state [enable   disable]}</b>
Description	This command is used to configure all of the OSPF interfaces on the switch, using a single group of parameters, at one time.
Parameters	<p><i>area &lt;area_id&gt;</i> - A 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain.</p> <p><i>priority &lt;value&gt;</i> - The priority used in the election of the Designated Router (DR). A number between 0 and 255.</p> <p><i>hello_interval &lt;sec 1-65535&gt;</i> - Allows the specification of the interval between the transmission of OSPF Hello packets, in seconds. Between 1 and 65535 seconds can be specified. The Hello Interval, Dead Interval, Authorization Type, and Authorization Key should be the same for all routers on the same network.</p> <p><i>dead_interval &lt;sec 1-65535&gt;</i> - Allows the specification of the length of time between the receipt of Hello packets from a neighbor router before the selected area declares that router down. An interval between 1 and 65535 seconds can be specified. The Dead Interval must be evenly divisible by the Hello Interval.</p> <p><i>metric &lt;value 1-65535&gt;</i> - The interface metric (1 to 65535). Entering a 0 will allow automatic calculation of the metric.</p> <p><i>authentication</i> - Enter the type of authentication preferred. The user may choose between:</p> <ul style="list-style-type: none"> <li>▪ <i>none</i> - Choosing this parameter will require no authentication.</li> <li>▪ <i>simple &lt;password 8&gt;</i> - Choosing this parameter will set a simple authentication which includes a case-sensitive password of no more than 8 characters.</li> <li>▪ <i>md5 &lt;key_id 1-255&gt;</i> - Choosing this parameter will set authentication based on md5 encryption. A previously configured MD5 key ID (1 to 255) is required.</li> </ul> <p><i>metric &lt;value 1-65535&gt;</i> - This field allows the entry of a number between 1 and 65,535 that is representative of the OSPF cost of reaching the selected OSPF interface. The default metric is 1.</p> <p><i>state [enable   disable]</i> - Used to enable or disable this function.</p>
Restrictions	Only administrator-level users can issue this command.

## Usage Example

To configure all of the OSPF interfaces on the switch with a single group of parameters:

```
DGS-3312SR:4#config ospf all state enable
```

```
Command: config ospf all state enable
```

```
Success.
```

```
DGS-3312SR:4#
```

## show ospf ipif

Purpose	Used to display the current OSPF interface settings for the specified interface name.
Syntax	<b>show ospf ipif {&lt;ipif_name 12&gt;   all}</b>
Description	This command will display the current OSPF interface settings for the specified interface name.
Parameters	<p>&lt;ipif_name 12&gt; – The IP interface name for which you want to display the current OSPF interface settings.</p> <p>all – Entering this parameter will display all ospf Interface settings.</p>
Restrictions	None.

### Usage Example

To display the current OSPF interface settings, for a specific OSPF interface:

```

DGS-3312SR:4#show ospf ipif ipif2
Command: show ospf ipif ipif2

Interface Name: ipif2                IP Address: 123.234.12.34/24 ((Link Up))
Network Medium Type: BROADCAST      Metric: 1
Area ID: 1.0.0.0                    Administrative State: Enabled
Priority: 1                           DR State: DR
DR Address: 123.234.12.34           Backup DR Address: None
Hello Interval: 10                   Dead Interval: 40
Transmit Delay: 1                     Retransmit Time: 5
Authentication: None

Total Entries: 1

DGS-3312SR:4#

```

Usage Example:

To display the current OSPF interface settings, for all OSPF interfaces on the switch:

```

DGS-3312SR:4#show ospf all
Command: show ospf all

Interface Name: System                IP Address: 10.42.73.10/8 (Link Up)
Network Medium Type: BROADCAST      Metric: 1
Area ID: 0.0.0.0                    Administrative State: Enabled
Priority: 1                           DR State: DR
DR Address: 10.42.73.10             Backup DR Address: None
Hello Interval: 10                   Dead Interval: 40
Transmit Delay: 1                     Retransmit Time: 5
Authentication: None

Interface Name: ipif2                IP Address: 123.234.12.34/24 ((Link Up))
Network Medium Type: BROADCAST      Metric: 1
Area ID: 1.0.0.0                    Administrative State: Enabled
Priority: 1                           DR State: DR
DR Address: 123.234.12.34           Backup DR Address: None
Hello Interval: 10                   Dead Interval: 40
Transmit Delay: 1                     Retransmit Time: 5
Authentication: None

Total Entries: 2

DGS-3312SR:4#

```

**create ospf virtual\_link**

Purpose	Used to create an OSPF virtual interface.
Syntax	<b>create ospf virtual_link &lt;area_id&gt; &lt;neighbor_id&gt; {hello_interval &lt;sec 1-65535&gt;   dead_interval &lt;sec 1-65535&gt;   authentication [none   simple &lt;password 8&gt;   md5 &lt;key_id 1-255&gt;]}</b>
Description	This command is used to create an OSPF virtual interface.
Parameters	<p><b>&lt;area_id&gt;</b> – A 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain.</p> <p><b>&lt;neighbor_id&gt;</b> – The OSPF router ID for the remote area. This is a 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the remote area's Area Border Router. The router ID of the neighbor router.</p> <p><b>hello_interval &lt;sec 1-65535&gt;</b> – Allows the specification of the interval between the transmission of OSPF Hello packets, in seconds. Between 1 and 65535 seconds can be specified. The Hello Interval, Dead Interval, Authorization Type, and Authorization Key should be the same for all routers on the same network.</p> <p><b>dead_interval &lt;sec 1-65535&gt;</b> – Allows the specification of the length of time between the receipt of Hello packets from a neighbor router before the selected area declares that router down. An interval between 1 and 65535 seconds can be specified. The Dead Interval must be evenly divisible by the Hello Interval.</p> <p><b>authentication</b> – Enter the type of authentication preferred. The user may choose between:</p> <ul style="list-style-type: none"> <li>▪ <i>none</i> – Choosing this parameter will require no authentication.</li> <li>▪ <i>simple &lt;password 8&gt;</i> – Choosing this parameter will set a simple authentication which includes a case-sensitive password of no more than 8 characters.</li> <li>▪ <i>md5 &lt;key_id 1-255&gt;</i> – Choosing this parameter will set authentication based on md5 encryption. A previously configured MD5 key ID (1 to 255) is required.</li> </ul>
Restrictions	Only administrator-level users can issue this command.

## Usage Example

To create an OSPF virtual interface:

```
DGS-3312SR:4#create ospf virtual_link 10.1.12 20.1.1.1 hello_interval 10
```

```
Command: create ospf virtual_link 10.1.12 20.1.1.1 hello_interval 10
```

```
Success.
```

```
DGS-3312SR:4#
```

## config ospf virtual\_link

Purpose	Used to configure the OSPF virtual interface settings.
Syntax	<b>config ospf virtual_link &lt;area_id&gt; &lt;neighbor_id&gt; {hello_interval &lt;sec 1-65535&gt;   dead_interval &lt;sec 1-65535&gt;   authentication [none   simple &lt;password 8&gt;   md5 &lt;key_id 1-255&gt;]}</b>
Description	This command is used to configure the OSPF virtual interface settings.
Parameters	<p><i>&lt;area_id&gt;</i> – A 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain.</p> <p><i>&lt;neighbor_id&gt;</i> – The OSPF router ID for the remote area. This is a 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the remote area's Area Border Router.</p> <p><i>hello_interval &lt;sec 1-65535&gt;</i> – Allows the specification of the interval between the transmission of OSPF Hello packets, in seconds. Between 1 and 65535 seconds can be specified. The Hello Interval, Dead Interval, Authorization Type, and Authorization Key should be the same for all routers on the same network.</p> <p><i>dead_interval &lt;sec 1-65535&gt;</i> – Allows the specification of the length of time between the receipt of Hello packets from a neighbor router before the selected area declares that router down. An interval between 1 and 65535 seconds can be specified. The Dead Interval must be evenly divisible by the Hello Interval.</p> <p><i>authentication</i> – Enter the type of authentication preferred. The user may choose between:</p> <ul style="list-style-type: none"> <li>▪ <i>none</i> – Choosing this parameter will require no authentication.</li> <li>▪ <i>simple &lt;password 8&gt;</i> – Choosing this parameter will set a simple authentication which includes a case-sensitive password of no more than 8 characters.</li> <li>▪ <i>md5 &lt;key_id 1-255&gt;</i> – Choosing this parameter will set authentication based on md5 encryption. A previously configured MD5 key ID (1 to 255) is required.</li> </ul>

**config ospf virtual\_link**

Restrictions	Only administrator-level users can issue this command.
--------------	--

## Usage Example

To configure the OSPF virtual interface settings:

```
DGS-3312SR:4#config ospf virtual_link 10.1.1.2 20.1.1.1 hello_interval 10
Command: config ospf virtual_link 10.1.1.2 20.1.1.1 hello_interval 10

Success.

DGS-3312SR:4#
```

**delete ospf virtual\_link**

Purpose	Used to delete an OSPF virtual interface.
Syntax	<b>delete ospf virtual_link &lt;area_id&gt; &lt;neighbor_id&gt;</b>
Description	This command will delete an OSPF virtual interface from the switch.
Parameters	<p><b>&lt;area_id&gt;</b> – A 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain.</p> <p><b>&lt;neighbor_id&gt;</b> – The OSPF router ID for the remote area. This is a 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the remote area's Area Border Router. The router ID of the neighbor router.</p>
Restrictions	Only administrator-level users can issue this command.

## Usage Example:

To delete an OSPF virtual interface from the switch:

```
DGS-3312SR:4#delete ospf virtual_link 10.1.12 20.1.1.1
Command: delete ospf virtual_link 10.1.12 20.1.1.1

Success.

DGS-3312SR:4#
```

**show ospf virtual\_link**

Purpose	Used to display the current OSPF virtual interface configuration.
Syntax	<b>show ospf virtual_link {&lt;area_id&gt; &lt;neighbor_id&gt;}</b>
Description	This command will display the current OSPF virtual interface configuration.
Parameters	<p><i>&lt;area_id&gt;</i> – A 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain.</p> <p><i>&lt;neighbor_id&gt;</i> – The OSPF router ID for the remote area. This is a 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the remote area's Area Border Router. This is the router ID of the neighbor router.</p>
Restrictions	None.

Usage Example:

To display the current OSPF virtual interface configuration:

```
DGS-3312SR:4#show ospf virtual_link
```

Transit Area ID	Virtual Neighbor Router	Hello Interval	Dead Interval	Authentication	Link Status
10.0.0.0	20.0.0.0	10	60	None	DOWN

Total Entries: 1

```
DGS-3312SR:4#
```

## COMMAND HISTORY LIST

The command history list commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
?	
show command_history	
config command_history	<value 1-40>

Each command is listed, in detail, in the following sections.

?	
Purpose	Used to display all commands in the Command Line Interface (CLI).
Syntax	?
Description	This command will display all of the commands available through the Command Line Interface (CLI).
Parameters	None.
Restrictions	None.

Example usage

To display all of the commands in the CLI:

```
DGS-3312SR:4#?
..
?
clear
clear arptable
clear counters
clear fdb
clear log
config 802.1p default_priority
config 802.1p user_priority
config 802.1x auth_mode
config 802.1x auth_parameter ports
config 802.1x auth_protocol
config 802.1x capability ports
config 802.1x init
```

```

config 802.1x reauth
config access profile profile_id
config account
config admin local_enable
config all_boxes_id
config arp_aging time
config authen_application
CTRL+C ESC q Quit SPACE n Next Page ENTER Next Entry a All

```

## show command\_history

Purpose	Used to display the command history.
Syntax	<b>show command_history</b>
Description	This command will display the command history.
Parameters	None.
Restrictions	None.

### Example usage

To display the command history:

```

DGS-3312SR:4#show command_history
Command: show command_history

?
? show
show vlan
config router_ports vlan2 add 1:1-1:10
config router_ports vlan2 add
config router_ports vlan2
config router_ports
show vlan
create vlan vlan2 tag 3
create vlan vlan2 tag 2
show router_ports
show router ports
login

DGS-3312SR:4#

```

**config command\_history**

Purpose	Used to configure the command history.
Syntax	<b>config command_history &lt;value 1-40&gt;</b>
Description	This command is used to configure the command history.
Parameters	<i>&lt;value 1-40&gt;</i> – The number of previously executed commands maintained in the buffer. Up to 40 of the latest executed commands may be viewed.
Restrictions	None.

## Example usage

To configure the command history:

```
DGS-3312SR:4#config command_history 20
Command: config command_history 20

Success.

DGS-3312SR:4#
```

**TECHNICAL SPECIFICATIONS**

<b>Physical and Environmental</b>	
<b>AC input &amp; External Redundant power Supply:</b>	100 – 120; 200 - 240 VAC, 50/60 Hz (internal universal power supply)
<b>Power Consumption:</b>	90 watts maximum
<b>DC fans:</b>	2 built-in 40 x 40 x10 mm fans
<b>Operating Temperature:</b>	0 to 40 degrees Celsius
<b>Storage Temperature:</b>	-25 to 55 degrees Celsius
<b>Humidity:</b>	Operating: 5% to 95% RH non-condensing; Storage: 0% to 95% RH non-condensing
<b>Dimensions:</b>	441 mm x 207 mm x 44 mm (1U), 19 inch rack-mount width
<b>Weight:</b>	3.15 kg
<b>EMC:</b>	FCC Class A CE Mark C-Tick
<b>Safety:</b>	CSA International

<b>General</b>	
<b>Standards:</b>	IEEE 802.3u 100BASE-TX Fast Ethernet IEEE 802.3ab 1000BASE-T Gigabit Ethernet IEEE 802.1 P/Q VLAN IEEE 802.3x Full-duplex Flow Control IEEE 802.3 Nway auto-negotiation IEEE 802.3z SFP ports IEEE 1394.b Stacking IEEE 802.1D/w/s Spanning trees. IEEE 802.1p QoS (Priority Bits) IEEE 802.1X Access Control

<b>General</b>	
<b>Protocols:</b>	CSMA/CD
<b>Data Transfer Rates:</b>	Half-duplex      Full-duplex
<b>Ethernet</b>	10 Mbps      20Mbps
<b>Fast Ethernet</b>	100Mbps      200Mbps
<b>Gigabit Ethernet</b>	n/a      2000Mbps
<b>Fiber Optic</b>	SFP (Mini GBIC) Support IEEE 802.3z 1000BASE-LX (DEM-310GT transceiver) IEEE 802.3z 1000BASE-SX (DEM-311GT transceiver) IEEE 802.3z 1000BASE-LH (DEM-314GT transceiver) IEEE 802.3z 1000BASE-ZX (DEM-315GT transceiver)
<b>Network Cables:</b>	
<b>10BASE-T:</b>	UTP Cat.5, Cat.5 Enhanced for 1000Mbps UTP Cat.5 for 100Mbps UTP Cat.3, 4, 5 for 10Mbps
<b>100BASE-TX:</b>	EIA/TIA-568 100-ohm screened twisted-pair (STP)(100m)
<b>Number of Ports:</b>	12 x 10/100/1000 Gigabit Ethernet ports

<b>Performance</b>	
<b>Transmission Method:</b>	Store-and-forward
<b>RAM Buffer:</b>	1 MB per device
<b>Filtering Address Table:</b>	16K MAC address per device
<b>Packet Filtering/Forwarding Rate:</b>	Full-wire speed for all connections. 148,810 pps per port (for 100Mbps)

<b>Performance</b>	
	1,488,100 pps per port (for 1000Mbps)
<b>MAC Address Learning:</b>	Automatic update.
<b>Forwarding Table Age Time:</b>	Max age: 10 - 1000000 seconds. Default = 300.