

Quick Installation Guide

DSA-3110 Hotspot Edition

Hotspot Service Gateway



BEFORE YOU BEGIN

Please read this guide before installation. Make sure that you have all the necessary information and equipment. Also check whether the existing hardware/software firewalls are disabled.

CONNECTING DSA-3110 HOTSPOT EDITION TO EXISTING NETWORK

- 1. Connect an Ethernet cable between any of Ethernet ports **4-7** located on the back panel of the device and the Ethernet port of your PC or the hub (switch) of your network.
- 2. Connect the power cord to the **power connector port** on the back panel of the device, then plug the power adapter into an electrical outlet or power strip. The Power LED turns on indicating that the device has been powered on.

Attention! Using a power supply with a different voltage rating than the one included will cause damage and void the warranty for this product.

3. Check whether the LED of the Ethernet port to which you have just connected the Ethernet cable is on. If the relevant LED is off, please repeat steps 1-2 and check the Ethernet cable.

<u>Note:</u> All LAN1 ports of the DSA-3110 Hotspot Edition device are auto-MDI/MDIX. So you can use a straight-through Ethernet cable as well as a crossover-one.

CHECKING IP ADDRESS

Check the IP address of the computer used to configure the DSA-3110 Hotspot Edition device.

Go to **Start > Run**. Enter "**cmd**" in the **Open** field. Click the **OK** button.



In the opened window, type "**ipconfig**". Press the **Enter** key.

Current settings of your IP address will be displayed.

The IP address should fall within the range from **192.168.1.1** to **192.168.1.253**.



If your IP address is out of the range specified above, change it in the following way:

1. Left-click the Network Connection icon



2. The Local Area Connection Status

window appears. In the window, click the **Properties** button.

3. The Local Area Connection Properties window appears. Select the Internet Protocol (TCP/IP) line and click the Properties button.

4. In the opened window, select the Use the following IP address radio button and enter the IP address of your computer from the range specified above (e.g., 192.168.1.2) and the subnet mask (255.255.255.0).

5. Click the OK button in the present window and the OK button in the Local Area Connection Properties window.

ternet Protocol (TCP/IP) Prop	erties 🕜	
General		
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.		
🔿 Obtain an IP address automatic	ally	
OUse the following IP address:		
IP address:	192.168.1.2	
Subnet mask:	255.255.255.0	
Default gateway:		
O Obtain DNS server address automatically		
Our Contract → Con	ddresses:	
Preferred DNS server:		
Alternate DNS server:		
Advanced		
OK Cancel		
ternet Protocol (TCP/IP) Prop	erties 🤗 🔀	
ternet Protocol (TCP/IP) Prop General	erties ?>	
	omatically if your network supports	
eneral You can get IP settings assigned auto this capability. Otherwise, you need to	omatically if your network supports ask your network administrator for	
General You can get IP settings assigned auto this capability. Otherwise, you need to the appropriate IP settings.	omatically if your network supports ask your network administrator for	
General You can get IP settings assigned auto this capability. Otherwise, you need to the appropriate IP settings. Obtain an IP address automatics	omatically if your network supports ask your network administrator for	
General You can get IP settings assigned auto this capability. Otherwise, you need to the appropriate IP settings. Obtain an IP address automatica Obtain an IP address automatica	omatically if your network supports o ask your network administrator for ally	
General You can get IP settings assigned auto this capability. Otherwise, you need to the appropriate IP settings. Obtain an IP address automatica Obtain an IP address automatica IP address:	omatically if your network supports o ask your network administrator for ally	
eneral You can get IP settings assigned auto this capability. Otherwise, you need to the appropriate IP settings. Obtain an IP address automatica Obtain an IP address automatica IP address: Subnet mask:	prmatically if your network supports b ask your network administrator for ally 192.168.1.2 255.255.255.0 	
General You can get IP settings assigned auto this capability. Otherwise, you need to the appropriate IP settings. Obtain an IP address automatica Use the following IP address: IP address: Subnet mask: Default gateway:	omatically if your network supports o ask your network administrator for ally 192.168.1.2 255.255.255.0 	
General You can get IP settings assigned autor this capability. Otherwise, you need to the appropriate IP settings. Obtain an IP address automatica Use the following IP address: IP address: Subnet mask: Default gateway: Obtain DNS server address autor	omatically if your network supports o ask your network administrator for ally 192.168.1.2 255.255.255.0 	
You can get IP settings assigned auto this capability. Otherwise, you need to the appropriate IP settings. Obtain an IP address automatica Use the following IP address: IP address: Subnet mask: Default gateway: Obtain DNS server address auto Obtain DNS server address auto	omatically if your network supports o ask your network administrator for ally 192.168.1.2 255.255.255.0 	
You can get IP settings assigned auto this capability. Otherwise, you need to the appropriate IP settings. Obtain an IP address automatica Use the following IP address: IP address: Subnet mask: Default gateway: Obtain DNS server address auto Use the following DNS server ad Preferred DNS server:	prmatically if your network supports b ask your network administrator for ally 192.168.1.2 255.255.255.0 	

CONNECTING TO WEB-BASED INTERFACE

1. Open a web browser

on your computer.

Enter

http://192.168.1.254 in the address bar.

<u>Note</u>: First disable proxy settings in your web browser.

2. On the opened page, enter "**admin**" in the **Login** field and "**admin**" in the **Password** field. Then click the **Enter** button.



DSA-3110 Hotspot Edition		
Login: admin		
Password:		
Clear Enter		

After successful registration the system statistics page opens.

		Russian Logout
D-Link Building Networks for People		
		Start
1 Start		
Lusers and Groups	ers and Groups	
	Parameter	Value
% Options	Total memory:	62312 Kbyte
💆 Net	Free memory:	14020 Kbyte
System		
• - • - • - • - • - • • • • • • • • • •	Uptime:	76 day, 20 hour, 24 min
	Load average (1, 5, 15 min):	2.01, 2.01, 2.00
	Total processes:	30

Follow the menu to configure the necessary settings.

Please refer to the "User Manual" document to fine-tune the device.

TECHNICAL SUPPORT

You can find software updates and user documentation on our website.

D-Link provides its customers with free support within the product's warranty period.

Customers can contact the technical support group by phone or by Internet/ e-mail.

FOR CUSTOMERS WITHIN RUSSIA

CONTACT D-LINK TECHNICAL SUPPORT

(495) 744-00-99

CONTACT D-LINK BY INTERNET

Website: <u>http://www.dlink.ru</u>

E-mail: <u>support@dlink.ru</u>

FOR TELEPHONE NUMBERS AND ADDRESSES OF D-LINK

OFFICES WORLDWIDE VISIT

http://www.dlink.com/corporate/worldwideoffices/