

How to upgrade the firmware

(Internal reference only)

Procedure:

Step 0 Setup a FTP server in your Local Network.

- a. Create a user anonymous, without password
- b. Create a new folder c:\dvc-1000, and set access right for user anonymous.

Setup Users			×
Users	Setup		Misc.
** Default ** 1	Group name		
Anonymous	Password		
	Home directory c:\dvc-1000		Quota
	Notes	Ą	<u>I</u> P access
	File/Directory access rules		
	C:\ File	les:	
	c:\20020	Write	Help
		C Append	
		Execute	<u>N</u> ew
		rectories:	<u>S</u> tore
		□ Make	<u>D</u> elete
	Su Su	ub-dirs:	<u>R</u> estore
1	Add Edit Delete Up Down	✓ Inherit	<u></u> K

c. Copy the necessary files into folder c:\dvc-1000, including pppoe123.txt and firmware file.

Step 1 Power on the DVC-1000 and make sure you have correct setting for IP address on DVC-1000.

Step 2 Enter main screen, select **Settings** and press **ENTER** button on remote control to enter setting screen.

Step 3 On the Settings screen, press the super password **8573** by remote controller to enter the advance setting



Step 4 Use the arrow keys to select **Update Config Server** in the Setting field. And specify the IP address for your FTP server in Local Network in the Value field. Press **OK** to apply the setting.

Step 5 Follow the step 3 to enter the advance setting screen. Use the arrow keys to select **Update Config File** in the Setting field, and key in the **pppoe123.txt** in the Value field (case sensitive). Press **OK** to apply the setting.

Setting:	Value:
Non-mirrored Self-view	pppoe123.txt
Uncompress Self-view Update Flags Update Retry Count Update Check Period Update Base Period Update Max Delay Update Config Server Update Config File	Time Alive: 00-00:01:57
C C C C C C C C C C C C C C C C C C C	

Step 6 On the main screen; enter Setting screen and select Update item. Enter Update screen, press **Check Now** item to check firmware from FTP server.

5	
	Update
	Automatically check for updates
	Check Now Check for an update now
	Application Version: 2.0.0.38
	Bost Londer Version: 1.0.4.3
	App Loader Version: 1.0.300,100
	(SOLDEFICITE) Return all settings to original state and remove all stored data
	OK Cancel

Step 7 If the FTP server can be contacted and the firmware is available, the Update available information will pop on screen. Press **Yes** to continue the processing.



Step8 After the step 7, the DVC-1000 will reboot automatically.



Step 9 When DVC-1000 boots up, DVC-1000 will download new firmware from FTP server. You can trace the processing status from screen.

Note: Please do not power off during the download is processing.

Update In Progress	
A software update is curre can take up to 5 minutes t	rtly in progress. This complets.
Please do not disconnect to or remove the network captogrees.	e power, reset the un le while the update is
Connecting to server.	
Reading configuration.	
Downloading software:	100%
Installing new software.	

Step 10 When processing is successful, the following message will pop on screen. Press OK to restart the DVC-1000

Updata System		
Update successful. The supdate to take effect.	system will restart to allow the	
	ОК	

When DVC-1000 boots up, the DVC-1000 is update the firmware to v3.0.5.123/v3.1.5.123 successfully.

Please do not change other setting value in advance setting except **Update Config Server** and **Update Config file.**