



# CLI Reference Guide

Product Model: DGS-1510/ME Series

Metro Ethernet Switch

Release 1.00

# Table of Contents

Chapter 1	Using Command Line Interface.....	1
Chapter 2	Basic Command List .....	8
Chapter 3	802.1Q VLAN Command List.....	22
Chapter 4	802.1X Command List.....	36
Chapter 5	Access Authentication Control Command List.....	51
Chapter 6	Access Control List (ACL) Command List.....	72
Chapter 7	Address Resolution Protocol (ARP) Command List.....	91
Chapter 8	ARP Spoofing Prevention Command List .....	96
Chapter 9	Auto-Configuration Command List.....	98
Chapter 10	Basic Commands Command List.....	101
Chapter 11	BPDU Attack Protection Command List.....	118
Chapter 12	Cable Diagnostics Command List.....	123
Chapter 13	Command Logging Command List.....	125
Chapter 14	Compound Authentication Command List .....	127
Chapter 15	Configuration Command List.....	131
Chapter 16	Connectivity Fault Management (CFM) Command List .....	136
Chapter 17	CPU Interface Filtering Command List.....	163
Chapter 18	Debug Software Command List .....	172
Chapter 19	DHCP Local Relay Command List.....	179
Chapter 20	DHCP Relay Command List.....	185
Chapter 21	DHCP Server Screening Command List.....	201
Chapter 22	Digital Diagnostic Monitoring (DDM) Commands .....	204
Chapter 23	D-Link Unidirectional Link Detection (DULD) Command List.....	210
Chapter 24	DoS Attack Prevention Command List.....	212
Chapter 25	Energy Efficient Ethernet (EEE) Command List .....	216
Chapter 26	Ethernet Ring Protection Switching (ERPS) Command List.....	218
Chapter 27	Filter Command List .....	227
Chapter 28	Filter Database (FDB) Command List.....	230
Chapter 29	Flash File System (FFS) Command List .....	240
Chapter 30	Gratuitous ARP Command List .....	249
Chapter 31	IGMP Snooping Command List.....	254
Chapter 32	IP-MAC-Port Binding (IMPB) Command List .....	280
Chapter 33	IPv6 Neighbor Discover Command List .....	295
Chapter 34	IPv6 Route Command List .....	299
Chapter 35	Jumbo Frame Command List.....	302
Chapter 36	Layer 2 Protocol Tunneling (L2PT) Command List.....	304
Chapter 37	Link Aggregation Command List.....	308
Chapter 38	Link Layer Discovery Protocol (LLDP) Command List.....	315
Chapter 39	LLDP-MED Command List.....	333

---

Chapter 40	Loop Back Detection (LBD) Command List .....	341
Chapter 41	MAC Notification Command List .....	347
Chapter 42	MAC-based Access Control Command List.....	352
Chapter 43	MAC-based VLAN Command List.....	367
Chapter 44	Mirror Command List.....	370
Chapter 45	MLD Snooping Command List .....	373
Chapter 46	MSTP debug enhancement Command List .....	395
Chapter 47	Multicast Filter Command List.....	401
Chapter 48	Multicast VLAN Command List .....	412
Chapter 49	Multiple Spanning Tree Protocol (MSTP) Command List .....	422
Chapter 50	Network Load Balancing (NLB) Command List .....	434
Chapter 51	Network Monitoring Command List.....	439
Chapter 52	OAM Commands.....	445
Chapter 53	Peripherals Command List.....	452
Chapter 54	Ping Command List.....	455
Chapter 55	Port Security Command List .....	457
Chapter 56	Power over Ethernet (PoE) Command List (DGS-1510-28LP/ME and DGS-1510-28XMP/ME Only) .	465
Chapter 57	PPPoE Circuit ID Insertions Command List.....	470
Chapter 58	Protocol VLAN Command List .....	473
Chapter 59	QinQ Command List.....	479
Chapter 60	Quality of Service (QoS) Command List .....	487
Chapter 61	RADIUS Client Command List .....	505
Chapter 62	Safeguard Engine Command List .....	515
Chapter 63	Secure Shell (SSH) Command List.....	517
Chapter 64	Secure Sockets Layer (SSL) Command List .....	525
Chapter 65	Show Technical Support Command List.....	531
Chapter 66	Simple Mail Transfer Protocol (SMTP) Command List .....	534
Chapter 67	Simple Network Management Protocol (SNMP) Command List .....	539
Chapter 68	Single IP Management Command List.....	564
Chapter 69	Syslog and Trap Source-interface Command List .....	574
Chapter 70	System Log Command List .....	578
Chapter 71	System Severity Command List .....	589
Chapter 72	Telnet Client Command List.....	591
Chapter 73	TFTP/FTP Client Command List.....	592
Chapter 74	Time and SNTP Command List .....	601
Chapter 75	Trace Route Command List .....	608
Chapter 76	Traffic Control Command List .....	611
Chapter 77	Traffic Segmentation Command List.....	616
Chapter 78	Trusted Host Command List .....	618
Chapter 79	Unicast Routing Command List.....	622
Chapter 80	VLAN Trunking Command List.....	625
Chapter 81	Password Recovery Command List.....	630

---

Appendix A	Password Recovery Procedure.....	632
Appendix B	System Log Entries .....	633
Appendix C	Trap Log Entries.....	643
Appendix D	RADIUS Attributes Assignment.....	647
Appendix E	IETF RADIUS Attributes Support.....	649

# Chapter 1 Using Command Line Interface

The Switch can be managed through the Switch's serial port, Telnet, SNMP or the Web-based management agent. The Command Line Interface (CLI) can be used to configure and manage the Switch via the serial port or Telnet interfaces.

This manual provides a reference for all of the commands contained in the CLI. Every command will be introduced in terms of purpose, format, description, parameters, and examples. Configuration and management of the Switch via the Web-based management agent are discussed in the Web UI Reference Guide. For detailed information on installing hardware please also refer to the Hardware Installation Guide.

## 1-1 Accessing the Switch via the Serial Port

The Switch's serial port's default settings are as follows:

- 115200 baud
- no parity
- 8 data bits
- 1 stop bit

A computer running a terminal emulation program capable of emulating a VT-100 terminal and a serial port configured as above are then connected to the Switch's Console port via an included RS-232 to RJ-45 convertor cable.

With the serial port properly connected to a management computer, the following screen should be visible. If this screen does not appear, try pressing Ctrl+r to refresh the console screen.

```
DGS-1510-28XMP/ME Gigabit Ethernet Switch
Command Line Interface

Firmware: Build 1.00.018
Copyright(C) 2015 D-Link Corporation. All rights reserved.
UserName:
PassWord:

DGS-1510-28XMP/ME:admin#
```

There is no initial username or password. Just press the **Enter** key twice to display the CLI input cursor – **DGS-1510-28XMP/ME:admin#**. This is the command line where all commands are input.

## 1-2 Setting the Switch's IP Address

Each Switch must be assigned its own IP Address, which is used for communication with an SNMP network manager or other TCP/IP application (for example BOOTP, TFTP). The Switch's default IP address is 10.90.90.90. You can change the default Switch IP address to meet the specification of your networking address scheme.

The Switch is also assigned a unique MAC address by the factory. This MAC address cannot be changed, and can be found on the initial boot console screen – shown below.

```

Boot Procedure                                     V1.00.001
-----
Power On Self Test ..... 100 %

MAC Address   : 00-01-02-03-04-00
H/W Version   : A1

Please Wait, Loading V1.00.018 Runtime Image ..... 100 %
UART init ..... 100 %
Starting runtime image
Device Discovery ..... 100 %
Configuration init ..... |

```

The Switch's MAC address can also be found in the Web management program on the Switch Information (Basic Settings) window on the Configuration menu.

The IP address for the Switch must be set before it can be managed with the Web-based manager. The Switch IP address can be automatically set using BOOTP or DHCP protocols, in which case the actual address assigned to the Switch must be known.

Starting at the command line prompt, enter the commands **config ipif System ipaddress xxx.xxx.xxx.xxx/yyy.yyy.yyy.yyy**. Where the **x**'s represent the IP address to be assigned to the IP interface named **System** and the **y**'s represent the corresponding subnet mask.

Alternatively, you can enter **config ipif System ipaddress xxx.xxx.xxx.xxx/z**. Where the **x**'s represent the IP address to be assigned to the IP interface named **System** and the **z** represents the corresponding number of subnets in CIDR notation.

The IP interface named **System** on the Switch can be assigned an IP address and subnet mask which can then be used to connect a management station to the Switch's Telnet or Web-based management agent.

```

DGS-1510-28XMP/ME:admin# config ipif System ipaddress 10.24.22.100/255.0.0.0
Command: config ipif System ipaddress 10.24.22.100/8

Success.

DGS-1510-28XMP/ME:admin#

```

In the above example, the Switch was assigned an IP address of 10.24.22.100 with a subnet mask of 255.0.0.0. The system message **Success** indicates that the command was executed successfully. The Switch can now be configured and managed via Telnet, SNMP MIB browser and the CLI or via the Web-based management agent using the above IP address to connect to the Switch.

There are a number of helpful features included in the CLI. Entering the **?** command will display a list of all of the top-level commands.

```

..
?
cable_diag ports
cd
cfm linktrace
cfm loopback
clear
clear address_binding dhcp_snoop binding_entry ports
clear arptable
clear attack_log
clear cfm pkt_cnt
clear counters
clear ethernet_oam ports
clear fdb
clear igmp_snooping data_driven_group
clear igmp_snooping statistics counter
clear log
clear mac_based_access_control auth_state
clear mld_snooping data_driven_group
clear mld_snooping statistics counter
clear port_security_entry
config 802.1p default_priority
CTRL+C ESC q Quit SPACE n Next Page ENTER Next Entry a All

```

When entering a command without its required parameters, the CLI will prompt you with a **Next possible completions:** message.

```

DGS-1510-28XMP/ME:admin# config account
Command: config account
Next possible completions:
<username>

DGS-1510-28XMP/ME:admin#

```

In this case, the command **config account** was entered with the parameter **<username>**. The CLI will then prompt to enter the **<username>** with the message, **Next possible completions:**. Every command in the CLI has this feature, and complex commands have several layers of parameter prompting.

In addition, after typing any given command plus one space, users can see all of the next possible sub-commands, in sequential order, by repeatedly pressing the **Tab** key.

To re-enter the previous command at the command prompt, press the up arrow cursor key. The previous command will appear at the command prompt.

```

DGS-1510-28XMP/ME:admin#config account
Command: config account
Next possible completions:
<username>

DGS-1510-28XMP/ME:admin#config account

```

In the above example, the command **config account** was entered without the required parameter **<username>**, the CLI returned the **Next possible completions: <username>** prompt. The up arrow cursor control key was

pressed to re-enter the previous command (**config account**) at the command prompt. Now the appropriate username can be entered and the **config account** command re-executed.

All commands in the CLI function in this way. In addition, the syntax of the help prompts are the same as presented in this manual – angle brackets < > indicate a numerical value or character string, braces { } indicate optional parameters or a choice of parameters, and brackets [ ] indicate required parameters.

If a command is entered that is unrecognized by the CLI, the top-level commands will be displayed under the **Available commands:** prompt.

```
DGS-1510-28XMP/ME:admin#the
Available commands:
..                ?                cable_diag        cd
cfm               clear                config            copy
create           debug                del               delete
dir              disable              download          enable
erase            login                logout            md
move             no                  ping              ping6
rd               reboot              reconfig          rename
reset            save                 show              smtp
telnet           traceroute          traceroute6       upload

DGS-1510-28XMP/ME:admin#
```

The top-level commands consist of commands such as **show** or **config**. Most of these commands require one or more parameters to narrow the top-level command. This is equivalent to **show** what? or **config** what? Where the what? is the next parameter.

For example, entering the **show** command with no additional parameters, the CLI will then display all of the possible next parameters.



```

Command: show
Next possible completions:
802.1p          802.1x          access_profile  account
accounting      acct_client     address_binding
arp_spoofing_prevention  arprentry      attack_log
auth_client     auth_diagnostics  auth_session_statistics
auth_statistics  authen           authen_enable   authen_login
authen_policy   authentication    authorization    autoconfig
bandwidth_control  boot_file       bpdu_protection  cfm
command         command_history  config           cpu
cpu_filter      current_config  ddm             device_status
dhcp_local_relay  dhcp_relay      dos_prevention
dot1v_protocol_group  dscp           duld
eee             environment     erps            error
ethernet_oam     fdb            filter          flow_meter
gratuitous_arp   greeting_message  gvrp           hol_prevention
igmp            igmp_snooping  ipif
ipif_ipv6_link_local_auto  iproute       ipv6
ipv6route       jumbo_frame    l2protocol_tunnel  lacp_port
limited_multicast_addr  link_aggregation  lldp
log             log_save_timing  log_software_module
loopdetect      mac_based_access_control
mac_based_access_control_local  mac_based_vlan  mac_notification
max_mcast_group  mcast_filter_profile  mirror
mld_snooping    multicast       multicast_fdb    nlb
packet          password_recovery  per_queue       poe
port            port_security   port_security_entry
port_vlan       ports          pppoe           pvid
qinq           radius         rmon            router_ports
safeguard_engine  scheduling     scheduling_mechanism
serial_port     session        sim             smtp
snmp           sntp           ssh             ssl
storage_media_info  stp           stp             switch
syslog         system_severity  tech_support    terminal
tftp           time           time_range      traffic
traffic_segmentation  trap          trusted_host
utilization     vlan          vlan_translation  vlan_trunk

DGS-1510-28XMP/ME:admin#

```

In the above example, all of the possible next parameters for the **show** command are displayed. At the next command prompt, the up arrow was used to re-enter the **show** command, followed by the **account** parameter. The CLI then displays the user accounts configured on the Switch.

### 1-3 Command Syntax Symbols

Each CLI command, available on this switch, contains certain syntax symbols that might be unfamiliar to the inexperienced user. Each syntax symbol carries a meaning and by knowing that meaning we can better understand how the command is used. All commands are case-sensitive. Be sure to disable the **Caps Lock** or any other unwanted function that changes text case.

Syntax	Description
angle brackets < >	This syntax is used to enclose a variable or a value. Users must enter the variable or value. For example, in the <b>config command_prompt [&lt;string 16&gt;   username   default]</b> command, users must enter the command prompt string value and NOT the parameter <string 16>.
square brackets [ ]	This syntax is used to enclose a required value or list of required arguments. Only one value or argument must be specified. For example, in the <b>config command_prompt [&lt;string 16&gt;   username   default]</b> command, users must enter either the command prompt string, select the username, or select the default option. Do not type the square brackets.
vertical bar	This syntax is used to separate mutually exclusive items in a list. For example, in the <b>reset {[config   system]} {force_agree}</b> command, users may choose <b>config</b> or <b>system</b> in the command. Do not type the vertical bar.
braces { }	This syntax is used to enclose an optional value or a list of optional arguments. One or more values or arguments can be specified. For example, in the <b>reset {[config   system]} {force_agree}</b> command, users may choose config or system in the command. Do not type the braces.
parentheses ( )	This syntax is used to indicate that at least one or more of the values or arguments in the preceding syntax enclosed by braces must be specified. For example, in the <b>config dhcp_relay {hops &lt;int 1-16&gt;   time &lt;sec 0-65535&gt;}(1)</b> command, users have the option to specify hops or time or both of them. The "(1)" following the set of braces indicates at least one argument or value within the braces must be specified. Do not type the parentheses.
ipif <ipif_name 12>	In this syntax example, the value <b>12</b> means that the IP interface name can be up to 12 characters long.
metric <value 1-31>	In this syntax example, the values <b>1-31</b> means that the metric value must be between 1 and 32.

#### 1-4 Line Editing Keys

Keys	Description
Delete	This key specifies to delete the character under the cursor and to shift the remainder of the line to the left.
Backspace	This key specifies to delete the character to the left of cursor and shift the remainder of the line to the left.
CTRL+R	This key specifies to replace text characters with newly typed text or to insert newly typed text within the existing sentence. This is similar to the <b>Insert</b> key.
Up Arrow	This key specifies to repeat the previously entered command. Each time the up arrow is pressed, the command previous to that displayed appears. This way it is possible to review the command history for the current session. Use the down arrow to progress sequentially forward through the command history list.
Down Arrow	This key specifies to display the next command in the command history entered in the current session. This displays each command sequentially as it was entered. Use the up arrow to review previous commands.
Left Arrow	This key specifies to move the cursor to the left.
Right Arrow	This key specifies to move the cursor to the right.
Tab	This key specifies to help users to select the appropriate token.

## 1-5 Multiple Page Display Control Keys

When CLI paging is enabled, the screen display will pause when the show command output reaches the end of the page, as shown below.

```
DGS-1510-28XMP/ME:admin#show stp ports
Command: show stp ports

MSTP Port Information
-----
Port Index      : 1      , Hello Time: 2 /2 , Port STP : Enabled ,
External PathCost : Auto/200000 , Edge Port : True /No , P2P : Auto /Yes
Port RestrictedRole : False, Port RestrictedTCN : False
Port Forward BPDU : Disabled
MSTI   Designated Bridge   Internal PathCost   Prio   Status       Role
-----
0      N/A                  200000             128   Forwarding   NonStp

CTRL+C  ESC  q  Quit  SPACE  n  Next Page  p  Previous Page  r  Refresh
```

The following control keys will then be available:

Keys	Description
CTRL+C	Stops the display of remaining pages when multiple pages are to be displayed.
ESC	Stops the display of remaining pages when multiple pages are to be displayed.
q	Stops the display of remaining pages when multiple pages are to be displayed.
SPACE	Displays the next page.
n	Displays the next page.
p	Displays the previous page.
r	Refreshes the pages currently displayed.
a	Displays the remaining pages without pausing between pages.
Enter	Displays the next line or table entry.

## Chapter 2 Basic Command List

---

**show session**

**show serial\_port**

**config serial\_port** {baud\_rate [9600 | 19200 | 38400 | 115200] | auto\_logout [never | 2\_minutes | 5\_minutes | 10\_minutes | 15\_minutes]}

**enable clipaging**

**disable clipaging**

**login**

**logout**

**?**

**clear**

**show command\_history**

**config command\_history** <value 1-40>

**config greeting\_message** {default}

**show greeting\_message**

**config command\_prompt** [<string 16> | username | default]

**config terminal width** [default | <value 80-200>]

**show terminal width**

**config ports** [<portlist> | all] {medium\_type [fiber | copper]} {speed [auto | 10\_half | 10\_full | 100\_half | 100\_full | 1000\_full {[master | slave]} | 10g\_full] | flow\_control [enable | disable] | learning [enable | disable] | state [enable | disable] | mdix [auto | normal | cross] | [description <desc 1-32> | clear\_description]}

**show ports** {<portlist>} {[description | err\_disabled | details | media\_type]}

---

### 2-1 show session

#### Description

This command is used to display a list of currently users which are login to the Switch.

#### Format

**show session**

#### Parameters

None.

#### Restrictions

Only Administrators and Operators can issue this command.

#### Example

To display the session entries:

ID	Live Time	From	Level	Name
0	00:01:46.360	10.90.90.10	puser	puser
8	00:05:49.340	Serial Port	admin	admin

Total Entries: 2

**CTRL+C** **ESC** **q** Quit **SPACE** **n** Next Page **p** Previous Page **r** Refresh

## 2-2 show serial\_port

### Description

This command is used to display the current serial port settings.

### Format

**show serial\_port**

### Parameters

None.

### Restrictions

None.

### Example

To display the serial port setting:

```
DGS-1510-28XMP/ME:admin# show serial_port
Command: show serial_port

Baud Rate      : 115200
Data Bits      : 8
Parity Bits    : None
Stop Bits      : 1
Auto-Logout    : 10 mins

DGS-1510-28XMP/ME:admin#
```

## 2-3 config serial\_port

### Description

This command is used to configure the serial bit rate that will be used to communicate with the management host and the auto logout time for idle connections.

## Format

```
config serial_port {baud_rate [9600 | 19200 | 38400 | 115200] | auto_logout [never | 2_minutes | 5_minutes | 10_minutes | 15_minutes]}
```

## Parameters

**baud\_rate** - (Optional) Specifies the serial bit rate that will be used to communicate with the management host. The default baud rate is 115200.

**9600** - Specifies the serial bit rate to be 9600.

**19200** - Specifies the serial bit rate to be 19200.

**38400** - Specifies the serial bit rate to be 38400.

**115200** - Specifies the serial bit rate to be 115200.

**auto\_logout** - (Optional) Specifies the auto logout time out setting.

**never** - Never timeout.

**2\_minutes** - Specifies that the device will auto logout when idle over 2 minutes.

**5\_minutes** - Specifies that the device will auto logout when idle over 5 minutes.

**10\_minutes** - Specifies that the device will auto logout when idle over 10 minutes.

**15\_minutes** - Specifies that the device will auto logout when idle over 15 minutes.

## Restrictions

Only Administrators and Operators can issue this command.

## Example

To configure baud rate:

```
DGS-1510-28XMP/ME:admin# config serial_port baud_rate 9600
Command: config serial_port baud_rate 9600

Success.

DGS-1510-28XMP/ME:admin#
```

## 2-4 enable clipaging

### Description

This command is used to enable the pausing of the screen display when the show command output reaches the end of the page. The default setting is enabled.

### Format

```
enable clipaging
```

### Parameters

None.

### Restrictions

Only Administrators and Operators can issue this command.

## Example

To enable pausing of the screen display when show command output reaches the end of the page:

```
DGS-1510-28XMP/ME:admin# enable clipaging
Command: enable clipaging

Success.

DGS-1510-28XMP/ME:admin#
```

## 2-5 disable clipaging

### Description

This command is used to disable the pausing of the screen display when the show command output reaches the end of the page. The default setting is enabled.

### Format

**disable clipaging**

### Parameters

None.

### Restrictions

Only Administrators and Operators can issue this command.

## Example

To disable pausing of the screen display when show command output reaches the end of the page:

```
DGS-1510-28XMP/ME:admin# disable clipaging
Command: disable clipaging

Success.

DGS-1510-28XMP/ME:admin#
```

## 2-6 login

### Description

This command is used to allow user login to the Switch.

### Format

**login**

### Parameters

None.

### Restrictions

None.

### Example

To login the Switch with a user name dlink:

```
DGS-1510-28XMP/ME:admin# login
Command: login

UserName:dlink
PassWord:****

DGS-1510-28XMP/ME:admin#
```

## 2-7 logout

### Description

This command is used to logout the facility.

### Format

**logout**

### Parameters

None.

### Restrictions

None.

### Example

To logout current user:



```
DGS-1510-28XMP/ME:admin# logout
Command: logout

*****
* Logout *
*****

                DGS-1510-28XMP/ME Gigabit Ethernet Switch
                Command Line Interface

                Firmware: Build 1.00.018
                Copyright(C) 2015 D-Link Corporation. All rights reserved.

UserName:
```

2-8 ?

### Description

This command is used to display the usage description for all commands or the specific one.

### Format

?

### Parameters

None.

### Restrictions

None.

### Example

To get “ping” command usage, descriptions:

```
DGS-1510-28XMP/ME:admin#? ping
Command: ? ping

Command: ping
Usage: <ipaddr> { times <value 1-255> | timeout <sec 1-99>}
Description: Used to test the connectivity between network devices.

DGS-1510-28XMP/ME:admin#
```

2-9 clear

### Description

The command is used to clear screen.

## Format

**clear**

## Parameters

None.

## Restrictions

None.

## Example

To clear screen:

```
DGS-1510-28XMP/ME:admin# clear
Command: clear

DGS-1510-28XMP/ME:admin#
```

## 2-10 show command\_history

### Description

The command is used to display command history.

### Format

**show command\_history**

### Parameters

None.

### Restrictions

None.

### Example

To display command history:

```
DGS-1510-28XMP/ME:admin# show command_history
Command: show command_history

? ping
login
show serial_port
show session
? config bpdu_protection ports
? reset
? create account
? create ipif
show
the
?

DGS-1510-28XMP/ME:admin#
```

## 2-11 config command\_history

### Description

This command is used to configure the number of commands that the Switch can recall. The Switch “remembers” up to the last 40 commands you entered.

### Format

**config command\_history <value 1-40>**

### Parameters

---

**<value 1-40>** - Enter the number of commands that the Switch can recall. This value must be between 1 and 40.

---

### Restrictions

Only Administrators and Operators can issue this command.

### Example

To configure the number of command history:

```
DGS-1510-28XMP/ME:admin# config command_history 25
Command: config command_history 25

Success.

DGS-1510-28XMP/ME:admin#
```

## 2-12 config greeting\_message

### Description

This command is used to configure the greeting message (or banner).

**Format****config greeting\_message {default}****Parameters****default** - (Optional) Specifies to return the greeting message (banner) to its original factory default entry.**Restrictions**

Only Administrators and Operators can issue this command.

**Example**

To edit the banner:

```

DGS-1510-28XMP/ME:admin#config greeting_message
Command: config greeting_message

Greeting Messages Editor
=====

                DGS-1510-28XMP/ME Gigabit Ethernet Switch
                  Command Line Interface

                Firmware: Build 1.00.018
                Copyright(C) 2015 D-Link Corporation. All rights reserved.
=====

<Function Key>          <Control Key>
Ctrl+C      Quit without save   left/right/
Ctrl+W      Save and quit       up/down    Move cursor
                                   Ctrl+D      Delete line
                                   Ctrl+X      Erase all setting
                                   Ctrl+L      Reload original setting
-----

```

**2-13 show greeting\_message****Description**

The command is used to display greeting message.

**Format****show greeting\_message****Parameters**

None.

## Restrictions

Only Administrators and Operators can issue this command.

## Example

To display greeting message:

```

DGS-1510-28XMP/ME:admin#show greeting_message
Command: show greeting_message

=====

                DGS-1510-28XMP/ME Gigabit Ethernet Switch
                  Command Line Interface

                Firmware: Build 1.00.018
                Copyright(C) 2015 D-Link Corporation. All rights reserved.
=====

DGS-1510-28XMP/ME:admin#

```

## 2-14 config command\_prompt

### Description

This command is used to modify the command prompt.

The current command prompt consists of four parts: "product name" + ":" + "user level" + "#" (e.g. "DGS-1510-28XMP/ME:admin# "). This command is used to modify the first part (1. "product name") with a string consisting of a maximum of 16 characters, or to be replaced with the users' login user name.

When issuing the **reset** command, the current command prompt will remain the same. However, when issuing the **reset system** command, the command prompt will return to its original factory default value.

### Format

**config command\_prompt [<string 16> | username | default]**

### Parameters

---

**<string 16>** - Enter the new command prompt string of no more than 16 characters.

---

**username** - Specifies to set the login username as the command prompt.

---

**default** - Specifies to return the command prompt to its original factory default value.

---

### Restrictions

Only Administrators and Operators can issue this command.

### Example

To edit the command prompt:

```
DGS-1510-28XMP/ME:admin# config command_prompt Prompt#
Command: config command_prompt Prompt#

Success.

Prompt#:admin#
```

## 2-15 config terminal width

### Description

The command is used to set current terminal width.

The usage is described as below:

1. Users login and configure the terminal width to 120, this configuration take effect on this login section. If users implement “save” command, the configuration is saved. After users log out and log in again, the terminal width is 120.
2. If user did not save the configuration, another user login, the terminal width is default value.
3. If at the same time, two CLI sessions are running, once section configure to 120 width and save it, the other section will not be effected, unless it log out and then log in.

### Format

**config terminal width [default | <value 80-200>]**

### Parameters

---

**default** - Specifies the default setting of terminal width. The default value is 80.

---

**<value 80-200>** - Enter the terminal width to be configured. The width is between 80 and 200 characters.

---

### Restrictions

None.

### Example

To configure the current terminal width:

```
DGS-1510-28XMP/ME:admin# config terminal width 120
Command: config terminal width 120

Success.

DGS-1510-28XMP/ME:admin#
```

## 2-16 show terminal width

### Description

The command is used to display the configuration of current terminal width.

**Format****show terminal width****Parameters**

None.

**Restrictions**

None.

**Example**

To display the configuration of current terminal width:

```
DGS-1510-28XMP/ME:admin# show terminal width
Command: show terminal width

Global terminal width      : 80
Current terminal width     : 80

DGS-1510-28XMP/ME:admin#
```

**2-17 config ports****Description**

This command is used to configure the Switch's port settings.

**Format**

**config ports** [<portlist> | all] {medium\_type [fiber | copper]} {speed [auto | 10\_half | 10\_full | 100\_half | 100\_full | 1000\_full] {[master | slave]} | 10g\_full} | flow\_control [enable | disable] | learning [enable | disable] | state [enable | disable] | mdix [auto | normal | cross] | [description <desc 1-32> | clear\_description]}

**Parameters**


---

**<portlist>** - Enter a list of ports used here.

---

**all** - Specifies that all the ports will be used for this configuration.

---

**medium\_type** - (Optional) Specifies the medium type while the configure ports are combo ports.

**fiber** - Specifies that the medium type will be set to fiber.

**copper** - Specifies that the medium type will be set to copper.

---

**speed** - (Optional) Specifies the port speed of the specified ports.

**auto** - Specifies the port speed to auto negotiation.

**10\_half** - Specifies the port speed to 10\_half.

**10\_full** - Specifies the port speed to 10\_full.

**100\_half** - Specifies the port speed to 100\_half.

**100\_full** - Specifies the port speed to 100\_full.

**1000\_full** - Specifies the port speed to 1000\_full. While set port speed to 1000\_full, user should specify master or slave mode for 1000 base TX interface, and leave the 1000\_full without any master or slave setting for other interface.

**master** - Specifies that the port(s) will be set to master.

---

---

**slave** - Specifies that the port(s) will be set to slave.

**10g\_full** - Specifies the port speed to 10g\_full.

---

**flow\_control** - (Optional) Specifies to turn on or turn off flow control on one or more ports.

**enable** - Specifies that the flow control option will be enabled.

**disable** - Specifies that the flow control option will be disabled.

---

**learning** - (Optional) Specifies to turn on or turn off MAC address learning on one or more ports.

**enable** - Specifies that the learning option will be enabled.

**disable** - Specifies that the learning option will be disabled.

---

**state** - (Optional) Specifies to enable or disable the specified port. If the specified ports are in error-disabled status, configure their state to enable will recover these ports from disabled to enable state.

**enable** - Specifies that the port state will be enabled.

**disable** - Specifies that the port state will be disabled.

---

**mdix** - (Optional) Specifies the MDIX mode.

**auto** - Specifies the MDIX mode for the port to be auto.

**normal** - Specifies the MDIX mode for the port to be normal. If set to normal state, the port is in the MDIX mode and can be connected to a PC's NIC using a straight-through cable or a port (in the MDIX mode) on another switch through a cross-over cable.

**cross** - Specifies the MDIX mode for the port to be cross. If set to cross state, the port is in the MDI mode and can be connected to a port (in the MDIX mode) on another switch through a straight cable.

---

**description** - (Optional) Specifies the description of the port interface.

**<desc 1-32>** - Enter the port interface description here. This value can be up to 32 characters long.

---

**clear\_description** - (Optional) Specifies that the description field will be cleared.

---

## Restrictions

Only Administrators and Operators can issue this command.

## Example

To configure the ports:

```
DGS-1510-28XMP/ME:admin# config ports all medium_type copper speed auto
Command: config ports all medium_type copper speed auto

Success.

DGS-1510-28XMP/ME:admin#
```

## 2-18 show ports

### Description

This command is used to display the current configurations of a range of ports.

### Format

**show ports** {<portlist>} {[description | err\_disabled | details | media\_type]}



## Parameters

**ports** - Specifies a range of ports to be displayed.

**<portlist>** - (Optional) Enter the list of ports to be configured here.

**description** - (Optional) Specifies to indicate if port description will be included in the display .

**err\_disabled** - (Optional) Specifies to indicate if ports are disabled by some reasons will be displayed.

**details** - (Optional) Specifies to display the port details.

**media\_type** - (Optional) Specifies to display port transceiver type.

## Restrictions

None.

## Example

To display the port details:

```
DGS-1510-28XMP/ME:admin#show ports details
Command: show ports details

Port : 1
-----
Port Status           : Link Up
Description           :
HardWare Type         : Gigabits Ethernet
MAC Address           : 00-01-02-03-04-01
Bandwidth              : 100000Kbit
Auto-Negotiation      : Enabled
Duplex Mode           : Full Duplex
Flow Control          : Disabled
MDI                   : Normal
Address Learning      : Enabled
Loopback Mode         : Disabled
Last Clear of Counter : 6 hours 57 mins ago
BPDU Hardware Filtering Mode: Disabled
Queuing Strategy      : FIFO
TX Load               :    0/100,          0 bits/sec,          0 packets/sec
RX Load               :    0/100,          0 bits/sec,          0 packets/sec
```

**CTRL+C** **ESC** **q** Quit **SPACE** **n** Next Page **p** Previous Page **r** Refresh

## Chapter 3 802.1Q VLAN Command List

---

<b>create vlan</b> <vlan_name 32> tag <vlanid 2-4094> {type 1q_vlan advertisement}
<b>create vlan vlanid</b> <vidlist> {advertisement}
<b>delete vlan</b> <vlan_name 32>
<b>delete vlan vlanid</b> <vidlist>
<b>config vlan</b> <vlan_name 32> {[add [tagged   untagged   forbidden]   delete] <portlist>   advertisement [enable   disable]}(1)
<b>config vlan vlanid</b> <vidlist> {[add [tagged   untagged   forbidden]   delete] <portlist>   advertisement [enable   disable]   name <vlan_name 32>}(1)
<b>config port_vlan</b> [<portlist>   all] {gvrp_state [enable   disable]   ingress_checking [enable   disable]   acceptable_frame [tagged_only   admit_all]   pvid <vlanid 1-4094>}(1)
<b>show vlan</b> {<vlan_name 32>}
<b>show vlan ports</b> {<portlist>}
<b>show vlan vlanid</b> <vidlist>
<b>show port_vlan</b> {<portlist>}
<b>enable pvid auto_assign</b>
<b>disable pvid auto_assign</b>
<b>show pvid auto_assign</b>
<b>config gvrp</b> [timer {join < value 100-100000>   leave < value 100-100000>   leaveall <value 100-100000>}   nni_bpdu_addr [dot1d   dot1ad]]
<b>show gvrp</b>
<b>enable gvrp</b>
<b>disable gvrp</b>

---

### 3-1 create vlan

#### Description

This command is used to create a VLAN on the Switch. The VLAN ID must be always specified for creating a VLAN.

#### Format

**create vlan** <vlan\_name 32> tag <vlanid 2-4094> {type 1q\_vlan advertisement}

#### Parameters

**vlan** - Specifies the name of the VLAN to be created.

**<vlan\_name 32>** - Enter the VLAN name here. The VLAN name can be up to 32 characters long.

**tag** - Specifies the VLAN ID of the VLAN to be created.

**<vlanid 2-4094>** - Enter the VLAN ID here. The VLAN ID value must be between 2 and 4094.

**type 1q\_vlan advertisement** - (Optional) Specifies that the VLAN type used is based on the 802.1Q standard and being able to be advertised out.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To create a VLAN with name "v2" and VLAN ID 2:

```
DGS-1510-28XMP/ME:admin# create vlan v2 tag 2 type lq_vlan advertisement
Command: create vlan v2 tag 2 type lq_vlan advertisement

Success.

DGS-1510-28XMP/ME:admin#
```

## 3-2 create vlan vlanid

### Description

This command is used to create more than one VLANs at a time. A unique VLAN name (e.g. VLAN10) will be automatically assigned by the system. The automatic assignment of VLAN name is based on the following rule: "VLAN"+ID. For example, for VLAN ID 100, the VLAN name will be VLAN100. If this VLAN name is conflict with the name of an existing VLAN, then it will be renamed based on the following rule: "VLAN"+ID+"ALT"+ collision count. For example, if this conflict is the second collision, then the name will be VLAN100ALT2.

### Format

**create vlan vlanid <vidlist> {advertisement}**

### Parameters

---

**vlanid** - Specifies the VLAN ID list to be created.

**<vidlist>** - Enter the VLAN ID list here.

---

**advertisement** - (Optional) Specifies the VLAN as being able to be advertised out.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To create some VLANs using VLAN ID:

```
DGS-1510-28XMP/ME:admin# create vlan vlanid 10-30
Command: create vlan vlanid 10-30

Success.

DGS-1510-28XMP/ME:admin#
```

### 3-3 delete vlan

#### Description

This command is used to delete a previously configured VLAN by the name on the Switch.

#### Format

**delete vlan <vlan\_name 32>**

#### Parameters

---

**vlan** - Specifies the VLAN name of the VLAN to be deleted.

**<vlan\_name 32>** - Enter the VLAN name here. This name can be up to 32 characters long.

---

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

#### Example

To remove a vlan v1:

```
DGS-1510-28XMP/ME:admin# delete vlan v1
Command: delete vlan v1

Success.

DGS-1510-28XMP/ME:admin#
```

### 3-4 delete vlan vlanid

#### Description

This command is used to delete one or a number of previously configured VLAN by VID list.

#### Format

**delete vlan vlanid <vidlist>**

#### Parameters

---

**vlanid** - Specifies the VLAN ID list to be deleted.

**<vidlist>** - Enter the VLAN ID list here.

---

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To remove VLANs from 10-30:

```
DGS-1510-28XMP/ME:admin# delete vlan vlanid 10-30
Command: delete vlan vlanid 10-30

Success.

DGS-1510-28XMP/ME:admin#
```

## 3-5 config vlan

### Description

This command is used to configure a VLAN based on the name.

### Format

**config vlan <vlan\_name 32> {[add [tagged | untagged | forbidden] | delete] <portlist> | advertisement [enable | disable]}(1)**

### Parameters

**<vlan\_name 32>** - Enter the VLAN name you want to add ports to. This name can be up to 32 characters long.

**add** - Specifies to add tagged, untagged or forbidden ports to the VLAN.

**tagged** - Specifies the additional ports as tagged.

**untagged** - Specifies the additional ports as untagged.

**forbidden** - Specifies the additional ports as forbidden.

**delete** - Specifies to delete ports from the VLAN.

**<portlist>** - Enter the list of ports used for the configuration here.

**advertisement** - Specifies the GVRP state of this VLAN.

**enable** - Specifies to enable advertisement for this VLAN.

**disable** - Specifies to disable advertisement for this VLAN.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To add 4 through 8 as tagged ports to the VLAN v2:

```
DGS-1510-28XMP/ME:admin# config vlan v2 add tagged 4-8
Command: config vlan v2 add tagged 4-8

Success.

DGS-1510-28XMP/ME:admin#
```

## 3-6 config vlan vlanid

**Description**

This command allows you to configure multiple VLANs at one time. But conflicts will be generated if you configure the name of multiple VLANs at one time.

**Format**

**config vlan vlanid <vidlist> {[add [tagged | untagged | forbidden] | delete] <portlist> | advertisement [enable | disable] | name <vlan\_name 32>}(1)**

**Parameters**


---

<b>&lt;vidlist&gt;</b> - Enter a list of VLAN IDs to configure.
<b>add</b> - Specifies to add tagged, untagged or forbidden ports to the VLAN.
<b>tagged</b> - Specifies the additional ports as tagged.
<b>untagged</b> - Specifies the additional ports as untagged.
<b>forbidden</b> - Specifies the additional ports as forbidden.
<b>delete</b> - Specifies to delete ports from the VLAN.
<b>&lt;portlist&gt;</b> - Enter the list of ports used for the configuration here.
<b>advertisement</b> - Specifies the GVRP state of this VLAN.
<b>enable</b> - Specifies to enable advertisement for this VLAN.
<b>disable</b> - Specifies to disable advertisement for this VLAN.
<b>name</b> - Specifies the new name of the VLAN.
<b>&lt;vlan_name 32&gt;</b> - Enter the VLAN name here. This name can be up to 32 characters long.

---

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To add 4 through 8 as tagged ports to the VLAN ID from 10-20:

```
DGS-1510-28XMP/ME:admin# config vlan vlanid 10-20 add tagged 4-8
Command: config vlan vlanid 10-20 add tagged 4-8

Success.

DGS-1510-28XMP/ME:admin#
```

## 3-7 config port\_vlan

**Description**

This command is used to set the ingress checking status, the sending and receiving GVRP information.

**Format**

**config port\_vlan [<portlist> | all] {gvrp\_state [enable | disable] | ingress\_checking [enable | disable] | acceptable\_frame [tagged\_only | admit\_all] | pvid <vlanid 1-4094>}(1)**

## Parameters

**<portlist>** - Enter a range of ports for which you want ingress checking. The port list is specified by listing the beginning port number on the Switch, separated by a colon. Then highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash.

**all** - Specifies all ports for ingress checking.

**gvrp\_state** - Specifies to enable or disable GVRP for the ports specified in the port list.

**enable** - Specifies that GVRP for the specified ports will be enabled.

**disable** - Specifies that GVRP for the specified ports will be disabled.

**ingress\_checking** - Specifies to enable or disable ingress checking for the specified port list.

**enable** - Specifies that ingress checking will be enabled for the specified port list.

**disable** - Specifies that ingress checking will be disabled for the specified port list.

**acceptable\_frame** - Specifies the type of frame will be accepted by the port. There are two types:

**tagged\_only** - Specifies that only tagged packets can be accepted by this port.

**admit\_all** - Specifies that all packets can be accepted.

**pvid** - Specifies the PVID of the ports.

**<vlanid 1-4094>** - Enter the VLAN ID here. The VLAN ID value must be between 1 and 4094.

## Restrictions

Only Administrators and Operators can issue this command.

## Example

To sets the ingress checking status, the sending and receiving GVRP information:

```
DGS-1510-28XMP/ME:admin# config port_vlan 1-5 gvrp_state enable ingress_checking enable
acceptable_frame tagged_only pvid 2
Command: config port_vlan 1-5 gvrp_state enable ingress_checking enable acceptable_frame
tagged_only pvid 2

Success.

DGS-1510-28XMP/ME:admin#
```

## 3-8 show vlan

### Description

This command is used to display the vlan information including of parameters setting and operational value.

### Format

**show vlan {<vlan\_name 32>}**

### Parameters

**<vlan\_name 32>** - (Optional) Enter the VLAN name to be displayed. The VLAN name can be up to 32 characters long.

## Restrictions

None.

## Example

To display VLAN settings:

```

DGS-1510-28XMP/ME:admin# show vlan
Command: show vlan

VLAN Trunk State      : Enabled
VLAN Trunk Member Ports : 1-5

VID      : 1          VLAN Name      : default
VLAN Type : Static    Advertisement : Enabled
Member Ports : 1-28
Static Ports : 1-28
Current Tagged Ports :
Current Untagged Ports: 1-28
Static Tagged Ports  :
Static Untagged Ports : 1-28
Forbidden Ports      :

VID      : 2          VLAN Name      : v2
VLAN Type : Static    Advertisement : Enabled
Member Ports : 4-8
Static Ports : 4-8
Current Tagged Ports : 4-8
Current Untagged Ports:
Static Tagged Ports  : 4-8
CTRL+C  ESC  q Quit  SPACE  n Next Page  ENTER Next Entry  a All

```

## 3-9 show vlan ports

### Description

This command is used to display the vlan information per ports.

### Format

**show vlan ports {<portlist>}**

### Parameters

**<portlist>** - (Optional) Enter the list of ports for which the VLAN information will be displayed.

## Restrictions

None.



**Example**

To display the VLAN configuration for port 6:

```
DGS-1510-28XMP/ME:admin# show vlan ports 6
Command: show vlan ports 6

  Port    VID    Untagged  Tagged  Dynamic  Forbidden
  -----
  6       1      X         -       -        -
  6       2      -         X       -        -

DGS-1510-28XMP/ME:admin#
```

**3-10 show vlan vlanid****Description**

This command is used to display the VLAN information using the VLAN ID.

**Format**

**show vlan vlanid <vidlist>**

**Parameters**

---

**<vidlist>** - Enter the VLAN ID to be displayed.

---

**Restrictions**

None.

**Example**

To display the VLAN configuration for VLAN ID 1:

```
DGS-1510-28XMP/ME:admin# show vlan vlanid 1
Command: show vlan vlanid 1

VID                : 1                VLAN Name         : default
VLAN Type          : Static            Advertisement    : Enabled
Member Ports       : 1-28
Static Ports       : 1-28
Current Tagged Ports :
Current Untagged Ports: 1-28
Static Tagged Ports :
Static Untagged Ports : 1-28
Forbidden Ports    :

Total Entries : 1

DGS-1510-28XMP/ME:admin#
```

### 3-11 show port\_vlan

#### Description

This command is used to display the ports' VLAN attributes on the Switch. If no parameter specified, system will display all ports GVRP information.

#### Format

**show port\_vlan {<portlist>}**

#### Parameters

---

**<portlist>** - (Optional) Enter a range of ports to be displayed.

---

#### Restrictions

None.

#### Example

To display 802.1Q port setting:

```
DGS-1510-28XMP/ME:admin# show port_vlan
```

```
Command: show port_vlan
```

Port	PVID	GVRP	Ingress Checking	Acceptable Frame Type
1	2	Enabled	Enabled	Only VLAN-tagged Frames
2	2	Enabled	Enabled	Only VLAN-tagged Frames
3	2	Enabled	Enabled	Only VLAN-tagged Frames
4	2	Enabled	Enabled	Only VLAN-tagged Frames
5	2	Enabled	Enabled	Only VLAN-tagged Frames
6	1	Disabled	Enabled	All Frames
7	1	Disabled	Enabled	All Frames
8	1	Disabled	Enabled	All Frames
9	1	Disabled	Enabled	All Frames
10	1	Disabled	Enabled	All Frames
11	1	Disabled	Enabled	All Frames
12	1	Disabled	Enabled	All Frames
13	1	Disabled	Enabled	All Frames
14	1	Disabled	Enabled	All Frames
15	1	Disabled	Enabled	All Frames
16	1	Disabled	Enabled	All Frames
17	1	Disabled	Enabled	All Frames
18	1	Disabled	Enabled	All Frames
19	1	Disabled	Enabled	All Frames
20	1	Disabled	Enabled	All Frames

```
CTRL+C ESC q Quit SPACE n Next Page ENTER Next Entry a All
```

### 3-12 enable pvid auto assign

#### Description

This command is used to enable the auto-assignment of PVID.

If "Auto-assign PVID" is enabled, PVID will be possibly changed by PVID or VLAN configuration. When user configures a port to VLAN X's untagged membership, this port's PVID will be updated with VLAN X. In the form of VLAN list command, PVID is updated with last item of VLAN list. When user removes a port from the untagged membership of the PVID's VLAN, the port's PVID will be assigned with "default VLAN".

The default setting is enabled.

#### Format

```
enable pvid auto_assign
```

#### Parameters

None.

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

#### Example

To enable the auto-assign PVID:

```
DGS-1510-28XMP/ME:admin# enable pvid auto_assign
Command: enable pvid auto_assign

Success.

DGS-1510-28XMP/ME:admin#
```

### 3-13 disable pvid auto assign

#### Description

This command is used to disable auto assignment of PVID.

#### Format

**disable pvid auto\_assign**

#### Parameters

None.

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

#### Example

To disable the auto-assign PVID:

```
DGS-1510-28XMP/ME:admin# disable pvid auto_assign
Command: disable pvid auto_assign

Success.

DGS-1510-28XMP/ME:admin#
```

### 3-14 show pvid auto\_assign

#### Description

This command is used to display the PVID auto-assignment state.

#### Format

**show pvid auto\_assign**

#### Parameters

None.

#### Restrictions

None.

## Example

To display PVID auto-assignment state:

```
DGS-1510-28XMP/ME:admin# show pvid auto_assign
Command: show pvid auto_assign

PVID Auto-assignment: Enabled

DGS-1510-28XMP/ME:admin#
```

## 3-15 config gvrp

### Description

This command is used to configure the GVRP timer's value. The default value for Join time is 200 milliseconds; for Leave time is 600 milliseconds; for Leave All time is 10000 milliseconds.

### Format

```
config gvrp [timer {join <value 100-100000> | leave <value 100-100000> | leaveall <value 100-100000>} |
nni_bpdu_addr [dot1d | dot1ad]]
```

### Parameters

---

<b>timer</b>	- Specifies that the GVRP timer parameter will be configured.
<b>join</b>	- (Optional) Specifies the Join time will be set.
<b>&lt;value 100-100000&gt;</b>	- Enter the time used here. This value must be between 100 and 100000.
<b>leave</b>	- (Optional) Specifies the Leave time will be set.
<b>&lt;value 100-100000&gt;</b>	- Enter the time used here. This value must be between 100 and 100000.
<b>leaveall</b>	- (Optional) Specifies the Leave All time will be set.
<b>&lt;value 100-100000&gt;</b>	- Enter the time used here. This value must be between 100 and 100000.
<b>nni_bpdu_addr</b>	- Specifies to determine the BPDU protocol address for GVRP in service provide site. It can use 802.1d GVRP address, 802.1ad service provider GVRP address or a user defined multicast address. The range of the user defined address is 0180C2000000 - 0180C2FFFFFF.
<b>dot1d</b>	- Specifies that the NNI BPDU protocol address value will be set to Dot1d.
<b>dot1ad</b>	- Specifies that the NNI BPDU protocol address value will be set to Dot1ad.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To set the Join time to 200 milliseconds:

```
DGS-1510-28XMP/ME:admin# config gvrp timer join 200
Command: config gvrp timer join 200

Success.

DGS-1510-28XMP/ME:admin#
```

### 3-16 show gvrp

#### Description

This command is used to display the GVRP global setting.

#### Format

**show gvrp**

#### Parameters

None.

#### Restrictions

None.

#### Example

To display the global setting of GVRP:

```
DGS-1510-28XMP/ME:admin# show gvrp
Command: show gvrp

Global GVRP      : Disabled
Join Time       : 200 Milliseconds
Leave Time       : 600 Milliseconds
LeaveAll Time    : 10000 Milliseconds
NNI BPDU Address: dot1d

DGS-1510-28XMP/ME:admin#
```

### 3-17 enable gvrp

#### Description

This command is used to enable the Generic VLAN Registration Protocol (GVRP).

#### Format

**enable gvrp**

#### Parameters

None.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To enable the generic VLAN Registration Protocol (GVRP):

```
DGS-1510-28XMP/ME:admin# enable gvrp
Command: enable gvrp

Success.

DGS-1510-28XMP/ME:admin#
```

## 3-18 disable gvrp

### Description

This command is used to disable the Generic VLAN Registration Protocol (GVRP).

### Format

**disable gvrp**

### Parameters

None.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To disable the Generic VLAN Registration Protocol (GVRP):

```
DGS-1510-28XMP/ME:admin# disable gvrp
Command: disable gvrp

Success.

DGS-1510-28XMP/ME:admin#
```

## Chapter 4 802.1X Command List

---

<b>enable 802.1x</b>
<b>disable 802.1x</b>
<b>create 802.1x user</b> <username 15>
<b>delete 802.1x user</b> <username 15>
<b>show 802.1x user</b>
<b>config 802.1x auth_protocol</b> [local   radius_eap]
<b>config 802.1x fwd_pdu system</b> [enable   disable]
<b>config 802.1x fwd_pdu ports</b> [<portlist>   all] [enable   disable]
<b>config 802.1x authorization attributes radius</b> [enable   disable]
<b>show 802.1x</b> {[auth_state   auth_configuration] ports {<portlist>}}
<b>config 802.1x capability ports</b> [<portlist>   all] [authenticator   none]
<b>config 802.1x max_users</b> [<value 1–448>   no_limit]
<b>config 802.1x auth_parameter ports</b> [<portlist>   all] [default   {direction [both   in]   port_control [force_unauth   auto   force_auth]   quiet_period <sec 0-65535>   tx_period <sec 1-65535>   supp_timeout <sec 1-65535>   server_timeout <sec 1-65535>   max_req <value 1-10>   reauth_period <sec 1-65535>   max_users [<value 1-448>   no_limit]   enable_reauth [enable   disable]}(1)]
<b>config 802.1x auth_mode</b> [port_based   mac_based]
<b>config 802.1x init</b> [port_based ports [<portlist>   all]   mac_based ports [<portlist>   all] {mac_address <macaddr>}]
<b>config 802.1x reauth</b> [port_based ports [<portlist>   all]   mac_based ports [<portlist>   all] {mac_address <macaddr>}]
<b>create 802.1x guest_vlan</b> {<vlan_name 32>}
<b>delete 802.1x guest_vlan</b> {<vlan_name 32>}
<b>config 802.1x guest_vlan ports</b> [<portlist>   all] state [enable   disable]
<b>show 802.1x guest_vlan</b>

---

4-1 enable 802.1x

### Description

This command is used to enable the 802.1X function.

### Format

**enable 802.1x**

### Parameters

None.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.



### Example

To enable the 802.1X function:

```
DGS-1510-28XMP/ME:admin# enable 802.1x
Command: enable 802.1x

Success.

DGS-1510-28XMP/ME:admin#
```

### 4-2 disable 802.1x

#### Description

This command is used to disable the 802.1X function.

#### Format

**disable 802.1x**

#### Parameters

None.

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To disable the 802.1X function:

```
DGS-1510-28XMP/ME:admin# disable 802.1x
Command: disable 802.1x

Success.

DGS-1510-28XMP/ME:admin#
```

### 4-3 create 802.1x user

#### Description

This command is used to create an 802.1X user.

#### Format

**create 802.1x user <username 15>**

## Parameters

---

**<username 15>** - Enter the username to be added. This value can be up to 15 characters long.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To create a 802.1x user "test":

```
DGS-1510-28XMP/ME:admin# create 802.1x user test
Command: create 802.1x user test

Enter a case-sensitive new password:****
Enter the new password again for confirmation:****
Success.

DGS-1510-28XMP/ME:admin#
```

## 4-4 delete 802.1x user

## Description

This command is used to delete an 802.1X user.

## Format

**delete 802.1x user <username 15>**

## Parameters

---

**<username 15>** - Enter the username to be deleted. This value can be up to 15 characters long.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To delete user "test":

```
DGS-1510-28XMP/ME:admin# delete 802.1x user test
Command: delete 802.1x user test

Success.

DGS-1510-28XMP/ME:admin#
```

## 4-5 show 802.1x user

**Description**

This command is used to display the 802.1X user.

**Format**

**show 802.1x user**

**Parameters**

None.

**Restrictions**

None.

**Example**

To display the 802.1X user information:

```
DGS-1510-28XMP/ME:admin# show 802.1x user
Command: show 802.1x user

Current Accounts:
Username          Password
-----          -
test              test

Total Entries:1

DGS-1510-28XMP/ME:admin#
```

## 4-6 config 802.1x auth\_protocol

**Description**

This command is used to configure the 802.1X authentication protocol.

**Format**

**config 802.1x auth\_protocol [local | radius\_eap]**

**Parameters**

---

**local** - Specifies the authentication protocol as local.

---

**radius\_eap** - Specifies the authentication protocol as RADIUS EAP.

---

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure the 802.1X authentication protocol to RADIUS EAP:

```
DGS-1510-28XMP/ME:admin# config 802.1x auth_protocol radius_eap
Command: config 802.1x auth_protocol radius_eap

Success.

DGS-1510-28XMP/ME:admin#
```

## 4-7 config 802.1x fwd\_pdu system

### Description

This command is used to globally control the forwarding of EAPOL PDU. When 802.1X functionality is disabled globally or for a port, and if 802.1X fwd\_pdu is enabled both globally and for the port, a received EAPOL packet on the port will be flooded in the same VLAN to those ports for which 802.1X fwd\_pdu is enabled and 802.1X is disabled (globally or just for the port). The default state is disabled.

### Format

**config 802.1x fwd\_pdu system [enable | disable]**

### Parameters

---

**enable** - Specifies to enable the forwarding of EAPOL PDU.

---

**disable** - Specifies to disable the forwarding of EAPOL PDU.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure forwarding of EAPOL PDU system state enable:

```
DGS-1510-28XMP/ME:admin# config 802.1x fwd_pdu system enable
Command: config 802.1x fwd_pdu system enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 4-8 config 802.1x fwd\_pdu ports

### Description

This command is used to control the forwarding of EAPOL PDU. When 802.1X functionality is disabled globally or for a port, and if 802.1X fwd\_pdu is enabled both globally and for the port, a received EAPOL packet on the port will be flooded in the same VLAN to those ports for which 802.1X fwd\_pdu is enabled and 802.1X is disabled (globally or just for the port). The default state is disabled.

**Format**

**config 802.1x fwd\_pdu ports [<portlist> | all] [enable | disable]**

**Parameters**

**<portlist>** - Enter the list of ports used for the configuration.

**all** - Specifies that all the ports will be used.

**enable** - Specifies to enable forwarding EAPOL PDU receive on the ports.

**disable** - Specifies to disable forwarding EAPOL PDU receive on the ports.

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To configure 802.1X fwd\_pdu for ports:

```
DGS-1510-28XMP/ME:admin# config 802.1x fwd_pdu ports 1-2 enable
Command: config 802.1x fwd_pdu ports 1-2 enable

Success.

DGS-1510-28XMP/ME:admin#
```

4-9 **config 802.1x authorization attributes radius****Description**

This command is used to enable or disable acceptance of authorized configuration.

When the authorization is enabled for 802.1X's RADIUS authentication, the authorized attributes (for example VLAN, 802.1p default priority, and ACL) assigned by the RADIUS server will be accepted.

**Format**

**config 802.1x authorization attributes radius [enable | disable]**

**Parameters**

**enable** - Specifies to enable the authorization attributes. When enabled, the authorization attributes (for example VLAN, 802.1p default priority, and ACL) assigned by the RADIUS server will be accepted. This is the default.

**disable** - Specifies to disable the authorization attributes.

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To disable to accept the authorized data assigned from the RADIUS server:

```
DGS-1510-28XMP/ME:admin# config 802.1x authorization attributes radius disable
Command: config 802.1x authorization attributes radius disable

Success.

DGS-1510-28XMP/ME:admin#
```

## 4-10 show 802.1x

### Description

This command is used to display the 802.1X state or configurations. If no parameter is specified, the 802.1X system configurations will be displayed.

### Format

**show 802.1x {[auth\_state | auth\_configuration] ports {<portlist>}}**

### Parameters

---

**auth\_state** - (Optional) Specifies to display 802.1X authentication state machine of some or all ports

---

**auth\_configuration** - (Optional) Specifies to display 802.1X configurations of some or all ports.

---

**port** - (Optional) Specifies a range of ports to be displayed. If no port is specified, all ports will be displayed.

---

**<portlist>** - Enter the list of ports used for the configuration here.

---

### Restrictions

None.

### Example

To display the 802.1X port level configurations:

```
DGS-1510-28XMP/ME:admin# show 802.1x auth_configuration ports 1
Command: show 802.1x auth_configuration ports 1

Port Number      : 1
Capability        : None
AdminCrlDir      : Both
OpenCrlDir       : Both
Port Control     : Auto
QuietPeriod      : 60    sec
TxPeriod         : 30    sec
SuppTimeout      : 30    sec
ServerTimeout    : 30    sec
MaxReq           : 2     times
ReAuthPeriod     : 3600  sec
ReAuthenticate   : Disabled
Forward EAPOL PDU On Port : Enabled
Max User On Port : 16
```

```
CTRL+C  ESC  q  Quit  SPACE  n  Next Page  p  Previous Page  r  Refresh
```

## 4-11 config 802.1x capability ports

### Description

This command is used to configure the port capability.

### Format

**config 802.1x capability ports [<portlist> | all] [authenticator | none]**

### Parameters

---

**<portlist>** - Enter the list of ports used for the configuration here.

---

**all** - Specifies all ports to be configured.

---

**authenticator** - Specifies the port that wishes to enforce authentication before allowing access to services that are accessible via that port adopts the authenticator role.

---

**none** - Specifies to disable authentication on the specified ports.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To configure the port capability:

```
DGS-1510-28XMP/ME:admin# config 802.1x capability ports 1-10 authenticator
Command: config 802.1x capability ports 1-10 authenticator

Success.

DGS-1510-28XMP/ME:admin#
```

## 4-12 config 802.1x max\_users

### Description

This command is used to limit the maximum number of users that can be learned via 802.1X authentication. In addition to the global limitation, maximum user for per port is also limited. It is specified by the **config 802.1x auth\_parameter** command.

### Format

**config 802.1x max\_users [<value 1–448> | no\_limit]**

### Parameters

---

**<value 1-448>** - Enter the maximum number of users. This value must be between 1 and 448.

---

**no\_limit** – Specifies that the maximum user limit will be set to 448.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To configure 802.1X number of users to be limited to 200:

```
DGS-1510-28XMP/ME:admin# config 802.1x max_users 200
Command: config 802.1x max_users 200

Success.

DGS-1510-28XMP/ME:admin#
```

## 4-13 config 802.1x auth\_parameter ports

### Description

This command is used to configure the parameters that control the operation of the authenticator associated with a port.

### Format

**config 802.1x auth\_parameter ports [<portlist> | all] [default | {direction [both | in] | port\_control [force\_unauth | auto | force\_auth] | quiet\_period <sec 0-65535> | tx\_period <sec 1-65535> | supp\_timeout <sec 1-65535> | server\_timeout <sec 1-65535> | max\_req <value 1-10> | reauth\_period <sec 1-65535> | max\_users [<value 1-448> | no\_limit] | enable\_reauth [enable | disable]}(1)]**



## Parameters

---

<b>&lt;portlist&gt;</b>	- Enter the list of ports used for the configuration here.
<b>all</b>	- Specifies that all the ports will be used.
<b>default</b>	- Specifies that all parameter to be default value.
<b>direction</b>	- Specifies the direction of access control.
<b>both</b>	- Specifies for bidirectional access control.
<b>in</b>	- Specifies for unidirectional access control.
<b>port_control</b>	- Specifies to force a specific port to be unconditionally authorized or unauthorized by setting the parameter of port_control to be force_authorized or force_unauthorized. Besides, the controlled port will reflect the outcome of authentication if port_control is auto.
<b>force_unauth</b>	- Specifies to force a specific port to be unconditionally unauthorized.
<b>auto</b>	- Specifies that the controlled port will reflect the outcome of authentication.
<b>force_auth</b>	- Specifies to force a specific port to be unconditionally authorized.
<b>quiet_period</b>	- Specifies the initialization value of the quietWhile timer.
<b>&lt;sec 0-65535&gt;</b>	- Enter the quiet period value here. This value must be between 0 and 65535 seconds. The default value is 60 seconds.
<b>tx_period</b>	- Specifies the initialization value of the transmit timer period.
<b>&lt;sec 1-65535&gt;</b>	- Enter the TX period value here. This value must be between 1 and 65535 seconds. The default value is 30 seconds.
<b>supp_timeout</b>	- Specifies the initialization value of the aWhile timer when timing out the supplicant.
<b>&lt;sec 1-65535&gt;</b>	- Enter the supplicant timeout value here. This value must be between 1 and 65535 seconds. The default value is 30 seconds.
<b>server_timeout</b>	- Specifies the initialization value of the aWhile timer when timing out the authentication server.
<b>&lt;sec 1-65535&gt;</b>	- Enter the server timeout value here. This value must be between 1 and 65535 seconds. The default value is 30.
<b>max_req</b>	- Specifies the maximum number of times that the authentication PAE state machine will retransmit an EAP Request packet to the supplicant.
<b>&lt;value 1-10&gt;</b>	- Enter the maximum required value here. This value must be between 1 and 10. The default value is 2.
<b>reauth_period</b>	- Specifies a nonzero number of seconds, which is used to be the re-authentication timer.
<b>&lt;sec 1-65535&gt;</b>	- Enter the re-authentication period value here. This value must be between 1 and 65535 seconds. The default value is 3600.
<b>max_users</b>	- Specifies per port maximum number of users. The default value is 16.
<b>&lt;value 1-448&gt;</b>	- Enter the maximum users value here. This value must be between 1 and 448.
<b>no_limit</b>	- Specifies that no limit is enforced on the maximum users used.
<b>enable_reauth</b>	- Specifies to enable or disable the re-authentication mechanism for a specific port.
<b>enable</b>	- Specifies to enable the re-authentication mechanism for a specific port.
<b>disable</b>	- Specifies to disable the re-authentication mechanism for a specific port.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure the parameters that control the operation of the authenticator associated with a port:

```
DGS-1510-28XMP/ME:admin# config 802.1x auth_parameter ports 1-20 direction both
Command: config 802.1x auth_parameter ports 1-20 direction both

Success.

DGS-1510-28XMP/ME:admin#
```

## 4-14 config 802.1x auth\_mode

### Description

This command is used to configure 802.1X authentication mode.

### Format

**config 802.1x auth\_mode [port\_based | mac\_based]**

### Parameters

---

**port\_based** - Specifies to configure the authentication as port-based mode.

**mac\_based** - Specifies to configure the authentication as MAC-based mode.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To configure the authentication mode:

```
DGS-1510-28XMP/ME:admin# config 802.1x auth_mode port_based
Command: config 802.1x auth_mode port_based

Success.

DGS-1510-28XMP/ME:admin#
```

## 4-15 config 802.1x init

### Description

This command is used to initialize the authentication state machine of some or all ports.

### Format

**config 802.1x init [port\_based ports [<portlist> | all] | mac\_based ports [<portlist> | all] {mac\_address <macaddr>}]**

### Parameters

---

**port\_based ports-** Specifies to configure the authentication as port-based mode.

---

---

**<portlist>** - Enter the list of ports used for the configuration here.

**all** - Specifies that all ports will be used.

---

**mac\_based ports** - Specifies to configure the authentication as MAC-based mode.

**<portlist>** - Enter the list of ports used for the configuration here.

**all** - Specifies that all ports will be used.

---

**mac\_address** - (Optional) Specifies the MAC address of client.

**<macaddr>** - Enter the MAC address used here.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To initialize the authentication state machine of some or all:

```
DGS-1510-28XMP/ME:admin# config 802.1x init port_based ports all
Command: config 802.1x init port_based ports all

Success.

DGS-1510-28XMP/ME:admin#
```

## 4-16 config 802.1x reauth

### Description

This command is used to re-authenticate the device connected to the port. During the re-authentication period, the port status remains authorized until failed re-authentication.

### Format

**config 802.1x reauth [port\_based ports [<portlist> | all] | mac\_based ports [<portlist> | all] {mac\_address <macaddr>}]**

### Parameters

---

**port\_based ports** - Specifies to configure the authentication as port-based mode.

**<portlist>** - Enter the list of ports used for the configuration here.

**all** - Specifies that all ports will be used.

---

**mac\_based ports** - Specifies to configure the authentication as MAC-based mode.

**<portlist>** - Enter the list of ports used for the configuration here.

**all** - Specifies that all ports will be used.

---

**mac\_address** - (Optional) Specifies the MAC address of client.

**<macaddr>** - Enter the MAC address used here.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To re-authenticate the device connected to the port:

```
DGS-1510-28XMP/ME:admin# config 802.1x reauth port_based ports all
Command: config 802.1x reauth port_based ports all

Success.

DGS-1510-28XMP/ME:admin#
```

## 4-17 create 802.1x guest\_vlan

### Description

This command is used to assign a static VLAN to be guest VLAN. The specific VLAN which assigned to guest VLAN must be existed. The specific VLAN which assigned to guest VLAN can't be deleting.

### Format

**create 802.1x guest\_vlan {<vlan\_name 32>}**

### Parameters

---

**<vlan\_name 32>** - (Optional) Specifies the VLAN to be guest VLAN. The VLAN name can be up to 32 characters long.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To create a VLAN named "guestVLAN" as 802.1X guest VLAN:

```
DGS-1510-28XMP/ME:admin# create 802.1x guest_vlan guestVLAN
Command: create 802.1x guest_vlan guestVLAN

Success.

DGS-1510-28XMP/ME:admin#
```

## 4-18 delete 802.1x guest\_vlan

### Description

This command is used to delete guest VLAN setting, but not delete the static VLAN. All ports which enabled guest VLAN will remove to original VLAN after deleted guest VLAN.

### Format

**delete 802.1x guest\_vlan {<vlan\_name 32>}**

---

## Parameters

---

**<vlan\_name 32>** - (Optional) Enter the VLAN name here. The VLAN name can be up to 32 characters long.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To delete the guest VLAN named "guestVLAN":

```
DGS-1510-28XMP/ME:admin# delete 802.1x guest_vlan guestVLAN
Command: delete 802.1x guest_vlan guestVLAN

Success.

DGS-1510-28XMP/ME:admin#
```

4-19 config 802.1x guest\_vlan

## Description

This command is used to configure guest VLAN setting. If the specific port state is changed from enabled state to disable state, this port will move to its original VLAN.

## Format

**config 802.1x guest\_vlan ports [<portlist> | all] state [enable | disable]**

---

## Parameters

---

**ports** - Specifies a range of ports enable or disable guest VLAN function.

**<portlist>** - Enter the list of ports used for the configuration here.

**all** - Specifies that all the port will be included in this configuration.

---

**state** - Specifies the guest VLAN port state of the configured ports.

**enable** - Specifies to join the guest VLAN.

**disable** - Specifies to be removed from the guest VLAN.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To enable on port 2 to 8 to configure 802.1X guest VLAN:

```
DGS-1510-28XMP/ME:admin# config 802.1x guest_vlan ports 2-8 state enable
Command: config 802.1x guest_vlan ports 2-8 state enable

Warning, The ports are moved to Guest VLAN.

Success.

DGS-1510-28XMP/ME:admin#
```

## 4-20 show 802.1x guest\_vlan

### Description

This command is used to show the information of guest VLANs.

### Format

**show 802.1x guest\_vlan**

### Parameters

None.

### Restrictions

None.

### Example

To show 802.1X guest VLAN on the Switch:

```
DGS-1510-28XMP/ME:admin# show 802.1x guest_vlan
Command: show 802.1x guest_vlan

Guest VLAN Setting
-----
Guest VLAN : guestVLAN
Enabled Guest VLAN Ports : 2-8

DGS-1510-28XMP/ME:admin#
```

## Chapter 5 Access Authentication Control Command List

---

**enable password encryption**

**disable password encryption**

**enable authen\_policy**

**disable authen\_policy**

**show authen\_policy**

**create authen\_login** method\_list\_name <string 15>

**config authen\_login** [default | method\_list\_name <string 15>] method {tacacs | xtacacs | tacacs+ | radius | server\_group <string 15> | local | none}

**delete authen\_login** method\_list\_name <string 15>

**show authen\_login** [default | method\_list\_name <string 15> | all]

**create authen\_enable** method\_list\_name <string 15>

**config authen\_enable** [default | method\_list\_name <string 15>] method {tacacs | xtacacs | tacacs+ | radius | server\_group <string 15> | local\_enable | none}

**delete authen\_enable** method\_list\_name <string 15>

**show authen\_enable** [default | method\_list\_name <string 15> | all]

**config authen application** [console | telnet | ssh | http | all] [login | enable] [default | method\_list\_name <string 15>]

**show authen application**

**create authen server\_group** <string 15>

**config authen server\_group** [tacacs | xtacacs | tacacs+ | radius | <string 15>] [add | delete] server\_host <ipaddr> protocol [tacacs | xtacacs | tacacs+ | radius]

**delete authen server\_group** <string 15>

**show authen server\_group** {<string 15>}

**create authen server\_host** <ipaddr> protocol [tacacs | xtacacs | tacacs+ | radius] {port <int 1-65535> | [key [<key\_string 254> | none]] | timeout <int 1-255> | retransmit <int 1-20>}

**config authen server\_host** <ipaddr> protocol [tacacs | xtacacs | tacacs+ | radius] {port <int 1-65535> | [key [<key\_string 254> | none]] | timeout <int 1-255> | retransmit <int 1-20>}

**delete authen server\_host** <ipaddr> protocol [tacacs | xtacacs | tacacs+ | radius]

**show authen server\_host**

**config authen parameter response\_timeout** <int 0-255>

**config authen parameter attempt** <int 1-255>

**show authen parameter**

**enable admin**

**config admin local\_enable** {encrypt [plain\_text | sha\_1] <password>}

---

## 5-1 enable password encryption

### Description

This command is used to enable password encryption. The user account configuration information will be stored in the configuration file, and can be applied to the system later.

If the password encryption is enabled, the password will be in encrypted form.

### Format

**enable password encryption**

### Parameters

None.

### Restrictions

Only Administrators can issue this command.

### Example

To enable the password encryption:

```
DGS-1510-28XMP/ME:admin# enable password encryption
Command: enable password encryption

Success.

DGS-1510-28XMP/ME:admin#
```

## 5-2 disable password encryption

### Description

This command is used to disable password encryption. The user account configuration information will be stored in the configuration file, and can be applied to the system later.

When password encryption is disabled, if the user specifies the password in the plain text form, the password will be in the plain text form. However, if the user specifies the password in the encrypted form, or if the password has been converted to the encrypted form by the last **enable password encryption** command, the password will still be in the encrypted form. It can not be reverted to the plain text.

### Format

**disable password encryption**

### Parameters

None.

### Restrictions

Only Administrators can issue this command.



## Example

To disable the password encryption:

```
DGS-1510-28XMP/ME:admin# disable password encryption
Command: disable password encryption

Success.

DGS-1510-28XMP/ME:admin#
```

## 5-3 enable authen\_policy

### Description

This command is used to enable system access authentication policy.

Enable system access authentication policy. When authentication is enabled, the device will adopt the login authentication method list to authenticate the user for login, and adopt the enable authentication method list to authenticate the enable password for promoting the user's privilege to Admin level.

### Format

**enable authen\_policy**

### Parameters

None.

### Restrictions

Only Administrators can issue this command.

## Example

To enable system access authentication policy:

```
DGS-1510-28XMP/ME:admin# enable authen_policy
Command: enable authen_policy

Success.

DGS-1510-28XMP/ME:admin#
```

## 5-4 disable authen\_policy

### Description

This command is used to disable system access authentication policy.

Disable system access authentication policy. When authentication is disabled, the device will adopt the local user account database to authenticate the user for login, and adopt the local enable password to authenticate the enable password for promoting the user's privilege to Admin level.

## Format

**disable authen\_policy**

## Parameters

None.

## Restrictions

Only Administrators can issue this command.

## Example

To disable system access authentication policy:

```
DGS-1510-28XMP/ME:admin# disable authen_policy
Command: disable authen_policy

Success.

DGS-1510-28XMP/ME:admin#
```

## 5-5 show authen\_policy

### Description

This command is used to display that system access authentication policy is enabled or disabled.

### Format

**show authen\_policy**

### Parameters

None.

### Restrictions

Only Administrators can issue this command.

### Example

To display system access authentication policy:

```
DGS-1510-28XMP/ME:admin# show authen_policy
Command: show authen_policy

Authentication Policy : Enabled

DGS-1510-28XMP/ME:admin#
```

## 5-6 create authen\_login

**Description**

This command is used to create a user-defined method list of authentication methods for user login. The maximum supported number of the login method lists is 8.

**Format**

**create authen\_login method\_list\_name <string 15>**

**Parameters**


---

**<string 15>** - Enter the user-defined method list name. This value can be up to 15 characters long.

---

**Restrictions**

Only Administrators can issue this command.

**Example**

To create a user-defined method list for user login:

```
DGS-1510-28XMP/ME:admin# create authen_login method_list_name login_list_1
Command: create authen_login method_list_name login_list_1

Success.

DGS-1510-28XMP/ME:admin#
```

## 5-7 config authen\_login

**Description**

This command is used to configure a user-defined or default method list of authentication methods for user login. The sequence of methods will effect the altercation result. For example, if the sequence is TACACS+ first, then TACACS and local, when the user tries to login, the authentication request will be sent to the first server host in TACACS+ built-in server group. If the first server host in TACACS+ group is missing, the authentication request will be sent to the second server host in TACACS+ group, and so on. If all server hosts in TACACS+ group are missing, the authentication request will be sent to the first server host in TACACS group and so on. If all server hosts in TACACS group are missing, the local account database in the device is used to authenticate this user. When the user logs in the device successfully while using methods like TACACS/XTACACS/TACACS+/RADIUS built-in or user-defined server groups or none, the "user" privilege level is assigned only. If the user wants to get admin privilege level, user must use the **enable admin** command to promote his privilege level. But when local method is used, the privilege level will depend on this account privilege level stored in the local device.

**Format**

**config authen\_login [default | method\_list\_name <string 15>] method {tacacs | xtacacs | tacacs+ | radius | server\_group <string 15> | local | none}**

**Parameters**


---

**default** - Specifies the default method list of authentication methods.

---

---

**method\_list\_name** - Specifies the user-defined method list of authentication methods.

**<string 15>** - Enter the method list name here. This value can be up to 15 characters long.

---

**method** - Specifies the authentication method used.

**tacacs** - (Optional) Specifies authentication by the built-in server group TACACS.

**xtacacs** - (Optional) Specifies authentication by the built-in server group XTACACS.

**tacacs+** - (Optional) Specifies authentication by the built-in server group TACACS+.

**radius** - (Optional) Specifies authentication by the built-in server group RADIUS.

**server\_group** - (Optional) Specifies authentication by the user-defined server group.

**<string 15>** - Enter the server group value here. This value can be up to 15 characters long.

**local** - (Optional) Specifies authentication by local user account database in device.

**none** - (Optional) Specifies that there is no authentication.

---

## Restrictions

Only Administrators can issue this command.

## Example

To configure a user-defined method list for user login:

```
DGS-1510-28XMP/ME:admin# config authen_login method_list_name login_list_1 method tacacs+
tacacs local
Command: config authen_login method_list_name login_list_1 method tacacs+ tacacs local

Success.

DGS-1510-28XMP/ME:admin#
```

## 5-8 delete authen\_login

### Description

This command is used to delete a user-defined method list of authentication methods for user login.

### Format

**delete authen\_login method\_list\_name <string 15>**

### Parameters

---

**<string 15>** - Enter the user-defined method list name. This value can be up to 15 characters long.

---

## Restrictions

Only Administrators can issue this command.

## Example

To delete a user-defined method list for user login:

```
DGS-1510-28XMP/ME:admin# delete authen_login method_list_name login_list_1
Command: delete authen_login method_list_name login_list_1

Success.

DGS-1510-28XMP/ME:admin#
```

## 5-9 show authen\_login

### Description

This command is used to display the method list of authentication methods for user login.

### Format

**show authen\_login [default | method\_list\_name <string 15> | all]**

### Parameters

**default** - Specifies to display default user-defined method list for user login.

**method\_list\_name** - Specifies to display the specific user-defined method list for user login.

**<string 15>** - Enter the method list name here. This value can be up to 15 characters long.

**all** - Specifies to display all method lists for user login.

### Restrictions

Only Administrators can issue this command.

### Example

To display a user-defined method list for user login:

```
DGS-1510-28XMP/ME:admin# show authen_login method_list_name login_list_1
Command: show authen_login method_list_name login_list_1

Method List Name  Priority  Method Name      Comment
-----
login_list_1      1         tacacs+          Built-in Group
                  2         tacacs           Built-in Group
                  3         mix_1            User-defined Group
                  4         local            Keyword

DGS-1510-28XMP/ME:admin#
```

## 5-10 create authen\_enable

### Description

This command is used to create a user-defined method list of authentication methods for promoting user's privilege to Admin level.

**Format**

```
create authen_enable method_list_name <string 15>
```

**Parameters**


---

**<string 15>** - Enter the user-defined method list name. This value can be up to 15 characters long.

---

**Restrictions**

Only Administrators can issue this command.

**Example**

To create a user-defined method list for promoting user's privilege to Admin level:

```
DGS-1510-28XMP/ME:admin# create authen_enable method_list_name enable_list_1
Command: create authen_enable method_list_name enable_list_1

Success.

DGS-1510-28XMP/ME:admin#
```

## 5-11 config authen\_enable

**Description**

This command is used to configure a user-defined or default method list of authentication methods for promoting user's privilege to Admin level. The sequence of methods will affect the alteration result. For example, if the sequence is TACACS+ first, then TACACS and local\_enable, when the user tries to promote user's privilege of Admin level, the authentication request will be sent to the first server host in TACACS+ built-in server group. If the first server host in TACACS+ group is missing, the authentication request will be sent to the second server host in TACACS+ group, and so on. If all server hosts in TACACS+ group are missing, the authentication request will be sent to the first server host in TACACS group and so on. If all server hosts in TACACS group are missing, the local enable password in the device is used to authenticate this user's password.

**Format**

```
config authen_enable [default | method_list_name <string 15>] method {tacacs | xtacacs | tacacs+ | radius | server_group <string 15> | local_enable | none}
```

**Parameters**


---

**default** - Specifies the default method list of authentication methods.

---

**method\_list\_name** - Specifies the user-defined method list of authentication methods.

**<string 15>** Enter the method list name here. This value can be up to 15 characters long.

---

**method** - Specifies the authentication method used.

**tacacs** - (Optional) Specifies authentication by the built-in server group TACACS.

**xtacacs** - (Optional) Specifies authentication by the built-in server group XTACACS.

**tacacs+** - (Optional) Specifies authentication by the built-in server group TACACS+.

**radius** - (Optional) Specifies authentication by the built-in server group RADIUS.

**server\_group** - (Optional) Specifies authentication by the user-defined server group.

**<string 15>** - Enter the server group name here. This value can be up to 15 characters long.

---

---

**local\_enable** - (Optional) Specifies authentication by local enable password in device.

**none** - (Optional) Specifies that there is no authentication.

---

### Restrictions

Only Administrators can issue this command.

### Example

To configure a user-defined method list for promoting user's privilege to Admin level:

```
DGS-1510-28XMP/ME:admin# config authen_enable method_list_name enable_list_1 method tacacs+
tacacs local_enable
```

```
Command: config authen_ enable method_list_name enable_list_1 method tacacs+ tacacs
local_enable
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```

## 5-12 delete authen\_enable

### Description

This command is used to delete a user-defined method list of authentication methods for promoting user's privilege to Admin level.

### Format

**delete authen\_enable method\_list\_name <string 15>**

### Parameters

---

**<string 15>** - Enter the user-defined method list name. This value can be up to 15 characters long.

---

### Restrictions

Only Administrators can issue this command.

### Example

To delete a user-defined method list for promoting user's privilege to Admin level:

```
DGS-1510-28XMP/ME:admin# delete authen_enable method_list_name enable_list_1
```

```
Command: delete authen_enable method_list_name enable_list_1
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```

## 5-13 show authen\_enable

**Description**

This command is used to display the method list of authentication methods for promoting user's privilege to Admin level.

**Format**

**show authen\_enable [default | method\_list\_name <string 15> | all]**

**Parameters**


---

**default** - Specifies to display default user-defined method list for promoting user's privilege to Admin level.

---

**method\_list\_name** - Specifies to display the specific user-defined method list for promoting user's privilege to Admin level.

**<string 15>** - Enter the method list name here. This value can be up to 15 characters long.

---

**all** - Specifies to display all method lists for promoting user's privilege to Admin level.

---

**Restrictions**

Only Administrators can issue this command.

**Example**

To display all method lists for promoting user's privilege to Admin level:

```
DGS-1510-28XMP/ME:admin# show authen_enable method_list_name enable_list_1
Command: show authen_enable method_list_name enable_list_1
```

Method List Name	Priority	Method Name	Comment
enable_list_1	1	tacacs+	Built-in Group
	2	tacacs	Built-in Group
	3	mix_1	User-defined Group
	4	local	Keyword

```
DGS-1510-28XMP/ME:admin#
```

## 5-14 config authen application

**Description**

This command is used to configure login or enable method list for all or the specified application.

**Format**

**config authen application [console | telnet | ssh | http | all] [login | enable] [default | method\_list\_name <string 15>]**

**Parameters**


---

**console** - Specifies the application as console.

---



---

**telnet** - Specifies the application as telnet.

---

**ssh** - Specifies the application as SSH.

---

**http** - Specifies the application as web.

---

**all** - Specifies the application as console, telnet, SSH, and web.

---

**login** - Specifies the method list of authentication methods for user login.

---

**enable** - Specifies the method list of authentication methods for promoting user's privilege to Admin level.

---

**default** - Specifies the default method list.

---

**method\_list\_name** - Specifies the user-defined method list name.

---

**<string>** - Enter the method list name here. This value can be up to 15 characters long.

---

## Restrictions

Only Administrators can issue this command.

## Example

To configure the login method list for telnet:

```
DGS-1510-28XMP/ME:admin# config authen application telnet login method_list_name login_list_1
Command: config authen application telnet login method_list_name login_list_1

Success.

DGS-1510-28XMP/ME:admin#
```

## 5-15 show authen application

### Description

This command is used to display the login/enable method list for all applications.

### Format

**show authen application**

### Parameters

None.

### Restrictions

Only Administrators can issue this command.

### Example

To display the login/enable method list for all applications:

```
DGS-1510-28XMP/ME:admin# show authen application
Command: show authen application

Application      Login Method List      Enable Method List
-----
Console         default                 default
Telnet          login_list_1           default
SSH             default                 default
HTTP            default                 default

DGS-1510-28XMP/ME:admin#
```

## 5-16 create authen server\_group

### Description

This command is used to create a user-defined authentication server group. The maximum supported number of server groups including built-in server groups is 8. Each group consists of 8 server hosts as maximum.

### Format

**create authen server\_group <string 15>**

### Parameters

---

**<string 15>** - Enter the user-defined server group name. This value can be up to 15 characters long.

---

### Restrictions

Only Administrators can issue this command.

### Example

To create a user-defined authentication server group:

```
DGS-1510-28XMP/ME:admin# create authen server_group mix_1
Command: create authen server_group mix_1

Success.

DGS-1510-28XMP/ME:admin#
```

## 5-17 config authen server\_group

### Description

This command is used to add or remove an authentication server host to or from the specified server group. Built-in TACACS, XTACACS, TACACS+, or RADIUS server group accepts the server host with the same protocol only, but user-defined server group can accept server hosts with different protocols.

## Format

```
config authn server_group [tacacs | xtacacs | tacacs+ | radius | <string 15>] [add | delete] server_host
<ipaddr> protocol [tacacs | xtacacs | tacacs+ | radius]
```

## Parameters

---

**tacacs** - Specifies to configure built-in server group TACACS.

**xtacacs** - Specifies to configure built-in server group XTACACS.

**tacacs+** - Specifies to configure built-in server group TACACS+.

**radius** - Specifies to configure built-in server group RADIUS.

**<string 15>** - Enter the server group name here. This value can be up to 15 characters long.

**add** - Specifies to add a server host to a server group.

**delete** - Specifies to remove a server host from a server group.

**server\_host** - Specifies the server host's IP address.

**<ipaddr>** - Enter the server host IP address here.

**protocol** - Specifies the authentication protocol used.

**tacacs** - Specifies that the TACACS authentication protocol will be used.

**xtacacs** - Specifies that the XTACACS authentication protocol will be used.

**tacacs+** - Specifies that the TACACS+ authentication protocol will be used.

**radius** - Specifies that the radius authentication protocol will be used.

---

## Restrictions

Only Administrators can issue this command.

## Example

To add an authentication server host to an server group:

```
DGS-1510-28XMP/ME:admin# config authn server_group mix_1 add server_host 10.1.1.222 protocol
tacacs+
Command: config authn server_group mix_1 add server_host 10.1.1.222 protocol ta
cacs+

Success.

DGS-1510-28XMP/ME:admin#
```

## 5-18 delete authn server\_group

### Description

This command is used to delete a user-defined authentication server group.

### Format

```
delete authn server_group <string 15>
```

## Parameters

---

**<string 15>** - Enter the user-defined server group name. This value can be up to 15 characters long.

---

## Restrictions

Only Administrators can issue this command.

## Example

To delete a user-defined authentication server group:

```
DGS-1510-28XMP/ME:admin# delete authen server_group mix_1
Command: delete authen server_group mix_1

Success.

DGS-1510-28XMP/ME:admin#
```

5-19 show authen server\_group

## Description

This command is used to display the authentication server groups.

## Format

**show authen server\_group {<string 15>}**

## Parameters

---

**<string 15>** - (Optional) Enter the built-in or user-defined server group name. This value can be up to 15 characters long.

---

## Restrictions

Only Administrators can issue this command.

## Example

To display all authentication server groups:

```
DGS-1510-28XMP/ME:admin# show authen server_group
```

```
Command: show authen server_group
```

Group Name	IP Address	Protocol
-----	-----	-----
mix_1	10.1.1.222	TACACS+
	10.1.1.223	TACACS
radius	10.1.1.224	RADIUS
tacacs	10.1.1.225	TACACS
tacacs+	10.1.1.226	TACACS+
xtacacs	10.1.1.227	XTACACS

```
Total Entries : 5
```

```
DGS-1510-28XMP/ME:admin#
```

## 5-20 create authen server\_host

### Description

This command is used to create an authentication server host. When an authentication server host is created, IP address and protocol are the index. That means over 1 authentication protocol services can be run on the same physical host. The maximum supported number of server hosts is 16.

### Format

```
create authen server_host <ipaddr> protocol [tacacs | xtacacs | tacacs+ | radius] {port <int 1-65535> | [ key [key_string 254] | none]] | timeout <int 1-255> | retransmit <int 1-20>}
```

### Parameters

---

**<ipaddr>** - Enter the server host IP address.

**protocol** - Specifies the host's authentication protocol.

**tacacs** - Specifies the protocol as TACACS.

**xtacacs** - Specifies the protocol as XTACACS.

**tacacs+** - Specifies the protocol as TACACS+.

**radius** - Specifies the protocol as RADIUS.

---

**port** - (Optional) Specifies the port number of authentication protocol for server host. Default value for TACACS/XTACACS/TACACS+ is 49. Default value for RADIUS is 1812.

**<int 1-65535>** - Enter the authentication protocol port number here. This value must be between 1 and 65535.

---

**key** - (Optional) Specifies the key for TACACS+ and RADIUS authentication. If the value is null, no encryption will apply. This value is meaningless for TACACS and XTACACS.

**<key\_string 254>** - Enter the TACACS+ or the RADIUS key here. This key can be up to 254 characters long.

**none** - Specifies that there is no encryption for TACACS+ and RADIUS authentication. This value is meaningless for TACACS and XTACACS.

---

**timeout** - (Optional) Specifies the time in second for waiting server reply. The default value is 5 seconds.

**<int 1-255>** - Enter the timeout value here. This value must be between 1 and 255 seconds.

---

**retransmit** - (Optional) Specifies the count for re-transmit. This value is meaningless for TACACS+. Default value is 2.

**<int 1-20>** - Enter the re-transmit value here. This value must be between 1 and 20.

---

## Restrictions

Only Administrators can issue this command.

## Example

To create a TACACS+ authentication server host, its listening port number is 15555 and timeout value is 10 seconds:

```
DGS-1510-28XMP/ME:admin# create authen server_host 10.1.1.222 protocol tacacs+ port 15555
timeout 10
Command: create authen server_host 10.1.1.222 protocol tacacs+ port 15555 timeout 10

Key is empty for TACACS+ or RADIUS.
Success.

DGS-1510-28XMP/ME:admin#
```

## 5-21 config authen server\_host

### Description

This command is used to configure an authentication server host.

### Format

```
config authen server_host <ipaddr> protocol [tacacs | xtacacs | tacacs+ | radius] {port <int 1-65535> | [key
[<key_string 254> | none]] | timeout <int 1-255> | retransmit <int 1-20>}
```

### Parameters

- 
- <ipaddr>** - Enter the server host IP address.
- 
- protocol** - Specifies the host's authentication protocol.
- tacacs** - Specifies the protocol as TACACS.
  - xtacacs** - Specifies the protocol as XTACACS.
  - tacacs+** - Specifies the protocol as TACACS+.
  - radius** - Specifies the protocol as RADIUS.
- 
- port** - (Optional) Specifies the port number of authentication protocol for server host. Default value for TACACS/XTACACS/TACACS+ is 49. The default value for RADIUS is 1812.
- <int 1-65535>** - Enter the port number here. This value must be between 1 and 65535.
- 
- key** - (Optional) Specifies the key for TACACS+ and RADIUS authentication. If the value is null, no encryption will apply. This value is meaningless for TACACS and XTACACS.
- <key\_string 254>** - Enter the TACACS+ key here. This value can be up to 254 characters long.
  - none** - Specifies that there is no encryption for TACACS+ and RADIUS authentication. This value is meaningless for TACACS and XTACACS.
- 
- timeout** - (Optional) Specifies the time in second for waiting server reply. Default value is 5 seconds.
- <int 1-255>** - Enter the timeout value here. This value must be between 1 and 255 seconds.
- 
- retransmit** - (Optional) Specifies the count for re-transmit. This value is meaningless for TACACS+. Default value is 2.
- <int 1-20>** - Enter the re-transmit value here. This value must be between 1 and 20.
-

## Restrictions

Only Administrators can issue this command.

## Example

To configure a TACACS+ authentication server host's key value:

```
DGS-1510-28XMP/ME:admin# config authen server_host 10.1.1.222 protocol tacacs+ key "This is a secret."
Command: config authen server_host 10.1.1.222 protocol tacacs+ key "This is a secret."

Success.

DGS-1510-28XMP/ME:admin#
```

## 5-22 delete authen server\_host

### Description

This command is used to delete an authentication server host.

### Format

**delete authen server\_host <ipaddr> protocol [tacacs | xtacacs | tacacs+ | radius]**

### Parameters

---

**<ipaddr>** - Enter the server host's IP address.

---

**protocol** - Specifies the host's authentication protocol.

**tacacs** - Specifies the protocol as TACACS.

**xtacacs** - Specifies the protocol as XTACACS.

**tacacs+** - Specifies the protocol as TACACS+.

**radius** - Specifies the protocol as RADIUS.

---

## Restrictions

Only Administrators can issue this command.

## Example

To delete an authentication server host:

```
DGS-1510-28XMP/ME:admin# delete authen server_host 10.1.1.222 protocol tacacs+
Command: delete authen server_host 10.1.1.222 protocol tacacs+

Success.

DGS-1510-28XMP/ME:admin#
```

## 5-23 show authen server\_host

**Description**

This command is used to display the authentication server hosts.

**Format**

**show authen server\_host**

**Parameters**

None.

**Restrictions**

Only Administrators can issue this command.

**Example**

To display all authentication server hosts:

```
DGS-1510-28XMP/ME:admin# show authen server_host
Command: show authen server_host

IP Address          Protocol  Port    Timeout  Retransmit  Key
-----
10.1.1.222          TACACS+  15555  10       -----    This is a secret.

Total Entries : 1

DGS-1510-28XMP/ME:admin#
```

## 5-24 config authen parameter response\_timeout

**Description**

This command is used to configure the amount of time waiting for user input on console, telnet, SSH application.

**Format**

**config authen parameter response\_timeout <int 0-255>**

**Parameters**

**<int 0-255>** - Enter the amount of time for user input on console or telnet or SSH. 0 means there is no time out. This value must be between 0 and 255. Default value is 30 seconds.

**Restrictions**

Only Administrators can issue this command.



## Example

To configure the amount of time waiting or user input to be 60 seconds:

```
DGS-1510-28XMP/ME:admin# config authen parameter response_timeout 60
Command: config authen parameter response_timeout 60

Success.

DGS-1510-28XMP/ME:admin#
```

## 5-25 config authen parameter attempt

### Description

This command is used to configure the maximum attempts for user's trying to login or promote the privilege on console, telnet, SSH application.

### Format

**config authen parameter attempt <int 1-255>**

### Parameters

---

**<int 1-255>** - Enter the amount of attempts for user's trying to login or promote the privilege on console or telnet or SSH. This value must be between 1 and 255. Default value is 3.

---

### Restrictions

Only Administrators can issue this command.

## Example

To configure the maximum attempts for user's trying to login or promote the privilege to be 9:

```
DGS-1510-28XMP/ME:admin# config authen parameter attempt 9
Command: config authen parameter attempt 9

Success.

DGS-1510-28XMP/ME:admin#
```

## 5-26 show authen parameter

### Description

This command is used to display the parameters of authentication.

### Format

**show authen parameter**

### Parameters

None.

### Restrictions

Only Administrators can issue this command.

### Example

To display the parameters of authentication:

```
DGS-1510-28XMP/ME:admin# show authen parameter
Command: show authen parameter

Response Timeout : 60 seconds
User Attempts    : 9

DGS-1510-28XMP/ME:admin#
```

## 5-27 enable admin

### Description

This command is used to enter the administrator level privilege. Promote the "user" privilege level to "admin" level. When the user enters this command, the authentication method tacacs, xtacacs, tacacs+, user-defined server groups, local\_enable or none will be used to authenticate the user. Because TACACS, XTACACS and RADIUS don't support "enable" function in itself, if user wants to use either one of these 3 protocols to do enable authentication, user must create a special account on the server host first, which has a username "enable" and then configure its password as the enable password to support "enable" function.

This command cannot be used when authentication policy is disabled.

### Format

**enable admin**

### Parameters

None.

### Restrictions

None.

### Example

To enable administrator lever privilege:

```
DGS-1510-28XMP/ME:puser# enable admin
Command: enable admin

PassWord:*****
Success.

DGS-1510-28XMP/ME:admin#
```

## 5-28 config admin local\_enable

### Description

This command is used to configure the local enable password of administrator level privilege. When the user chooses the "local\_enable" method to promote the privilege level, the enable password of local device is needed. When the password information is not specified in the command, the system will prompt the user to input the password interactively. For this case, the user can only input the plain text password. If the password is present in the command, the user can select to input the password in the plain text form or in the encrypted form. The encryption algorithm is based on SHA-1.

### Format

```
config admin local_enable {encrypt [plain_text | sha_1] <password>}
```

### Parameters

**encrypt** - (Optional) Specifies the password form.

**plain\_text** - Specifies the password in plain text form.

**sha\_1** - Specifies the password in SHA-1 encrypted form.

**<password>** - (Optional) Enter the password for promoting the privilege level. The length for a password in plain-text form and SHA-1 encrypted form are different.

plain-text: Passwords can be from a minimum of 0 to a maximum of 15 characters.

SHA-1: The length of encrypted passwords is fixed to 35 bytes long and the password is case-sensitive.

### Restrictions

Only Administrators can issue this command.

### Example

To configure the administrator password:

```
DGS-1510-28XMP/ME:admin# config admin local_enable
Command: config admin local_ebable

Enter the old password:
Enter the case-sensitive new password:*****
Enter the new password again for confirmation:*****
Success.

DGS-1510-28XMP/ME:admin#
```

## Chapter 6 Access Control List (ACL) Command List

---

```
create access_profile profile_id <value 1-512> {profile_name <name 32>} [ethernet{vlan {<hex 0x0-0x0fff>} | source_mac <macmask 000000000000-ffffffff>} | destination_mac <macmask 000000000000-ffffffff>} | 802.1p | ethernet_type}ip {vlan {<hex 0x0-0x0fff>} | source_ip_mask <netmask>} | destination_ip_mask <netmask>} | dscp | [icmp {type | code} | igmp {type} | tcp {src_port_mask <hex0x0-0xffff>} | dst_port_mask <hex 0x0-0xffff>} | flag_mask [all | {urg | ack | psh | rst | syn | fin}]} | udp {src_port_mask <hex 0x0-0xffff>} | dst_port_mask <hex 0x0-0xffff>} | protocol_id_mask <hex 0x0-0xff>} {user_define_mask <hex 0x0-0xffffffff>}} | packet_content_mask {offset_chunk_1 <value 0-31> <hex 0x0-0xffffffff>} | offset_chunk_2 <value 0-31> <hex 0x0-0xffffffff>} | offset_chunk_3<value 0-31> <hex 0x0-0xffffffff>} | offset_chunk_4 <value 0-31> <hex 0x0-0xffffffff>} | ipv6 {class {flowlabel | source_ipv6_mask <ipv6mask>} | destination_ipv6_mask <ipv6mask>} | [tcp {src_port_mask <hex 0x0-0xffff>} | dst_port_mask <hex 0x0-0xffff>} | udp {src_port_mask <hex 0x0-0xffff>} | dst_port_mask <hex 0x0-0xffff>} | icmp {type | code}]]]
```

---

```
delete access_profile [profile_id <value 1-512> | profile_name <name 32> | all]
```

---

```
config access_profile [profile_id <value 1-512> | profile_name <name 32>] [add access_id [auto_assign | <value 1-128>] [ethernet {[vlan <vlan_name 32> | vlan_id <vlanid 1-4094>} {mask <hex 0x0-0x0fff>} | source_mac <macaddr> {mask <macmask>} | destination_mac <macaddr> {mask <macmask>} | 802.1p <value 0-7> | ethernet_type <hex 0x0-0xffff>} | ip {[vlan <vlan_name 32> | vlan_id <vlanid 1-4094>} {mask <hex 0x0-0x0fff>} | source_ip <ipaddr> {mask <netmask>} | destination_ip <ipaddr> {mask <netmask>} | dscp <value 0-63>} | [icmp {type <value 0-255> | code <value 0-255>} | igmp {type <value 0-255>} | tcp {src_port <value 0-65535> {mask <hex 0x0-0xffff>} | dst_port <value 0-65535> {mask <hex 0x0-0xffff>} | flag [all | {urg | ack | psh | rst | syn | fin}]} | udp {src_port <value 0-65535> {mask <hex 0x0-0xffff>} | dst_port <value 0-65535> {mask <hex 0x0-0xffff>}} | protocol l_id <value 0-255> {user_define <hex 0x0-0xffffffff>} {mask <hex 0x0-0xffffffff>}}] | packet_content {offset_chunk_1 <hex 0x0-0xffffffff>} {mask <hex 0x0-0xffffffff>} | offset_chunk_2 <hex 0x0-0xffffffff>} {mask <hex 0x0-0xffffffff>} | offset_chunk_3 <hex 0x0-0xffffffff>} {mask <hex 0x0-0xffffffff>} | offset_chunk_4 <hex 0x0-0xffffffff>} {mask <hex 0x0-0xffffffff>}} | ipv6 {class <value 0-255> | flowlabel <hex 0x0-0xffff>} | source_ipv6 <ipv6addr> {mask <ipv6mask>} | destination_ipv6 <ipv6addr> {mask <ipv6mask>} | [tcp {src_port <value 0-65535> {mask <hex 0x0-0xffff>} | dst_port <value 0-65535> {mask <hex 0x0-0xffff>}} | udp {src_port <value 0-65535> {mask <hex 0x0-0xffff>} | dst_port <value 0-65535> {mask <hex 0x0-0xffff>}} | icmp {type<value 0-255> | code <value 0-255>}}] [port [<portlist> | all] | vlan_based [vlan <vlan_name 32> | vlan_id <vlanid 1-4094>]] [permit {priority <value 0-7> {replace_priority} | [replace_dscp_with <value 0-63> | replace_tos_precedence_with <value 0-7>] | counter [enable | disable]} | mirror | deny] {time_range <range_name 32>} | delete access_id <value 1-128>]
```

---

```
show access_profile {[profile_id <value 1-512> | profile_name <name 32>}]
```

---

```
config flow_meter [profile_id <value 1-512> | profile_name <name 32>] access_id <value 1-128> [rate [<value 1-10485760>] {burst_size [<value 1-262144>]} rate_exceed [drop_packet | remark_dscp <value 0-63>] | tr_tcm cir <value 1-10485760> {cbs <value 1-262144>} pir <value 1-10485760> {pbs <value 1-262144>} {[color_blind | color_aware]} {conform [permit | replace_dscp <value 0-63>] {counter [enable | disable]}} exceed [permit {replace_dscp <value 0-63>} | drop] {counter [enable | disable]} violate [permit {replace_dscp <value 0-63>} | drop] {counter [enable | disable]} | sr_tcm cir <value 1-10485760> cbs <value 1-262144> ebs <value 1-262144> {[color_blind | color_aware]} {conform [permit | replace_dscp <value 0-63>] {counter [enable | disable]}} exceed [permit {replace_dscp <value 0-63>} | drop] {counter [enable | disable]} violate [permit {replace_dscp <value 0-63>} | drop] {counter [enable | disable]} | delete]
```

---

```
show flow_meter {[profile_id <value 1-512> | profile_name <name 32>} {access_id <value 1-128>}]
```

---

```
config time_range <range_name 32> [hours start_time <time hh:mm:ss> end_time <time hh:mm:ss> weekdays <daylist> | delete]
```

---

```
show time_range
```

---

```
show current_config access_profile
```

---

## 6-1 create access\_profile

**Description**

This command is used to create access control list profiles.

When creating ACL, each profile can have 128 rules/access IDs. However, when creating ACL type as Ethernet or IPv4 at the first time, 62 rules are reserved for the system. In this case, only 66 rules are available to configure. You can use the **show access\_profile** command to see the available rules.

Profile ID 1 is reserved for Ethernet profile, and profile ID 2 is reserved for IPv4 profile. Both IDs cannot be deleted from the Switch.

The Switch supports the following profile types:

1. MAC DA, MAC SA, Ethernet Type, Outer VLAN Tag
2. Outer VLAN Tag, Source IPv4, Destination IPv4, DSCP, Protocol ID, TCP/UDP Source Port, TCP/UDP Destination Port, ICMP type/code, IGMP type, TCP flags
3. Source IPv6 Address, Class, Flow Label, IPv6 Protocol (Next Header)
4. Destination IPv6 Address, Class, Flow Label, IPv6 Protocol (Next Header)
5. Class, Flow Label, IPv6 Protocol (Next Header), TCP/UDP source port, TCP/UDP destination port, ICMP type/code, Outer VLAN Tag
6. Packet Content, Outer VLAN Tag
7. MAC SA, Ethernet Type, Source IPv4/ARP sender IP, Outer VLAN Tag
8. LLC Header/SNAP Header, Outer VLAN Tag
9. Source IPv6 Address, Class, IPv6 Protocol (Next Header), Outer VLAN Tag
10. Destination IPv6 Address, Class, IPv6 Protocol (Next Header), Outer VLAN Tag

**Format**

```
create access_profile profile_id <value 1-512> {profile_name <name 32>} [ethernet{vlan {<hex 0x0-0x0fff>} | source_mac <macmask 000000000000-ffffffff> | destination_mac <macmask 000000000000-ffffffff> | 802.1p | ethernet_type}|ip {vlan {<hex 0x0-0x0fff>} | source_ip_mask <netmask> | destination_ip_mask <netmask> | dscp | [icmp {type | code} | igmp {type} | tcp {src_port_mask <hex0x0-0xffff> | dst_port_mask <hex 0x0-0xffff> | flag_mask [all | {urg | ack | psh | rst | syn | fin}]} | udp {src_port_mask <hex 0x0-0xffff> | dst_port_mask <hex 0x0-0xffff>} | protocol_id_mask <hex 0x0-0xff> {user_define_mask <hex 0x0-0xffffffff>}}] | packet_content_mask {offset_chunk_1 <value 0-31> <hex 0x0-0xffffffff> | offset_chunk_2 <value 0-31> <hex 0x0-0xffffffff> | offset_chunk_3<value 0-31> <hex 0x0-0xffffffff> | offset_chunk_4 <value 0-31> <hex 0x0-0xffffffff>} | ipv6 {class | flowlabel | source_ipv6_mask <ipv6mask> | destination_ipv6_mask <ipv6mask> | [tcp {src_port_mask <hex 0x0-0xffff> | dst_port_mask <hex 0x0-0xffff>} | udp {src_port_mask <hex 0x0-0xffff> | dst_port_mask <hex 0x0-0xffff>} | icmp {type | code}]]]
```

**Parameters**


---

**<value 1-512>** - Enter the profile ID here. This value must be between 1 and 512.

---

**profile\_name** – (Optional) Specifies the name of the profile. The maximum length is 32 characters.

**<name 32>** - Enter the profile name here.

---

**ethernet** - Specifies this is an Ethernet mask.

**vlan** - (Optional) Specifies a VLAN mask. Only the last 12 bits of the mask will be considered.

**<hex 0x0-0x0fff>** - Enter the VLAN mask value here.

**source\_mac** - (Optional) Specifies the source MAC mask.

**<macmask>** - Enter the source MAC address used here.

**destination\_mac** - (Optional) Specifies the destination MAC mask.

**<macmask>** - Enter the destination MAC address used here.

**802.1p** - (Optional) Specifies the 802.1p priority tag mask.

---

---

**ethernet\_type** - (Optional) Specifies the Ethernet type mask.

---

**ip** - Specifies this is a IPv4 mask.

**vlan** - (Optional) Specifies a VLAN mask. Only the last 12 bits of the mask will be considered.

**<hex 0x0-0x0fff>** - Enter the VLAN mask value here.

**source\_ip\_mask** - (Optional) Specifies a source IP address mask.

**<netmask>** - Enter the source IP address mask here.

**destination\_ip\_mask** - (Optional) Specifies a destination IP address mask.

**<netmask>** - Enter the destination IP address mask here.

**dscp** - (Optional) Specifies the DSCP mask.

**icmp** - (Optional) Specifies that the rule applies to ICMP traffic.

**type** - Specifies the type of ICMP traffic.

**code** - Specifies the code of ICMP traffic

**igmp** - (Optional) Specifies that the rule applies to IGMP traffic.

**type** - Specifies the type of IGMP traffic.

**tcp** - (Optional) Specifies that the rule applies to TCP traffic.

**src\_port\_mask** - (Optional) Specifies the TCP source port mask.

**<hex 0x0-0xffff>** - Enter the TCP source port mask here.

**dst\_port\_mask** - (Optional) Specifies the TCP destination port mask.

**<hex 0x0-0xffff>** - Enter the TCP destination port mask here.

**flag\_mask** - (Optional) Specifies the TCP flag field mask.

**all** – Specifies that all the flags will be used for the TCP mask.

**urg** – (Optional) Specifies that the TCP flag field will be set to 'urg'.

**ack** - (Optional) Specifies that the TCP flag field will be set to 'ack'.

**psh** - (Optional) Specifies that the TCP flag field will be set to 'psh'.

**rst** - (Optional) Specifies that the TCP flag field will be set to 'rst'.

**syn** - (Optional) Specifies that the TCP flag field will be set to 'syn'.

**fin** - (Optional) Specifies that the TCP flag field will be set to 'fin'.

**udp** - (Optional) Specifies that the rule applies to UDP traffic.

**src\_port\_mask** - (Optional) Specifies the UDP source port mask.

**<hex 0x0-0xffff>** - Enter the UDP source port mask here.

**dst\_port\_mask** - (Optional) Specifies the UDP destination port mask.

**<hex 0x0-0xffff>** - Enter the UDP destination port mask here.

**protocol\_id\_mask** - (Optional) Specifies that the rule applies to IP protocol ID traffic.

**<0x0-0xff>** - Enter the protocol ID mask here.

**user\_define\_mask** - (Optional) Specifies that the rule applies to the IP protocol ID, and that the mask option behind the IP header length is 4 bytes.

**<hex 0x0-0xffffffff>** - Enter a user-defined mask value here.

---

**packet\_content\_mask** - Specifies the packet content mask. Only one packet\_content\_mask profile can be created.

**offset\_chunk\_1** - (Optional) Specifies that the offset chunk 1 will be used.

**<value 0-31>** - Enter the offset chunk 1 value here. This value must be between 0 and 31.

**<hex 0x0-0xffffffff>** - Enter the offset chunk 1 mask here.

**offset\_chunk\_2** - (Optional) Specifies that the offset chunk 2 will be used.

**<value 0-31>** - Enter the offset chunk 2 value here. This value must be between 0 and 31.

**<hex 0x0-0xffffffff>** - Enter the offset chunk 2 mask here.

**offset\_chunk\_3** - (Optional) Specifies that the offset chunk 3 will be used.

**<value 0-31>** - Enter the offset chunk 3 value here. This value must be between 0 and 31.

**<hex 0x0-0xffffffff>** - Enter the offset chunk 3 mask here.

**offset\_chunk\_4** - (Optional) Specifies that the offset chunk 4 will be used.

**<value 0-31>** - Enter the offset chunk 4 value here. This value must be between 0 and 31.

---

---

<hex 0x0-0xffffffff> - Enter the offset chunk 4 mask here.

---

**ipv6** - Specifies this is the IPv6 mask.

**class** - (Optional) Specifies the IPv6 class.

**flowlabel** - (Optional) Specifies the IPv6 flow label.

**source\_ipv6\_mask** - (Optional) Specifies an IPv6 source sub-mask.

<ipv6mask> - Enter the source IPv6 mask value here.

**destination\_ipv6\_mask** - (Optional) Specifies an IPv6 destination sub-mask.

<ipv6mask> - Enter the destination IPv6 mask value here.

**tcp** - (Optional) Specifies that the rule applies to TCP traffic.

**src\_port\_mask** - (Optional) Specifies an IPv6 TCP source port mask.

<hex 0x0-0xffff> - Enter the TCP source port mask value here.

**dst\_port\_mask** - (Optional) Specifies an IPv6 TCP destination port mask.

<hex 0x0-0xffff> - Enter the TCP destination port mask value here.

**udp** - (Optional) Specifies that the rule applies to UDP traffic.

**src\_port\_mask** - Specifies the UDP source port mask.

<hex 0x0-0xffff> - Enter the UDP source port mask value here.

**dst\_port\_mask** - Specifies the UDP destination port mask.

<hex 0x0-0xffff> - Enter the UDP destination port mask value here.

**icmp** - (Optional) Specifies a mask for ICMP filtering.

**type** - (Optional) Specifies the inclusion of the ICMP type field in the mask.

**code** - (Optional) Specifies the inclusion of the ICMP code field in the mask.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To create three access profiles:

```
DGS-1510-28XMP/ME:admin# create access_profile profile_id 1 profile_name t1 ethernet vlan
source_mac 00-00-00-00-00-01 destination_mac 00-00-00-00-00-02 802.1p ethernet_type
Command: create access_profile profile_id 1 profile_name 1 ethernet vlan source_mac 00-00-00-
00-00-01 destination_mac 00-00-00-00-00-02 802.1p ethernet_type

Success.

DGS-1510-28XMP/ME:admin# create access_profile profile_id 2 profile_name 2 ip vlan
source_ip_mask 20.0.0.0 destination_ip_mask 10.0.0.0 dscp icmp type code
Command: create access_profile profile_id 2 profile_name t2 ip vlan source_ip_mask 20.0.0.0
destination_ip_mask 10.0.0.0 dscp icmp type code

Success.

DGS-1510-28XMP/ME:admin# create access_profile profile_id 4 profile_name 4
packet_content_mask offset_chunk_1 3 0xFFFF offset_chunk_2 5 0xFF00 offset_chunk_3 14
0xFFFF0000 offset_chunk_4 16 0xFF000000
Command: create access_profile profile_id 4 profile_name 4 packet_content_mask offset_chunk_1
3 0xFFFF offset_chunk_2 5 0xFF00 offset_chunk_3 14 0xFFFF0000 offset_chunk_4 16 0xFF000000

Success.

DGS-1510-28XMP/ME:admin#
```

## 6-2 delete access\_profile

**Description**

This command is used to delete access list profiles. ACL profile ID 1 and 2 cannot be deleted. When this command is issued for profile ID 1 and 2, all the settings within these profiles will be removed. When this command is issued for profile ID 3 and more, the complete profile will be deleted entirely.

**Format**

**delete access\_profile [profile\_id <value 1-512> | profile\_name <name 32> | all]**

**Parameters**

**profile\_id** - Specifies the index of the access list profile.

**<value 1-512>** - Enter the profile ID value here. This value must be between 1 and 512.

**profile\_name** - Specifies the name of the profile.

**<name 32>** - Enter the profile name. The maximum length is 32 characters.

**all** - Specifies that the whole access list profile will be deleted.

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To delete the access list rule with a profile ID of 1:

```
DGS-1510-28XMP/ME:admin# delete access_profile profile_id 1
Command: delete access_profile profile_id 1

Success.

DGS-1510-28XMP/ME:admin#
```

## 6-3 config access\_profile

**Description**

This command is used to configure an access list entry. The ACL mirror function works after the mirror has been enabled and the mirror port has been configured using the mirror command.

When applying an access rule to a target, the setting specified in the VLAN field will not take effect if the target is a VLAN.

**Format**

**config access\_profile [profile\_id <value 1-512> | profile\_name <name 32>] [add access\_id [auto\_assign | <value 1-128>] [ethernet {[vlan <vlan\_name 32> | vlan\_id <vlanid 1-4094>] {mask <hex 0x0-0x0fff>} | source\_mac <macaddr> {mask <macmask>} | destination\_mac <macaddr> {mask <macmask>} | 802.1p <value 0-7> | ethernet\_type <hex 0x0-0xffff>} | ip {[vlan <vlan\_name 32> | vlan\_id <vlanid 1-4094>] {mask <hex 0x0-0x0fff>} | source\_ip <ipaddr> {mask <netmask>} | destination\_ip <ipaddr> {mask <netmask>} | dscp <value 0-63> | [icmp {type <value 0-255> | code <value 0-255>} | igmp {type <value 0-255>} | tcp {src\_port <value 0-65535> {mask <hex 0x0-0xffff>} | dst\_port <value 0-65535> {mask <hex 0x0-0xffff>} | flag [all | {urg | ack | psh | rst | syn | fin}}] | udp {src\_port <value 0-65535> {mask <hex 0x0-0xffff>} | dst\_port**



```
<value 0-65535> {mask <hex 0x0-0xffff>}} | protocol l_id <value 0-255> {user_define <hex 0x0-0xffffffff>
{mask <hex 0x0-0xffffffff>}} | packet_content {offset_chunk_1 <hex 0x0-0xffffffff> {mask <hex 0x0-
0xffffffff>} | offset_chunk_2 <hex 0x0-0xffffffff> {mask <hex 0x0-0xffffffff>} | offset_chunk_3 <hex 0x0-
0xffffffff> {mask <hex 0x0-0xffffffff>} | offset_chunk_4 <hex 0x0-0xffffffff> {mask <hex 0x0-0xffffffff>}} | ipv6
{class <value 0-255> | flowlabel <hex 0x0-0xffff> | source_ipv6 <ipv6addr> {mask<ipv6mask>} |
destination_ipv6 <ipv6addr> {mask <ipv6mask>} | [tcp {src_port <value 0-65535> {mask <hex 0x0-0xffff>} |
dst_port <value 0-65535> {mask <hex 0x0-0xffff>}} | udp {src_port <value 0-65535> {mask <hex 0x0-0xffff>}
| dst_port <value 0-65535> {mask <hex 0x0-0xffff>}} | icmp {type<value 0-255> | code <value 0-255>}}] [port
[<portlist> | all] | vlan_based [vlan <vlan_name 32> | vlan_id <vlanid 1-4094>]] [permit {priority <value 0-7>
{replace_priority} | [replace_dscp_with <value 0-63> | replace_tos_precedence_with <value 0-7>] | counter
[enable | disable]} | mirror | deny] {time_range <range_name 32>} | delete access_id <value 1-128>]
```

## Parameters

**profile\_id** - Specifies the index of the access list profile.

**<value 1-512>** - Enter the profile ID value here. This value must be between 1 and 512.

**profile\_name** - Specifies the name of the profile.

**<name 32>** - Enter the profile name here. This name can be up to 32 characters long.

**add** - Specifies that a profile or a rule will be added.

**access\_id** - Specifies the index of the access list entry.

**auto\_assign** - Specifies that the access ID will automatically be assigned.

**<value 1- 128>** - Enter the access ID used here. This value must be between 1 and 128.

**ethernet** - Specifies to configure the Ethernet access profile.

**vlan** - (Optional) Specifies the VLAN name.

**<vlan\_name 32>** - Enter the name of the VLAN here. This name can be up to 32 characters long.

**vlan\_id** - (Optional) Specifies the VLAN ID used.

**<vlanid 1-4094>** - Enter the VLAN ID used here. This value must be between 1 and 4094.

**mask** - (Optional) Specifies an additional mask parameter that can be configured.

**<hex 0x0-0x0fff>** - Enter the mask value here.

**source\_mac** - (Optional) Specifies the source MAC address.

**<macaddr>** - Enter the source MAC address used for this configuration here.

**mask** - (Optional) Specifies an additional mask parameter that can be configured.

**<macmask>** - Enter the source MAC mask used here.

**destination\_mac** - (Optional) Specifies the destination MAC address.

**<macaddr>** - Enter the destination MAC address used for this configuration here.

**mask** - (Optional) Specifies an additional mask parameter that can be configured.

**<macmask>** - Enter the destination MAC mask here.

**802.1p** - (Optional) Specifies the value of the 802.1p priority tag.

**<value 0-7>** - Enter the 802.1p priority tag value. The priority tag ranges from 1 to 7.

**ethernet\_type** - (Optional) Specifies the Ethernet type.

**<hex 0x0-0xffff>** - Enter the Ethernet type mask here.

**ip** - Specifies to configure the IP access profile.

**vlan** - (Optional) Specifies a VLAN name.

**<vlan\_name 32>** - Enter the name of the VLAN here. This name can be up to 32 characters long.

**vlan\_id** - (Optional) Specifies that VLAN ID used.

**<vlanid 1-4094>** - Enter the VLAN ID used here. This value must be between 1 and 4094.

**mask** - (Optional) Specifies an additional mask parameter that can be configured.

**<hex 0x0-0x0fff>** - Enter the mask value here.

**source\_ip** - (Optional) Specifies an IP source address.

**<ipaddr>** - Enter the source IP address used for this configuration here.

**mask** - (Optional) Specifies an additional mask parameter that can be configured.

- <netmask>** - Enter the source netmask used here.
- destination\_ip** - (Optional) Specifies an IP destination address.
- <ipaddr>** - Enter the destination IP address used for this configuration here.
- mask** - (Optional) Specifies an additional mask parameter that can be configured.
- <netmask>** - Enter the destination netmask used here.
- dscp** - (Optional) Specifies the value of DSCP. The DSCP value ranges from 0 to 63.
- <value 0-63>** - Enter the DSCP value here.
- icmp** - (Optional) Specifies to configure the ICMP parameters.
- type** - (Optional) Specifies that the rule will apply to the ICMP Type traffic value.
- <value 0-255>** - Enter the ICMP type traffic value here. This value must be between 0 and 255.
- code** - (Optional) Specifies that the rule will apply to the ICMP Code traffic value.
- <value 0-255>** - Enter the ICMP code traffic value here. This value must be between 0 and 255.
- igmp** - (Optional) Specifies to configure the IGMP parameters.
- type** - (Optional) Specifies that the rule will apply to the IGMP Type traffic value.
- <value 0-255>** - Enter the IGMP type traffic value here. This value must be between 0 and 255.
- tcp** - Specifies to configure the TCP parameters.
- src\_port** - (Optional) Specifies that the rule will apply to a range of TCP source ports.
- <value 0-65535>** - Enter the TCP source port value here. This value must be between 0 and 65535.
- mask** - (Optional) Specifies an additional mask parameter that can be configured.
- <hex 0x0-0xffff>** - Enter the source port mask here.
- dst\_port** - (Optional) Specifies that the rule will apply to a range of TCP destination ports.
- <value 0-65535>** - Enter the TCP destination port value here. This value must be between 0 and 65535.
- mask** - (Optional) Specifies an additional mask parameter that can be configured.
- <hex 0x0-0xffff>** - Enter the destination port mask here.
- flag** - (Optional) Specifies the TCP flag fields.
- all** - Specifies that all the TCP flags will be used in this configuration.
- urg** - (Optional) Specifies that the TCP flag field will be set to 'urg'.
- ack** - (Optional) Specifies that the TCP flag field will be set to 'ack'.
- psh** - (Optional) Specifies that the TCP flag field will be set to 'psh'.
- rst** - (Optional) Specifies that the TCP flag field will be set to 'rst'.
- syn** - (Optional) Specifies that the TCP flag field will be set to 'syn'.
- fin** - (Optional) Specifies that the TCP flag field will be set to 'fin'.
- udp** - Specifies to configure the UDP parameters.
- src\_port** - (Optional) Specifies the UDP source port range.
- <value 0-65535>** - Enter the UDP source port value here. This value must be between 0 and 65535.
- mask** - (Optional) Specifies an additional mask parameter that can be configured.
- <hex 0x0-0xffff>** - Enter the source port mask here.
- dst\_port** - (Optional) Specifies the UDP destination port range.
- <value 0-65535>** - Enter the UDP destination port value here. This value must be between 0 and 65535.
- mask** - (Optional) Specifies an additional mask parameter that can be configured.
- <hex 0x0-0xffff>** - Enter the destination port mask here.
- protocol\_id** - Specifies that the rule will apply to the value of IP protocol ID traffic.
- <value 0-255>** - Enter the protocol ID used here.
- user\_define** - (Optional) Specifies that the rule will apply to the IP protocol ID and that the mask options behind the first 4 bytes of the IP payload.
- <hex 0x0-0xffffffff>** - Enter the user-defined mask value here.
- mask** - Specifies an additional mask parameter that can be configured.
- <hex 0x0-0xffffffff>** - Enter the mask value here.

---

**packet\_content** - Specifies the offset. Each offset defines 4 bytes of data which is identified as a single UDF

---

---

field.

**offset\_chunk\_1** - (Optional) Specifies the value of the packet bytes to be matched. Offset chunk 1 will be used.

**<hex 0x0-0xffffffff>** - Enter the offset chunk 1 mask here.

**offset\_chunk\_2** - (Optional) Specifies the value of the packet bytes to be matched. Offset chunk 2 will be used.

**<hex 0x0-0xffffffff>** - Enter the offset chunk 2 mask here.

**offset\_chunk\_3** - (Optional) Specifies the value of the packet bytes to be matched. Offset chunk 3 will be used.

**<hex 0x0-0xffffffff>** - Enter the offset chunk 3 mask here.

**offset\_chunk\_4** - (Optional) Specifies the value of the packet bytes to be matched. Offset chunk 4 will be used.

**<hex 0x0-0xffffffff>** - Enter the offset chunk 4 mask here.

---

**ipv6** - Specifies that the rule applies to IPv6 fields.

**class** - (Optional) Specifies the value of the IPv6 class.

**<value 0-255>** - Enter the IPv6 class value here. This value must be between 0 and 255.

**flowlabel** - (Optional) Specifies the value of the IPv6 flow label.

**<hex 0x0-0xffff>** - Enter the IPv6 flow label mask used here.

**source\_ipv6** - (Optional) Specifies the value of the IPv6 source address.

**<ipv6addr>** - Enter the source IPv6 address used for this configuration here.

**mask** - (Optional) Specifies an additional mask parameter that can be configured.

**<ipv6mask>** - Enter the source IPv6 mask here.

**destination\_ipv6** - (Optional) Specifies the value of the IPv6 destination address.

**<ipv6addr>** - Enter the destination IPv6 address used for this configuration here.

**mask** - (Optional) Specifies an additional mask parameter that can be configured.

**<ipv6mask>** - Enter the destination IPv6 mask here.

**tcp** - (Optional) Specifies to configure the TCP parameters.

**src\_port** - Specifies the value of the IPv6 Layer 4 TCP source port.

**<value 0-65535>** - Enter the TCP source port value here. This value must be between 0 and 65535.

**mask** - Specifies an additional mask parameter that can be configured.

**<hex 0x0-0xffff>** - Enter the TCP source port mask value here.

**dst\_port** - (Optional) Specifies the value of the IPv6 Layer 4 TCP destination port.

**<value 0-65535>** - Enter the TCP destination port value here. This value must be between 0 and 65535.

**mask** - Specifies an additional mask parameter that can be configured.

**<hex 0x0-0xffff>** - Enter the TCP destination port mask value here.

**udp** - (Optional) Specifies to configure the UDP parameters.

**src\_port** - Specifies the value of the IPv6 Layer 4 UDP source port.

**<value 0-65535>** - Enter the UDP source port value here. This value must be between 0 and 65535.

**mask** - Specifies an additional mask parameter that can be configured.

**<hex 0x0-0xffff>** - Enter the UDP source port mask value here.

**dst\_port** - Specifies the value of the IPv6 Layer 4 UDP destination port.

**<value 0-65535>** - Enter the UDP destination port value here. This value must be between 0 and 65535.

**mask** - Specifies an additional mask parameter that can be configured.

**<hex 0x0-0xffff>** - Enter the UDP destination port mask value here.

**icmp** - (Optional) Specifies to configure the ICMP parameters used.

**type** - (Optional) Specifies that the rule applies to the value of ICMP type traffic.

**<value 0-255>** - Enter the ICMP type traffic value here. This value must be between 0 and 255.

**code** - (Optional) Specifies that the rule applies to the value of ICMP code traffic.

**<value 0-255>** - Enter the ICMP code traffic value here. This value must be between 0 and 255.

---

**port** - Specifies the port list used for this configuration.

**<portlist>** - Enter a list of ports used for the configuration here.

**all** - Specifies that all the ports will be used for this configuration.

**vlan\_based** - Specifies that the rule will be VLAN based.

**vlan** - Specifies the VLAN name used for this configuration.

**<vlan\_name>** - Enter the VLAN name used for this configuration here.

**vlan\_id** - Specifies the VLAN ID used for this configuration.

**<vlanid 1-4094>** - Enter the VLAN ID used here. This value must be between 1 and 4094.

**permit** - Specifies that packets matching the access rule are permitted by the Switch.

**priority** - (Optional) Specifies that the priority of the packet will change if the packet matches the access rule.

**<value 0-7>** - Enter the priority value here. This value must be between 0 and 7.

**replace\_priority** - (Optional) Specifies that the 802.1p priority of the outgoing packet will be replaced.

**replace\_dscp\_with** - (Optional) Specifies that the DSCP of the outgoing packet is changed with the new value. If using this action without an action priority, the packet will be sent to the default TC.

**<value 0-63>** - Enter the replace DSCP with value here. This value must be between 0 and 63.

**replace\_tos\_precedence\_with** - (Optional) Specifies that the IP precedence of the outgoing packet is changed with the new value. If used without an action priority, the packet is sent to the default TC.

**<value 0-7>** - Enter the replace ToS precedence with value here. This value must be between 0 and 7.

**counter** - (Optional) Specifies whether the ACL counter feature is enabled or disabled. This parameter is optional. The default option is disabled. If the rule is not bound with the flow\_meter, all matching packets are counted. If the rule is bound with the flow\_meter, then the "counter" is overridden.

**enable** - Specifies that the ACL counter feature will be enabled.

**disable** - Specifies that the ACL counter feature will be disabled.

**mirror** - Specifies that packets matching the access rules are copied to the mirror port.

**deny** - Specifies that packets matching the access rule are filtered by the Switch.

**time\_range** - (Optional) Specifies the name of the time range entry.

**<range\_name 32>** - Enter the time range name here. This name can be up to 32 characters long.

**delete** - Specifies that a profile or a rule will be deleted.

**access\_id** - Specifies the index of the access list entry.

**<value 1- 128>** - Enter the access ID used here. This value must be between 1 and 128.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure a rule entry for a packet content mask profile:

```
DGS-1510-28XMP/ME:admin#config access_profile profile_id 4 add access_id auto_assign
packet_content offset_chunk_3 0xF0 port all deny
Command: config access_profile profile_id 4 add access_id auto_assign packet_content
offset_chunk_3 0xF0 port all deny
```

Success.

```
DGS-1510-28XMP/ME:admin#
```

## 6-4 show access\_profile

**Description**

This command is used to display the current access list table.

**Format**

**show access\_profile** {[profile\_id <value 1-512> | profile\_name <name 32>]}

**Parameters**

**profile\_id** - (Optional) Specifies the index of the access list profile.

**<value 1-512>** - Enter the profile ID used here. This value must be between 1 and 512.

**profile\_name** - (Optional) Specifies the name of the profile.

**<name 32>** - Enter the profile name used here. This name can be up to 32 characters long.

**Restrictions**

None.

**Example**

To display the current access list table:

```
DGS-1510-28XMP/ME:admin#show access_profile
Command: show access_profile

Access Profile Table

Total User Set Rule Entries : 1
Total Used HW Entries      : 125
Total Available HW Entries : 899

=====
Profile ID: 1      Profile name: t1  Type: Ethernet

MASK on
  VLAN           : 0xFFF
  Source MAC     : 00-00-00-00-00-01
  Destination MAC : 00-00-00-00-00-02
  802.1p
  Ethernet Type

Available HW Entries : 66

=====

=====
Profile ID: 2      Profile name: 2  Type: IPv4
CTRL+C  ESC  q  Quit  SPACE  n  Next Page  ENTER  Next Entry  a  All
```

The following example displays an access profile that supports an entry mask for each rule:

```
DGS-1510-28XMP/ME:admin#show access_profile profile_id 1
```

```
Command: show access_profile profile_id 1
```

```
Access Profile Table
```

```
=====
Profile ID: 1      Profile name: t1  Type: Ethernet
```

```
MASK on
```

```
VLAN           : 0xFFF
Source MAC      : 00-00-00-00-00-01
Destination MAC : 00-00-00-00-00-02
802.1p
Ethernet Type
```

```
Available HW Entries : 66
```

```
=====
DGS-1510-28XMP/ME:admin#
```

The following example displays the packet content mask profile for the profile with an ID of 4:

```
DGS-1510-28XMP/ME:admin#show access_profile profile_id 4
```

```
Command: show access_profile profile_id 4
```

```
Access Profile Table
```

```
=====
Profile ID: 4      Profile name: 4  Type: User Defined
```

```
MASK on
```

```
offset_chunk_1 : 3      value : 0x0000FFFF
offset_chunk_2 : 5      value : 0x0000FF00
offset_chunk_3 : 14     value : 0xFFFF0000
offset_chunk_4 : 16     value : 0xFF000000
```

```
Available HW Entries : 127
```

```
-----
Rule ID : 1      (auto assign)   Ports: 1-28
```

```
Match on
```

```
offset_chunk_3 : 14     value : 0x00000000
```

```
Action:
```

```
Deny
```

```
=====
CTRL+C  ESC  q  Quit  SPACE  n  Next Page  ENTER  Next Entry  a  All
```

## 6-5 config flow\_meter

**Description**

This command is used to configure the flow-based metering function. The metering function supports three modes: single rate two color, single rate three color, and two rate three color. The access rule must be created before the parameters of this function can be applied.

For the single rate two color mode, users may set the preferred bandwidth for this rule, in Kbps, and once the bandwidth has been exceeded, overflowing packets will either be dropped or have a drop precedence set, depending on the user configuration.

For single rate three color mode, users need to specify the committed rate, in Kbps, the committed burst size, and the excess burst size.

For the two rate three color mode, users need to specify the committed rate in Kbps, the committed burst size, the peak rate and the peak burst size.

There are two cases for mapping the color of a packet: Color-blind mode and Color-aware mode. In the Color-blind case, the determination for the packet's color is based on the metering result. In the Color-aware case, the determination for the packet's color is based on the metering result and the ingress DSCP.

When color-blind or color-aware is not specified, color-blind is the default mode.

The green color packet will be treated as the conforming action, the yellow color packet will be treated as the exceeding action, and the red color packet will be treated as the violating action.

The replace DSCP action can be performed on packets that conform (GREEN) and packets that do not conform (YELLOW and RED). If drop YELLOW/RED is selected, the action to replace the DSCP will not take effect.

**Format**

```
config flow_meter [profile_id <value 1-512> | profile_name <name 32>] access_id <value 1-128> [rate
[<value 1-10485760>] {burst_size [<value 1-262144>]} rate_exceed [drop_packet | remark_dscp <value 0-
63>] | tr_tcm cir <value 1-10485760> {cbs <value 1-262144>} pir <value 1-10485760> {pbs <value 1-262144>}}
{[color_blind | color_aware]} {conform [permit | replace_dscp <value 0-63>]} {counter [enable | disable]}}
exceed [permit {replace_dscp <value 0-63>} | drop] {counter [enable | disable]} violate [permit
{replace_dscp <value 0-63>} | drop] {counter [enable | disable]} | sr_tcm cir <value 1-10485760> cbs <value
1-262144> ebs <value 1-262144> {[color_blind | color_aware]} {conform [permit | replace_dscp <value 0-
63>]} {counter [enable | disable]}} exceed [permit {replace_dscp <value 0-63>} | drop] {counter [enable |
disable]} violate [permit {replace_dscp <value 0-63>} | drop] {counter [enable | disable]} | delete]
```

**Parameters**


---

**profile\_id** - Specifies the profile ID.

**<value 1-512>** - Enter the profile ID here. This value must be between 1 and 512.

---

**profile\_name** - Specifies the name of the profile. The maximum length is 32 characters.

**<name 32>** - Enter the profile name used here.

---

**access\_id** - Specifies the access ID.

**<value 1-128>** - Enter the access ID used here. This value must be between 1 and 128.

---

**rate** - Specifies the rate for single rate two color mode. Specifies the committed bandwidth in Kbps for the flow.

**<value 1-10485760>** - Enter the rate for single rate two color mode here. This value must be between 1 and 10485760.

**burst\_size** - (Optional) Specifies the burst size for the single rate two color mode. The unit is Kbytes.

**<value 1-262144>** - Enter the burst size value here. This value must be between 1 and 262144.

**rate\_exceed** - Specifies the action for packets that exceeds the committed rate in single rate, two color mode.

**drop\_packet** - Specifies to drop the packet immediately.

**remark\_dscp** - Specifies mark the packet with a specified DSCP. The packet is set to have a high drop precedence.

**<value 0-63>** - Enter the remark DSCP value here. This value must be between 0 and 63.

---

**tr\_tcm** - Specifies the "two rate three color mode".

---

- 
- cir** - Specifies the Committed Information Rate. The unit is in Kbps. CIR should always be equal or less than PIR.  
**<value 1-10485760>** - Enter the CIR value here. This value must be between 1 and 10485760.
- cbs** - (Optional) Specifies the Committed Burst Size. The unit is Kbytes. That is to say, 1 means 1Kbytes. This parameter is an optional parameter. The default value is 4\*1024.  
**<value 1-262144>** - Enter the CBS value here. This value must be between 1 and 262144.
- pir** - Specifies the "Peak Information Rate". The unit is in Kbps. PIR should always be equal to or greater than CIR.  
**<value 1-10485760>** - Enter the peak information rate value here. This value must be between 1 and 10485760.
- pbs** - (Optional) Specifies the "Peak Burst Size". The unit is in Kbytes. This parameter is an optional parameter. The default value is 4\*1024.  
**<value 1-262144>** - Enter the peak burst size value here. This value must be between 1 and 262144.
- color\_blind** - (Optional) Specifies the meter mode as color-blind. The default is color-blind mode.
- color\_aware** - (Optional) Specifies the meter mode as color-aware. The final color of the packet is determined by the initial color of the packet and the metering result.
- conform** - (Optional) Specifies the action when a packet is mapped to the "green" color.
- permit** - Specifies to permit the packet.
- replace\_dscp** - Specifies to change the DSCP of the packet.  
**<value 0-63>** - Enter the replace DSCP value here. This value must be between 0 and 63.
- counter** - (Optional) Specifies the ACL counter. This is optional. The default is "disable". The resource may be limited so that a counter cannot be turned on. Counters will be cleared when the function is disabled.
- enable** - Specifies that the ACL counter option will be enabled.
- disable** - Specifies that the ACL counter option will be disabled.
- exceed** - Specifies the action when a packet is mapped to the "yellow" color.
- permit** - Specifies to permit the packet.
- replace\_dscp** - (Optional) Specifies to change the DSCP of the packet.  
**<value 0-63>** - Enter the replace DSCP value here. This value must be between 0 and 63.
- drop** - Specifies to drop the packet.
- counter** - (Optional) Specifies the ACL counter. This is optional. The default is "disable". The resource may be limited so that a counter cannot be turned on. Counters will be cleared when the function is disabled.
- enable** - Specifies that the ACL counter option will be enabled.
- disable** - Specifies that the ACL counter option will be disabled.
- violate** - Specifies the action when a packet is mapped to the "red" color.
- permit** - Specifies to permit the packet.
- replace\_dscp** - (Optional) Specifies to change the DSCP of the packet.  
**<value 0-63>** - Enter the replace DSCP value here. This value must be between 0 and 63.
- drop** - Specifies to drop the packet.
- counter** - (Optional) Specifies the ACL counter. This is optional. The default is "disable". The resource may be limited so that a counter cannot be turned on. Counters will be cleared when the function is disabled.
- enable** - Specifies that the ACL counter option will be enabled.
- disable** - Specifies that the ACL counter option will be disabled.
- 
- sr\_tcm** - Specifies "single rate three color mode".
- cir** - Specifies the Committed Information Rate. The unit is Kbps.  
**<value 0- 10485760>** - Enter the CIR value here. This value must be between 0 and 10485760.
- cbs** - Specifies the Committed Burst Size. The unit is Kbytes.  
**<value 1-262144>** - Enter the CBS value here. This value must be between 1 and 262144.
- ebs** - Specifies the Excess Burst Size. The unit is Kbytes.  
**<value 1-262144>** - Enter the EBS value here. This value must be between 1 and 262144.
- color\_blind** - (Optional) Specifies the meter mode as color-blind. The default is color-blind mode.
- color\_aware** - (Optional) Specifies the meter mode as color-aware. The final color of the packet is determined by the initial color of the packet and the metering result.
-



---

**conform** - (Optional) Specifies the action when a packet is mapped to the “green” color.

**permit** - Permits the packet.

**replace\_dscp** - Specifies to change the DSCP of the packet.

**<value 0-63>** - Enter the replace DSCP value here. This value must be between 0 and 63.

**counter** - (Optional) Specifies the ACL counter. This is optional. The default is “disable”. The resource may be limited so that a counter cannot be turned on. Counters will be cleared when the function is disabled.

**enable** - Specifies that the ACL counter option will be enabled.

**disable** - Specifies that the ACL counter option will be disabled.

**exceed** - Specifies the action when a packet is mapped to the “yellow” color.

**permit** - Specifies to permit the packet.

**replace\_dscp** - (Optional) Specifies to change the DSCP of the packet.

**<value 0-63>** - Enter the replace DSCP value here. This value must be between 0 and 63.

**drop** - Specifies to drop the packet.

**counter** - (Optional) Specifies the ACL counter. This is optional. The default is “disable”. The resource may be limited so that a counter cannot be turned on. Counters will be cleared when the function is disabled.

**enable** - Specifies that the ACL counter option will be enabled.

**disable** - Specifies that the ACL counter option will be disabled.

**violate** - Specifies the action when a packet is mapped to the “red” color.

**permit** - Specifies to permit the packet.

**replace\_dscp** - (Optional) Specifies to change the DSCP of the packet.

**<value 0-63>** - Enter the replace DSCP value here. This value must be between 0 and 63.

**drop** - Specifies to drop the packet.

**counter** - (Optional) Specifies the ACL counter. This is optional. The default is “disable”. The resource may be limited so that a counter cannot be turned on. Counters will be cleared when the function is disabled.

**enable** - Specifies that the ACL counter option will be enabled.

**disable** - Specifies that the ACL counter option will be disabled.

---

**delete** - Specifies to delete the specified flow\_meter.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure a “two rate, three color” flow meter:

```
DGS-1510-28XMP/ME:admin# config flow_meter profile_id 1 access_id 1 tr_tcm cir 1000 cbs 2000
pir 2000 pbs 2000 color_blind conform permit counter enable exceed permit replace_dscp 60
counter enable violate drop
Command: config flow_meter profile_id 1 access_id 1 tr_tcm cir 1000 cbs 2000 pir 2000 pbs
2000 color_blind conform permit counter enable exceed permit replace_dscp 60 counter enable
violate drop

Success.
DGS-1510-28XMP/ME:admin#
```

## 6-6 show flow\_meter

### Description

This command is used to display the flow-based metering (ACL Flow Metering) configuration.

## Format

```
show flow_meter {[profile_id <value 1-512> | profile_name <name 32>] {access_id <value 1- 128>}}
```

## Parameters

**profile\_id** - (Optional) Specifies the profile ID.

**<value 1-512>** - Enter the profile ID used here. This value must be between 1 and 512.

**profile\_name** - (Optional) Specifies the name of the profile.

**<name 32>** - Enter the profile name used here. The maximum length is 32 characters.

**access\_id** - (Optional) Specifies the access ID.

**<value 1- 128>** - Enter the access ID used here. This value must be between 1 and 128.

## Restrictions

None.

## Example

To display the flow metering configuration:

```
DGS-1510-28XMP/ME:admin# show flow_meter
Command: show flow_meter

Flow Meter Information
-----
Profile ID:1      Access ID:1      Mode : trTCM / ColorBlind
CIR(Kbps):1000   CBS(Kbyte):2000   PIR(Kbps):2000   PBS(Kbyte):2000
Action:
  Conform : Permit           Counter: Enabled
  Exceed  : Permit   Replace DSCP: 60   Counter: Enabled
  Violate : Drop            Counter: Disabled
-----
Total Entries: 1

DGS-1510-28XMP/ME:admin#
```

## 6-7 config time\_range

### Description

This command is used to define a specific range of time to activate a function on the Switch by specifying which time range in a day and which days in a week are covered in the time range. Note that the specified time range is based on the SNTP time or the configured time. If this time is not available, the time range will not be met.

### Format

```
config time_range <range_name 32> [hours start_time <time hh:mm:ss> end_time <time hh:mm:ss>
weekdays <daylist> | delete]
```

### Parameters

**<range\_name 32>** - Enter the time range name used here. This name can be up to 32 characters long.

**hours** - Specifies the time of a day.

**start\_time** - Specifies the starting time of a day.

**<time hh:mm:ss>** - Enter the starting time here. (24-hr time). For example, 19:00 means 7PM. 19 is also acceptable. The time specified in the start\_time parameter must be smaller than the time specified in the end\_time parameter.

**end\_time** - Specifies the ending time of a day. (24-hr time)

**<time hh:mm:ss>** - Enter the ending time here. (24-hr time). For example, 19:00 means 7PM. 19 is also acceptable. The time specified in the start\_time parameter must be smaller than the time specified in the end\_time parameter.

**weekdays** - Specifies the list of days contained in the time range. Use a dash to define a period of days. Use a comma to separate specific days.

**<daylist>** - Enter the weekdays that will be included in this configuration here. For example, mon-fri (Monday to Friday). sun, mon, fri (Sunday, Monday and Friday)

**delete** - Deletes a time range profile. When a time\_range profile has been associated with ACL entries, deleting the time\_range profile will fail.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure a time range named "1" that starts every Monday at 01:01:01am and ends at 02:02:02am:

```
DGS-1510-28XMP/ME:admin# config time_range 1 hours start_time 1:1:1 end_time 2:2:2 weekdays
mon
Command: config time_range 1 hours start_time 1:1:1 end_time 2:2:2 weekdays mon

Success.

DGS-1510-28XMP/ME:admin#
```

## 6-8 show time\_range

### Description

This command is used to display the current time range settings.

### Format

**show time\_range**

### Parameters

None.

### Restrictions

None.

### Example

To display the current time range settings:

```
DGS-1510-28XMP/ME:admin# show time_range
Command: show time_range

Time Range Information
-----
Range Name           : 1
Weekdays            : Mon
Start Time           : 01:01:01
End Time             : 02:01:01

Total Entries :1

DGS-1510-28XMP/ME:admin#
```

## 6-9 show current\_config access\_profile

### Description

This command is used to display the ACL part of the current configuration, when logged in with user level privileges.

The overall current configuration can be displayed by using the **show config current\_config** command, which is accessible with administrator level privileges.

### Format

**show current\_config access\_profile**

### Parameters

None.

### Restrictions

None.

### Example

To display the ACL part of the current configuration:

```
DGS-1510-28XMP/ME:admin# show current_config access_profile
Command: show current_config access_profile

#-----

# ACL

create access_profile ethernet vlan profile_id 1
config access_profile profile_id 1 add access_id 1 ethernet vlan default port 1 permit

create access_profile ip source_ip_mask 255.255.255.255 profile_id 2
config access_profile profile_id 2 add access_id 1 ip source_ip 10.10.10.10 port 2 deny

#-----

DGS-1510-28XMP/ME:admin#
```

## 6-10 show access\_profile hw\_info

### Description

This command is used to the ACL hardware usage information.

### Format

**show access\_profile hw\_info**

### Parameters

None.

### Restrictions

None.

### Example

To display the ACL hardware usage information:

```
DGS-1510-28XMP/ME:admin#show access_profile hw_info
```

```
Command: show access_profile hw_info
```

```
Slice ID/
```

Priority	Profile ID	Owner	Number of Rules
1/4094	1	System	62
	Used		62
	Available		66
2/4093	2	System	62
	Used		62
	Available		66
3/0			
	Used		0
	Available		128
4/0			
	Used		0
	Available		128

```
CTRL+C ESC q Quit SPACE n Next Page ENTER Next Entry a All
```

## Chapter 7 Address Resolution Protocol (ARP) Command List

---

```
create arpentry <ipaddr> <macaddr>
delete arpentry [<ipaddr> | all]
config arpentry <ipaddr> <macaddr>
config arp_aging time <value 0-65535>
clear arptable
show arpentry {ipif <ipif_name 12> | ipaddress <ipaddr> | static | mac_address <macaddr>}
```

---

### 7-1 create arpentry

#### Description

This command is used to enter a static ARP entry into the Switch's ARP table.

#### Format

```
create arpentry <ipaddr> <macaddr>
```

#### Parameters

---

**<ipaddr>** - The IP address of the end node or station.

---

**<macaddr>** - The MAC address corresponding to the IP address above.

---

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

#### Example

To create a static ARP entry for the IP address 10.48.74.121 and MAC address 00-50-BA-00-07-36:

```
DGS-1510-28XMP/ME:admin# create arpentry 10.48.74.121 00-50-BA-00-07-36
Command: create arpentry 10.48.74.121 00-50-BA-00-07-36

Success.

DGS-1510-28XMP/ME:admin#
```

### 7-2 delete arpentry

#### Description

This command is used to delete an ARP entry, by specifying either the IP address of the entry or all. Specifies 'all' clears the Switch's ARP table.

**Format**

**delete arpentry [<ipaddr> | all]**

**Parameters**

---

**<ipaddr>** - The IP address of the end node or station.

---

**all** - Delete all ARP entries.

---

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To delete an entry of IP address 10.48.74.121 from the ARP table:

```
DGS-1510-28XMP/ME:admin# delete arpentry 10.48.74.121
Command: delete arpentry 10.48.74.121

Success.

DGS-1510-28XMP/ME:admin#
```

## 7-3 config arpentry

**Description**

This command is used to configure a static entry's MAC address in the ARP table. Specifies the IP address and MAC address of the entry.

**Format**

**config arpentry <ipaddr> <macaddr>**

**Parameters**

---

**<ipaddr>** - The IP address of the end node or station.

---

**<macaddr>** - The MAC address corresponding to the IP address above.

---

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To configure a static ARP entry, whose IP address is 10.48.74.121, set its MAC address to 00-50-BA-00-07-37:



```
DGS-1510-28XMP/ME:admin# config arpentry 10.48.74.121 00-50-BA-00-07-37
Command: config arpentry 10.48.74.121 00-50-BA-00-07-37

Success.

DGS-1510-28XMP/ME:admin#
```

## 7-4 config arp\_aging time

### Description

This command is used to set the maximum amount of time, in minutes, that a dynamic ARP entry can remain in the Switch's ARP table, without being accessed, before it is dropped from the table.

### Format

**config arp\_aging time <value 0-65535>**

### Parameters

---

**<value 0-65535>**- Enter the ARP age-out time, in minutes. This value must be between 0 and 65535 minutes. The default value is 20.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To configure ARP aging time to 30 minutes:

```
DGS-1510-28XMP/ME:admin# config arp_aging time 30
Command: config arp_aging time 30

Success.

DGS-1510-28XMP/ME:admin#
```

## 7-5 clear arptable

### Description

This command is used to clear all the dynamic entries from ARP table.

### Format

**clear arptable**

### Parameters

None.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To clear the ARP table:

```
DGS-1510-28XMP/ME:admin# clear arptable
Command: clear arptable

Success.

DGS-1510-28XMP/ME:admin#
```

## 7-6 show arpentry

### Description

This command is used to displays the ARP table. You can filter the display by IP address, MAC address, Interface name, or static entries.

### Format

**show arpentry {ipif <ipif\_name 12> | ipaddress <ipaddr> | static | mac\_address <macaddr>}**

### Parameters

---

**ipif** - (Optional) Specifies the name of the IP interface the end node or station for which the ARP table entry was made, resides on.

**<ipif\_name 12>** - Enter the IP interface name here. This value can be up to 12 characters long.

---

**ipaddress** - (Optional) Specifies the IP address of the end node or station.

**<ipaddr>** - Enter the IP address here.

---

**static** - (Optional) Specifies to display the static entries in the ARP table.

---

**mac\_address** - (Optional) Specifies to display the ARP entry by MAC address.

**<macaddr>** - Enter the MAC address here.

---

### Restrictions

None.

### Example

To display the ARP table:

```
DGS-1510-28XMP/ME:admin# show arpentry
```

```
Command: show arpentry
```

```
ARP Aging Time : 20
```

Interface	IP Address	MAC Address	Type
System	10.0.0.0	FF-FF-FF-FF-FF-FF	Local/Broadcast
System	10.1.1.1	00-02-03-04-05-06	Static
System	10.1.1.2	00-02-03-04-05-06	Dynamic
System	10.1.1.3	00-02-03-04-05-06	Static
System	10.90.90.90	00-01-02-03-04-00	Local
System	10.255.255.255	FF-FF-FF-FF-FF-FF	Local/Broadcast

```
Total Entries: 6
```

```
DGS-1510-28XMP/ME:admin#
```

## Chapter 8 ARP Spoofing Prevention

### Command List

---

```
config arp_spoofing_prevention [add gateway_ip <ipaddr> gateway_mac <macaddr> ports [<portlist> | all] |
delete gateway_ip <ipaddr>]
```

---

```
show arp_spoofing_prevention
```

---

#### 8-1 config arp\_spoofing\_prevention

##### Description

This command is used to configure the spoofing prevention entry to prevent spoofing of MAC for the protected gateway. When an entry is created, those ARP packets whose sender IP matches the gateway IP of an entry, but source MAC field does not match the gateway MAC of the entry will be dropped by the system.

##### Format

```
config arp_spoofing_prevention [add gateway_ip <ipaddr> gateway_mac <macaddr> ports [<portlist> | all]
| delete gateway_ip <ipaddr>]
```

##### Parameters

---

**add** - Specifies to add an ARP spoofing prevention entry.

**gateway\_ip** - Specifies a gateway IP address to be configured.

**<ipaddr>** - Enter the IP address used for this configuration here.

**gateway\_mac** - Specifies a gateway MAC address to be configured.

**<macaddr>** - Enter the MAC address used for this configuration here.

**ports** - Specifies a range of ports to be configured.

**<portlist>** - Enter a list of ports used for the configuration here.

**all** - Specifies all of ports to be configured.

---

**delete** - Specifies to delete an ARP spoofing prevention entry.

**gateway\_ip** - Specifies a gateway IP to be configured.

**<ipaddr>** - Enter the IP address used for this configuration here.

---

##### Restrictions

Only Administrators and Operators can issue this command.

##### Example

To configure the ARP spoofing prevention entry:

```
DGS-1510-28XMP/ME:admin# config arp_spoofing_prevention add gateway_ip 10.254.254.251
gateway_mac 00-00-00-11-11-11 ports 1-2
Command: config arp_spoofing_prevention add gateway_ip 10.254.254.251 gateway_ma
c 00-00-00-11-11-11 ports 1-2

Success.

DGS-1510-28XMP/ME:admin#
```

## 8-2 show arp\_spoofing\_prevention

### Description

This command is used to show the ARP spoofing prevention entry.

### Format

**show arp\_spoofing\_prevention**

### Parameters

None.

### Restrictions

Only Administrators and Operators can issue this command.

### Example

To display the ARP spoofing prevention entries:

```
DGS-1510-28XMP/ME:admin# show arp_spoofing_prevention
Command: show arp_spoofing_prevention

Gateway IP          Gateway MAC          Ports
-----
10.254.254.251     00-00-00-11-11-11   1-2

Total Entries: 1

DGS-1510-28XMP/ME:admin#
```

## Chapter 9 Auto-Configuration Command List

---

**enable autoconfig**

---

**disable autoconfig**

---

**show autoconfig**

---

**config autoconfig timeout <value 1-65535>**

---

---

### 9-1 enable autoconfig

#### Description

This command is used to enable auto-configuration. When enabled, during power on initialization, the Switch will get configure file path name and TFTP server IP address from the DHCP server. Then, the Switch will download the configuration file from the TFTP server for configuration of the system.

#### Format

**enable autoconfig**

#### Parameters

None.

#### Restrictions

Only Administrators and Operators can issue this command.

#### Example

To enable auto-configuration:

```
DGS-1510-28XMP/ME:admin# enable autoconfig
Command: enable autoconfig

Success.

DGS-1510-28XMP/ME:admin#
```

### 9-2 disable autoconfig

#### Description

This command is used to disable auto-configuration. When disabled, the Switch will configure itself using the local configuration file

#### Format

**disable autoconfig**

### Parameters

None.

### Restrictions

Only Administrators and Operators can issue this command.

### Example

To disable auto-configuration:

```
DGS-1510-28XMP/ME:admin# disable autoconfig
Command: disable autoconfig

Success.

DGS-1510-28XMP/ME:admin#
```

## 9-3 show autoconfig

### Description

This command is used to display if the auto-configuration is enabled or disabled.

### Format

**show autoconfig**

### Parameters

None.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To show autoconfig status:

```
DGS-1510-28XMP/ME:admin# show autoconfig
Command: show autoconfig

Autoconfig State: Disabled
Timeout           : 50 sec

DGS-1510-28XMP/ME:admin#
```

## 9-4 config autoconfig timeout

### Description

This command is used to configure the timeout value. This timer is used to limit the length of time in getting configuration settings from the network. When timeout occurs, the auto configuration operation will be stopped and the local configuration file will be used to configure the system.

### Format

**config autoconfig timeout <value 1-65535>**

### Parameters

---

**<value 1-65535>** - Specifies the timeout length in seconds. The default setting is 50 seconds.

---

### Restrictions

Only Administrators and Operators can issue this command.

### Example

To configure auto configuration timeout:

```
DGS-1510-28XMP/ME:admin# config autoconfig timeout 60
Command: config autoconfig timeout 60

Success.

DGS-1510-28XMP/ME:admin#
```



## Chapter 10 Basic Commands Command List

---

<b>create account</b> [admin   operator   power_user   user] <username 15> {encrypt [plain_text   sha_1] <password>}
<b>config account</b> <username> {encrypt [plain_text   sha_1] <password>}
<b>show account</b>
<b>delete account</b> <username>
<b>show switch</b>
<b>enable telnet</b> {<tcp_port_number 1-65535>}
<b>disable telnet</b>
<b>enable web</b> {<tcp_port_number 1-65535>}
<b>disable web</b>
<b>reboot</b> {force_agree}
<b>reset</b> {[config   system]} {force_agree}
<b>config firmware image</b> <path_filename64>boot_up
<b>create ipif</b> <ipif_name 12> <network_address> <vlan_name 32> {state [enable   disable]}
<b>config ipif</b> <ipif_name 12> [{ipaddress <network_address>   vlan <vlan_name 32>   state [enable   disable]}   bootp   dhcp   ipv6 [ipv6address <ipv6networkaddr>   state [enable  disable]]   ipv4 state [enable   disable]   dhcp_option12 [hostname <hostname63>   clear_hostname   state [enable   disable]]]
<b>delete ipif</b> [<ipif_name 12> {ipv6address <ipv6networkaddr>}   all]
<b>enable ipif</b> [<ipif_name 12>   all]
<b>disable ipif</b> [<ipif_name 12>   all]
<b>show ipif</b> {<ipif_name 12>}
<b>enable ipif_ipv6_link_local_auto</b> [<ipif_name 12>   all]
<b>disable ipif_ipv6_link_local_auto</b> [<ipif_name 12>   all]
<b>show ipif_ipv6_link_local_auto</b> {<ipif_name 12>}

---

### 10-1 create account

#### Description

This command is used to create user accounts. The username is between 1 and 15 characters, the password is between 0 and 15 characters. It is case sensitive. The number of account (include admin and user) is up to 8.

#### Format

```
create account [admin | operator | power_user | user] <username 15> {encrypt [plain_text | sha_1] <password>}
```

#### Parameters

- 
- admin** - Specifies the name of the admin account.
  - operator** - Specifies the name for the operator user account.
  - power\_user** – Specifies the name for the Power-user account.
-

---

**user** - Specifies the name of the user account.

**<username 15>** - Enter the username used here. This name can be up to 15 characters long.

**encrypt** - (Optional) Specifies the encryption applied to the account.

**plain\_text** - Specifies the password in plain text form.

**sha\_1** - Specifies the password in the SHA-1 encrypted form.

**<password>** - Enter the password for the user account. The length for of password in plain-text form and in encrypted form are different. For the plain-text form, passwords must have a minimum of 0 character and can have a maximum of 15 characters. For the encrypted form password, the length is fixed to 35 bytes long. The password is case-sensitive.

---

## Restrictions

Only Administrators can issue this command.

## Example

To create the admin-level user “dlink”:

```
DGS-1510-28XMP/ME:admin# create account admin dlink
Command: create account admin dlink

Enter a case-sensitive new password:****
Enter the new password again for confirmation:****

Success.

DGS-1510-28XMP/ME:admin#
```

To create the user-level user “Remote-Manager”:

```
DGS-1510-28XMP/ME:admin# create account user Remote-Manager
Command: create account user Remote-Manager

Enter a case-sensitive new password:****
Enter the new password again for confirmation:****

Success.

DGS-1510-28XMP/ME:admin#
```

## 10-2 config account

### Description

This command is used to configure user account. When the password information is not specified in the command, the system will prompt the user to input the password interactively. For this case, the user can only input the plain text password.

If the password is present in the command, the user can select to input the password in the plain text form or in the encrypted form. The encryption algorithm is based on SHA-1.

### Format

**config account <username> {encrypt [plain\_text | sha\_1] <password>}**

## Parameters

**<username>** - Enter the user name of the account that has been defined.

**encrypt** - (Optional) Specifies that the password will be encrypted.

**plain\_text** - Specifies the password in plain text form.

**sha\_1** - Specifies the password in the SHA-1 encrypted form.

**<password>** - Enter the password for the user account. The length for of password in plain-text form and in encrypted form are different. For the plain-text form, passwords must have a minimum of 0 character and can have a maximum of 15 characters. For the encrypted form password, the length is fixed to 35 bytes long. The password is case-sensitive.

## Restrictions

Only Administrators can issue this command.

## Example

To configure the user password of “dlink” account:

```
DGS-1510-28XMP/ME:admin# config account dlink
Command: config account dlink

Enter a old password:****
Enter a case-sensitive new password:****
Enter the new password again for confirmation:****

Success.

DGS-1510-28XMP/ME:admin#
```

To configure the user password of “administrator” account:

```
DGS-1510-28XMP/ME:admin# config account administrator encrypt sha_1
*%&cRDtpNCeBiq15KOQsKVyrA0sAiCIZQwq
Command: config account administrator encrypt sha_1 *%&cRDtpNCeBiq15KOQsKVyrA0sAiCIZQwq

Success.

DGS-1510-28XMP/ME:admin#
```

## 10-3 show account

### Description

This command is used to display user accounts that have been created.

### Format

**show account**

**Parameters**

None.

**Restrictions**

Only Administrators can issue this command.

**Example**

To display the accounts that have been created:

```
DGS-1510-28XMP/ME:admin# show account
Command: show account

Current Accounts:
Username           Access Level
-----
admin              Admin
oper               Operator
power              Power_user
user               User

Total Entries : 4

DGS-1510-28XMP/ME:admin#
```

## 10-4 delete account

**Description**

This command is used to delete an existing account.

**Format**

**delete account <username>**

**Parameters**

---

**<username>** - Enter the user name to be deleted.

---

**Restrictions**

Only Administrators can issue this command.

**Example**

To delete the user account "System":

```
DGS-1510-28XMP/ME:admin# delete account System
Command: delete account System

Success.

DGS-1510-28XMP/ME:admin#
```

## 10-5 show switch

### Description

This command is used to display the Switch information.

### Format

**show switch**

### Parameters

None.

### Restrictions

None.

### Example

To display of the Switch information:

```
DGS-1510-28XMP/ME:admin#show switch
Command: show switch

Device Type           : DGS-1510-28XMP/ME Gigabit Ethernet Switch
MAC Address           : 00-01-02-03-04-00
IP Address             : 10.90.90.90 (Manual)
VLAN Name              : default
Subnet Mask            : 255.0.0.0
Default Gateway        : 0.0.0.0
Boot PROM Version     : Build 1.00.001
Firmware Version       : Build 1.00.018
Hardware Version       : A1
Serial Number          : T3941C1000029
System Name            :
System Location        :
System Uptime          : 0 days, 0 hours, 4 minutes, 27 seconds
System Contact         :
Spanning Tree          : Disabled
GVRP                   : Disabled
IGMP Snooping          : Disabled
MLD Snooping           : Disabled
VLAN Trunk              : Disabled
Telnet                 : Enabled (TCP 23)
Web                     : Enabled (TCP 80)
SNMP                   : Disabled
CTRL+C ESC q Quit  SPACE n Next Page  ENTER Next Entry  a All
```

## 10-6 enable telnet

### Description

This command is used to enable TELNET and configure port number.

### Format

```
enable telnet {<tcp_port_number 1-65535>}
```

### Parameters

---

**<tcp\_port\_number 1-65535>** - (Optional) The TCP port number. TCP ports are numbered between 1 and 65535. The "well-known" TCP port for the TELNET protocol is 23.

---

### Restrictions

Only Administrators and Operators can issue this command.

### Example

To enable TELNET and configure port number:

```
DGS-1510-28XMP/ME:admin# enable telnet 23
Command: enable telnet 23

Success.

DGS-1510-28XMP/ME:admin#
```

## 10-7 disable telnet

### Description

This command is used to disable TELNET.

### Format

**disable telnet**

### Parameters

None.

### Restrictions

Only Administrators and Operators can issue this command.

### Example

To disable TELNET:

```
DGS-1510-28XMP/ME:admin# disable telnet
Command: disable telnet

Success.

DGS-1510-28XMP/ME:admin#
```

## 10-8 enable web

### Description

This command is used to enable HTTP and configure port number.

### Format

**enable web {<tcp\_port\_number 1-65535>}**

### Parameters

---

**<tcp\_port\_number 1-65535>** - (Optional) Enter the TCP port number. TCP ports are numbered between 1 and 65535. The “well-known” TCP port for the WEB protocol is 80.

---

## Restrictions

Only Administrators and Operators can issue this command.

## Example

To enable HTTP and configure port number:

```
DGS-1510-28XMP/ME:admin# enable web 80
Command: enable web 80

Note: SSL will be disabled if web is enabled.
Success.

DGS-1510-28XMP/ME:admin#
```

## 10-9 disable web

### Description

This command is used to disable HTTP.

### Format

**disable web**

### Parameters

None.

### Restrictions

Only Administrators and Operators can issue this command.

## Example

To disable HTTP:

```
DGS-1510-28XMP/ME:admin# disable web
Command: disable web

Success.

DGS-1510-28XMP/ME:admin#
```

## 10-10 reboot

### Description

This command is used to restart the Switch.

### Format

**reboot {force\_agree}**



## Parameters

---

**force\_agree** - (Optional) Specifies to immediately reboot the Switch without further confirmation.

---

## Restrictions

Only Administrators can issue this command.

## Example

To reboot the Switch:

```
DGS-1510-28XMP/ME:admin# reboot
Command: reboot

Are you sure to proceed with the system reboot?(y/n)
Please wait, the switch is rebooting...
```

## 10-11 reset

### Description

This command is used to provide reset functions. The configuration setting will be reset to the default setting by the **reset config** command. For the **reset system** command, the device will store the reset setting in the NVRAM and then reboot the system. The **reset** command will not reset IP address, log, user accounts and banner configured on the system.

### Format

**reset** {[config | system]} {force\_agree}

## Parameters

---

**config** - (Optional) Specifies that all parameters are reset to default settings. But device will not do save neither reboot.

---

**system** - (Optional) Specifies that all parameters are reset to default settings. Then the Switch will do factory reset, save and reboot.

---

**force\_agree** - (Optional) Specifies to immediately reset to default settings without further confirmation.

---

## Restrictions

Only Administrators can issue this command.

## Example

To reset the Switch:

```
DGS-1510-28XMP/ME:admin# reset system
Command: reset system

Are you sure you want to proceed with system reset?(y/n)
y-(reset all include configuration, save, reboot )
n-(cancel command) y
Reboot & Load Factory Default Configuration...

Saving configurations and logs to NV-RAM..... Done.
Please wait, the switch is rebooting...
```

## 10-12 config firmware image

### Description

This command is used to select a firmware file as a boot up file. This command is required to be supported when multiple firmware images are supported.

### Format

**config firmware image <path\_filename64>boot\_up**

### Parameters

---

**<path\_filename64>** - Enter a firmware file on the device file system.

---

**boot\_up** - Specifies the firmware as the boot up firmware.

---

### Restrictions

Only Administrators can issue this command.

### Example

To configure c:/DES3200\_Run\_4\_00\_014.had as the boot up image:

```
DGS-1510-28XMP/ME:admin# config firmware image c:/DES3200_Run_4_02_004.had boot_up
Command: config firmware image c:/DES3200_Run_4_02_004.had boot_up

Success.

DGS-1510-28XMP/ME:admin#
```

## 10-13 create ipif

### Description

This command is used to create an IP interface.

### Format

**create ipif <ipif\_name 12> <network\_address> <vlan\_name 32> {state [enable | disable]}**

## Parameters

**<ipif\_name 12>** - Enter the IP interface name here. This name can be up to 12 characters long.

**<network\_address>** - Specifies the IPv4 network address (xx.xx.xx.xx/xx). It specifies a host address and length of network mask.

**<vlan\_name 32>** - Enter the VLAN name used here. This name can be up to 32 characters long.

**state** - (Optional) Specifies the state of the IP interface.

**enable** - Specifies that the IP interface state will be enabled.

**disable** - Specifies that the IP interface state will be disabled.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To create an IP interface:

```
DGS-1510-28XMP/ME:admin# create ipif Inter2 192.168.16.1/24 default state enable
Command: create ipif Inter2 192.168.16.1/24 default state enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 10-14 config ipif

### Description

This command is used to configure the IP interface.

### Format

```
config ipif <ipif_name 12> [{ipaddress <network_address> | vlan <vlan_name 32> | state [enable | disable]}
| bootp | dhcp | ipv6 [ipv6address <ipv6networkaddr> | state [enable| disable]] | ipv4 state [enable | disable]
| dhcp_option12 [hostname <hostname63> | clear_hostname | state [enable | disable]]]
```

## Parameters

**<ipif\_name 12>** - Enter the IP interface name used here. This name can be up to 12 characters long.

**ipaddress** - (Optional) Specifies a network on an ipif. The address should specify a host address and length of network mask. Since an ipif can have only one IPv4 address, the new configured address will overwrite the original one.

**<network\_address>** - Enter the network address used here.

**vlan** - (Optional) Specifies the name of the VLAN here.

**<vlan\_name 32>** - Enter the VLAN name used here. This name can be up to 32 characters long.

**state** - (Optional) Specifies to enable or disable the state of the interface.

**enable** - Specifies to enable the state of the interface.

**disable** - Specifies to disable the state of the interface.

**bootp** - Specifies to use BOOTP to obtain the IPv4 address.

---

**dhcp** - Specifies to use DHCP to obtain the IPv4 address.

---

**ipv6** - Specifies that the IPv6 configuration will be done.

**ipv6address** - Specifies the IPv6 network address. The address should specify a host address and length of network prefix. There can be multiple IPv6 addresses defined on an interface. Thus, as a new address is defined, it is added on this ipif.

**<ipv6networkaddr>** - Enter the IPv6 address used here.

**state** - Specifies that the IPv6 interface state will be set to enabled or disabled.

**enable** - Specifies that the IPv6 interface state will be enabled.

**disable** - Specifies that the IPv6 interface state will be disabled.

---

**ipv4** - Specifies that the IPv4 configuration will be done.

**state** - Specifies that the IPv4 interface state will be set to enabled or disabled.

**enable** - Specifies that the IPv4 interface state will be enabled.

**disable** - Specifies that the IPv4 interface state will be disabled.

---

**dhcp\_option12** - Specifies the DHCP option 12.

**hostname** - Specifies the host name to be inserted in the DHCPDISCOVER and DHCPREQUEST message.

**<hostname 63>** - Enter a name starting with a letter, end with a letter or digit, and have only letters, digits, and hyphen as interior characters; the maximal length is 63.

**clear\_hostname** - Specifies to clear the hostname setting. If host name is empty, system name will be used to encode option 12. The length of system name is more than 63, the superfluous chars will be truncated. If system name is also empty, then product model name will be used to encode option 12.

**state** - Specifies to enable or disable insertion of option 12 in the DHCPDISCOVER and DHCPREQUEST message. The state is disable by default.

**enable** - Specifies to enable insertion of option 12 in the DHCPDISCOVER and DHCPREQUEST message.

**disable** - Specifies to disable insertion of option 12 in the DHCPDISCOVER and DHCPREQUEST message.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure an interface's IPv4 network address:

```
DGS-1510-28XMP/ME:admin# config ipif System ipaddress 192.168.69.123/24 vlan default
Command: config ipif System ipaddress 192.168.69.123/24 vlan default
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```

## 10-15 delete ipif

### Description

This command is used to delete an IP interface.

### Format

**delete ipif [<ipif\_name 12> {ipv6address <ipv6networkaddr>} | all]**

---

## Parameters

**<ipif\_name 12>** - Enter the IP interface name used here. This name can be up to 12 characters long.

**ipv6address** – (Optional) Specifies the IPv6 network address. The address should specify a host address and length of network prefix. There can be multiple IPv6 addresses defined on an interface.

**<ipv6networkaddr>** - Enter the IPv6 address used here.

---

**all** – Specifies that all the IP interfaces will be used.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To delete an IP interface:

```
DGS-1510-28XMP/ME:admin# delete ipif newone
Command: delete ipif newone

Success.

DGS-1510-28XMP/ME:admin#
```

## 10-16 enable ipif

### Description

This command is used to enable the IP interface.

### Format

**enable ipif [<ipif\_name 12> | all]**

## Parameters

---

**<ipif\_name 12>** - Enter the IP interface name used here. This name can be up to 12 characters long.

---

**all** - Specifies that all the IP interfaces will be enabled.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To enable an IP interface:

```
DGS-1510-28XMP/ME:admin# enable ipif newone
Command: enable ipif newone

Success.

DGS-1510-28XMP/ME:admin#
```

## 10-17 disable ipif

### Description

This command is used to disable an IP interface.

### Format

**disable ipif [<ipif\_name 12> | all]**

### Parameters

---

**<ipif\_name 12>** - Enter the IP interface name used here. This name can be up to 12 characters long.

---

**all** - Specifies that all the IP interfaces will be disabled.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To disable an IP interface:

```
DGS-1510-28XMP/ME:admin# disable ipif newone
Command: disable ipif newone

Success.

DGS-1510-28XMP/ME:admin#
```

## 10-18 show ipif

### Description

This command is used to display an IP interface.

### Format

**show ipif {<ipif\_name 12>}**

### Parameters

---

**<ipif\_name 12>** - (Optional) Enter the IP interface name used here. This name can be up to 12 characters long.

---

### Restrictions

None.

### Example

To display an IP interface:

```

DGS-1510-28XMP/ME:admin# show ipif
Command: show ipif

IP Interface           : System
VLAN Name              : default
Interface Admin State  : Enabled
Link Status            : LinkUp
IPv4 Address           : 10.90.90.90/8 (Manual)
IPv4 State              : Enabled
IPv6 State              : Enabled
DHCP Option12 State    : Disabled
DHCP Option12 Host Name :

Total Entries: 1

DGS-1510-28XMP/ME:admin#

```

## 10-19 enable ipif\_ipv6\_link\_local\_auto

### Description

This command is used to enable the auto configuration of link local address when there are no IPv6 addresses explicitly configured. When an IPv6 address is explicitly configured, the link local address will be automatically configured, and the IPv6 processing will be started. When there is no IPv6 address explicitly configured, by default, link local address is not configured and the IPv6 processing will be disabled. By enable this automatic configuration, the link local address will be automatically configured and IPv6 processing will be started.

### Format

**enable ipif\_ipv6\_link\_local\_auto [*<ipif\_name 12>* | all]**

### Parameters

---

**<ipif\_name 12>** - Enter the IP interface name used here. This name can be up to 12 characters long.

---

**all** - Specifies that all the IP interfaces will be used.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To enable the IP interface for IPv6 link local automatic:

```

DGS-1510-28XMP/ME:admin# enable ipif_ipv6_link_local_auto newone
Command: enable ipif_ipv6_link_local_auto newone

Success.

DGS-1510-28XMP/ME:admin#

```

## 10-20 disable ipif\_ipv6\_link\_local\_auto

### Description

This command is used to disable the auto configuration of link local address when no IPv6 address are configured.

### Format

**disable ipif\_ipv6\_link\_local\_auto [<ipif\_name 12> | all]**

### Parameters

---

**<ipif\_name 12>** - Enter the IP interface name used here. This name can be up to 12 characters long.

---

**all** - Specifies that all the IP interfaces will be used.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To disable the IP interface for IPv6 link local automatic:

```
DGS-1510-28XMP/ME:admin# disable ipif_ipv6_link_local_auto newone
Command: disable ipif_ipv6_link_local_auto newone

Success.

DGS-1510-28XMP/ME:admin#
```

## 10-21 show ipif\_ipv6\_link\_local\_auto

### Description

This command is used to display the link local address automatic configuration state.

### Format

**show ipif\_ipv6\_link\_local\_auto {<ipif\_name 12>}**

### Parameters

---

**<ipif\_name 12>** - (Optional) Enter the IP interface name used here. This name can be up to 12 characters long.

---

### Restrictions

None.

### Example

To display the link local address automatic configuration state.



```
DGS-1510-28XMP/ME:admin# show ipif_ipv6_link_local_auto
Command: show ipif_ipv6_link_local_auto

  IPIF: System           Automatic Link Local Address: Disabled

DGS-1510-28XMP/ME:admin#
```

# Chapter 11 BPDU Attack Protection Command List

---

```
config bpdu_protection ports [<portlist> | all ] {state [enable | disable] | mode [ drop | block | shutdown]} (1)
```

---

```
config bpdu_protection recovery_timer [<sec 60-1000000> | infinite]
```

---

```
config bpdu_protection [trap | log] [none | attack_detected | attack_cleared | both]
```

---

```
enable bpdu_protection
```

---

```
disable bpdu_protection
```

---

```
show bpdu_protection {ports {<portlist>}}
```

---

## 11-1 config bpdu\_protection ports

### Description

This command is used to configure the BPDP protection function for the ports on the Switch. In generally, there are two states in BPDU protection function. One is normal state, and another is under attack state. The under attack state have three modes: drop, block, and shutdown. A BPDU protection enabled port will enter under attack state when it receives one STP BPDU packet. And it will take action based on the configuration. Thus, BPDU protection can only be enabled on STP-disabled port.

BPDU protection has a higher priority than the Forward BPDU (FBPDU) setting configured by configure STP command in the determination of BPDU handling. That is, when FBPDU is configured to forward STP BPDU but BPDU protection is enabled, then the port will not forward STP BPDU.

### Format

```
config bpdu_protection ports [<portlist> | all ] {state [enable | disable] | mode [ drop | block | shutdown]}(1)
```

### Parameters

---

**<portlist>** - Specifies a range of ports to be configured (port number).

---

**all** - Specifies that all the port will be configured.

---

**state** - Specifies the BPDU protection state. The default state is disable

**enable** - Specifies to enable BPDU protection.

**disable** - Specifies to disable BPDU protection.

---

**mode** - Specifies the BPDU protection mode. The default mode is shutdown

**drop** - Specifies to drop all received BPDU packets when the port enters under\_attack state.

**block** - Specifies to drop all packets (include BPDU and normal packets) when the port enters under\_attack state.

**shutdown** - Specifies to shut down the port when the port enters under\_attack state.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To set the port state enable and drop mode:

```
DGS-1510-28XMP/ME:admin# config bpdu_protection ports 1 state enable mode drop
Commands: config bpdu_protection ports 1 state enable mode drop

Success.

DGS-1510-28XMP/ME:admin#
```

## 11-2 config bpdu\_protection recovery\_timer

### Description

This command is used to configure BPDU protection recovery timer. When a port enters the 'under attack' state, it can be disabled or blocked based on the configuration. The state can be recovered manually or by the auto recovery mechanism. To manually recover the port, the user needs to disable and re-enable the port.

### Format

**config bpdu\_protection recovery\_timer [<sec 60-1000000> | infinite]**

### Parameters

---

**<sec 60 –1000000>** - Enter the timer (in seconds) used by the Auto-Recovery mechanism to recover the port. The valid range is 60 to 1000000. The default value is 60.

---

**infinite** - Specifies that the port will not be auto recovered.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To configure the bpdu\_protection recovery\_timer to 120 seconds on the Switch:

```
DGS-1510-28XMP/ME:admin# config bpdu_protection recovery_timer 120
Commands: config bpdu_protection recovery_timer 120

Success.

DGS-1510-28XMP/ME:admin#
```

## 11-3 config bpdu\_protection

### Description

This command is used to configure the BPDU protection trap state or state for the Switch.

### Format

**config bpdu\_protection [trap | log] [none | attack\_detected | attack\_cleared | both]**

### Parameters

---

**trap** - Specifies the trap state.

---

**log** - Specifies the log state.

**none** - Specifies that neither attack\_detected nor attack\_cleared is trapped or logged.

**attack\_detected** - Specifies that events will be logged or trapped when the BPDU attacks is detected.

**attack\_cleared** - Specifies that events will be logged or trapped when the BPDU attacks is cleared.

**both** - Specifies that the events of attack\_detected and attack\_cleared shall be trapped or logged.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To configure the BPDU protection trap state as both on the Switch:

```
DGS-1510-28XMP/ME:admin# config bpdu_protection trap both
Commands: config bpdu_protection trap both

Success.

DGS-1510-28XMP/ME:admin#
```

## 11-4 enable bpdu\_protection

### Description

This command is used to enable BPDU protection function globally for the Switch.

### Format

**enable bpdu\_protection**

### Parameters

None.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To enable BPDU protection function globally on the Switch:

```
DGS-1510-28XMP/ME:admin# enable bpdu_protection
Commands: enable bpdu_protection

Success.

DGS-1510-28XMP/ME:admin#
```

## 11-5 disable bpdu\_protection

### Description

This command is used to disable BPDU protection function globally for the Switch.

### Format

**disable bpdu\_protection**

### Parameters

None.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To disable BPDU protection function globally on the Switch:

```
DGS-1510-28XMP/ME:admin# disable bpdu_protection
Commands: disable bpdu_protection

Success.

DGS-1510-28XMP/ME:admin#
```

## 11-6 show bpdu\_protection

### Description

This command is used to display BPDU protection global configuration or per port configuration and current status.

### Format

**show bpdu\_protection {ports {<portlist>}}**

### Parameters

---

**ports** - (Optional) Specifies a range of ports to be configured.  
**<portlist>** - Enter a range of ports here.

---

### Restrictions

None.

### Example

To show the BPDU protection on the Switch:

```
DGS-1510-28XMP/ME:admin# show bpdu_protection
Commands: show bpdu_protection

BPDU Protection Global Settings
-----
BPDU Protection status           : Enabled
BPDU Protection Recovery Time    : 60 seconds
BPDU Protection Trap State       : None
BPDU Protection Log State        : None

DGS-1510-28XMP/ME:admin#
```

To show the bpdu\_protection status ports 1-12:

```
DGS-1510-28XMP/ME:admin# show bpdu_protection ports 1-12
Commands: show bpdu_protection ports 1-12

Port      State      Mode      Status
-----
1         Enabled   shutdown  Normal
2         Enabled   shutdown  Normal
3         Enabled   shutdown  Normal
4         Enabled   shutdown  Normal
5         Enabled   shutdown  Under Attack
6         Enabled   shutdown  Normal
7         Enabled   shutdown  Normal
8         Enabled   shutdown  Normal
9         Enabled   shutdown  Normal
10        Enabled   Block     Normal
11        Disabled  shutdown  Normal
12        Disabled  shutdown  Normal

DGS-1510-28XMP/ME:admin#
```

---

## Chapter 12 Cable Diagnostics Command List

---

---

**cable\_diag ports** [<portlist> | all]

---

### 12-1 cable\_diag ports

#### Description

This command is used to configure cable diagnostics on ports. For FE port, two pairs of cable will be diagnosed. For GE port, four pairs of cable will be diagnosed.

The following test result can be displayed.

- **Open** - The cable in the error pair does not have a connection at the specified position.
- **Short** - The cable in the error pair has a short problem at the specified position.
- **Crosstalk** - The cable in the error pair has a crosstalk problem at the specified position.
- **Shutdown** - The remote partner is powered off.
- **Unknown** - The diagnosis does not obtain the cable status. Please try again.
- **OK** - The pair or cable has no error.
- **No cable** - The port does not have any cable connected to the remote partner.

When a port is in link-up status, the test will obtain the distance of the cable. Since the status is link-up, the cable will not have the short or open problem. But the test may still detect the crosstalk problem.

When a port is in link-down status, the link-down may be caused by many factors.

1. When the port has a normal cable connection, but the remote partner is powered off, the cable diagnosis can still diagnose the health of the cable as if the remote partner is powered on.
2. When the port does not have any cable connection, the result of the test will indicate no cable.
3. The test will detect the type of error and the position where the error occurs.

When the link partner is Fast Ethernet ports:

- Where the **link partner is powered on with no errors** and the **link is up**, this command cannot detect the cable length
- Where the **link partner is powered on with errors**, this command can detect whether the error is open, short, or crosstalk. In this case this command can also detect the distance of the error
- Where the **link partner is powered down with no errors** and the **link is down**, this command cannot detect the cable length
- When the **link partner is powered down with errors**, this command can detect whether the error is open, short, or crosstalk. In this case this command can also detect the distance of the error
- When there is **no link partner with no errors** and the **link is up**, this command can detect the cable length
- When there is **no link partner with errors**, this command can detect whether the error is open, short, or crosstalk. In this case this command can also detect the distance of the error

When the link partner is Gigabit Ethernet ports:

- Where the **link partner is powered on with no errors** and the **link is up**, this command can detect the cable length
- Where the **link partner is powered on with errors**, this command can detect whether the error is open, short, or crosstalk. In this case this command can also detect the distance of the error
- Where the **link partner is powered down with no errors** and the **link is down**, this command cannot detect the cable length
- When the **link partner is powered down with errors**, this command can detect whether the error is open, short, or crosstalk. In this case this command can also detect the distance of the error
- When there is **no link partner with no errors** and the **link is up**, this command can detect the cable length
- When there is **no link partner with errors**, this command can detect whether the error is open, short, or crosstalk. In this case this command can also detect the distance of the error



**NOTE:** This test is only for copper cable. The fiber port is not tested. For the combo ports, only the copper media will be tested. The cable diagnosis does not support on the Pair 1 and 4 if the link partner is FE port. If the link partner is FE port, the target port's link will be down after the test.

## Format

**cable\_diag ports [<portlist> | all]**

## Parameters

**<portlist>** - Enter a list of ports used for the configuration here.

**all** - Specifies that all the ports will be used for this configuration.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

Test the cable on port 1, 11, and 12:

```
DGS-1510-28XMP/ME:admin# cable_diag ports 1,11-12
Command: cable_diag ports 1,11-12

Perform Cable Diagnostics ...

Port      Type      Link Status  Test Result  Cable Length (M)
-----
1         100BASE-T  Link Up      OK           4
11        100BASE-T  Link Down    No Cable     -
12        100BASE-T  Link Down    No Cable     -

DGS-1510-28XMP/ME:admin#
```



## Chapter 13 Command Logging Command List

---

**enable command logging**

---

**disable command logging**

---

**show command logging**

---

---

### 13-1 enable command logging

#### Description

This command is used to enable the command logging function. This is disabled by default.



**NOTE:** When the Switch is under booting procedure, all configuration command should not be logged. When the user under AAA authentication, the user name should not be changed if the user uses “enable admin” command to replace its privilege.

#### Format

**enable command logging**

#### Parameters

None.

#### Restrictions

Only Administrators can issue this command.

#### Example

To enable the command logging function:

```
DGS-1510-28XMP/ME:admin# enable command logging
Command: enable command logging

Success.

DGS-1510-28XMP/ME:admin#
```

### 13-2 disable command logging

#### Description

This command is used to disable the command logging function.

#### Format

**disable command logging**

### Parameters

None.

### Restrictions

Only Administrators can issue this command.

### Example

To disable the command logging:

```
DGS-1510-28XMP/ME:admin# disable command logging
Command: disable command logging

Success.

DGS-1510-28XMP/ME:admin#
```

## 13-3 show command logging

### Description

This command is used to display the Switch's general command logging configuration status.

### Format

**show command logging**

### Parameters

None.

### Restrictions

Only Administrators and Operators can issue this command.

### Example

To show the command logging configuration status:

```
DGS-1510-28XMP/ME:admin# show command logging
Command: show command logging

Command Logging State : Disabled

DGS-1510-28XMP/ME:admin#
```

# Chapter 14 Compound Authentication

## Command List

---

**enable authorization attributes**

---

**disable authorization attributes**

---

**show authorization**

---

**config authentication server failover** [local | permit | block]

---

**show authentication**

---

---

### 14-1 enable authorization attributes

#### Description

This command is used to enable authorization.

#### Format

**enable authorization attributes**

#### Parameters

None.

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

#### Example

This example sets authorization global state enabled:

```
DGS-1510-28XMP/ME:admin# enable authorization attributes
Command: enable authorization attributes

Success.

DGS-1510-28XMP/ME:admin#
```

### 14-2 disable authorization attributes

#### Description

This command is used to disable authorization.

#### Format

**disable authorization attributes**

### Parameters

None.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

This example sets authorization global state disabled:

```
DGS-1510-28XMP/ME:admin# disable authorization attributes
Command: disable authorization attributes

Success.

DGS-1510-28XMP/ME:admin#
```

## 14-3 show authorization

### Description

This command is used to display authorization status.

### Format

**show authorization**

### Parameters

None.

### Restrictions

None.

### Example

This example displays authorization status:

```
DGS-1510-28XMP/ME:admin# show authorization
Command: show authorization

Authorization for Attributes: Enabled.

DGS-1510-28XMP/ME:admin#
```

## 14-4 config authentication server failover

### Description

This command is used to configure the failover authentication of the authentication server.

## Format

**config authentication server failover [local | permit | block]**

## Parameters

---

**local** - Specifies to use local DB to authenticate the client.

---

**permit** - Specifies that the client is always regarded as authenticated.

---

**block** - Specifies to block the client. This is the default.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure the failover authentication state:

```
DGS-1510-28XMP/ME:admin# config authentication server failover local
Command: config authentication server failover local

Success.

DGS-1510-28XMP/ME:admin#
```

## 14-5 show authentication

### Description

This command is used to display authentication global configuration.

### Format

**show authentication**

### Parameters

None.

### Restrictions

None.

### Example

To show authentication global configuration:

```
DGS-1510-28XMP/ME:admin# show authentication
```

```
Command: show authentication
```

```
Authentication Server Failover: Local.
```

```
DGS-1510-28XMP/ME:admin#
```

## Chapter 15 Configuration Command List

---

```
show config [effective | modified | current_config | boot_up | file <pathname 64>] {[include | exclude | begin]
<filter_string 80> {<filter_string 80> {<filter_string 80>}} {[include | exclude | begin] <filter_string 80>
{<filter_string 80> {<filter_string 80>}} {[include | exclude | begin ] <filter_string 80> {<filter_string 80>
{<filter_string 80>}}}}
```

---

```
config configuration <pathname 64> [boot_up | active]
```

---

```
save {[config <pathname 64> | log | all]}
```

---

```
show boot_file
```

---

### 15-1 show config

#### Description

This command is used to display the content of the current configuration, the configuration to be used in next boot, or the configuration file specified by the command.

The output stream of the configuration data can be filtered by the expression specified at the end of the command. The expression can contain up to three multiple filter evaluations. A filter evaluation begins with a filter type (include, exclude, and begin), followed by up to three filter strings (ex: "stp"). A filter string is enclosed by symbol ". The following describes the meaning of the each filter type.

**include:** includes lines that contain the specified filter string.

**exclude:** excludes lines that contain the specified filter string

**begin:** The first line that contains the specified filter string will be the first line of the output.

The relationship of multiple filter strings following the same filter type is OR. That is, one line is qualified if one of specified filter strings is matched.

If more than one filter evaluation is specified; the output of filtered by the former evaluation will be used as the input of the latter evaluation.

#### Format

```
show config [effective | modified | current_config | boot_up | file <pathname 64>] {[include | exclude | begin]
<filter_string 80> {<filter_string 80> {<filter_string 80>}} {[include | exclude | begin] <filter_string 80>
{<filter_string 80> {<filter_string 80>}} {[include | exclude | begin ] <filter_string 80> {<filter_string 80>
{<filter_string 80>}}}}
```

#### Parameters

---

**effective** - Specifies to only display the commands which affects the behavior of the device. For example, if STP is disabled, then for STP configuration, only "STP is disabled" is displayed. All other lower level setting regarding STP is not displayed. The lower level setting will only be displayed when the higher level setting is enabled. Note that this parameter is only for the current configuration.

---

**modified** - Specifies to only display the commands which are not default setting. Note that this parameter is only for the current configuration.

---

**current\_config** - Specifies the current configuration.

---

**boot\_up** - Specifies the list of the bootup configuration.

---

---

**file** - Specifies to display the configuration file.

**<pathname 64>** - Enter an absolute pathname on the device file system. If pathname is not specified, the boot up configuration is implied. This name can be up to 64 characters long.

---

**include** - (Optional) Specifies to include lines that contain the specified filter string.

---

**exclude** - (Optional) Specifies to exclude lines that contain the specified filter string.

---

**begin** - (Optional) Specifies the first line that contains the specified filter string will be the first line of the output.

---

**<filter\_string 80>** - Enter a filter string that is enclosed by the symbol ". Thus, the filter string itself cannot contain the " character. The filter string is case sensitive. This value can be up to 80 characters long.

**<filter\_string 80>** - (Optional) Enter a filter string that is enclosed by the symbol ". Thus, the filter string itself cannot contain the " character. The filter string is case sensitive. This value can be up to 80 characters long.

**<filter\_string 80>** - (Optional) Enter a filter string that is enclosed by the symbol ". Thus, the filter string itself cannot contain the " character. The filter string is case sensitive. This value can be up to 80 characters long.

**include** - (Optional) Specifies to include lines that contain the specified filter string.

**exclude** - (Optional) Specifies to exclude lines that contain the specified filter string.

**begin** - (Optional) Specifies the first line that contains the specified filter string will be the first line of the output.

**<filter\_string 80>** - Enter a filter string that is enclosed by the symbol ". Thus, the filter string itself cannot contain the " character. The filter string is case sensitive. This value can be up to 80 characters long.

**<filter\_string 80>** - (Optional) Enter a filter string that is enclosed by the symbol ". Thus, the filter string itself cannot contain the " character. The filter string is case sensitive. This value can be up to 80 characters long.

**<filter\_string 80>** - (Optional) Enter a filter string that is enclosed by the symbol ". Thus, the filter string itself cannot contain the " character. The filter string is case sensitive. This value can be up to 80 characters long.

**include** - (Optional) Specifies to include lines that contain the specified filter string.

**exclude** - (Optional) Specifies to exclude lines that contain the specified filter string.

**begin** - (Optional) Specifies the first line that contains the specified filter string will be the first line of the output.

**<filter\_string 80>** - Enter a filter string that is enclosed by the symbol ". Thus, the filter string itself cannot contain the " character. The filter string is case sensitive. This value can be up to 80 characters long.

**<filter\_string 80>** - (Optional) Enter a filter string that is enclosed by the symbol ". Thus, the filter string itself cannot contain the " character. The filter string is case sensitive. This value can be up to 80 characters long.

**<filter\_string 80>** - (Optional) Enter a filter string that is enclosed by the symbol ". Thus, the filter string itself cannot contain the " character. The filter string is case sensitive.

---

## Restrictions

Only Administrators can issue this command.

## Example

The following example illustrates how the special filters, 'modified', affect the configuration display:



```

DGS-1510-28XMP/ME:admin#show config modified
Command: show config modified

#-----
#
#           DGS-1510-28XMP/ME Gigabit Ethernet Switch
#
#           Configuration
#
#
#           Firmware: Build 1.00.018
#
#           Copyright(C) 2015 D-Link Corporation. All rights reserved.
#-----

# DEVICE

# BASIC

# ACCOUNT LIST
# ACCOUNT END
# PASSWORD ENCRYPTION

# DEBUG

CTRL+C  ESC  q  Quit  SPACE  n  Next Page  ENTER  Next Entry  a  All

```

## 15-2 config configuration

### Description

This command is used to select a configuration file as the next boot up configuration or to apply a specific configuration to the system. This command is required when multiple configuration files are supported.

### Format

**config configuration <pathname 64> [boot\_up | active]**

### Parameters

---

**<pathname 64>** - Specifies a configuration file on the device file system.

---

**boot\_up** - Specifies it as a boot up file.

---

**active** - Specifies to apply the configuration.

---

### Restrictions

Only Administrators can issue this command.

### Example

To configure the Switch's configuration file as boot up:

```
DGS-1510-28XMP/ME:admin# config configuration config.cfg boot_up
Command: config configuration config.cfg boot_up

Success.
DGS-1510-28XMP/ME:admin#
```

## 15-3 save

### Description

This command is used to save the current configuration to a file.

### Format

**save** {[**config** <pathname 64> | **log** | **all**]}

### Parameters

---

**config** - (Optional) Specifies to save the configuration to a file.

<pathname64> - Enter the pathname specifies the absolute pathname on the device file system. If pathname is not specified, it refers to the boot up configuration file.

---

**log** - (Optional) Specifies to save the log.

---

**all** - (Optional) Specifies to save the configuration and the log.

---

### Restrictions

Only Administrators and Operators can issue this command.

### Example

To save the configuration:

```
DGS-1510-28XMP/ME:admin# save config c:/3200.cfg
Command: save config c:/3200.cfg

Saving all configurations to NV-RAM..... Done.

DGS-1510-28XMP/ME:admin#
```

## 15-4 show boot file

### Description

This command is used to display the configuration file and firmware image assigned as boot up files.

### Format

**show boot\_file**

### Parameters

None.

## Restrictions

None.

## Example

To display the boot file:

```
DGS-1510-28XMP/ME:admin# show boot_file
Command: show boot_file

  Bootup Firmware      : /c:/runtime.had
  Bootup Configuration : /c:/config.cfg

DGS-1510-28XMP/ME:admin#
```

# Chapter 16 Connectivity Fault Management (CFM) Command List

---

```
create cfm md <string 22> {md_index <uint 1-4294967295>} level <int 0-7>
```

```
config cfm md [<string 22> | md_index <uint 1-4294967295>] {mip [none | auto | explicit] | sender_id [none | chassis | manage | chassis_manage]}
```

---

```
create cfm ma <string 22> {ma_index <uint 1-4294967295>} md [<string 22> | md_index <uint 1-4294967295>]
```

```
config cfm ma [<string 22> | ma_index <uint 1-4294967295>] md [<string 22> | md_index <uint 1-4294967295>] {vlanid <vlanid 1-4094> | mip [none | auto | explicit | defer] | sender_id [none | chassis | manage | chassis_manage | defer] | ccm_interval [10ms | 100ms | 1sec | 10sec | 1min | 10min] | mepid_list [add | delete] <mepid_list>}
```

---

```
create cfm mep <string 32> mepid <int 1-8191> md [<string 22> | md_index <uint 1-4294967295>] ma [<string 22> | ma_index <uint 1-4294967295>] direction [inward | outward] port <port>
```

```
config cfm mep [mepname <string 32> | mepid <int 1-8191> md [<string 22> | md_index <uint 1-4294967295>] ma [<string 22> | ma_index <uint 1-4294967295>]] {state [enable | disable] | ccm [enable | disable] | pdu_priority <int 0-7> | fault_alarm [all | mac_status | remote_ccm | error_ccm | xcon_ccm | none] | alarm_time <centisecond 250 -1000> | alarm_reset_time <centisecond 250-1000>}
```

---

```
delete cfm mep [mepname <string 32> | mepid <int 1-8191> md [<string 22> | md_index <uint 1-4294967295>] ma [<string 22> | ma_index <uint 1-4294967295>]]
```

---

```
delete cfm ma [<string 22> | ma_index <uint 1-4294967295>] md [<string 22> | md_index <uint 1-4294967295>]
```

---

```
delete cfm md [<string 22> | md_index <uint 1-4294967295>]
```

---

```
enable cfm
```

---

```
disable cfm
```

---

```
config cfm ports <portlist> state [enable | disable]
```

---

```
show cfm ports <portlist>
```

---

```
show cfm {[md [<string 22> | md_index <uint 1-4294967295>] {ma [<string 22> | ma_index <uint 1-4294967295>] {mepid <int 1-8191>}} | mepname <string 32>]}
```

---

```
show cfm fault {md [<string 22> | md_index <uint 1-4294967295>] {ma [<string 22> | ma_index <uint 1-4294967295>}}}
```

---

```
show cfm port <port> {level <int 0-7> | direction [inward | outward] | vlanid <vlanid 1-4094>}
```

---

```
cfm loopback <macaddr> [mepname <string 32> | mepid <int 1-8191> md [<string 22> | md_index <uint 1-4294967295>] ma [<string 22> | ma_index <uint 1-4294967295>]] {num <int 1-65535> | [length <int 0-1500> | pattern <string 1500>] | pdu_priority <int 0-7>}
```

---

```
cfm linktrace <macaddr> [mepname <string 32> | mepid <int 1-8191> md [<string 22> | md_index <uint 1-4294967295>] ma [<string 22> | ma_index <uint 1-4294967295>]] {ttl <int 2-255> | pdu_priority <int 0-7>}
```

---

```
show cfm linktrace [mepname <string 32> | mepid <int 1-8191> md [<string 22> | md_index <uint 1-4294967295>] ma [<string 22> | ma_index <uint 1-4294967295>]] {trans_id <uint>}
```

---

```
delete cfm linktrace {[md [<string 22> | md_index <uint 1-4294967295>] {ma [<string 22> | ma_index <uint 1-4294967295>] {mepid <int 1-8191>}} | mepname <string 32>]}
```

---

```
show cfm mipccm
```

---

```
config cfm mp_ltr_all [enable | disable]
```

---

```
show cfm mp_ltr_all
```

---

```
show cfm remote_mep [mepname <string 32> | md [<string 22> | md_index <uint 1-4294967295>] ma [<string 22> | ma_index <uint 1-4294967295>] mepid <int 1-8191>] remote_mepid <int 1-8191>
```

---

```
show cfm pkt_cnt {[ports <portlist> {[rx | tx]} | [rx | tx] | ccm]}
```

---

---



---

```
clear cfm pkt_cnt {[ports <portlist> {[rx | tx]} | [rx | tx] | ccm]}
```

---

## 16-1 create cfm md

### Description

This command is used to create a maintenance domain.

### Format

```
create cfm md <string 22> {md_index <uint 1-4294967295>} level <int 0-7>
```

### Parameters

---

**<string 22>** - Enter the maintenance domain name. This name can be up to 22 characters long.

---

**md\_index** - (Optional) Specifies the maintenance domain index.

**<uint 1-4294967295>** - Enter the maintenance domain index value here. This value must be between 1 and 4294967295.

---

**level** - Specifies the maintenance domain level.

**<int 0-7>** - Enter the maintenance domain level here. This value must be between 0 and 7.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To create a maintenance domain called “op\_domain” and assign a maintenance domain level of “2”:

```
DGS-1510-28XMP/ME:admin# create cfm md op_domain level 2
Command: create cfm md op_domain level 2

Success.

DGS-1510-28XMP/ME:admin#
```

## 16-2 config cfm md

### Description

This command is used to configure the parameters of a maintenance domain. The creation of MIPs on an MA is useful to trace the link, MIP by MIP. It also allows the user to perform a loopback from an MEP to an MIP.

### Format

```
config cfm md [<string 22> | md_index <uint 1-4294967295>] {mip [none | auto | explicit] | sender_id [none | chassis | manage | chassis_manage]}
```

## Parameters

**<string 22>** - Enter the maintenance domain name. This name can be up to 22 characters long.

**md\_index** - Specifies the maintenance domain index.

**<uint 1-4294967295>** - Enter the maintenance domain index value here. This value must be between 1 and 4294967295.

**mip** - (Optional) Specifies the control creations of MIPs.

**none** - Specifies not to create MIPs. This is the default value.

**auto** - Specifies that MIPs can always be created on any ports in this MD, if that port is not configured with an MEP of this MD. For the intermediate switch in an MA, the setting must be automatic in order for the MIPs to be created on this device.

**explicit** - Specifies that MIPs can be created on any ports in this MD, only if the next existent lower level has an MEP configured on that port, and that port is not configured with an MEP of this MD.

**sender\_id** - (Optional) Specifies the control transmission of the sender ID TLV.

**none** - Specifies not to transmit the sender ID TLV. This is the default value.

**chassis** - Specifies to transmit the sender ID TLV with the chassis ID information.

**manage** - Specifies to transmit the sender ID TLV with the managed address information.

**chassis\_manage** - Specifies to transmit sender ID TLV with chassis ID information and manage address information.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure the maintenance domain called "op\_domain" and specify the explicit option for creating MIPs:

```
DGS-1510-28XMP/ME:admin# config cfm md op_domain mip explicit
Command: config cfm md op_domain mip explicit

Success.

DGS-1510-28XMP/ME:admin#
```

## 16-3 create cfm ma

### Description

This command is used to create a maintenance association. Different MAs in an MD must have different MA Names. Different MAs in different MDs may have the same MA Name.

### Format

```
create cfm ma <string 22> {ma_index <uint 1-4294967295>} md [<string 22> | md_index <uint 1-4294967295>]
```

## Parameters

**<string 22>** - Enter the maintenance association name. This name can be up to 22 characters long.

**ma\_index** - (Optional) Specifies the maintenance association index.

**<uint 1-4294967295>** - Enter the maintenance association index value here. This value must be between 1

---

and 4294967295.

---

**md** - Specifies the maintenance domain name.

**<string 22>** - Enter the maintenance domain name here. This name can be up to 22 characters long.

**md\_index** - Specifies the maintenance domain index.

**<uint 1-4294967295>** - Enter the maintenance domain index value here. This value must be between 1 and 4294967295.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To create a maintenance association called “op1” and assign it to the maintenance domain “op\_domain”:

```
DGS-1510-28XMP/ME:admin# create cfm ma op1 md op_domain
```

```
Command: create cfm ma op1 md op_domain
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```

---

## 16-4 config cfm ma

### Description

This command is used to configure the parameters of a maintenance association. The MEP list specified for an MA can be located in different devices. MEPs must be created on the ports of these devices explicitly. An MEP will transmit a CCM packet periodically across the MA. The receiving MEP will verify these received CCM packets from the other MEPs against this MEP list for the configuration integrity check.

### Format

```
config cfm ma [<string 22> | ma_index <uint 1-4294967295>] md [<string 22> | md_index <uint 1-4294967295>] {vlanid <vlanid 1-4094> | mip [none | auto | explicit | defer] | sender_id [none | chassis | manage | chassis_manage | defer] | ccm_interval [10ms | 100ms | 1sec | 10sec | 1min | 10min] | mepid_list [add | delete] <mepid_list>}
```

### Parameters

---

**<string 22>** - Enter the maintenance association name. This name can be up to 22 characters long.

---

**ma\_index** - Specifies the maintenance association index.

**<uint 1-4294967295>** - Enter the maintenance association index value here. This value must be between 1 and 4294967295.

---

**md** - Specifies the maintenance domain name.

**<string 22>** - Enter the maintenance domain name here. This name can be up to 22 characters long.

**md\_index** - Specifies the maintenance domain index.

**<uint 1-4294967295>** - Enter the maintenance domain index value here. This value must be between 1 and 4294967295.

---

**vlanid** - (Optional) Specifies the VLAN Identifier. Different MAs must be associated with different VLANs.

**<vlanid 1-4094>** - Enter the VLAN ID used here. This value must be between 1 and 4094.

---

**mip** - (Optional) Specifies the control creation of MIPs.

---

**none** - Specifies not to create MIPs.

**auto** - Specifies that MIPs can always be created on any ports in this MA, if that port is not configured with an MEP of that MA.

**explicit** - Specifies that MIP can be created on any ports in this MA, only if the next existing lower level has an MEP configured on that port, and that port is not configured with an MEP of this MA.

**defer** - Specifies to inherit the setting configured for the maintenance domain that this MA is associated with. This is the default value.

**sender\_id** - (Optional) Specifies the control transmission of the sender ID TLV.

**none** - Specifies not to transmit the sender ID TLV. This is the default value.

**chassis** - Specifies to transmit the sender ID TLV with the chassis ID information.

**manage** - Specifies to transmit the sender ID TLV with the manage address information.

**chassis\_manage** - Specifies to transmit the sender ID TLV with the chassis ID information and the manage address information.

**defer** - Specifies to inherit the setting configured for the maintenance domain that this MA is associated with. This is the default value.

**ccm\_interval** - (Optional) Specifies the CCM interval.

**10ms** - Specifies that the CCM interval will be set to 10 milliseconds. Not recommended.

**100ms** - Specifies that the CCM interval will be set to 100 milliseconds. Not recommended.

**1sec** - Specifies that the CCM interval will be set to 1 second.

**10sec** - Specifies that the CCM interval will be set to 10 seconds. This is the default value.

**1min** - Specifies that the CCM interval will be set to 1 minute.

**10min** - Specifies that the CCM interval will be set to 10 minutes.

**mepid\_list** - (Optional) Specifies the MEPIDs contained in the maintenance association. The range of the MEPID is 1-8191.

**add** - Specifies to add MEPID(s).

**delete** - Specifies to delete MEPID(s). By default, there is no MEPID in a newly created maintenance association.

**<mepid\_list>** - Enter the MEP ID list here.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure a CFM MA:

```
DGS-1510-28XMP/ME:admin# config cfm ma op1 md op_domain vlanid 1 ccm_interval 1sec
Command: config cfm ma op1 md op_domain vlanid 1 ccm_interval 1sec

Success.

DGS-1510-28XMP/ME:admin#
```

## 16-5 create cfm mep

### Description

This command is used to create an MEP. Different MEPs in the same MA must have a different MEPID. MD name, MA name, and MEPID that together identify a MEP.

Different MEPs on the same device must have a different MEP name. Before creating an MEP, its MEPID should be configured in the MA's MEPID list.



## Format

**create cfm mep** <string 32> mepid <int 1-8191> md [<string 22> | md\_index <uint 1-4294967295>] ma [<string 22> | ma\_index <uint 1-4294967295>] direction [inward | outward] port <port>

## Parameters

**<string 32>** - Enter the MEP name used. It is unique among all MEPs configured on the device. This name can be up to 32 characters long.

**mepid** - Specifies the MEP ID. It should be configured in the MA's MEPID list.

**<int 1-8191>** - Enter the MEP ID used here. This value must be between 1 and 8191.

**md** - Specifies the maintenance domain name.

**<string 22>** - Enter the maintenance domain name used here. This name can be up to 22 characters long.

**md\_index** - Specifies the maintenance domain index.

**<uint 1-4294967295>** - Enter the maintenance domain index value here. This value must be between 1 and 4294967295.

**ma** - Specifies the maintenance association name.

**<string 22>** - Enter the maintenance association name used here. This name can be up to 22 characters long.

**ma\_index** - Specifies the maintenance association index.

**<uint 1-4294967295>** - Enter the maintenance association index value here. This value must be between 1 and 4294967295.

**direction** - Specifies the MEP direction.

**inward** - Specifies the inward facing (up) MEP.

**outward** - Specifies the outward facing (down) MEP.

**port** - Specifies the port number. This port should be a member of the MA's associated VLAN.

**<port>** - Enter the port number used here.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To create a CFM MEP:

```
DGS-1510-28XMP/ME:admin# create cfm mep mep1 mepid 1 md op_domain ma op1 direction inward
port 2
```

```
Command: create cfm mep mep1 mepid 1 md op_domain ma op1 direction inward port 2
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```

## 16-6 config cfm mep

### Description

This command is used to configure the parameters of an MEP.

An MEP may generate 5 types of Fault Alarms, as shown below by their priorities from high to low:

- Cross-connect CCM Received: priority 5

- Error CCM Received: priority 4
- Some Remote MEPs Down: priority 3
- Some Remote MEP MAC Status Errors: priority 2
- Some Remote MEP Defect Indications: priority 1

If multiple types of the fault occur on an MEP, only the fault with the highest priority will be alarmed.

## Format

```
config cfm mep [mepname <string 32> | mepid <int 1-8191> md [<string 22> | md_index <uint 1-4294967295>] ma [<string 22> | ma_index <uint 1-4294967295>]] {state [enable | disable] | ccm [enable | disable] | pdu_priority <int 0-7> | fault_alarm [all | mac_status | remote_ccm | error_ccm | xcon_ccm | none] | alarm_time <centisecond 250 -1000> | alarm_reset_time <centisecond 250-1000>}
```

## Parameters

**mepname** - Specifies the MEP name.

**<string 32>** - Enter the MEP name used here. This name can be up to 32 characters long.

**mepid** - Specifies the MEP ID.

**<int 1-8191>** - Enter the MEP ID used here. This value must be between 1 and 8191.

**md** - Specifies the maintenance domain name.

**<string 22>** - Enter the maintenance domain name used here. This name can be up to 22 characters long.

**md\_index** - Specifies the maintenance domain index.

**<uint 1-4294967295>** - Enter the maintenance domain index value here. This value must be between 1 and 4294967295.

**ma** - Specifies the maintenance association name.

**<string 22>** - Enter the maintenance association name used here. This name can be up to 22 characters long.

**ma\_index** - Specifies the maintenance association index.

**<uint 1-4294967295>** - Enter the maintenance association index value here. This value must be between 1 and 4294967295.

**state** - (Optional) Specifies the MEP administrative state.

**enable** - Specifies that the MEP will be enabled.

**disable** - Specifies that the MEP will be disabled. This is the default value.

**ccm** - (Optional) Specifies the CCM transmission state.

**enable** - Specifies that the CCM transmission will be enabled.

**disable** - Specifies that the CCM transmission will be disabled. This is the default value.

**pdu\_priority** - (Optional) Specifies that the 802.1p priority is set in the CCMs and the LTM messages transmitted by the MEP. The default value is 7.

**<int 0-7>** - Enter the PDU priority value here. This value must be between 0 and 7.

**fault\_alarm** - (Optional) Specifies the control types of the fault alarms sent by the MEP.

**all** - Specifies that all types of fault alarms will be sent.

**mac\_status** - Specifies that only the fault alarms whose priority is equal to or higher than "Some Remote MEP MAC Status Errors" are sent.

**remote\_ccm** - Specifies that only the fault alarms whose priority is equal to or higher than "Some Remote MEPs Down" are sent.

**error\_ccm** - Specifies that only the fault alarms whose priority is equal to or higher than "Error CCM Received" are sent.

**xcon\_ccm** - Specifies that only the fault alarms whose priority is equal to or higher than "Cross-connect CCM Received" are sent.

---

**none** - Specifies that no fault alarm is sent. This is the default value.

---

**alarm\_time** - (Optional) Specifies the time that a defect must exceed before the fault alarm can be sent. The unit is centisecond. The default value is 250.

**<centisecond 250-1000>** - Enter the alarm time value here. This value must be between 250 and 1000 centiseconds.

---

**alarm\_reset\_time** - (Optional) Specifies the dormant duration time before a defect is triggered before the fault can be re-alarmed. The unit is centisecond. The default value is 1000.

**<centisecond 250-1000>** - Enter the alarm reset time value here. This value must be between 250 and 1000 centiseconds.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure a CFM MEP:

```
DGS-1510-28XMP/ME:admin# config cfm mep mepname mep1 state enable ccm enable
Command: config cfm mep mepname mep1 state enable ccm enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 16-7 delete cfm mep

### Description

This command is used to delete a previously created MEP.

### Format

**delete cfm mep [mepname <string 32> | mepid <int 1-8191> md [<string 22> | md\_index <uint 1-4294967295>] ma [<string 22> | ma\_index <uint 1-4294967295>]]**

### Parameters

---

**mepname** - Specifies the MEP name.

**<string 32>** - Enter the MEP name used here. This name can be up to 32 characters long.

---

**mepid** - Specifies the MEP ID.

**<int 1-8191>** - Enter the MEP ID used here. This value must be between 1 and 8191.

**md** - Specifies the maintenance domain name.

**<string 22>** - Enter the maintenance domain name used here. This name can be up to 22 characters long.

**md\_index** - Specifies the maintenance domain index.

**<uint 1-4294967295>** - Enter the maintenance domain index value here. This value must be between 1 and 4294967295.

**ma** - Specifies the maintenance association name.

**<string 22>** - Enter the maintenance association name used here. This name can be up to 22 characters long.

**ma\_index** - Specifies the maintenance association index.

**<uint 1-4294967295>** - Enter the maintenance association index value here. This value must be

---

---

between 1 and 4294967295.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To delete a CFM MEP:

```
DGS-1510-28XMP/ME:admin# delete cfm mep mepname mep1
Command: delete cfm mep mepname mep1

Success.

DGS-1510-28XMP/ME:admin#
```

## 16-8 delete cfm ma

### Description

This command is used to delete a created maintenance association. All MEPs created in the maintenance association will be deleted automatically.

### Format

**delete cfm ma** [<string 22> | ma\_index <uint 1-4294967295>] md [<string 22> | md\_index <uint 1-4294967295>]

### Parameters

---

**<string 22>** - Enter the maintenance association name. This name can be up to 22 characters long.

---

**ma\_index** - Specifies the maintenance association index.

**<uint 1-4294967295>** - Enter the maintenance association index value here. This value must be between 1 and 4294967295.

---

**md** - Specifies the maintenance domain name.

**<string 22>** - Enter the maintenance domain name used here. This name can be up to 22 characters long.

**md\_index** - Specifies the maintenance domain index.

**<uint 1-4294967295>** - Enter the maintenance domain index value here. This value must be between 1 and 4294967295.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To delete a CFM MA:

```
DGS-1510-28XMP/ME:admin# delete cfm ma op1 md op_domain
Command: delete cfm ma op1 md op_domain

Success.

DGS-1510-28XMP/ME:admin#
```

## 16-9 delete cfm md

### Description

This command is used to delete a previously created maintenance domain. All the MEPs and maintenance associations created in the maintenance domain will be deleted automatically.

### Format

**delete cfm md [<string 22> | md\_index <uint 1-4294967295>]**

### Parameters

---

**<string 22>** - Enter the maintenance domain name. This name can be up to 22 characters long.

**md\_index** - Specifies the maintenance domain index.

**<uint 1-4294967295>** - Enter the maintenance domain index value here. This value must be between 1 and 4294967295.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To delete a CFM MD:

```
DGS-1510-28XMP/ME:admin# delete cfm md op_domain
Command: delete cfm md op_domain

Success.

DGS-1510-28XMP/ME:admin#
```

## 16-10 enable cfm

### Description

This command is used to enable the CFM globally.

### Format

**enable cfm**

### Parameters

None.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To enable the CFM globally:

```
DGS-1510-28XMP/ME:admin# enable cfm
Command: enable cfm

Success.

DGS-1510-28XMP/ME:admin#
```

## 16-11 disable cfm

### Description

This command is used to disable the CFM globally.

### Format

**disable cfm**

### Parameters

None.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To disable the CFM globally:

```
DGS-1510-28XMP/ME:admin# disable cfm
Command: disable cfm

Success.

DGS-1510-28XMP/ME:admin#
```

## 16-12 config cfm ports

### Description

This command is used to enable or disable the CFM function on a per-port basis. By default, the CFM function is disabled on all ports.

If the CFM is disabled on a port:

1. MIPs are never created on that port.
2. MEPs can still be created on that port, and the configuration can be saved.
3. MEPs created on that port can never generate or process CFM PDUs. If the user issues a Loopback or Link trace test on those MEPs, it will prompt the user to inform them that the CFM function is disabled on that port.

### Format

**config cfm ports <portlist> state [enable | disable]**

### Parameters

---

**<portlist>** - Enter the list of ports used for this configuration.

---

**state** - Specifies that the CFM function will be enabled or disabled.

**enable** - Specifies that the CFM function will be enabled.

**disable** - Specifies that the CFM function will be disabled.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To configure the CFM ports:

```
DGS-1510-28XMP/ME:admin# config cfm ports 2-5 state enable
Command: config cfm ports 2-5 state enable

Success.

DGS-1510-28XMP/ME:admin#
```

16-13 show cfm ports

### Description

This command is used to show the CFM state of specified ports.

### Format

**show cfm ports <portlist>**

### Parameters

---

**<portlist>** - Enter the list of logical ports.

---

### Restrictions

None.

## Example

To show the CFM ports:

```

DGS-1510-28XMP/ME:admin# show cfm ports 3-6
Command: show cfm ports 3-6

Port    State
-----  -
3       Enabled
4       Enabled
5       Enabled
6       Disabled

DGS-1510-28XMP/ME:admin#

```

16-14 show cfm

## Description

This command is used to show the CFM configuration.

## Format

**show cfm** {[**md** [**<string 22>** | **md\_index** **<uint 1-4294967295>**]} {**ma** [**<string 22>** | **ma\_index** **<uint 1-4294967295>**]} {**mepid** **<int 1-8191>**}} | **mepname** **<string 32>**}}

## Parameters

- 
- md** - (Optional) Specifies the maintenance domain name.
    - <string 22>** - Enter the maintenance domain name used here. This name can be up to 22 characters long.
  - md\_index** - Specifies the maintenance domain index.
    - <uint 1-4294967295>** - Enter the maintenance domain index value here. This value must be between 1 and 4294967295.
  - ma** - (Optional) Specifies the maintenance association name.
    - <string 22>** - Enter the maintenance association name used here. This name can be up to 22 characters long.
  - ma\_index** - Specifies the maintenance association index.
    - <uint 1-4294967295>** - Enter the maintenance association index value here. This value must be between 1 and 4294967295.
  - mepid** - (Optional) Specifies the MEP ID.
    - <int 1-8191>** - Enter the MEP ID used here. This value must be between 1 and 8191.
- 
- mepname** - (Optional) Specifies the MEP name.
    - <string 32>** - Enter the MEP name used here. This name can be up to 32 characters long.
- 

## Restrictions

None.

## Example

To show the CFM configuration:



```
DGS-1510-28XMP/ME:admin# show cfm
```

```
Command: show cfm
```

```
CFM State: Enabled
```

MD Index	MD Name	Level
1	op_domain	2

```
DGS-1510-28XMP/ME:admin# show cfm md op_domain
```

```
Command: show cfm md op_domain
```

```
MD Index      : 1
MD Name       : op_domain
MD Level      : 2
MIP Creation  : Explicit
SenderID TLV : None
```

MA Index	MA Name	VID
1	op1	1

```
DGS-1510-28XMP/ME:admin# show cfm md op_domain ma op1
```

```
Command: show cfm md op_domain ma op1
```

```
MA Index      : 1
MA Name       : op1
MA VID        : 1
MIP Creation  : Defer
CCM Interval  : 1 second
SenderID TLV : Defer
MEPID List    : 1
```

MEPID	Direction	Port	Name	MAC Address
1	Inward	2	mep1	00-01-02-03-04-02

```
DGS-1510-28XMP/ME:admin# show cfm mepname mep1
```

```
Command: show cfm mepname mep1
```

```
Name           : mep1
MEPID          : 1
Port           : 2
Direction      : Inward
CFM Port Status : Disabled
MAC Address     : 00-01-02-03-04-02
MEP State      : Enabled
CCM State      : Enabled
PDU Priority    : 7
Fault Alarm     : Disabled
Alarm Time     : 250 centisecond((1/100)s)
Alarm Reset Time : 1000 centisecond((1/100)s)
Highest Fault   : None
Out-of-Sequence CCMs: 0 received
```

```

Cross-connect CCMs : 0 received
Error CCMs        : 0 received
Normal CCMs       : 0 received
Port Status CCMs  : 0 received
If Status CCMs    : 0 received
CCMs transmitted  : 0
In-order LBRs     : 0 received
Out-of-order LBRs : 0 received
Next LTM Trans ID : 0
Unexpected LTRs    : 0 received
LBMs Transmitted  : 0

```

Remote

MEPID	MAC Address	Status	RDI	PortSt	IfSt	Detect Time
2	FF-FF-FF-FF-FF-FF	FAILED	No	No	No	2011-07-13 12:00:00

DGS-1510-28XMP/ME:admin#

## 16-15 show cfm fault

### Description

This command is used to display all the fault conditions detected by the MEPs contained in the specified MA or MD. This display provides the overview of the fault status by MEPs.

### Format

```
show cfm fault {md [<string 22> | md_index <uint 1-4294967295>} {ma [<string 22> | ma_index <uint 1-4294967295>]}
```

### Parameters

**md** - (Optional) Specifies the maintenance domain name.

**<string 22>** - Enter the maintenance domain name used here. This name can be up to 22 characters long.

**md\_index** - Specifies the maintenance domain index.

**<uint 1-4294967295>** - Enter the maintenance domain index value here. This value must be between 1 and 4294967295.

**ma** - (Optional) Specifies the maintenance association name.

**<string 22>** - Enter the maintenance association name used here. This name can be up to 22 characters long.

**ma\_index** - Specifies the maintenance association index.

**<uint 1-4294967295>** - Enter the maintenance association index value here. This value must be between 1 and 4294967295.

### Restrictions

None.

### Example

To show the CFM faults:

```
DGS-1510-28XMP/ME:admin# show cfm fault
Command: show cfm fault

MD Name      MA Name      MEPID  Status
-----
op_domain    op1          1      Cross-connect CCM Received

DGS-1510-28XMP/ME:admin#
```

## 16-16 show cfm port

### Description

This command is used to show MEPs and MIPs created on a port.

### Format

**show cfm port <port> {level <int 0-7> | direction [inward | outward] | vlanid <vlanid 1-4094>}**

### Parameters

**<port>** - Enter the port number used here.

**level** - (Optional) Specifies the MD Level. If not specified, all levels are shown.

**<int 0-7>** - Enter the MD level value here. This value must be between 0 and 7.

**direction** - (Optional) Specifies the MEP direction. If not specified, both directions and the MIP are shown.

**inward** - Specifies that the MEP direction will be inward facing.

**outward** - Specifies that the MEP direction will be outward facing.

**vlanid** - (Optional) Specifies the VLAN identifier. If not specified, all VLANs are shown.

**<vlanid 1-4094>** - Enter the VLAN ID used here. This value must be between 1 and 4094.

### Restrictions

None.

### Example

To show the MEPs and MIPs created on a port:

```
DGS-1510-28XMP/ME:admin# show cfm port 2
Command: show cfm port 2

MAC Address: 00-01-02-03-04-02
MD Name      MA Name      MEPID  Level  Direction  VID
-----
op_domain    op1          1      2      Inward     1

DGS-1510-28XMP/ME:admin#
```

## 16-17 cfm loopback

**Description**

This command is used to start a CFM loopback test. You can press Ctrl+C to exit the loopback test. The MAC address represents the destination MEP or MIP that can be reached by this MAC address. The MEP represents the source MEP to initiate the loopback message.

**Format**

```
cfm loopback <macaddr> [mepname <string 32> | mepid <int 1-8191> md [<string 22> | md_index <uint 1-4294967295>] ma [<string 22> | ma_index <uint 1-4294967295>]] {num <int 1-65535> | [length <int 0-1500> | pattern <string 1500>] | pdu_priority <int 0-7>}
```

**Parameters**


---

<b>&lt;macaddr&gt;</b>	- Enter the destination MAC address here.
<hr/>	
<b>mepname</b>	- Specifies the MEP name used.
<b>&lt;string 32&gt;</b>	- Enter the MEP name used here. This name can be up to 32 characters long.
<hr/>	
<b>mepid</b>	- Specifies the MEP ID used.
<b>&lt;int 1-8191&gt;</b>	- Enter the MEP ID used here. This value must be between 1 and 8191.
<b>md</b>	- Specifies the maintenance domain name.
<b>&lt;string 22&gt;</b>	- Enter the maintenance domain name her. This name can be up to 22 characters long.
<b>md_index</b>	- Specifies the maintenance domain index.
<b>&lt;uint 1-4294967295&gt;</b>	- Enter the maintenance domain index value here. This value must be between 1 and 4294967295.
<b>ma</b>	- Specifies the maintenance association name.
<b>&lt;string 22&gt;</b>	- Enter the maintenance association name her. This name can be up to 22 characters long.
<b>ma_index</b>	- Specifies the maintenance association index.
<b>&lt;uint 1-4294967295&gt;</b>	- Enter the maintenance association index value here. This value must be between 1 and 4294967295.
<hr/>	
<b>num</b>	- (Optional) Number of LBMs to be sent. The default value is 4.
<b>&lt;int 1-65535&gt;</b>	- Enter the number of LBMs to be sent here. This value must be between 1 and 65535.
<hr/>	
<b>length</b>	- (Optional) The payload length of the LBM to be sent. The default is 0.
<b>&lt;int 0-1500&gt;</b>	- Enter the payload length here. This value must be between 0 and 1500.
<hr/>	
<b>pattern</b>	- (Optional) An arbitrary amount of data to be included in a Data TLV, along with an indication whether the Data TLV is to be included.
<b>&lt;string 1500&gt;</b>	- Enter the pattern used here. This value can be up to 1500 characters long.
<hr/>	
<b>pdu_priority</b>	- (Optional) The 802.1p priority to be set in the transmitted LBMs. If not specified, it uses the same priority as CCMs and LTMs sent by the MA.
<b>&lt;int 0-7&gt;</b>	- Enter the PDU priority value here. This value must be between 0 and 7.

---

**Restrictions**

None.

**Example**

To transmit a LBM:

```
DGS-1510-28XMP/ME:admin# cfm loopback 32-00-70-89-31-06 mepname mep1
Command: cfm loopback 32-00-70-89-31-06 mepname mep1

Reply from 32-00-70-89-31-06: bytes=0 time=50ms
Reply from 32-00-70-89-31-06: bytes=0 time=50ms
Reply from 32-00-70-89-31-06: bytes=0 time=50ms
Reply from 32-00-70-89-31-06: bytes=0 time=50ms

CFM loopback statistics for 32-00-70-89-31-06:
    Packets: Sent=4, Received=4, Lost=0(0% loss).

DGS-1510-28XMP/ME:admin# "
```

## 16-18 cfm linktrace

### Description

This command is used to issue a CFM link track message.

### Format

```
cfm linktrace <macaddr> [mepname <string 32> | mepid <int 1-8191> md [<string 22> | md_index <uint 1-4294967295>] ma [<string 22> | ma_index <uint 1-4294967295>]] [ttl <int 2-255> | pdu_priority <int 0-7>]
```

### Parameters

---

<b>&lt;macaddr&gt;</b>	- Specifies the destination MAC address.
<b>mepname</b>	- Specifies the MEP name used.
<b>&lt;string 32&gt;</b>	- Enter the MEP name used here. This name can be up to 32 characters long.
<b>mepid</b>	- Specifies the MEP ID used.
<b>&lt;int 1-8191&gt;</b>	- Enter the MEP ID used here. This value must be between 1 and 8191.
<b>md</b>	- Specifies the maintenance domain name.
<b>&lt;string 22&gt;</b>	- Enter the maintenance domain name here. This name can be up to 22 characters long.
<b>md_index</b>	- Specifies the maintenance domain index.
<b>&lt;uint 1-4294967295&gt;</b>	- Enter the maintenance domain index value here. This value can be between 1 and 4294967295.
<b>ma</b>	- Specifies the maintenance association name.
<b>&lt;string 22&gt;</b>	- Enter the maintenance association name here. This name can be up to 22 characters long.
<b>ma_index</b>	- Specifies the maintenance association index.
<b>&lt;uint 1-4294967295&gt;</b>	- Enter the maintenance association index value here. This value can be between 1 and 4294967295.
<b>ttl</b>	- (Optional) Specifies the link trace message TTL value. The default value is 64.
<b>&lt;int 2-255&gt;</b>	- Enter the link trace message TTL value here. This value must be between 2 and 255.
<b>pdu_priority</b>	- (Optional) Specifies the 802.1p priority to be set in the transmitted LTM. If not specified, it uses the same priority as CCMs sent by the MA.
<b>&lt;int 0-7&gt;</b>	- Enter the PDU priority value here. This value must be between 0 and 7.

---

### Restrictions

None.

## Example

To transmit an LTM:

```
DGS-1510-28XMP/ME:admin# cfm linktrace 00-01-02-03-04-05 mepname mep1
Command: cfm linktrace 00-01-02-03-04-05 mepname mep1

Transaction ID: 26
Success.

DGS-1510-28XMP/ME:admin#
```

16-19 show cfm linktrace

## Description

This command is used to show the link trace responses. The maximum link trace responses a device can hold is 128.

## Format

**show cfm linktrace [mepname <string 32> | mepid <int 1-8191> md [<string 22> | md\_index <uint 1-4294967295>] ma [<string 22> | ma\_index <uint 1-4294967295>]] {trans\_id <uint>}**

## Parameters

**mepname** - Specifies the MEP name used.

**<string 32>** - Enter the MEP name used here. This name can be up to 32 characters long.

**mepid** - Specifies the MEP ID used.

**<int 1-8191>** - Enter the MEP ID used here. This value must be between 1 and 8191.

**md** - Specifies the maintenance domain name.

**<string 22>** - Enter the maintenance domain name here. This name can be up to 22 characters long.

**md\_index** - Specifies the maintenance domain index.

**<uint 1-4294967295>** - Enter the maintenance domain index value here. This value must be between 1 and 4294967295.

**ma** - Specifies the maintenance association name.

**<string 22>** - Enter the maintenance association name here. This name can be up to 22 characters long.

**ma\_index** - Specifies the maintenance association index.

**<uint 1-4294967295>** - Enter the maintenance association index value here. This value must be between 1 and 4294967295.

**trans\_id** - (Optional) Specifies the identifier of the transaction displayed.

**<uint>** - Enter the transaction ID used here.

## Restrictions

None.

## Example

To show the link trace reply when the "all MPs reply LTRs" function is enabled:

```
DGS-1510-28XMP/ME:admin# show cfm linktrace mepname mep1 trans_id 26
Command: show cfm linktrace mepname mep1 trans_id 26

Transaction ID: 26
From MEP mep1 to 32-00-70-89-31-06
Start Time      : 2011-11-22 16:05:08
```

Hop	MEPID	Ingress MAC Address	Egress MAC Address	Forwarded	Relay Action
1	-	00-00-00-00-00-00	32-00-70-89-41-06	Yes	FDB
2	-	00-32-28-40-09-07	00-32-28-40-09-05	Yes	FDB
3	2	00-00-00-00-00-00	32-00-70-89-31-06	No	Hit

```
DGS-1510-28XMP/ME:admin# "
```

To show the link trace reply when the "all MPs reply LTRs" function is disabled:

```
DGS-1510-28XMP/ME:admin# show cfm linktrace mepname mep1 trans_id 27
Command: show cfm linktrace mepname mep1 trans_id 27

Transaction ID: 27
From MEP mep1 to 32-00-70-89-31-06
Start Time      : 2011-11-22 16:28:56
```

Hop	MEPID	Ingress MAC Address	Egress MAC Address	Forwarded	Relay Action
1	-	00-00-00-00-00-00	32-00-70-89-41-06	Yes	FDB
2	-	00-32-28-40-09-07	00-32-28-40-09-05	Yes	FDB
3	2	00-00-00-00-00-00	32-00-70-89-31-06	No	Hit

```
DGS-1510-28XMP/ME:admin# "
```

## 16-20 delete cfm linktrace

### Description

This command is used to delete the stored link trace response data that have been initiated by the specified MEP.

### Format

```
delete cfm linktrace {[md [<string 22> | md_index <uint 1-4294967295>] {ma [<string 22> | ma_index <uint 1-4294967295>] {mepid <int 1-8191>}} | mepname <string 32>}}
```

### Parameters

**md** - (Optional) Specifies the maintenance domain name.

**<string 22>** - Enter the maintenance domain name her. This name can be up to 22 characters long.

**md\_index** - Specifies the maintenance domain index.

**<uint 1-4294967295>** - Enter the maintenance domain index value here. This value must be between 1 and 4294967295.

**ma** - (Optional) Specifies the maintenance association name.

**<string 22>** - Enter the maintenance association name her. This name can be up to 22 characters long.

---

**ma\_index** - Specifies the maintenance association index.

**<uint 1-4294967295>** - Enter the maintenance association index value here. This value must be between 1 and 4294967295.

**mepid** - (Optional) Specifies the MEP ID used.

**<int 1-8191>** - Enter the MEP ID used here. This value must be between 1 and 8191.

---

**mepname** - (Optional) Specifies the MEP name used.

**<string 32>** - Enter the MEP name used here. This name can be up to 32 characters long.

---

## Restrictions

None.

## Example

To delete the CFM link trace reply:

```
DGS-1510-28XMP/ME:admin# delete cfm linktrace mepname mep1
Command: delete cfm linktrace mepname mep1

Success.

DGS-1510-28XMP/ME:admin#
```

## 16-21 show cfm mipccm

### Description

This command is used to show the MIP CCM database entries. All entries in the MIP CCM database will be shown. A MIP CCM entry is similar to a FDB which keeps the forwarding port information of a MAC entry.

### Format

**show cfm mipccm**

### Parameters

None.

### Restrictions

None.

### Example

To show MIP CCM database entries:



```
DGS-1510-28XMP/ME:admin# show cfm mipccm
Command: show cfm mipccm

MA          VID   MAC Address          Port
-----
opma       1     xx-xx-xx-xx-xx-xx   2
opma       1     xx-xx-xx-xx-xx-xx   3

Total: 2

DGS-1510-28XMP/ME:admin#
```

## 16-22 config cfm mp\_ltr\_all

### Description

This command is used to enable or disable the "all MPs reply LTRs" function.

### Format

**config cfm mp\_ltr\_all [enable | disable]**

### Parameters

---

**enable** - Specifies that the MP's reply to the LTR function will be set to all.

---

**disable** - Specifies to disable sending the all MPs replay LTRs function.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To enable the "all MPs reply LTRs" function:

```
DGS-1510-28XMP/ME:admin# config cfm mp_ltr_all enable
Command: config cfm mp_ltr_all enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 16-23 show cfm mp\_ltr\_all

### Description

This command is used to show the current configuration of the "all MPs reply LTRs" function.

### Format

**show cfm mp\_ltr\_all**

**Parameters**

None.

**Restrictions**

None.

**Example**

To show the configuration of the "all MPs reply LTRs" function:

```
DGS-1510-28XMP/ME:admin# show cfm mp_ltr_all
Command: show cfm mp_ltr_all

All MPs reply LTRs: Disabled

DGS-1510-28XMP/ME:admin#
```

16-24 show cfm remote\_mep

**Description**

This command is used to show remote MEPs.

**Format**

```
show cfm remote_mep [mepname <string 32> | md [<string 22> | md_index <uint 1-4294967295>] ma
[<string 22> | ma_index <uint 1-4294967295>] mepid <int 1-8191>] remote_mepid <int 1-8191>
```

**Parameters**

**mepname** - Specifies the MEP name used.

**<string 32>** - Enter the MEP name used here. This name can be up to 32 characters long.

**md** Specifies the maintenance domain name.

**<string 22>** - Enter the maintenance domain name here. This name can be up to 22 characters long.

**md\_index** - Specifies the maintenance domain index.

**<uint 1-4294967295>** - Enter the maintenance domain index value here. This value must be between 1 and 4294967295.

**ma** - Specifies the maintenance association name.

**<string 22>** - Enter the maintenance association name here. This name can be up to 22 characters long.

**ma\_index** - Specifies the maintenance association index.

**<uint 1-4294967295>** - Enter the maintenance association index value here. This value must be between 1 and 4294967295.

**mepid** - Specifies the MEP ID used.

**<int 1-8191>** - Enter the MEP ID used here. This value must be between 1 and 8191.

**remote\_mepid** - Specifies the Remote MEP ID used.

**<int 1-8191>** - Enter the remote MEP ID used here. This value must be between 1 and 8191.

**Restrictions**

None.

## Example

To show the CFM Remote MEP information:

```

DGS-1510-28XMP/ME:admin# show cfm remote_mep mepname mep1 remote_mepid 2
Command: show cfm remote_mep mepname mep1 remote_mepid 2

Remote MEPID           : 2
MAC Address            : 00-11-22-33-44-02
Status                 : OK
RDI                    : Yes
Port State             : Blocked
Interface Status       : Down
Last CCM Serial Number : 1000
Sender Chassis ID      : 00-11-22-33-44-00
Sender Management Address: SNMP-UDP-IPv4 10.90.90.90:161
Detect Time            : 2008-01-01 12:00:00

DGS-1510-28XMP/ME:admin#

```

## 16-25 show cfm pkt\_cnt

### Description

This command is used to show the CFM packet's RX/TX counters.

### Format

**show cfm pkt\_cnt** {[ports <portlist> {[rx | tx]} | [rx | tx] | ccm]}

### Parameters

**ports** - (Optional) Specifies the port counters to show. If not specified, all ports will be shown.

**<portlist>** - Enter the list of ports used for this configuration here.

**rx** - (Optional) Specifies to display the RX counter.

**tx** - (Optional) Specifies to display the TX counter. If not specified, both of them will be shown.

**rx** - (Optional) Specifies to display the RX counter.

**tx** - (Optional) Specifies to display the TX counter. If not specified, both of them will be shown.

**ccm** - (Optional) Specifies the CCM RX counters.

### Restrictions

None.

### Example

To show the CFM packet's RX/TX counters:

DGS-1510-28XMP/ME:admin# show cfm pkt\_cnt

Command: show cfm pkt\_cnt

## CFM RX Statistics

```

-----
Port  AllPkt  CCM      LBR      LBM      LTR      LTM      VidDrop  OpcoDrop
-----
all   2446    2434     0         9         0         3         0         0
1     2446    2434     0         9         0         3         0         0
2     0        0         0         0         0         0         0         0
3     0        0         0         0         0         0         0         0
4     0        0         0         0         0         0         0         0
5     0        0         0         0         0         0         0         0
6     0        0         0         0         0         0         0         0
7     0        0         0         0         0         0         0         0
8     0        0         0         0         0         0         0         0
9     0        0         0         0         0         0         0         0
10    0        0         0         0         0         0         0         0
11    0        0         0         0         0         0         0         0
12    0        0         0         0         0         0         0         0
13    0        0         0         0         0         0         0         0
14    0        0         0         0         0         0         0         0
15    0        0         0         0         0         0         0         0
16    0        0         0         0         0         0         0         0
17    0        0         0         0         0         0         0         0
18    0        0         0         0         0         0         0         0
19    0        0         0         0         0         0         0         0
20    0        0         0         0         0         0         0         0
21    0        0         0         0         0         0         0         0
22    0        0         0         0         0         0         0         0
23    0        0         0         0         0         0         0         0
24    0        0         0         0         0         0         0         0
25    0        0         0         0         0         0         0         0
26    0        0         0         0         0         0         0         0
27    0        0         0         0         0         0         0         0
28    0        0         0         0         0         0         0         0

```

## CFM TX Statistics

```

-----
Port  AllPkt  CCM      LBR      LBM      LTR      LTM
-----
all   1974    1974     0         0         0         0
1     1974    1974     0         0         0         0
2     0        0         0         0         0         0
3     0        0         0         0         0         0
4     0        0         0         0         0         0
5     0        0         0         0         0         0
6     0        0         0         0         0         0
7     0        0         0         0         0         0
8     0        0         0         0         0         0
9     0        0         0         0         0         0
10    0        0         0         0         0         0
11    0        0         0         0         0         0
12    0        0         0         0         0         0
13    0        0         0         0         0         0

```

```

14 0 0 0 0 0 0
15 0 0 0 0 0 0
16 0 0 0 0 0 0
17 0 0 0 0 0 0
18 0 0 0 0 0 0
19 0 0 0 0 0 0
20 0 0 0 0 0 0
21 0 0 0 0 0 0
22 0 0 0 0 0 0
23 0 0 0 0 0 0
24 0 0 0 0 0 0
25 0 0 0 0 0 0
26 0 0 0 0 0 0
27 0 0 0 0 0 0
28 0 0 0 0 0 0

```

```
DGS-1510-28XMP/ME:admin# show cfm pkt_cnt ccm
```

```
Command: show cfm pkt_cnt ccm
```

```
CCM RX counters:
```

```
XCON = Cross-connect CCMS
```

```
Error = Error CCMS
```

```
Normal = Normal CCMS
```

MEP Name	VID	Port	Level	Direction	XCON	Error	Normal
1	1	1	1	Inward	0	0	0
28mep	45	3	7	Inward	0	0	2438
Total:					0	0	2438

```
DGS-1510-28XMP/ME:admin#
```

## 16-26 clear cfm pkt\_cnt

### Description

This command is used to clear the CFM packet's RX/TX counters.

### Format

```
clear cfm pkt_cnt {[ports <portlist> {[rx | tx]} | [rx | tx] | ccm]}
```

### Parameters

**ports** - (Optional) The ports which require need the counters clearing. If not specified, all ports will be cleared.

**<portlist>** - Enter the list of ports used for this configuration here.

**rx** - (Optional) Specifies to clear the RX counter.

**tx** - (Optional) Specifies to clear the TX counter. If not specified, both of them will be cleared.

**rx** - (Optional) Specifies to clear the RX counter.

**tx** - (Optional) Specifies to clear the TX counter. If not specified, both of them will be cleared.

**ccm** - (Optional) Specifies the CCM RX counters.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To clear the CFM packet's RX/TX counters:

```
DGS-1510-28XMP/ME:admin# clear cfm pkt_cnt
Command: clear cfm pkt_cnt

Success.

DGS-1510-28XMP/ME:admin# clear cfm pkt_cnt ccm
Command: clear cfm pkt_cnt ccm

Success.

DGS-1510-28XMP/ME:admin#
```

# Chapter 17 CPU Interface Filtering Command List

---

```
create cpu access_profile profile_id <value 1-5> [ethernet {vlan | source_mac <macmask 000000000000-
ffffffff> | destination_mac <macmask 000000000000-ffffffff> | 802.1p | ethernet_type} | ip {vlan |
source_ip_mask <netmask> | destination_ip_mask <netmask> | dscp | [icmp {type | code} | igmp {type} | tcp
{src_port_mask <hex 0x0-0xffff> | dst_port_mask <hex 0x0-0xffff> | flag_mask [all | {urg | ack | psh | rst | syn
| fin}]} | udp {src_port_mask <hex 0x0-0xffff> | dst_port_mask <hex 0x0-0xffff>} | protocol_id_mask <hex 0x0-
0xff> {user_define_mask <hex 0x0-0xffffffff>}}] | packet_content_mask {offset_0-15 <hex 0x0-0xffffffff> <hex
0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> | offset_16-31 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff>
<hex 0x0-0xffffffff> <hex 0x0-0xffffffff> | offset_32-47 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-
0xffffffff> <hex 0x0-0xffffffff> | offset_48-63 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex
0x0-0xffffffff> | offset_64-79 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> } |
ipv6 {class | flowlabel | source_ipv6_mask <ipv6mask> | destination_ipv6_mask <ipv6mask>}]
```

---

```
delete cpu access_profile [profile_id <value 1-5> | all]
```

---

```
config cpu access_profile profile_id <value 1-5> [add access_id [auto_assign | <value 1-100>] [ethernet {[vlan
<vlan_name 32> | vlan_id <vlanid 1-4094>] | source_mac <macaddr> | destination_mac <macaddr> | 802.1p
<value 0-7> | ethernet_type <hex 0x0-0xffff>} | ip {[vlan <vlan_name 32> | vlan_id <vlanid 1-4094>] |
source_ip <ipaddr> | destination_ip <ipaddr> | dscp <value 0-63> | [icmp {type <value 0-255> | code <value
0-255>} | igmp {type <value 0-255>} | tcp {src_port <value 0-65535> | dst_port <value 0-65535> | flag [all |
{urg | ack | psh | rst | syn | fin}]} | udp {src_port <value 0-65535> | dst_port <value 0-65535>} | protocol_id
<value 0-255> {user_define <hex 0x0-0xffffffff>}}] | packet_content {offset_0-15 <hex 0x0-0xffffffff> <hex 0x0-
0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> | offset_16-31 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex
0x0-0xffffffff> <hex 0x0-0xffffffff> | offset_32-47 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff>
<hex 0x0-0xffffffff> | offset_48-63 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-
0xffffffff> | offset_64-79 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff>} | ipv6
{class <value 0-255> | flowlabel <hex 0x0-0xffff> | source_ipv6 <ipv6addr> | destination_ipv6 <ipv6addr>}]
port [<portlist> | all] [permit | deny] {time_range <range_name 32>} | delete access_id <value 1-100>]
```

---

```
enable cpu_interface_filtering
```

---

```
disable cpu_interface_filtering
```

---

```
show cpu access_profile {profile_id <value 1-5>}
```

---

## 17-1 create cpu access\_profile profile\_id

### Description

This command is used to create CPU access list profiles.

### Format

```
create cpu access_profile profile_id <value 1-5> [ethernet {vlan | source_mac <macmask 000000000000-
ffffffff> | destination_mac <macmask 000000000000-ffffffff> | 802.1p | ethernet_type} | ip {vlan |
source_ip_mask <netmask> | destination_ip_mask <netmask> | dscp | [icmp {type | code} | igmp {type} |
tcp {src_port_mask <hex 0x0-0xffff> | dst_port_mask <hex 0x0-0xffff> | flag_mask [all | {urg | ack | psh | rst
| syn | fin}]} | udp {src_port_mask <hex 0x0-0xffff> | dst_port_mask <hex 0x0-0xffff>} | protocol_id_mask
<hex 0x0-0xff> {user_define_mask <hex 0x0-0xffffffff>}}] | packet_content_mask {offset_0-15 <hex 0x0-
0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> | offset_16-31 <hex 0x0-0xffffffff> <hex
0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> | offset_32-47 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff>
<hex 0x0-0xffffffff> <hex 0x0-0xffffffff> | offset_48-63 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-
0xffffffff> <hex 0x0-0xffffffff> | offset_64-79 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex
0x0-0xffffffff>} | ipv6 {class | flowlabel | source_ipv6_mask <ipv6mask> | destination_ipv6_mask
<ipv6mask>}]
```

## Parameters

---

**<value 1-5>** - Enter the profile ID value here. This value must be between 1 and 5.

---

**ethernet** - Specifies that the profile type will be Ethernet.

**vlan** - (Optional) Specifies a VLAN mask.

**source\_mac** - (Optional) Specifies the source MAC mask.

**<macmask>** - Enter the source MAC mask here.

**destination\_mac** - (Optional) Specifies the destination mac mask.

**<macmask>** - Enter the destination MAC mask here.

**802.1p** - (Optional) Specifies 802.1p priority tag mask.

**ethernet\_type** - (Optional) Specifies the Ethernet type mask.

---

**ip** - Specifies that the profile type will be IP.

**vlan** - (Optional) Specifies a VLAN mask.

**source\_ip\_mask** - (Optional) Specifies an IP source submask.

**<netmask>** - Enter the IP source submask here.

**destination\_ip\_mask** - (Optional) Specifies an IP destination submask.

**<netmask>** - Enter the IP destination submask here.

**dscp** - (Optional) Specifies the DSCP mask.

**icmp** - (Optional) Specifies that the rule applies to ICMP traffic.

**type** - (Optional) Specifies that the rule applies to ICMP type traffic.

**code** - (Optional) Specifies that the rule applies to ICMP code traffic.

**igmp** - (Optional) Specifies that the rule applies to IGMP traffic.

**type** - (Optional) Specifies that the rule applies to IGMP type traffic.

**tcp** - Specifies that the rule applies to TCP traffic.

**src\_port\_mask** - (Optional) Specifies the TCP source port mask.

**<hex 0x0-0xffff>** - Enter the source TCP port mask here.

**dst\_port\_mask** - (Optional) Specifies the TCP destination port mask.

**<hex 0x0-0xffff>** - Enter the destination TCP port mask here.

**flag\_mask** - (Optional) Specifies the TCP flag field mask.

**all** - Specifies that the TCP flag field mask will be set to all.

**urg** - (Optional) Specifies that the TCP flag field mask will be set to urg.

**ack** - (Optional) Specifies that the TCP flag field mask will be set to ack.

**psh** - (Optional) Specifies that the TCP flag field mask will be set to psh.

**rst** - (Optional) Specifies that the TCP flag field mask will be set to rst.

**syn** - (Optional) Specifies that the TCP flag field mask will be set to syn.

**fin** - (Optional) Specifies that the TCP flag field mask will be set to fin.

**udp** - (Optional) Specifies that the rule applies to UDP traffic.

**src\_port\_mask** - (Optional) Specifies the UDP source port mask.

**<hex 0x0-0xffff>** - Enter the source UDP port mask here.

**dst\_port\_mask** - (Optional) Specifies the UDP destination port mask.

**<hex 0x0-0xffff>** - Enter the destination UDP port mask here.

**protocol\_id\_mask** - (Optional) Specifies that the rule applies to the IP protocol ID traffic.

**<hex 0x0-0xff>** - Enter the IP protocol ID mask here.

**user\_define\_mask** - (Optional) Specifies that the rule applies to the IP protocol ID and the mask options behind the first 4 bytes of the IP payload.

**<hex 0x0-0xffffffff>** - Enter the user-defined IP protocol ID mask here.

---

**packet\_content\_mask** - Specifies the frame content mask, there are 5 offsets in maximum could be configured. Each offset presents 16 bytes, the range of mask of frame is 80 bytes (5 offsets) in the first eighty bytes of frame.

**offset\_0-15** - (Optional) Specifies that the mask pattern offset of the frame will be between 0 and 15.

---



**<hex 0x0-0xffffffff>** - Enter the mask pattern offset of the frame between 0 and 15 here.

**offset\_16-31** - (Optional) Specifies that the mask pattern offset of the frame will be between 16 and 31.

**<hex 0x0-0xffffffff>** - Enter the mask pattern offset of the frame between 16 and 31 here.

**offset\_32-47** - (Optional) Specifies that the mask pattern offset of the frame will be between 32 and 47.

**<hex 0x0-0xffffffff>** - Enter the mask pattern offset of the frame between 32 and 47 here.

**offset\_48-63** - (Optional) Specifies that the mask pattern offset of the frame will be between 48 and 63.

**<hex 0x0-0xffffffff>** - Enter the mask pattern offset of the frame between 48 and 63 here.

**offset\_64-79** - (Optional) Specifies that the mask pattern offset of the frame will be between 64 and 79.

**<hex 0x0-0xffffffff>** - Enter the mask pattern offset of the frame between 64 and 79 here.

**ipv6** - Specifies IPv6 filtering mask.

**class** - (Optional) Specifies the IPv6 class.

**flowlabel** - (Optional) Specifies the IPv6 flow label.

**source\_ipv6\_mask** - (Optional) Specifies an IPv6 source submask.

**<ipv6mask>** - Enter the IPv6 source submask here.

**destination\_ipv6\_mask** - (Optional) Specifies an IPv6 destination submask.

**<ipv6mask>** - Enter the IPv6 destination submask here.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To create CPU access list rules:

```
DGS-1510-28XMP/ME:admin# create cpu access_profile profile_id 1 ethernet vlan source_mac 00-00-00-00-00-01 destination_mac 00-00-00-00-00-02 802.1p ethernet_type
Command: create cpu access_profile profile_id 1 ethernet vlan source_mac 00-00-00-00-00-01 destination_mac 00-00-00-00-00-02 802.1p ethernet_type

Success.

DGS-1510-28XMP/ME:admin# create cpu access_profile profile_id 2 ip vlan source_ip_mask 20.0.0.0 destination_ip_mask 10.0.0.0 dscp icmp type code
Command: create cpu access_profile profile_id 2 ip vlan source_ip_mask 20.0.0.0 destination_ip_mask 10.0.0.0 dscp icmp type code

Success.

DGS-1510-28XMP/ME:admin#
```

## 17-2 delete cpu access\_profile

### Description

This command is used to delete CPU access list rules.

### Format

**delete cpu access\_profile [profile\_id <value 1-5> | all]**

## Parameters

**profile\_id** - Specifies the index of access list profile.

**<value 1-5>** - Enter the profile ID value here. This value must be between 1 and 5.

**all** - Specifies that all the access list profiles will be deleted.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To delete CPU access list rules:

```
DGS-1510-28XMP/ME:admin# delete cpu access_profile profile_id 1
Command: delete cpu access_profile profile_id 1

Success.

DGS-1510-28XMP/ME:admin#
```

## 17-3 config cpu access\_profile profile\_id

### Description

This command is used to configure CPU access list entry.

### Format

```
config cpu access_profile profile_id <value 1-5> [add access_id [auto_assign | <value 1-100>] [ethernet
{[vlan <vlan_name 32> | vlan_id <vlanid 1-4094>] | source_mac <macaddr> | destination_mac <macaddr> |
802.1p <value 0-7> | ethernet_type <hex 0x0-0xffff>} | ip {[vlan <vlan_name 32> | vlan_id <vlanid 1-4094>] |
source_ip <ipaddr> | destination_ip <ipaddr> | dscp <value 0-63>} | [icmp {type <value 0-255> | code <value
0-255>} | igmp {type <value 0-255>} | tcp {src_port <value 0-65535> | dst_port <value 0-65535> | flag [all |
{urg | ack | psh | rst | syn | fin}]} | udp {src_port <value 0-65535> | dst_port <value 0-65535>} | protocol_id
<value 0-255> {user_define <hex 0x0-0xffffffff>}] | packet_content {offset_0-15 <hex 0x0-0xffffffff> <hex
0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> | offset_16-31 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff>
<hex 0x0-0xffffffff> <hex 0x0-0xffffffff> | offset_32-47 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-
0xffffffff> <hex 0x0-0xffffffff> | offset_48-63 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex
0x0-0xffffffff> | offset_64-79 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff>} |
ipv6 {class <value 0-255> | flowlabel <hex 0x0-0xffff> | source_ipv6 <ipv6addr> | destination_ipv6
<ipv6addr>}] port [<portlist> | all] [permit | deny] {time_range <range_name 32>} | delete access_id <value
1-100>]
```

### Parameters

**<value 1-5>** - Enter the profile ID value here. This value must be between 1 and 5.

**add** - Specifies that a profile or a rule will be added.

**access\_id** - Specifies the index of access list entry. The range of this value is 1-100.

**auto\_assign** - Specifies that the access ID will automatically be assigned.

**<value 1-100>** - Enter the access ID here. This value must be between 1 and 100.

**ethernet** - Specifies that the profile type will be Ethernet.

**vlan** - (Optional) Specifies the VLAN name used.

**<vlan\_name 32>** - Enter the name of the VLAN here. This name can be up to 32 characters long.

---

**vlan\_id** - (Optional) Specifies the VLAN ID used.

**<vlanid 1-4094>** - Enter the VLAN ID used here.

**source\_mac** - (Optional) Specifies the source MAC address.

**<macaddr>** - Enter the source MAC address used for this configuration here.

**destination\_mac** - (Optional) Specifies the destination MAC.

**<macaddr>** - Enter the destination MAC address used for this configuration here.

**802.1p** - (Optional) Specifies the value of 802.1p priority tag.

**<value 0-7>** - Enter the 802.1p priority tag value here. This value must be between 0 and 7.

**ethernet\_type** - (Optional) Specifies the Ethernet type.

**<hex 0x0-0xffff>** - Enter the Ethernet type value here.

---

**ip** - Specifies that the profile type will be IP.

**vlan** - (Optional) Specifies the VLAN name used.

**<vlan\_name 32>** - Enter the name of the VLAN here. This name can be up to 32 characters long.

**vlan\_id** - (Optional) Specifies the VLAN ID used.

**<vlanid 1-4094>** - Enter the VLAN ID used here.

**source\_ip** - (Optional) Specifies an IP source address.

**<ipaddr>** - Enter the source IP address used for this configuration here.

**destination\_ip** - (Optional) Specifies an IP destination address.

**<ipaddr>** - Enter the destination IP address used for this configuration here.

**dscp** - (Optional) Specifies the value of DSCP, the value can be configured 0 to 63.

**<value 0-63>** - Enter the DSCP value used here.

**icmp** - (Optional) Specifies that the rule applies to ICMP traffic.

**type** - (Optional) Specifies that the rule applies to the value of ICMP type traffic.

**<value 0-255>** - Enter the ICMP type value here. This value must be between 0 and 255.

**code** - (Optional) Specifies that the rule applies to the value of ICMP code traffic.

**<value 0-255>** - Enter the ICMP code value here. This value must be between 0 and 255.

**igmp** - (Optional) Specifies that the rule applies to IGMP traffic.

**type** - (Optional) Specifies that the rule applies to the value of IGMP type traffic.

**<value 0-255>** - Enter the IGMP type value here. This value must be between 0 and 255.

**tcp** - (Optional) Specifies that the rule applies to TCP traffic.

**src\_port** - (Optional) Specifies that the rule applies the range of TCP source port.

**<value 0-65535>** - Enter the source port value here. This value must be between 0 and 65535.

**dst\_port** - (Optional) Specifies the range of TCP destination port range.

**<value 0-65535>** - Enter the destination port value here. This value must be between 0 and 65535.

**flag** - (Optional) Specifies the TCP flag fields .

**all** - Specifies that the TCP flag field mask will be set to all.

**urg** - (Optional) Specifies that the TCP flag field mask will be set to urg.

**ack** - (Optional) Specifies that the TCP flag field mask will be set to ack.

**psh** - (Optional) Specifies that the TCP flag field mask will be set to psh.

**rst** - (Optional) Specifies that the TCP flag field mask will be set to rst.

**syn** - (Optional) Specifies that the TCP flag field mask will be set to syn.

**fin** - (Optional) Specifies that the TCP flag field mask will be set to fin.

**udp** - Specifies that the rule applies to UDP traffic.

**src\_port** - (Optional) Specifies the range of UDP source port range.

**<value 0-65535>** - Enter the source port value here. This value must be between 0 and 65535.

**dst\_port** - (Optional) Specifies the range of UDP destination port mask.

**<value 0-65535>** - Enter the destination port value here. This value must be between 0 and 65535.

**protocol\_id** - Specifies that the rule applies to the value of IP protocol ID traffic.

**<value 0-255>** - Enter the protocol ID value here. This value must be between 0 and 255.

**user\_define** - (Optional) Specifies that the rule applies to the IP protocol ID and the mask options behind

---

---

the first 4 bytes of the IP payload.

**<hex 0x0-0xffffffff>** - Enter the user-defined IP protocol ID mask here.

---

**packet\_content** - Specifies the frame content pattern, there are 5 offsets in maximum could be configure. Each offset presents 16 bytes, the range of content of frame is 80 bytes(5 offsets) in the first eighty bytes of frame.

**offset\_0-15** - (Optional) Specifies that the mask pattern offset of the frame will be between 0 and 15.

**<hex 0x0-0xffffffff>** - Enter the mask pattern offset of the frame between 0 and 15 here.

**offset\_16-31** - (Optional) Specifies that the mask pattern offset of the frame will be between 16 and 31.

**<hex 0x0-0xffffffff>** - Enter the mask pattern offset of the frame between 16 and 31 here.

**offset\_32-47** - (Optional) Specifies that the mask pattern offset of the frame will be between 32 and 47.

**<hex 0x0-0xffffffff>** - Enter the mask pattern offset of the frame between 32 and 47 here.

**offset\_48-63** - (Optional) Specifies that the mask pattern offset of the frame will be between 48 and 63.

**<hex 0x0-0xffffffff>** - Enter the mask pattern offset of the frame between 48 and 63 here.

**offset\_64-79** - (Optional) Specifies that the mask pattern offset of the frame will be between 64 and 79.

**<hex 0x0-0xffffffff>** - Enter the mask pattern offset of the frame between 64 and 79 here.

---

**ipv6** - Specifies the rule applies to IPv6 fields.

**class** - (Optional) Specifies the value of IPv6 class.

**<value 0-255>** - Enter the IPv6 class value here. This value must be between 0 and 255.

**flowlabel** - (Optional) Specifies the value of IPv6 flow label.

**<hex 0x0-0xffff>** - Enter the IPv6 flow label here.

**source\_ipv6** - (Optional) Specifies the value of IPv6 source address.

**<ipv6addr>** - Enter the IPv6 source address used for this configuration here.

**destination\_ipv6** - (Optional) Specifies the value of IPv6 destination address.

**<ipv6addr>** - Enter the IPv6 destination address used for this configuration here.

---

**port** - Specifies the list of ports to be included in this configuration.

**<portlist>** - Enter a list of ports used for the configuration here.

**all** - Specifies that all the ports will be used for this configuration.

---

**permit** - Specifies the packets that match the access profile are permit by the Switch.

**deny** - Specifies the packets that match the access profile are filtered by the Switch.

---

**time\_range** - (Optional) Specifies name of this time range entry.

**<range\_name 32>** - Enter the time range here.

---

**delete** - Specifies to delete a rule from the profile ID entered.

**access\_id** - Specifies the index of access list entry. The range of this value is 1-100.

**<value 1-100>** - Enter the access ID here. This value must be between 1 and 100.

---

## Restrictions

Only Administrators and Operators can issue this command.

## Example

To configure CPU access list entry:

```
DGS-1510-28XMP/ME:admin# config cpu access_profile profile_id 1 add access_id 1 ip
vlan default source_ip 20.2.2.3 destination_ip 10.1.1.252 dscp 3 icmp type 11 code
32 port 1 deny
Command: config cpu access_profile profile_id 1 add access_id 1 ip vlan default
source_ip 20.2.2.3 destination_ip 10.1.1.252 dscp 3 icmp type 11 code 32 port 1
deny

Success.

DGS-1510-28XMP/ME:admin#
```

## 17-4 enable cpu interface filtering

### Description

This command is used to enable CPU interface filtering control.

### Format

**enable cpu\_interface\_filtering**

### Parameters

None.

### Restrictions

Only Administrators and Operators can issue this command.

### Example

To enable cpu\_interface\_filtering:

```
DGS-1510-28XMP/ME:admin# enable cpu_interface_filtering
Command: enable cpu_interface_filtering

Success.

DGS-1510-28XMP/ME:admin#
```

## 17-5 disable cpu interface filtering

### Description

This command is used to disable CPU interface filtering control.

### Format

**disable cpu\_interface\_filtering**

### Parameters

None.

## Restrictions

Only Administrators and Operators can issue this command.

## Example

To disable `cpu_interface_filtering`:

```
DGS-1510-28XMP/ME:admin# disable cpu_interface_filtering
Command: disable cpu_interface_filtering

Success.

DGS-1510-28XMP/ME:admin#
```

## 17-6 show cpu access\_profile

### Description

This command is used to display current access list table.

### Format

`show cpu access_profile {profile_id <value 1-5>}`

### Parameters

---

**profile\_id** - (Optional) Specifies the index of access list profile.

**<value 1-5>** - Enter the profile ID used here. This value must be between 1 and 5.

---

### Restrictions

None.

### Example

To display current cpu access list table:

```
DGS-1510-28XMP/ME:admin# show cpu access_profile
```

```
Command: show cpu access_profile
```

```
CPU Interface Filtering State: Disabled
```

```
CPU Interface Access Profile Table
```

```
Total Unused Rule Entries : 500
```

```
Total Used Rule Entries   : 0
```

```
=====
Profile ID: 1      Type: Ethernet
```

```
MASK on
```

```
  VLAN           : 0xFFFF
```

```
  Source MAC     : 00-00-00-00-00-01
```

```
  Destination MAC : 00-00-00-00-00-02
```

```
  802.1p
```

```
  Ethernet Type
```

```
Unused Rule Entries: 100
```

```
=====
Profile ID: 2      Type: IPv4
```

```
MASK on
```

```
  VLAN           : 0xFFFF
```

```
  Source IP      : 20.0.0.0
```

```
  Dest IP       : 10.0.0.0
```

```
  DSCP
```

```
  ICMP
```

```
  Type
```

```
  Code
```

```
Unused Rule Entries: 100
```

```
=====
DGS-1510-28XMP/ME:admin#
```

## Chapter 18 Debug Software Command List

---

```
debug error_log [dump | clear | upload_toTFTP {<ipaddr> <path_filename 64>}]  
debug buffer [utilization | dump | clear | upload_toTFTP <ipaddr> <path_filename 64>]  
debug output [module <module_list> | all] [buffer | console]  
debug config error_reboot [enable | disable]  
debug config state [enable | disable]  
debug show error_reboot state  
debug show status {module <module_list>}
```

---

### 18-1 debug error\_log

#### Description

This command is used to dump, clear or upload the software error log to a TFTP server.

#### Format

```
debug error_log [dump | clear | upload_toTFTP {<ipaddr> <path_filename 64>}]
```

#### Parameters

---

**dump** - Specifies to display the debug message of the debug log.

---

**clear** - Specifies to clear the debug log.

---

**upload\_toTFTP** - Specifies to upload the debug log to a TFTP server specified by IP address.

**<ipaddr>** - (Optional) Enter the IPv4 address of the TFTP server.

**<path\_filename 64>** - (Optional) Enter the pathname specifies the DOS pathname on the TFTP server. It can be a relative pathname or an absolute pathname. This value can be up to 64 characters long.

---

#### Restrictions

Only Administrators can issue this command.

#### Example

To dump the error log:



```
DGS-1510-28XMP/ME:admin# debug error_log dump
Command: debug error_log dump

*****
# debug log: 1
# level: fatal
# clock: 1000ms
# time : 2009/03/11 13:00:00

===== SOFTWARE FATAL ERROR =====
Invalid mutex handle : 806D6480

Current TASK : bcmARL.0

----- TASK STACKTRACE -----
->802ACE98
->8018C814
->8028FF44
->8028352C
->801D703C
->8013B8A4
->802AE754
->802A5E0C
```

To clear the error log:

```
DGS-1510-28XMP/ME:admin# debug error_log clear
Command: debug error_log clear

Success.

DGS-1510-28XMP/ME:admin#
```

To upload the error log to TFTP server:

```
DGS-1510-28XMP/ME:admin# debug error_log upload_toTFTP 10.0.0.90 debug-log.txt
Command: debug error_log upload_toTFTP 10.0.0.90 debug-log.txt

Connecting to server.....Done.
Upload error log .....Done.

DGS-1510-28XMP/ME:admin#
```

## 18-2 debug buffer

### Description

This command is used to show the debug buffer's state, or dump, clear, or upload the debug buffer to a TFTP server.

## Format

```
debug buffer [utilization | dump | clear | upload_toTFTP <ipaddr> <path_filename 64>]
```

## Parameters

---

**utilization** - Specifies to display the debug buffer's state.

---

**dump** - Specifies to display the debug message in the debug buffer.

---

**clear** - Specifies to clear the debug buffer.

---

**upload\_toTFTP** - Specifies to upload the debug buffer to a TFTP server specified by IP address.

**<ipaddr>** - Enter the IPv4 address of the TFTP server.

**<path\_filename 64>** - Enter the pathname specifies the DOS pathname on the TFTP server. It can be a relative pathname or an absolute pathname. This value can be up to 64 characters long.

---

## Restrictions

Only Administrators can issue this command.

## Example

To show the debug buffer's state:

```
DGS-1510-28XMP/ME:admin# debug buffer utilization
Command: debug buffer utilization

Allocate from      :      System memory pool
Total size         :      2 MB
Utilization rate   :      30%

DGS-1510-28XMP/ME:admin#
```

To clear the debug buffer:

```
DGS-1510-28XMP/ME:admin# debug buffer clear
Command: debug buffer clear

Success.

DGS-1510-28XMP/ME:admin#
```

To upload the messages stored in debug buffer to TFTP server:

```
DGS-1510-28XMP/ME:admin# debug buffer upload_toTFTP 10.0.0.90 debugcontent.txt
Command: debug buffer upload_toTFTP 10.0.0.90 debugcontent.txt

Connecting to server..... Done.
Upload debug file ..... Done.

DGS-1510-28XMP/ME:admin#
```

## 18-3 debug output

### Description

This command is used to set a specified module's debug message output to debug buffer or local console. If the user uses the command in a Telnet session, the error message also is output to the local console.

### Format

**debug output [module <module\_list> | all] [buffer | console]**

### Parameters

---

**module** - Specifies the module list.

**<module\_list>** - Enter the module list here.

**all** - Specifies to control output method of all modules.

---

**buffer** - Specifies to direct the debug message of the module output to debug buffer. This is the default option.

---

**console** - Specifies to direct the debug message of the module output to local console.

---

### Restrictions

Only Administrators can issue this command.

### Example

To set all module debug message outputs to local console:

```
DGS-1510-28XMP/ME:admin# debug output all console
Command: debug output all console

Success.

DGS-1510-28XMP/ME:admin#
```

## 18-4 debug config error\_reboot

### Description

This command is used to set if the Switch needs to be rebooted when a fatal error occurs. When the error occurs, the watchdog timer will be disabled by the system first, and then all debug information will be saved in NVRAM. If the error\_reboot is enabled, the watchdog shall be enabled after all information is stored into NVRAM.

### Format

**debug config error\_reboot [enable | disable]**

### Parameters

---

**enable** - Specifies to reboot when a fatal error happens.

---

**disable** - Specifies that the Switch will not reboot when a fatal error happens, system will hang-up for debug and enter the debug shell mode for debug.

---

## Restrictions

Only Administrators can issue this command.

## Example

To set the Switch to not need a reboot when a fatal error occurs:

```
DGS-1510-28XMP/ME:admin# debug config error_reboot disable
Command: debug config error_reboot disable

Success.

DGS-1510-28XMP/ME:admin#
```

## 18-5 debug config state

### Description

This command is used to set the state of the debug.

### Format

**debug config state [enable | disable]**

### Parameters

---

**enable** - Specifies to enable the debug state.

---

**disable** - Specifies to disable the debug state.

---

## Restrictions

Only Administrators can issue this command.

## Example

To set the debug state to disabled:

```
DGS-1510-28XMP/ME:admin# debug config state disable
Command: debug config state disable

Success.

DGS-1510-28XMP/ME:admin#
```

## 18-6 debug show error\_reboot state

### Description

This command is used to display debug error reboot state.

**Format**

**debug show error\_reboot state**

**Parameters**

None.

**Restrictions**

Only Administrators can issue this command.

**Example**

To show the debug error reboot state:

```
DGS-1510-28XMP/ME:admin# debug show error_reboot state
Command: debug show error_reboot state

Error Reboot: Enabled

DGS-1510-28XMP/ME:admin#
```

**18-7 debug show status****Description**

This command is used to display the specified module's debug status.

**Format**

**debug show status {module <module\_list>}**

**Parameters**

---

**module** – (Optional) Specifies the module list.  
**<module\_list>** - Enter the module list.

---

**Restrictions**

Only Administrators can issue this command.

**Example**

To show the specified module's debug state:

```
DGS-1510-28XMP/ME:admin# debug show status module MSTP
Command: debug show status module MSTP

Debug Global State   : Enabled

MSTP                  : Disabled

DGS-1510-28XMP/ME:admin#
```

To show the debug state:

```
DGS-1510-28XMP/ME:admin# debug show status
Command: debug show status

Debug Global State   : Enabled

MSTP                  : Disabled
IMPB                  : Disabled
ERPS                  : Disabled

DGS-1510-28XMP/ME:admin#
```

## Chapter 19 DHCP Local Relay Command List

---

```

config dhcp_local_relay vlan <vlan_name 32> state [enable | disable]
config dhcp_local_relay vlan vlanid <vlan_id> state [enable | disable]
config dhcp_local_relay option_82 circuit_id [default | vendor1]
config dhcp_local_relay option_82 ports <portlist> policy [replace | drop | keep]
config dhcp_local_relay option_82 remote_id [default | user_define <desc 32>]
enable dhcp_local_relay
disable dhcp_local_relay
show dhcp_local_relay
show dhcp_local_relay option_82 ports {<portlist>}

```

---

### 19-1 config dhcp\_local\_relay vlan

#### Description

This command is used to enable or disable DHCP local relay function for specified VLAN name.

When DHCP local relay is enabled for the VLAN, the DHCP packet will be relayed in broadcast way without change of the source MAC address and gateway address. DHCP option 82 will be automatically added.

#### Format

```
config dhcp_local_relay vlan <vlan_name 32> state [enable | disable]
```

#### Parameters

---

**<vlan\_name 32>** - Enter the VLAN name that the DHCP local relay function will be enabled. This name can be up to 32 characters long.

---

**state** - Specifies to enable or disable DHCP local relay for specified VLAN.

**enable** - Specifies that the DHCP local relay function will be enabled.

**disable** - Specifies that the DHCP local relay function will be disabled.

---

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

#### Example

To enable DHCP local relay for default VLAN:

```

DGS-1510-28XMP/ME:admin# config dhcp_local_relay vlan default state enable
Command: config dhcp_local_relay vlan default state enable

Success.

DGS-1510-28XMP/ME:admin#

```

## 19-2 config dhcp\_local\_relay vlan vlanid

### Description

This command is used to enable or disable DHCP local relay function for specified VLAN ID.

### Format

**config dhcp\_local\_relay vlan vlanid <vlan\_id> state [enable | disable]**

### Parameters

---

**vlanid** - Specifies the VLAN ID that the DHCP local relay function will be enabled.

**<vlan\_id>** - Enter the VLAN ID used here.

---

**state** - Specifies to enable or disable DHCP local relay for specified VLAN.

**enable** - Specifies that the DHCP local relay function will be enabled.

**disable** - Specifies that the DHCP local relay function will be disabled.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To enable DHCP local relay for default VLAN:

```
DGS-1510-28XMP/ME:admin# config dhcp_local_relay vlan vlanid 1 state enable
Command: config dhcp_local_relay vlan vlanid 1 state enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 19-3 config dhcp\_local\_relay option\_82 circuit\_id

### Description

This command is used to configure the circuit id of DHCP relay agent information option 82 of the switch.

### Format

**config dhcp\_local\_relay option\_82 circuit\_id [default | vendor1]**

### Parameters

---

**default** – Specifies the circuit id of DHCP relay agent to default.

---

**vendor1** - Specifies the circuit id of DHCP relay agent to vendor1.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.



**Example**

To configure the circuit id of DHCP relay agent as default:

```
DGS-1510-28XMP/ME:admin# config dhcp_local_relay option_82 circuit_id default
Command: config dhcp_local_relay option_82 circuit_id default

Success.

DGS-1510-28XMP/ME:admin#
```

## 19-4 config dhcp\_local\_relay option\_82 ports

**Description**

This command is used to configure the settings of the specified ports for the policy of the option 82.

**Format**

**config dhcp\_local\_relay option\_82 ports <portlist> policy [replace | drop | keep]**

**Parameters**


---

**<portlist>** - Enter a list of ports to be configured.

---

**policy** - Specifies how to process the packets coming from the client side which have the option 82 field.

**replace** - Specifies to replace the existing option 82 field in the packet.

**drop** - Specifies to discard if the packet has the option 82 field.

**keep** - Specifies to retain the existing option 82 field in the packet.

---

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To configure port 1 to 5 for the policy of the option 82:

```
DGS-1510-28XMP/ME:admin# config dhcp_local_relay option_82 ports 1-5 policy keep
Command: config dhcp_local_relay option_82 ports 1-5 policy keep

Success.

DGS-1510-28XMP/ME:admin#
```

## 19-5 config dhcp\_local\_relay option\_82 remote\_id

**Description**

This command is used to configure the remote ID.

**Format**

**config dhcp\_local\_relay option\_82 remote\_id [default | user\_define <desc 32>]**

## Parameters

---

**default** - Specifies to use the Switch's system MAC address as the remote ID.

---

**user\_define** - Specifies to use the user-defined string as the remote ID.

**<desc 32>** - Enter the maximum of 32 characters. Space is allowed in the string.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure the remote ID:

```
DGS-1510-28XMP/ME:admin# config dhcp_local_relay option_82 remote_id user_define D-Link L2Switch
Command: config dhcp_local_relay option_82 remote_id user_define D-Link L2Switch

Success.

DGS-1510-28XMP/ME:admin#
```

## 19-6 enable dhcp\_local\_relay

### Description

This command is used to globally enable the DHCP local relay function on the Switch.

### Format

**enable dhcp\_local\_relay**

### Parameters

None.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To enable the DHCP local relay function:

```
DGS-1510-28XMP/ME:admin# enable dhcp_local_relay
Command: enable dhcp_local_relay

Success.

DGS-1510-28XMP/ME:admin#
```

## 19-7 disable dhcp\_local\_relay

### Description

This command is used to globally disable the DHCP local relay function on the Switch.

### Format

**disable dhcp\_local\_relay**

### Parameters

None.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To disable the DHCP local relay function:

```
DGS-1510-28XMP/ME:admin# disable dhcp_local_relay
Command: disable dhcp_local_relay

Success.

DGS-1510-28XMP/ME:admin#
```

## 19-8 show dhcp\_local\_relay

### Description

This command is used to display the current DHCP local relay configuration.

### Format

**show dhcp\_local\_relay**

### Parameters

None.

### Restrictions

None.

### Example

To display DHCP local relay status:

```
DGS-1510-28XMP/ME:admin# show dhcp_local_relay
Command: show dhcp_local_relay

DHCP/BOOTP Local Relay Status      : Disabled
DHCP/BOOTP Local Relay VID List    : 1

DHCP Relay Agent Information Option 82 Circuit ID : Default
DHCP Relay Agent Information Option 82 Remote ID : D-Link L2Switch

DGS-1510-28XMP/ME:admin#
```

## 19-9 show dhcp\_local\_relay option\_82 ports

### Description

This command is used to display the current DHCP local relay option 82 configuration of each port.

### Format

**show dhcp\_local\_relay option\_82 ports {<portlist>}**

### Parameters

---

**<portlist>** - (Optional) Enter a list of ports to be displayed.

---

### Restrictions

None.

### Example

To display DHCP local relay option 82 configuration of port 1 to 5:

```
DGS-1510-28XMP/ME:admin# show dhcp_local_relay option_82 ports 1-5
Command: show dhcp_local_relay option_82 ports 1-5

Port  Option 82
      Policy
-----
1     keep
2     keep
3     keep
4     keep
5     keep

DGS-1510-28XMP/ME:admin#
```

## Chapter 20 DHCP Relay Command List

---

<b>config dhcp_relay</b> {hops <int 1-16>   time <sec 0-65535>}
<b>config dhcp_relay add</b> ipif <ipif_name 12> <ipaddr>
<b>config dhcp_relay add vlanid</b> <vlan_id_list> <ipaddr>
<b>config dhcp_relay delete</b> ipif <ipif_name 12> <ipaddr>
<b>config dhcp_relay delete vlanid</b> <vlan_id_list> <ipaddr>
<b>config dhcp_relay option_82</b> {state [enable   disable]   check [enable   disable]   policy [replace   drop   keep]   remote_id [default   user_define <desc 32>]}(1)
<b>config dhcp_relay option_82 circuit_id</b> [default   vendor1]
<b>enable dhcp_relay</b>
<b>disable dhcp_relay</b>
<b>show dhcp_relay</b> {ipif <ipif_name 12>}
<b>config dhcp_relay option_60 state</b> [enable   disable]
<b>config dhcp_relay option_60 add string</b> <multiword 255> relay <ipaddr> [exact-match   partial-match]
<b>config dhcp_relay option_60 default</b> [relay <ipaddr>   mode [relay   drop]]
<b>config dhcp_relay option_60 delete</b> [string <multiword 255> {relay <ipaddr>}   ipaddress <ipaddr>   all   default {<ipaddr>}]
<b>show dhcp_relay option_60</b> {[string <multiword 255>   ipaddress <ipaddr>   default]}
<b>config dhcp_relay option_61 state</b> [enable   disable]
<b>config dhcp_relay option_61 add</b> [mac_address <macaddr>   string <multiword 255>] [relay <ipaddr>   drop]
<b>config dhcp_relay option_61 default</b> [relay <ipaddr>   drop]
<b>config dhcp_relay option_61 delete</b> [mac_address <macaddr>   string <multiword 255>   all]
<b>show dhcp_relay option_61</b>

---

### 20-1 config dhcp\_relay

#### Description

This command is used to configure the DHCP relay feature of the Switch.

#### Format

```
config dhcp_relay {hops <int 1-16> | time <sec 0-65535>}
```

#### Parameters

**hops** - (Optional) Specifies the maximum number of relay hops that the DHCP/BOOTP packets can cross. The range is 1 to 16. The default value is 4. The DHCP packet will be dropped when the relay hop count in the received packet is equal to or greater than this setting.

**<int 1-16>** - Enter the maximum number of relay hops here. This value must be between 1 and 16.

**time** - (Optional) The time field in the DHCP packet must be equal to or greater than this setting to be relayed by the router. The default value is 0.

**<sec 0-65535>** - Enter the relay time here. This value must be between 0 and 65535 seconds.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure the DHCP relay hops and time parameters:

```
DGS-1510-28XMP/ME:admin# config dhcp_relay hops 4 time 2
Command: config dhcp_relay hops 4 time 2

Success.

DGS-1510-28XMP/ME:admin#
```

## 20-2 config dhcp\_relay add ipif

### Description

This command is used to add an IP destination address of the DHCP server for relay of DHCP/BOOTP packets.

### Format

**config dhcp\_relay add ipif <ipif\_name 12> <ipaddr>**

### Parameters

---

**<ipif\_name 12>** - Enter the IP interface name used here. This name can be up to 12 characters long.

---

**<ipaddr>** - Enter the DHCP/BOOTP server IP address.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To add a DHCP/BOOTP server to the relay table:

```
DGS-1510-28XMP/ME:admin# config dhcp_relay add ipif System 10.43.21.12
Command: config dhcp_relay add ipif System 10.43.21.12

Success.

DGS-1510-28XMP/ME:admin#
```

## 20-3 config dhcp\_relay add vlanid

### Description

This command is used to add an IP address as a destination to forward (relay) DHCP/BOOTP packets. If there is an IP interface in the VLAN and it has configured a DHCP server at the interface level, then the configuration at the

interface level has higher priority. In this case, the DHCP server configured on the VLAN will not be used to forward the DHCP packets.

## Format

```
config dhcp_relay add vlandid <vlan_id_list> <ipaddr>
```

## Parameters

---

<vlan\_id\_list> - Enter the VLAN ID list used for this configuration here.

---

<ipaddr> - Enter the DHCP/BOOTP server IP address used here.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To add a DHCP/BOOTP server 10.43.21.12 to VLAN 1 to 10:

```
DGS-1510-28XMP/ME:admin# config dhcp_relay add vlandid 1-10 10.43.21.12
Command: config dhcp_relay add vlandid 1-10 10.43.21.12

Success.

DGS-1510-28XMP/ME:admin#
```

To display the DHCP relay status:

```
DGS-1510-28XMP/ME:admin# show dhcp_relay
Command: show dhcp_relay

DHCP/BOOTP Relay Status      : Disabled
DHCP/BOOTP Hops Count Limit  : 4
DHCP/BOOTP Relay Time Threshold : 0
DHCP Vendor Class Identifier Option 60 State: Disabled
DHCP Client Identifier Option 61 State: Disabled
DHCP Relay Agent Information Option 82 State : Disabled
DHCP Relay Agent Information Option 82 Check : Disabled
DHCP Relay Agent Information Option 82 Policy : Replace
DHCP Relay Agent Information Option 82 Circuit ID : Default
DHCP Relay Agent Information Option 82 Remote ID : 00-01-02-03-04-00

Interface      Server 1      Server 2      Server 3      Server 4
-----
Server          VLAN ID List
-----
1-10                                     10.43.21.12

DGS-1510-28XMP/ME:admin#
```

## 20-4 config dhcp\_relay delete

### Description

This command is used to delete one of the IP destination addresses in the Switch's relay table.

### Format

```
config dhcp_relay delete ipif <ipif_name 12> <ipaddr>
```

### Parameters

---

<ipif\_name 12> - Enter the IP interface name used here. This name can be up to 12 characters long.

---

<ipaddr> - Enter the DHCP/BOOTP server IP address.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To delete a DHCP/BOOTP server to the relay table:

```
DGS-1510-28XMP/ME:admin# config dhcp_relay delete ipif System 10.43.21.12
Command: config dhcp_relay delete ipif System 10.43.21.12

Success.

DGS-1510-28XMP/ME:admin#
```

## 20-5 config dhcp\_relay delete vlanid

### Description

This command is used to delete an IP address as a destination to forward (relay) DHCP/BOOTP packets.

### Format

```
config dhcp_relay delete vlanid <vlan_id_list> <ipaddr>
```

### Parameters

---

<vlan\_id\_list> - Enter the VLAN ID list used for this configuration here.

---

<ipaddr> - Enter the DHCP/BOOTP server IP address used here.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To delete a DHCP/BOOTP server 10.43.21.12 from VLAN 2 and VLAN 3:



```
DGS-1510-28XMP/ME:admin# config dhcp_relay delete vlanid 2-3 10.43.21.12
Command: config dhcp_relay delete vlanid 2-3 10.43.21.12

Success.

DGS-1510-28XMP/ME:admin#
```

## 20-6 config dhcp\_relay option\_82

### Description

This command is used to configure the processing of DHCP 82 option for the DHCP relay function.

### Format

```
config dhcp_relay option_82 {state [enable | disable] | check [enable | disable] | policy [replace | drop | keep] | remote_id [default | user_define <desc 32>]}(1)
```

### Parameters

**state** - When the state is enabled, the DHCP packet will be inserted with the option 82 field before being relayed to server. The DHCP packet will be processed based on the behavior defined in check and policy setting. When the state is disabled, the DHCP packet will be relayed directly to server without further check and processing on the packet. The default setting is disabled.

**enable** - Specifies that the option 82 processing will be enabled.

**disable** - Specifies that the option 82 processing will be disabled.

**check** - When the state is enabled, For packet come from client side, the packet should not have the option 82's field. If the packet has this option field, it will be dropped. The default setting is disabled.

**enable** - Specifies that checking will be enabled.

**disable** - Specifies that checking will be disabled.

**policy** - Specifies the policy used. This option takes effect only when the check status is disabled. The default setting is set to 'replace'.

**replace** - Replace the existing option 82 field in the packet. The Switch will use its own Option 82 value to replace the old Option 82 value in the packet.

**drop** - Discard if the packet has the option 82 field. If the packet, that comes from the client side, contains and Option 82 value, then the packet will be dropped. If the packet, that comes from the client side doesn't contain an Option 82 value, then insert its own Option 82 value into the packet.

**keep** - Retain the existing option 82 field in the packet. If the packet, that comes from the client side, contains and Option 82 value, then keep the old Option 82 value. If the packet, that comes from the client side, doesn't contain an Option 82 value, then insert its own Option 82 value into the packet.

**remote\_id** - Specifies the content in Remote ID sub-option.

**default** - Use switch's system MAC address as remote ID.

**user\_define** - Use user-defined string as remote ID. The space character is allowed in the string.

**<desc 32>** - Enter the user defined description here. This value can be up to 32 characters long.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To configure dhcp\_relay option 82:

```
DGS-1510-28XMP/ME:admin# config dhcp_relay option_82 state enable
Command: config dhcp_relay option_82 state enable

Success.

DGS-1510-28XMP/ME:admin# config dhcp_relay option_82 check disable
Command: config dhcp_relay option_82 check disable

Success.

DGS-1510-28XMP/ME:admin# config dhcp_relay option_82 policy replace
Command: config dhcp_relay option_82 policy replace

Success.

DGS-1510-28XMP/ME:admin# config dhcp_relay option_82 remote_id user_define "D-Link L2 Switch"
Command: config dhcp_relay option_82 remote_id user_define "D-Link L2 Switch"

Success.

DGS-1510-28XMP/ME:admin#
```

## 20-7 config dhcp\_relay option\_82 circuit\_id

### Description

This command is used to configure the circuit id of DHCP relay agent information option 82 of the Switch.

### Format

```
config dhcp_relay option_82 circuit_id [default | vendor1]
```

### Parameters

---

**default** – Specifies the circuit id of DHCP relay agent to default.

---

**vendor1** - Specifies the circuit id of DHCP relay agent to vendor1.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To configure the circuit ID as default:

```
DGS-1510-28XMP/ME:admin# config dhcp_relay option_82 circuit_id default
Command: config dhcp_relay option_82 circuit_id default

Success.

DGS-1510-28XMP/ME:admin#
```

## 20-8 enable dhcp\_relay

### Description

This command is used to enable the DHCP relay function on the Switch.

### Format

**enable dhcp\_relay**

### Parameters

None.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To enable the DHCP relay function.

```
DGS-1510-28XMP/ME:admin# enable dhcp_relay
Command: enable dhcp_relay

Success.

DGS-1510-28XMP/ME:admin#
```

## 20-9 disable dhcp\_relay

### Description

This command is used to disable the DHCP relay function on the Switch.

### Format

**disable dhcp\_relay**

### Parameters

None.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To disable the DHCP relay function:

```
DGS-1510-28XMP/ME:admin# disable dhcp_relay
Command: disable dhcp_relay

Success.

DGS-1510-28XMP/ME:admin#
```

## 20-10 show dhcp\_relay

### Description

This command is used to display the current DHCP relay configuration.

### Format

**show dhcp\_relay {ipif <ipif\_name 12>}**

### Parameters

**ipif** - (Optional) Specifies the IP interface name.

**<ipif\_name 12>** - Enter the IP interface name used here. This name can be up to 12 characters long.

If no parameter is specified, the system will display all DHCP relay configuration.

### Restrictions

None.

### Example

To display DHCP relay configuration:

```
DGS-1510-28XMP/ME:admin# show dhcp_relay ipif System
Command: show dhcp_relay ipif System

DHCP/BOOTP Relay Status      : Enabled
DHCP/BOOTP Hops Count Limit  : 4
DHCP/BOOTP Relay Time Threshold : 2
DHCP Vendor Class Identifier Option 60 State: Disabled
DHCP Client Identifier Option 61 State: Disabled
DHCP Relay Agent Information Option 82 State : Enabled
DHCP Relay Agent Information Option 82 Check : Disabled
DHCP Relay Agent Information Option 82 Policy : Replace
DHCP Relay Agent Information Option 82 Circuit ID : Default
DHCP Relay Agent Information Option 82 Remote ID : "D-Link L2 Switch"

Interface      Server 1      Server 2      Server 3      Server 4
-----
System         10.43.21.12

DGS-1510-28XMP/ME:admin#
```

## 20-11 config dhcp\_relay option\_60 state

**Description**

This command is used to decide whether DHCP relay will process the DHCP option 60 or not.

When option\_60 is enabled, if the packet does not have option 60, then the relay servers cannot be determined based on option 60. The relay servers will be determined based on either option 61 or per IPIF configured servers.

If the relay servers are determined based on option 60 or option 61, then per IPIF configured servers will be ignored.

If the relay servers are not determined either by option 60 or option 61, then per IPIF configured servers will be used to determine the relay servers.

**Format**

**config dhcp\_relay option\_60 state [enable | disable]**

**Parameters**


---

**enable** - Specifies that the option 60 rule will be enabled.

---

**disable** - Specifies that the option 60 rule will be disabled.

---

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To configure the state of dhcp\_relay option 60:

```
DGS-1510-28XMP/ME:admin# config dhcp_relay option_60 state enable
Command: config dhcp_relay option_60 state enable

Success

DGS-1510-28XMP/ME:admin#
```

## 20-12 config dhcp\_relay option\_60 add string

**Description**

This command is used to configure the option 60 relay rules. Note that different string can be specified with the same relay server, and the same string can be specified with multiple relay servers.

The system will relay the packet to all the matching servers.

**Format**

**config dhcp\_relay option\_60 add string <multiword 255> relay <ipaddr> [exact-match | partial-match]**

**Parameters**


---

**<multiword 255>** - Enter the string value here. This value can be up to 255 characters long.

---

**relay** - Specifies a relay server IP address.

---

---

**<ipaddr>** - Enter the IP address used for this configuration here.

---

**exact-match** - Specifies that the option 60 string in the packet must full match with the specified string.

---

**partial-match** - Specifies that the option 60 string in the packet only need partial match with the specified string.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure the DHCP relay option 60 option:

```
DGS-1510-28XMP/ME:admin# config dhcp_relay option_60 add string "abc" relay 10.90.90.1 exact-match
Command: config dhcp_relay option_60 add string "abc" relay 10.90.90.1 exact-match

Success.

DGS-1510-28XMP/ME:admin#
```

## 20-13 config dhcp\_relay option\_60 default

### Description

This command is used to configure the DHCP relay option 60 default drop option.

When there are no match servers found for the packet based on option 60, the relay servers will be determined by the default relay server setting.

When drop is specified, the packet with no matching rules found will be dropped without further process.

When relay is specified, the packet will be processed further based on option 61. The final relay servers will be the union of option 60 default relay servers and the relay servers determined by option 61.

### Format

**config dhcp\_relay option\_60 default [relay <ipaddr> | mode [relay | drop]]**

### Parameters

---

**relay** - Specifies the IP address used for the DHCP relay forward function.

**<ipaddr>** - Enter the IP address used for this configuration here.

---

**mode** - Specifies the DHCP relay option 60 mode.

**relay** - Specifies that the packet will be relayed based on the relay rules.

**drop** - Specifies to drop the packet that has no matching option 60 rules.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure the DHCP relay option 60 default drop option:

```
DGS-1510-28XMP/ME:admin# config dhcp_relay option_60 default mode drop
Command: config dhcp_relay option_60 default mode drop

Success.

DGS-1510-28XMP/ME:admin#
```

## 20-14 config dhcp\_relay option\_60 delete

### Description

This command is used to delete DHCP relay option 60 entry.

### Format

```
config dhcp_relay option_60 delete [string <multiword 255> {relay <ipaddr>} | ipaddress <ipaddr> | all |
default {<ipaddr>}]
```

### Parameters

**string** - Specifies to delete all the entries whose string is equal to the string of specified if IP address is not specified.

**<multiword 255>** - Enter the DHCP option 60 string to be removed here. This value can be up to 255 characters long.

**relay** - (Optional) Specifies to delete one entry, whose string and IP address are equal to the string and IP address specified by the user.

**<ipaddr>** - Enter the IP address used for this configuration here.

**ipaddress** - Specifies to delete all the entry whose IP address is equal to the specified IP address.

**<ipaddr>** - Enter the IP address used for this configuration here.

**all** - Specifies to delete all the entries. Default relay servers are excluded.

**default** - Specifies to delete the default relay IP address that is specified by the user.

**<ipaddr>** - (Optional) Enter the IP address used for this configuration here.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To delete the DHCP relay option 60 string called 'abc':

```
DGS-1510-28XMP/ME:admin# config dhcp_relay option_60 delete string "abc" relay 10.90.90.1
Command: config dhcp_relay option_60 delete string "abc" relay 10.90.90.1

Success.

DGS-1510-28XMP/ME:admin#
```

## 20-15 show dhcp\_relay option\_60

**Description**

This command is used to show DHCP relay option 60 entry by the user specified.

**Format**

**show dhcp\_relay option\_60** {[string <multiword 255> | ipaddress <ipaddr> | default]}

**Parameters**

**string** - (Optional) Specifies to display the entry that contains this string.

**<multiword 255>** - Enter the string here. This value can be up to 255 characters long.

**ipaddress** - (Optional) Specifies to display the entry whose IP address equal the specified IP address.

**<ipaddr>** - Enter the IP address here.

**default** - (Optional) Specifies to display the default behavior of DHCP relay option 60.

If no parameter is specified then all the DHCP option 60 entries will be displayed.

**Restrictions**

None.

**Example**

To show DHCP option 60 information:

```
DGS-1510-28XMP/ME:admin# show dhcp_relay option_60
Command: show dhcp_relay option_60

Default Processing Mode: Drop

Default Servers:

Matching Rules:

String                Match Type           IP Address
-----
abc                   Exact Match          10.90.90.1

Total Entries : 1

DGS-1510-28XMP/ME:admin#
```

## 20-16 config dhcp\_relay option\_61 state

**Description**

This command is used to decide whether the DHCP relay will process the DHCP option 61 or not.

When option 61 is enabled, if the packet does not have option 61, then the relay servers cannot be determined based on option 61.



If the relay servers are determined based on option 60 or option 61, then per IPIF configured servers will be ignored.

If the relay servers are not determined either by option 60 or option 61, then per IPIF configured servers will be used to determine the relay servers.

### Format

```
config dhcp_relay option_61 state [enable | disable]
```

### Parameters

---

**enable** - Specifies to enable the function DHCP relay use option 61 ruler to relay DHCP packet.

---

**disable** - Specifies to disable the function DHCP relay use option 61 ruler to relay DHCP packet.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To configure the state of DHCP relay option 61:

```
DGS-1510-28XMP/ME:admin# config dhcp_relay option_61 state enable
Command: config dhcp_relay option_61 state enable

Success

DGS-1510-28XMP/ME:admin#
```

## 20-17 config dhcp\_relay option\_61 add

### Description

This command is used to add a rule to determine the relay server based on option 61. The match rule can base on either MAC address or a user-specified string. Only one relay server can be specified for a MAC-address or a string.

If relay servers are determined based on option 60, and one relay server is determined based on option 61, the final relay servers will be the union of these two sets of the servers.

### Format

```
config dhcp_relay option_61 add [mac_address <macaddr> | string <multiword 255>] [relay <ipaddr> | drop]
```

### Parameters

---

**mac\_address** - Specifies the client's client-ID which is the hardware address of client.

**<macaddr>** - Enter the client's MAC address here.

---

**string** - Specifies the client's client-ID, which is specified by administrator.

**<multiword 255>** - Enter the client's description here. This value can be up to 255 characters long.

---

**relay** - Specifies to relay the packet to a IP address.

**<ipaddr>** - Enter the IP address used for this configuration here.

---

---

**drop** - Specifies to drop the packet.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To configure the DHCP relay option 61 function:

```
DGS-1510-28XMP/ME:admin# config dhcp_relay option_61 add mac_address 00-11-22-33-44-55 drop
Command: config dhcp_relay option_61 add mac_address 00-11-22-33-44-55 drop
```

```
Success
```

```
DGS-1510-28XMP/ME:admin#
```

## 20-18 config dhcp\_relay option\_61 default

### Description

This command is used to configure the default ruler for option 61.

### Format

**config dhcp\_relay option\_61 default [relay <ipaddr> | drop]**

### Parameters

---

**relay** - Specifies to relay the packet that has no option matching 61 matching rules to an IP address.

**<ipaddr>** - Enter the IP address used for this configuration here.

---

**drop** - Specifies to drop the packet that have no option 61 matching rules.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To configure the DHCP relay option 61 function:

```
DGS-1510-28XMP/ME:admin# config dhcp_relay option_61 default drop
Command: config dhcp_relay option_61 default drop
```

```
Success
```

```
DGS-1510-28XMP/ME:admin#
```

## 20-19 config dhcp\_relay option\_61 delete

### Description

This command is used to delete an option 61 rule.

### Format

**config dhcp\_relay option\_61 delete [mac\_address <macaddr> | string <multiword 255> | all]**

### Parameters

---

**mac\_address** - Specifies the entry with the specified MAC address will be deleted.

**<macaddr>** - Enter the MAC address here.

---

**string** - Specifies the entry with the specified string will be deleted.

**<multiword 255>** - Enter the string value here. This value can be up to 255 characters long.

---

**all** - Specifies that all rules excluding the default rule will be deleted.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To remove a DHCP relay option 61 entry:

```
DGS-1510-28XMP/ME:admin# config dhcp_relay option_61 delete mac_address 00-11-22-33-44-55
Command: config dhcp_relay option_61 delete mac_address 00-11-22-33-44-55

Success

DGS-1510-28XMP/ME:admin#
```

## 20-20 show dhcp\_relay option\_61

### Description

This command is used to show all rulers for option 61.

### Format

**show dhcp\_relay option\_61**

### Parameters

None.

### Restrictions

None.

**Example**

To display DHCP relay rulers for option 61:

```
DGS-1510-28XMP/ME:admin# show dhcp_relay option_61
Command: show dhcp_relay option_61

Default Relay Rule:Drop

Matching Rules:

Client-ID                Type                Relay Rule
-----                -
00-11-22-33-44-55       MAC Address         Drop

Total Entries : 1

DGS-1510-28XMP/ME:admin#
```

# Chapter 21 DHCP Server Screening Command List

---

```
config filter dhcp_server [add permit server_ip <ipaddr> ports [<portlist> | all] | delete permit server_ip <ipaddr>
ports [<portlist> | all] | ports [<portlist> | all] state [enable | disable] | illegal_server_log_suppress_duration
[1min | 5min | 30min] | trap_log [enable | disable]]
```

---

```
show filter dhcp_server
```

---

## 21-1 config filter dhcp\_server

### Description

This command is used to configure DHCP server screening.

With DHCP server screening function, illegal DHCP server packet will be filtered. This command is used to configure the state of the function for filtering of DHCP server packet and to add/delete the DHCP server binding entry.

This command is useful for projects that support per port control of the DHCP server screening function. The filter can be based on the DHCP server IP address.

The command has two purposes: To specify to filter all DHCP server packets on the specific port and to specify to allow some DHCP server packets with pre-defined server IP addresses. With this function, we can restrict the DHCP server to service specific DHCP clients. This is useful when two DHCP servers are present on the network, one of them provides the private IP address, and one of them provides the IP address.

Enabling filtering of the DHCP server port state will create one access profile and create one access rule per port (UDP port = 67). Filter commands in this file will share the same access profile.

Addition of a permit DHCP entry will create one access profile and create one access rule. Filtering commands in this file will share the same access profile.

### Format

```
config filter dhcp_server [add permit server_ip <ipaddr> ports [<portlist> | all] | delete permit server_ip
<ipaddr> ports [<portlist> | all] | ports [<portlist> | all] state [enable | disable] |
illegal_server_log_suppress_duration [1min | 5min | 30min] | trap_log [enable | disable]]
```

### Parameters

---

**add permit server\_ip** - Specifies to add a DHCP permit server IP address.

**<ipaddr>** - Enter the DHCP server IP address here.

**ports** - Specifies the port number of filter DHCP server.

**<portlist>** - Enter the list of ports to be configured here.

**all** - Specifies that all the port will be used for this configuration.

---

**delete permit server\_ip** - Specifies to delete a DHCP permit server IP address.

**<ipaddr>** - Enter the DHCP server IP address here.

**ports** - Specifies the port number of filter DHCP server.

**<portlist>** - Enter the list of ports to be configured here.

**all** - Specifies that all the port will be used for this configuration.

---

**ports** - Specifies the port number of filter DHCP server.

**<portlist>** - Enter the list of ports to be configured here.

**all** - Specifies that all the port will be used for this configuration.

---

---

**state** - Specifies the state of the DHCP server filtering.

**enable** - Specifies to enable the DHCP server filtering.

**disable** - Specifies to disable the DHCP server filtering.

---

**illegal\_server\_log\_suppress\_duration** - Specifies the same illegal DHCP server IP address detected will be logged only once within the duration. The default value is 5 minutes.

**1min** - Specifies that illegal server log suppress duration value will be set to 1 minute.

**5min** - Specifies that illegal server log suppress duration value will be set to 5 minutes.

**30min** - Specifies that illegal server log suppress duration value will be set to 30 minutes.

---

**trap\_log** - Specifies the trap and log status.

**enable** - Specifies to enable trap and log status.

**disable** - Specifies to disable trap and log status.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To add an entry from the DHCP server filter list in the Switch's database:

```
DGS-1510-28XMP/ME:admin# config filter dhcp_server add permit server_ip 10.90.90.20 ports 1-20
```

```
Command: config filter dhcp_server add permit server_ip 10.90.90.20 ports 1-20
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```

```
DGS-1510-28XMP/ME:admin# config filter dhcp_server ports 1-10 state enable
```

```
Command: config filter dhcp_server ports 1-10 state enable
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```

## 21-2 show filter dhcp\_server

### Description

This command is used to display the DHCP server filter list created on the Switch.

### Format

**show filter dhcp\_server**

### Parameters

None.

## Restrictions

None.

## Example

To display the DHCP server/client filter list created on the Switch:

```
DGS-1510-28XMP/ME:admin# show filter dhcp_server
Command: show filter dhcp_server

Enabled Ports: 1-10
Trap & Log State: Disabled
Illegal Server Log Suppress Duration:5 minutes

Permit DHCP Server/Client Table:
Server IP Address Client MAC Address  Port
-----
10.90.90.20      All Client MAC      1-20

Total Entries: 1

DGS-1510-28XMP/ME:admin#
```

## Chapter 22 Digital Diagnostic Monitoring (DDM) Commands

---

**config ddm** [trap | log] [enable | disable]

---

**config ddm** ports [<portlist> | all] [[temperature\_threshold | voltage\_threshold | bias\_current\_threshold | tx\_power\_threshold | rx\_power\_threshold] {high\_alarm <float> | low\_alarm <float> | high\_warning <float> | low\_warning <float>} | {state [enable | disable] | shutdown [alarm | warning | none]}]

---

**show ddm**

---

**show ddm ports** {<portlist>} [status | configuration]

---

### 22-1 config ddm

#### Description

The command configures the DDM log and trap action when encountering an exceeding alarm or warning thresholds event.

#### Format

**config ddm** [trap | log] [enable | disable]

#### Parameters

---

**trap** - Specifies whether to send traps, when the operating parameter exceeds the corresponding threshold. The DDM trap is disabled by default.

---

**log** - Specifies whether to send a log, when the operating parameter exceeds the corresponding threshold. The DDM log is enabled by default.

---

**enable** - Specifies to enable the log or trap sending option.

---

**disable** - Specifies to disable the log or trap sending option.

---

#### Restrictions

Only Administrators and Operators can issue this command.

#### Example

To configure DDM log state to enable:

```
DGS-1510-28XMP/ME:admin# config ddm log enable
Command: config ddm log enable

Success.

DGS-1510-28XMP/ME:admin#
```

To configure DDM trap state to enable:



```
DGS-1510-28XMP/ME:admin# config ddm trap enable
Command: config ddm trap enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 22-2 config ddm ports

### Description

The command is used to configure the DDM settings of the specified ports.

### Format

```
config ddm ports [<portlist> | all] [[temperature_threshold | voltage_threshold | bias_current_threshold |
tx_power_threshold | rx_power_threshold] {high_alarm <float> | low_alarm <float> | high_warning <float> |
low_warning <float>} | {state [enable | disable] | shutdown [alarm | warning | none]]]
```

### Parameters

---

**<portlist>** - Enter the range of ports to be configured here.

---

**all** - Specifies that all the optic ports' operating parameters will be configured.

---

**temperature\_threshold** - Specifies the threshold of the optic module's temperature in centigrade. At least one parameter shall be specified for this threshold.

---

**voltage\_threshold** - Specifies the threshold of optic module's voltage.

---

**bias\_current\_threshold** - Specifies the threshold of the optic module's bias current.

---

**tx\_power\_threshold** - Specifies the threshold of the optic module's output power.

---

**rx\_power\_threshold** - Specifies the threshold of optic module's received power.

---

**high\_alarm** - (Optional) Specifies the high threshold for the alarm. When the operating parameter rises above this value, the action associated with the alarm is taken.

**<float>** - Enter the high threshold alarm value used here.

---

**low\_alarm** - (Optional) Specifies the low threshold for the alarm. When the operating parameter falls below this value, the action associated with the alarm is taken.

**<float>** - Enter the low threshold alarm value used here.

---

**high\_warning** - (Optional) Specifies the high threshold for the warning. When the operating parameter rises above this value, the action associated with the warning is taken.

**<float>** - Enter the high threshold warning value here.

---

**low\_warning** - (Optional) Specifies the low threshold for the warning. When the operating parameter falls below this value, the action associated with the warning is taken.

**<float>** - Enter the low threshold warning value here.

---

**state** - (Optional) Specifies the DDM state to enable or disable. If the state is disabled, no DDM action will take effect.

**enable** - Specifies to enable the DDM state.

**disable** - Specifies to disable the DDM state.

---

**shutdown** - (Optional) Specifies whether or not to shut down the port when the operating parameter exceeds the corresponding alarm threshold or warning threshold. The default value is none.

**alarm** - Shutdown the port when the configured alarm threshold range is exceeded.

**warning** - Shutdown the port when the configured warning threshold range is exceeded.

---

---

**none** - The port will never shutdown regardless if the threshold ranges are exceeded or not.

---

## Restrictions

Only Administrators and Operators can issue this command.

## Example

To configure the port 25's temperature threshold:

```
DGS-1510-28XMP/ME:admin# config ddm ports 25 temperature_threshold high_alarm 84.9532
low_alarm -10 high_warning 70 low_warning 2.25
Command: config ddm ports 25 temperature_threshold high_alarm 84.9532 low_alarm
-10 high_warning 70 low_warning 2.25
```

According to the DDM precision definition, closest value 84.9531 is chosen.

Success.

```
DGS-1510-28XMP/ME:admin#
```

To configure the port 25's voltage threshold:

```
DGS-1510-28XMP/ME:admin# config ddm ports 25 voltage_threshold high_alarm 4.25 low_alarm 2.5
high_warning 3.5 low_warning 3
Command: config ddm ports 25 voltage_threshold high_alarm 4.25 low_alarm 2.5 high_warning 3.5
low_warning 3
```

Success.

```
DGS-1510-28XMP/ME:admin#
```

To configure the port 25's bias current threshold:

```
DGS-1510-28XMP/ME:admin# config ddm ports 25 bias_current_threshold high_alarm 7.25 low_alarm
0.004 high_warning 0.5 low_warning 0.008
Command: config ddm ports 25 bias_current_threshold high_alarm 7.25 low_alarm 0.004
high_warning 0.5 low_warning 0.008
```

Success.

```
DGS-1510-28XMP/ME:admin#
```

To configure the port 25's transmit power threshold:

```
DGS-1510-28XMP/ME:admin# config ddm ports 25 bias_current_threshold high_alarm 7.25 low_alarm
0.004 high_warning 0.5 low_warning 0.008
Command: config ddm ports 25 bias_current_threshold high_alarm 7.25 low_alarm 0.004
high_warning 0.5 low_warning 0.008
```

Success.

```
DGS-1510-28XMP/ME:admin#
```

To configure the port 25's receive power threshold:

```
DGS-1510-28XMP/ME:admin# config ddm ports 25 rx_power_threshold high_alarm 4.55 low_alarm
0.01 high_warning 3.5 low_warning 0.03
Command: config ddm ports 25 rx_power_threshold high_alarm 4.55 low_alarm 0.01 high_warning
3.5 low_warning 0.03

Success.

DGS-1510-28XMP/ME:admin#
```

To configure the port 25's actions associate with the alarm:

```
DGS-1510-28XMP/ME:admin# config ddm ports 25 state enable shutdown alarm
Command: config ddm ports 25 state enable shutdown alarm

Success.

DGS-1510-28XMP/ME:admin#
```

## 22-3 show ddm

### Description

This command is used to display the DDM global settings.

### Format

**show ddm**

### Parameters

None.

### Restrictions

None.

### Example

To display the DDM global settings:

```
DGS-1510-28XMP/ME:admin# show ddm
Command: show ddm

DDM Log           :Enabled
DDM Trap          :Disabled

DGS-1510-28XMP/ME:admin#
```

## 22-4 show ddm ports

### Description

This command is used to show the current operating DDM parameters and configuration values of the optic module of the specified ports. There are two types of thresholds: the administrative configuration and the operation configuration threshold.

For the optic port, when a particular threshold was configured by user, it will be shown in this command with a tag indicating that it is a threshold that user configured, else it would be the threshold read from the optic module that is being inserted.

### Format

**show ddm ports {<portlist>} [status | configuration]**

### Parameters

---

**<portlist>** - (Optional) Enter the range of ports to be displayed here.

---

**status** - Specifies that the operating parameter will be displayed.

---

**configuration** - Specifies that the configuration values will be displayed.

---

### Restrictions

None.

### Example

To display ports 25-26's operating parameters:

```
DGS-1510-28XMP/ME:admin# show ddm ports 25-26 status
```

```
Command: show ddm ports 25-26 status
```

Port	Temperature (in Celsius)	Voltage (V)	Bias Current (mA)	TX Power (mW)	RX Power (mW)
25	-	-	-	-	-
26	-	-	-	-	-

**CTRL+C** **ESC** **q** Quit **SPACE** **n** Next Page **p** Previous Page **r** Refresh

## Chapter 23 D-Link Unidirectional Link Detection (DULD) Command List

---

```
config duld ports [<portlist> | all ] {state [enable | disable] | mode [shutdown | normal] | discovery_time <sec 5-65535>}(1)
```

---

```
show duld ports {<portlist>}
```

---

### 23-1 config duld ports

#### Description

The command is used to configure unidirectional link detection on ports. Unidirectional link detection provides discovery mechanism based on 802.3ah to discover its neighbor. If the OAM discovery can complete in configured discovery time, it concludes the link is bidirectional. Otherwise, it starts detecting task to detect the link status.

#### Format

```
config duld ports [<portlist> | all ] {state [enable | disable] | mode [shutdown | normal] | discovery_time <sec 5-65535>}(1)
```

#### Parameters

---

**<portlist>** - Enter a range of ports.

---

**all** - Specifies to select all ports.

---

**state** - Specifies these ports unidirectional link detection status.

**enable** - Specifies to enable unidirectional link detection status.

**disable** - Specifies to disable unidirectional link detection status.

---

**mode** - Specifies the mode when detecting unidirectional link.

**shutdown** - Specifies to disable the port and log an event when any unidirectional link is detected.

**normal** - Specifies to only log an event when a unidirectional link is detected.

---

**discovery\_time** - Specifies these ports neighbor discovery time. If OAM discovery cannot complete in the discovery time, the unidirectional link detection will start.

**<sec 5-65535>** - Enter a time in second. The default discovery time is 5 seconds.

---

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

#### Example

To enable unidirectional link detection on port 1:

```
DGS-1510-28XMP/ME:admin# config duld ports 1 state enable
Command: config duld ports 1 state enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 23-2 show duld ports

### Description

This command is used to show unidirectional link detection information.

### Format

**show duld ports {<portlist>}**

### Parameters

---

**<portlist>** - (Optional) Enter a range of ports.

---

### Restrictions

None.

### Example

To show ports 1-4 unidirectional link detection information:

```
DGS-1510-28XMP/ME:admin# show duld ports 1-4
Command: show duld ports 1-4

Port    Admin State  Oper Status  Mode      Link Status  Discovery Time(Sec)
-----  -
1       Enabled     Disabled    Normal    Unknown      5
2       Disabled    Disabled    Normal    Unknown      5
3       Disabled    Disabled    Normal    Unknown      5
4       Disabled    Disabled    Normal    Unknown      5

DGS-1510-28XMP/ME:admin#
```

# Chapter 24 DoS Attack Prevention Command List

---

```
config dos_prevention dos_type [{land_attack | blat_attack | tcp_null_scan | tcp_xmasscan | tcp_synfin |
tcp_syn_srcport_less_1024 | ping_death_attack | tcp_tiny_frag_attack} | all] {action [drop] | state [enable |
disable]}
```

---

```
show dos_prevention {land_attack | blat_attack | tcp_null_scan | tcp_xmasscan | tcp_synfin |
tcp_syn_srcport_less_1024 | ping_death_attack | tcp_tiny_frag_attack}
```

---

```
config dos_prevention trap [enable | disable]
```

---

```
config dos_prevention log [enable | disable]
```

---

## 24-1 config dos\_prevention dos\_type

### Description

This command is used to configure the prevention of each Denial-of-Service (DoS) attack, including state and action. The packet matching will be done by hardware. For a specific type of attack, the content of the packet will be matched against a specific pattern.

### Format

```
config dos_prevention dos_type [{land_attack | blat_attack | tcp_null_scan | tcp_xmasscan | tcp_synfin |
tcp_syn_srcport_less_1024 | ping_death_attack | tcp_tiny_frag_attack} | all] {action [drop] | state [enable |
disable]}
```

### Parameters

---

**land\_attack** - (Optional) Specifies to check whether the source address is equal to destination address of a received IP packet.

---

**blat\_attack** - (Optional) Specifies to check whether the source port is equal to destination port of a received TCP packet.

---

**tcp\_null\_scan** - (Optional) Specifies to check whether a received TCP packet contains a sequence number of 0 and no flags.

---

**tcp\_xmasscan** - (Optional) Specifies to check whether a received TCP packet contains URG, Push and FIN flags.

---

**tcp\_synfin** - (Optional) Specifies to check whether a received TCP packet contains FIN and SYN flags.

---

**tcp\_syn\_srcport\_less\_1024** - (Optional) Specifies to check whether the TCP packets source ports are less than 1024 packets.

---

**ping\_death\_attack** - (Optional) Specifies to detect whether received packets are fragmented ICMP packets.

---

**tcp\_tiny\_frag\_attack** - (Optional) Specifies to check whether the packets are TCP tiny fragment packets.

---

**all** - Specifies all DoS attack type.

---

**action** - (Optional) Specifies to take the following action when enabling DoS prevention.

**drop** - Specifies to drop DoS attack packets.

---

**state** - (Optional) Specifies the DoS attack prevention state.

**enable** - Specifies to enable DoS attack prevention.

**disable** - Specifies to disable DoS attack prevention.

---



## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure land attack and blat attack prevention, the action is drop:

```
DGS-1510-28XMP/ME:admin# config dos_prevention dos_type land_attack blat_attack action drop
state enable
Command: config dos_prevention dos_type land_attack blat_attack action drop state enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 24-2 show dos\_prevention

### Description

This command is used to display DoS prevention information, including the Trap/Log state, the type of DoS attack, the prevention state, the corresponding action if the prevention is enabled and the counter information of the DoS packet.

### Format

**show dos\_prevention {land\_attack | blat\_attack | tcp\_null\_scan | tcp\_xmasscan | tcp\_synfin | tcp\_syn\_srcport\_less\_1024 | ping\_death\_attack | tcp\_tiny\_frag\_attack}**

### Parameters

<b>land_attack</b> - (Optional) Specifies to display land attack information.
<b>blat_attack</b> - (Optional) Specifies to display blat attack information.
<b>tcp_null_scan</b> - (Optional) Specifies to display TCP null scan information.
<b>tcp_xmasscan</b> - (Optional) Specifies to display TCP Xmas scan information.
<b>tcp_synfin</b> - (Optional) Specifies to display TCP SYN/FIN information.
<b>tcp_syn_srcport_less_1024</b> - (Optional) Specifies to display TCP SYN SrcPort less 1024 information.
<b>ping_death_attack</b> - (Optional) Specifies to display ping of death attack information.
<b>tcp_tiny_frag_attack</b> - (Optional) Specifies to display TCP tiny fragment attack information.

### Restrictions

None.

### Example

To display DoS prevention information:

```
DGS-1510-28XMP/ME:admin# show dos_prevention
Command: show dos_prevention

Trap:Disabled   Log:Disabled   Function Version   : 1.01

DoS Type                State      Action           Frame Counts
-----
Land Attack              Enabled    Drop              -
Blat Attack              Enabled    Drop              -
TCP Null Scan            Disabled   Drop              -
TCP Xmas Scan            Disabled   Drop              -
TCP SYNFIN               Disabled   Drop              -
TCP SYN SrcPort Less 1024 Disabled   Drop              -
Ping of Death Attack     Disabled   Drop              -
TCP Tiny Fragment Attack Disabled   Drop              -

CTRL+C  ESC  q  Quit  SPACE  n  Next Page  p  Previous Page  r  Refresh
```

## 24-3 config dos\_prevention trap

### Description

This command is used to enable or disable DoS prevention trap state.

### Format

**config dos\_prevention trap [enable | disable]**

### Parameters

---

**enable** - Specifies to enable DoS prevention trap state.

---

**disable** - Specifies to disable DoS prevention trap state.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To disable DoS prevention trap:

```
DGS-1510-28XMP/ME:admin# config dos_prevention trap disable
Command: config dos_prevention trap disable

Success.

DGS-1510-28XMP/ME:admin#
```

## 24-4 config dos\_prevention log

### Description

This command is used to enable or disable dos prevention log state.

### Format

**config dos\_prevention log [enable | disable]**

### Parameters

---

**enable** - Specifies to enable DoS prevention log state.

---

**disable** - Specifies to disable DoS prevention log state.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To enable DoS prevention log:

```
DGS-1510-28XMP/ME:admin# config dos_prevention log enable
Command: config dos_prevention log enable

Success.

DGS-1510-28XMP/ME:admin#
```

## Chapter 25 Energy Efficient Ethernet (EEE) Command List

---

**config eee ports** [<portlist> | all] state [enable | disable]**show eee ports** {<portlist>}

### 25-1 config eee ports

#### Description

This command is used to enable or disable the EEE function on the specified port(s) on the Switch.



**NOTE:** EEE and ERPS are mutually exclusive functions.

#### Format

**config eee ports** [<portlist> | all] state [enable | disable]

#### Parameters

---

**<portlist>** - Enter a range of ports to be configured.

**all** - Specifies to configure all ports.

**state** - Specifies the EEE state. The default is disabled.

**enable** - Specifies to enable the EEE function for the specified port(s).

**disable** - Specifies to disable the EEE function for the specified port(s).

---

#### Restrictions

Only Administrators and Operators can issue this command.

#### Example

To enable the EEE state on ports 2-5:

```
DGS-1510-28XMP/ME:admin#config eee ports 2-5 state enable
```

```
Command: config eee ports 2-5 state enable
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```

### 25-2 show eee ports

#### Description

This command is used to display the EEE function state on the specified port(s).

**Format**

```
show eee ports {<portlist>}
```

**Parameters**

---

```
<portlist> - (Optional) Specifies a list of ports to be displayed.
```

---

**Restrictions**

None.

**Example**

To display the EEE state:

```
DGS-1510-28XMP/ME:admin#show eee ports 1-6,9  
Command: show eee ports 1-6,9
```

Port	State
-----	-----
1	Disabled
2	Enabled
3	Enabled
4	Enabled
5	Enabled
6	Disabled
9	Disabled

```
DGS-1510-28XMP/ME:admin#
```

## Chapter 26 Ethernet Ring Protection Switching (ERPS) Command List

---



---

**enable erps**

**disable erps**

**create erps raps\_vlan <vlanid>**

**delete erps raps\_vlan <vlanid>**

**config erps raps\_vlan <vlanid>** [state [enable | disable] | ring\_mel <value 0-7> | ring\_port [west <port> | east <port> ] | rpl\_port [west | east | none] | rpl\_owner [enable | disable] | protected\_vlan [add | delete] vlanid <vidlist> | revertive [enable | disable] | timer {holdoff\_time <millisecond 0 - 10000> | guard\_time <millisecond 10 - 2000> | wtr\_time <min 5 - 12>}]

**config erps log** [enable | disable]

**config erps trap** [enable | disable]

**show erps**

---



---

### 26-1 enable erps

#### Description

This command is used to enable the global ERPS function on a switch. When both the global state and the specified ring ERPS state are enabled, the specified ring will be activated. The default state is disabled.

The global ERPS function cannot be enabled, when any ERPS ring on the device is enabled and the integrity of any ring parameter is not available. For each ring with the ring state enabled when ERPS is enabled, the following integrity will be checked:

1. R-APS VLAN is created.
2. The Ring port is a tagged member port of the R-APS VLAN.
3. The RPL port is specified if the RPL owner is enabled.
4. The RPL port is not specified as virtual channel.



**NOTE:** EEE and ERPS are mutually exclusive functions.

#### Format

**enable erps**

#### Parameters

None.

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To enable ERPS:

```
DGS-1510-28XMP/ME:admin# enable erps
Command: enable erps

Success.

DGS-1510-28XMP/ME:admin#
```

## 26-2 disable erps

**Description**

This command is used to disable the global ERPS function on a switch.

**Format**

**disable erps**

**Parameters**

None.

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To disable ERPS:

```
DGS-1510-28XMP/ME:admin# disable erps
Command: disable erps

Success.

DGS-1510-28XMP/ME:admin#
```

## 26-3 create erps raps\_vlan

**Description**

This command is used to create an R-APS VLAN on a switch. Only one R-APS VLAN should be used to transfer R-APS messages.

Note that the R-APS VLAN must already have been created by the **create vlan** command.

**Format**

**create erps raps\_vlan <vlanid>**

## Parameters

---

**<vlanid>** - Enter the VLAN ID to be the R-APS VLAN.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To create an R-APS VLAN:

```
DGS-1510-28XMP/ME:admin# create erps raps_vlan 4094
Command: create erps raps_vlan 4094

Success.

DGS-1510-28XMP/ME:admin#
```

## 26-4 delete erps raps\_vlan

### Description

This command is used to delete an R-APS VLAN on a switch. When an R-APS VLAN is deleted, all parameters related to this R-APS VLAN will also be deleted. This command can only be issued when the ring is not active.

### Format

**delete erps raps\_vlan <vlanid>**

## Parameters

---

**<vlanid>** - Enter the VLAN ID to be the R-APS VLAN.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To delete an R-APS VLAN:

```
DGS-1510-28XMP/ME:admin# delete erps raps_vlan 4094
Command: delete erps raps_vlan 4094

Success.

DGS-1510-28XMP/ME:admin#
```



## 26-5 config erps raps\_vlan

### Description

This command is used to configure the ERPS R-APS VLAN settings.

The ring MEL is one field in the R-APS PDU. Note that if CFM (Connectivity Fault Management) and ERPS are used at the same time, the R-APS PDU is one of a suite of Ethernet OAM PDU. The behavior for forwarding of R-APS PDU should follow the Ethernet OAM. If the MEL of R-APS PDU is not higher than the level of the MEP with the same VLAN on the ring ports, the R-APS PDU cannot be forwarded on the ring.

Restrictions apply for ports that are included in a link aggregation group. A link aggregation group can be configured as a ring port by specifying the master port of the link aggregation port. Only the master port can be specified as a ring port. If the specified link aggregation group is eliminated, the master port retains its ring port status. If the ring port configured on virtual channel, the ring which the port connects to will be considered as a sub-ring.

**RPL port** - Specifies one of the R-APS VLAN ring ports as the RPL port. To remove an RPL port from an R-APS VLAN, use the none designation for rpl\_port.

**RPL owner** - Specifies the node as the RPL owner.

Note that the virtual channel cannot be configured as RPL. For example, if a ring port is configured on the virtual channel and the ring port is configured as an RPL port, an error message will be display and the configuration will fail.

The R-APS VLAN cannot be the protected VLAN. The protected VLAN can be one that has already been created, or it can be used for a VLAN that has not yet been created.

**Hold-off timer** - The Hold-off timer is used to filter out intermittent link faults when link failures occur during the protection switching process. When a ring node detects a link failure, it will start the hold-off timer and report the link failure event (R-APS BPDU with SF flag) after the link failure is confirmed within period of time specified.

**Guard timer** - Guard timer is used to prevent ring nodes from receiving outdated R-APS messages. This timer is used during the protection switching process after the link failure recovers. When the link node detects the recovery of the link, it will report the link failure recovery event (R-APS PDU with NR flag) and start the guard timer. Before the guard timer expires, all received R-APS messages are ignored by this ring node, except in the case where a burst of three R-APS event messages that indicates the topology of a sub-ring has changed and the node needs to flush FDB are received on the node. In this case the recovered link does not go into a blocking state. The Guard Timer should be greater than the maximum expected forwarding delay for which one R-APS message circles around the ring.

**WTR timer** - WTR timer is used to prevent frequent operation of the protection switch due to an intermittent defect. This timer is used during the protection switching process when a link failure recovers. It is only used by the RPL owner. When the RPL owner in protection state receives R-APS PDU with an NR flag, it will start the WTR timer. The RPL owner will block the original unblocked RPL port and start to send R-APS PDU with an RB flag after the link recovery is confirmed within this period of time.

**Revertive mode**- When revertive is enabled, the traffic link is restored to the working transport link. When revertive is disabled, the traffic link is allowed to use the RPL, after recovering from a failure.

When both the global state and the specified ring ERPS state are enabled, the specified ring will be activated. STP and LBD should be disabled on the ring ports before the specified ring is activated.

The ring cannot be enabled before the R-APS VLAN is created, and ring ports, RPL port, RPL owner, are configured. Note that these parameters cannot be changed when the ring is activated.

In order to guarantee correct operation, the following integrity will be checked when the ring is enabled and the global ERPS state is enabled.

1. R-APS VLAN is created.

2. The Ring port is the tagged member port of the R-APS VLAN.
3. The RPL port is specified if RPL owner is enabled.

## Format

```
config erps raps_vlan <vlanid> [state [enable | disable] | ring_mel <value 0-7> | ring_port [west <port> | east <port> ] | rpl_port [west | east | none] | rpl_owner [enable | disable] | protected_vlan [add | delete] vlanid <vidlist> | revertive [enable | disable] | timer {holdoff_time <millisecond 0 - 10000> | guard_time <millisecond 10 - 2000> | wtr_time <min 5 - 12>}]
```

## Parameters

---

**<vlanid>** - Enter the R-APS VLAN ID used.

**state** - Specifies to enable or disable the specified ring.

**enable** - Specifies to enable the state of the specified ring.

**disable** - Specifies to disable the state of the specified ring. The default value is disabled.

**ring\_mel** - Specifies the ring MEL of the R-APS function. The default ring MEL is 1.

**<value 0-7>** - Enter the ring MEL value here. This value should be between 0 and 7.

**ring\_port** - Specifies the ring port used.

**west** - Specifies the port as the west ring port.

**<port>** - Enter the port number here.

**east** - Specifies the port as the east ring port.

**<port>** - Enter the port number here.

**rpl\_port** - Specifies the RPL port used.

**west** - Specifies the west ring port as the RPL port.

**east** - Specifies the east ring port as the RPL port.

**none** - Specifies that there is no RPL port on this node. By default, the node has no RPL port.

**rpl\_owner** - Specifies to enable or disable the RPL owner node.

**enable** - Specifies the device as an RPL owner node.

**disable** - Specifies that the node is not an RPL owner. By default, the RPS owner is disabled.

**protected\_vlan** - Specifies to add or delete the protected VLAN group.

**add** - Specifies to add VLANs to the protected VLAN group.

**delete** - Specifies to delete VLANs from the protected VLAN group.

**vlanid** - Specifies the VLAN ID to be removed or added.

**<vidlist>** - Enter the VLAN ID list here.

**revertive** - Specifies the state of the R-APS revertive option.

**enable** - Specifies that the R-APS revertive option will be enabled.

**disable** - Specifies that the R-APS revertive option will be disabled.

**timer** - Specifies the R-APS timer used.

**holdoff\_time** - (Optional) Specifies the hold-off time of the R-APS function. The default hold-off time is 0 milliseconds.

**<millisecond 0-10000>** - Enter the hold off time value here. This value must be in the range of 0 to 10000 milliseconds.

**guard\_time** - (Optional) Specifies the guard time of the R-APS function. The default guard time is 500 milliseconds.

**<millisecond 10-2000>** - Enter the guard time value here. This value must be in the range of 0 to 2000 milliseconds.

**wtr\_time** - (Optional) Specifies the WTR time of the R-APS function.

**<min 5-12>** - Enter the WTR time range value here. The range is from 5 to 12 minutes. The default WTR time is 5 minutes.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure the MEL of the ERPS ring for a specific R-APS VLAN:

```
DGS-1510-28XMP/ME:admin# config erps raps_vlan 4094 ring_mel 2
Command: config erps raps_vlan 4094 ring_mel 2

Success.

DGS-1510-28XMP/ME:admin#
```

To configure the ports of the ERPS ring for a specific R-APS VLAN:

```
DGS-1510-28XMP/ME:admin# config erps raps_vlan 4094 ring_port west 5
Command: config erps raps_vlan 4094 ring_port west 5

Success.

DGS-1510-28XMP/ME:admin#
```

To configure the RPL owner for a specific R-APS VLAN:

```
DGS-1510-28XMP/ME:admin# config erps raps_vlan 4094 rpl_owner enable
Command: config erps raps_vlan 4094 rpl_owner enable

Success.

DGS-1510-28XMP/ME:admin#
```

To configure the protected VLAN for a specific R-APS VLAN:

```
DGS-1510-28XMP/ME:admin# config erps raps_vlan 4094 protected_vlan add vlanid 10-20
Command: config erps raps_vlan 4094 protected_vlan add vlanid 10-20

Success.

DGS-1510-28XMP/ME:admin#
```

To configure the ERPS timers for a specific R-APS VLAN:

```
DGS-1510-28XMP/ME:admin# config erps raps_vlan 4094 timer holdoff_time 100 guard_time 1000
wtr_time 10
Command: config erps raps_vlan 4094 timer holdoff_time 100 guard_time 1000 wtr_time 10

Success.

DGS-1510-28XMP/ME:admin#
```

To configure the ring state of the ERPS:

```
DGS-1510-28XMP/ME:admin# config erps raps_vlan 4094 state enable
Command: config erps raps_vlan 4094 state enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 26-6 config erps log

### Description

This command is used to configure the log state of ERPS events.

### Format

**config erps log [enable | disable]**

### Parameters

---

**enable** - Specifies to enable the log state.

---

**disable** - Specifies to disable the log state. This is the default option.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To configure the ERPS log state:

```
DGS-1510-28XMP/ME:admin# config erps log enable
Command: config erps log enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 26-7 config erps trap

### Description

This command is used to configure trap state of ERPS events.

### Format

**config erps trap [enable | disable]**

### Parameters

---

**enable** - Specifies to enable the trap state.

---

---

**disable** - Specifies to disable the trap state. This is the default option.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To configure the trap state of the ERPS:

```
DGS-1510-28XMP/ME:admin# config erps trap enable
Command: config erps trap enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 26-8 show erps

### Description

This command is used to display ERPS configuration and operation information.

The port state of the ring port may be as "Forwarding", "Blocking", "Signal Fail". "Forwarding" indicates that traffic is able to be forwarded. "Blocking" indicates that traffic is blocked by ERPS and a signal failure is not detected on the port. "Signal Fail" indicates that a signal failure is detected on the port and traffic is blocked by ERPS.

The RPL owner administrative state could be configured to "Enabled" or "Disabled". But the RPL owner operational state may be different from the RPL owner administrative state, for example, the RPL owner conflict occurs. "Active" is used to indicate that the RPL owner administrative state is enabled and the device is operated as the active RPL owner. "Inactive" is used to indicate that the RPL owner administrative state is enabled, but the device is operated as the inactive RPL owner.

### Format

**show erps**

### Parameters

None.

### Restrictions

None.

### Example

To display ERPS information:

```
DGS-1510-28XMP/ME:admin# show erps
Command: show erps

Global Status          : Disabled
Log Status             : Disabled
Trap Status           : Disabled
-----
R-APS VLAN            : 4094
ERPS Status           : Disabled
Admin West Port       : 5
Operational West Port : 5    (Forwarding)
Admin East Port       :
Operational East Port :
Admin RPL Port        : None
Operational RPL Port  : None
Admin Owner           : Enabled
Operational Owner     : Enabled
Protected VLANs       : 10-20
Ring MEL              : 2
Holdoff Time          : 100 milliseconds
Guard Time           : 1000 milliseconds
WTR Time              : 10 minutes
Revertive mode        : Enabled
Current Ring State    : -
```

```
-----
Total Rings: 1
```

```
DGS-1510-28XMP/ME:admin#
```

## Chapter 27 Filter Command List

---

**config filter netbios** [<portlist> | all] state [enable | disable]

---

**show filter netbios**

---

**config filter extensive\_netbios** [<portlist> | all] state [enable | disable]

---

**show filter extensive\_netbios**

---

### 27-1 config filter netbios

#### Description

This command is used to configure the Switch to deny the NetBIOS packets on specific ports.

#### Format

**config filter netbios** [<portlist> | all] state [enable | disable]

#### Parameters

---

**<portlist>** - Specifies the list of ports used.

---

**all** - Specifies that all the ports will be used for the configuration.

---

**state**- Specifies the state of the filter to block the NETBIOS packet.

**enable** - Specifies that the state will be enabled.

**disable** - Specifies that the state will be disabled.

---

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

#### Example

To configure filter NetBIOS state:

```
DGS-1510-28XMP/ME:admin# config filter netbios 1-10 state enable
Command: config filter netbios 1-10 state enable
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```

### 27-2 show filter netbios

#### Description

This command is used to display the NetBIOS filter state on the Switch.

#### Format

**show filter netbios**

## Parameters

None.

## Restrictions

None.

## Example

To display the filter NetBIOS list created on the Switch:

```
DGS-1510-28XMP/ME:admin# show filter netbios
Command: show filter netbios

Enabled ports: 1-3

DGS-1510-28XMP/ME:admin#
```

## 27-3 config filter extensive\_netbios

### Description

This command is used to configure the Switch to filter NetBIOS packets over 802.3 frame on the specific ports.

### Format

**config filter extensive\_netbios [<portlist> | all] state [enable | disable]**

### Parameters

---

**<portlist>** - Enter the list of ports used for this configuration here.

---

**all** - Specifies that all the ports will be used this configuration.

---

**state** - Specifies to enable or disable the filter to block the NetBIOS packet over 802.3 frame.

**enable** - Specifies that the filter state will be enabled.

**disable** - Specifies that the filter state will be disabled.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To configure filter extensive NetBIOS state:

```
DGS-1510-28XMP/ME:admin# config filter extensive_netbios 1-10 state enable
Command: config filter extensive_netbios 1-10 state enable

Success.

DGS-1510-28XMP/ME:admin#
```



## 27-4 show filter extensive\_netbios

### Description

This command is used to display the extensive NetBIOS state on the Switch.

### Format

**show filter extensive\_netbios**

### Parameters

None.

### Restrictions

None.

### Example

To display the extensive state created on the Switch:

```
DGS-1510-28XMP/ME:admin# show filter extensive_netbios
Command: show filter extensive_netbios

Enabled ports: 1-3

DGS-1510-28XMP/ME:admin#
```

## Chapter 28 Filter Database (FDB) Command List

---



---

<b>create fdb</b> <vlan_name 32> <macaddr> [port <port>   drop]
<b>create fdb vlanid</b> <vidlist> <macaddr> [port <port>   drop]
<b>create multicast_fdb</b> <vlan_name 32> <macaddr>
<b>config multicast_fdb</b> <vlan_name 32> <macaddr> [add   delete] <portlist>
<b>config fdb aging_time</b> <sec 10-1000000>
<b>config multicast vlan_filtering_mode</b> [vlanid <vidlist>   vlan <vlan_name 32>   all] [forward_all_groups   forward_unregistered_groups   filter_unregistered_groups]
<b>delete fdb</b> <vlan_name 32> <macaddr>
<b>clear fdb</b> [vlan <vlan_name 32>   port <port>   all]
<b>show multicast_fdb</b> {[vlan <vlan_name 32>   vlanid <vidlist>]   mac_address <macaddr>}
<b>show fdb</b> {port <port>   [vlan <vlan_name 32>   vlanid <vidlist>]   mac_address <macaddr>   static   aging_time   security}
<b>show multicast vlan_filtering_mode</b> {[vlanid < vidlist>   vlan <vlan_name 32>]}

---



---

### 28-1 create fdb

#### Description

This command is used to create a static entry in the unicast MAC address forwarding table (database).

#### Format

**create fdb** <vlan\_name 32> <macaddr> [port <port> | drop]

#### Parameters

**<vlan\_name 32>** - Specifies a VLAN name associated with a MAC address. The maximum length of the VLAN name is 32 bytes.

**<macaddr>** - Specifies the MAC address to be added to the static forwarding table.

**port** - Specifies the port number corresponding to the MAC destination address. The Switch will always forward traffic to the specified device through this port.

**<port>** - Enter the port number corresponding to the MAC destination address here.

**drop** - Specifies the action drop to be taken.

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

#### Example

To create a unicast MAC forwarding entry:

```
DGS-1510-28XMP/ME:admin# create fdb default 00-00-00-00-01-02 port 5
Command: create fdb default 00-00-00-00-01-02 port 5

Success.

DGS-1510-28XMP/ME:admin#
```

To filter a unicast MAC:

```
DGS-1510-28XMP/ME:admin# create fdb default 00-00-00-00-01-02 drop
Command: create fdb default 00-00-00-00-01-02 drop

Success.

DGS-1510-28XMP/ME:admin#
```

## 28-2 create fdb vlanid

### Description

This command is used to create a static entry in the unicast MAC address forwarding table (database).

### Format

**create fdb vlanid <vidlist> <macaddr> [port <port> | drop]**

### Parameters

---

**<vidlist>** - Specifies a VLAN ID associated with a MAC address.

---

**<macaddr>** - Specifies the MAC address to be added to the static forwarding table.

---

**port** - Specifies the port number corresponding to the MAC destination address. The Switch will always forward traffic to the specified device through this port.

**<port>** - Enter the port number corresponding to the MAC destination address here.

---

**drop** - Specifies the action drop to be taken.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To create a unicast MAC forwarding entry:

```
DGS-1510-28XMP/ME:admin# create fdb vlanid 1 00-00-00-00-02-02 port 5
Command: create fdb vlanid 1 00-00-00-00-02-02 port 5

Success.

DGS-1510-28XMP/ME:admin#
```

To filter a unicast MAC:

```
DGS-1510-28XMP/ME:admin# create fdb vlanid 1 00-00-00-00-02-02 drop
Command: create fdb vlanid 1 00-00-00-00-02-02 drop

Success.

DGS-1510-28XMP/ME:admin#
```

## 28-3 create multicast\_fdb

### Description

This command is used to create a static entry in the multicast MAC address forwarding table (database).

### Format

**create multicast\_fdb <vlan\_name 32> <macaddr>**

### Parameters

---

**<vlan\_name 32>** - Enter the name of the VLAN on which the MAC address resides. The maximum name length is 32.

---

**<macaddr>** - Enter the multicasts MAC address to be added to the static forwarding table.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To create a multicast MAC forwarding entry to the default VLAN:

```
DGS-1510-28XMP/ME:admin# create multicast_fdb default 01-00-5E-00-00-00
Command: create multicast_fdb default 01-00-5E-00-00-00

Success.

DGS-1510-28XMP/ME:admin#
```

## 28-4 config multicast\_fdb

### Description

This command is used to configure the Switch's multicast MAC address forwarding database.

### Format

**config multicast\_fdb <vlan\_name 32> <macaddr> [add | delete] <portlist>**

### Parameters

---

**<vlan\_name 32>** - Enter the name of the VLAN on which the MAC address resides. The maximum name length is 32.

---

---

**<macaddr>** - Enter the MAC address that will be added or deleted to the forwarding table.

---

**add** - Specifies to add ports to the multicast forwarding table.

---

**delete** - Specifies to remove ports from the multicast forwarding table.

---

**<portlist>** - Enter a range of ports to be configured.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To add a multicast MAC forwarding entry to the default VLAN on port 1 to 5:

```
DGS-1510-28XMP/ME:admin# config multicast_fdb default 01-00-5E-00-00-00 add 1-5
Command: config multicast_fdb default 01-00-5E-00-00-00 add 1-5

Success.

DGS-1510-28XMP/ME:admin#
```

## 28-5 config fdb aging\_time

### Description

This command is used to configure the MAC address table aging time. The aging time affects the learning process of the Switch. Dynamic forwarding table entries, which are made up of the source MAC addresses and their associated port numbers, are deleted from the table if they are not accessed within the aging time. A very long aging time can result in dynamic forwarding table entries that are out-of-date or no longer exist. This may cause incorrect packet forwarding decisions by the Switch. If the aging time is too short, however, many entries may be aged out too soon. This will result in a high percentage of received packets whose source addresses cannot be found in the forwarding table, in which case the Switch will broadcast the packet to all ports, negating many of the benefits of having a switch.

### Format

**config fdb aging\_time <sec 10-1000000>**

### Parameters

---

**<sec 10-1000000>** - Enter the FDB age out time between 10 to 1000000 seconds. The default value is 300 seconds.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To configure the MAC address table aging time to 600 seconds:

```
DGS-1510-28XMP/ME:admin# config fdb aging_time 600
Command: config fdb aging_time 600

Success.

DGS-1510-28XMP/ME:admin#
```

## 28-6 config multicast vlan\_filtering\_mode

### Description

This command is used to configure the multicast packet filtering mode for VLANs.

The registered group will be forwarded to the range of ports in the multicast forwarding database.

### Format

**config multicast vlan\_filtering\_mode [vlanid <vidlist> | vlan <vlan\_name 32> | all] [forward\_all\_groups | forward\_unregistered\_groups | filter\_unregistered\_groups]**

### Parameters

**vlanid** - Specifies a list of VLANs to be configured.

**<vidlist>** - Enter the VLAN ID list here.

**vlan** - Specifies the name of the VLAN. The maximum name length is 32.

**<vlan\_name 32>** - Enter the VLAN name can be up to 32 characters long.

**all** - Specifies all configured VLANs.

**forward\_all\_groups** - Specifies that both the registered group and the unregistered group will be forwarded to all member ports of the specified VLAN where the multicast traffic comes in.

**forward\_unregistered\_groups** - Specifies that the unregistered group will be forwarded to all member ports of the VLAN where the multicast traffic comes in.

**filter\_unregistered\_groups** - Specifies that the unregistered group will be filtered.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To configure the multicast packet filtering mode to filter all unregistered multicast groups for the VLAN 200 to 300:

```
DGS-1510-28XMP/ME:admin# config multicast vlan_filtering_mode vlanid 200-300
filter_unregistered_groups
Command: config multicast vlan_filtering_mode vlanid 200-300 filter_unregistered_groups

Success.

DGS-1510-28XMP/ME:admin#
```

## 28-7 delete fdb

### Description

This command is used to delete a static entry from the forwarding database.

### Format

**delete fdb <vlan\_name 32> <macaddr>**

### Parameters

---

**<vlan\_name 32>** - Enter the name of the VLAN on which the MAC address resides. The maximum name length is 32.

---

**<macaddr>** - Enter the multicast MAC address to be deleted from the static forwarding table.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To delete a static FDB entry:

```
DGS-1510-28XMP/ME:admin# delete fdb default 00-00-00-00-01-02
Command: delete fdb default 00-00-00-00-01-02

Success.

DGS-1510-28XMP/ME:admin#
```

## 28-8 clear fdb

### Description

This command is used to clear the Switch's forwarding database for dynamically learned MAC addresses.

### Format

**clear fdb [vlan <vlan\_name 32> | port <port> | all]**

### Parameters

---

**vlan** - Specifies to clear the FDB entry by specifying the VLAN name.

**<vlan\_name 32>** - Enter the name of the VLAN on which the MAC address resides. The maximum name length is 32.

---

**port** - Specifies to clear the FDB entry by specifying the port number.

**<port>** - Enter the port number corresponding to the MAC destination address. The switch will always forward traffic to the specified device through this port.

---

**all** - Specifies to clear all dynamic entries in the Switch's forwarding database.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To clear all FDB dynamic entries:

```
DGS-1510-28XMP/ME:admin# clear fdb all
Command: clear fdb all

Success.

DGS-1510-28XMP/ME:admin#
```

## 28-9 show multicast\_fdb

### Description

This command is used to display the multicast forwarding database of the Switch.

### Format

**show multicast\_fdb** {[vlan <vlan\_name 32> | vlanid <vidlist>] | mac\_address <macaddr>}

### Parameters

---

**vlan** - (Optional) Specifies the name of the VLAN on which the MAC address resides.

**<vlan\_name 32>** - Enter the VLAN name here. The VLAN name can be up to 32 characters long.

---

**vlanid** - (Optional) Specifies to display the entries for the VLANs indicated by VID list.

**<vidlist>** - Enter the VLAN ID list here.

---

**mac\_address** - (Optional) Specifies a MAC address, for which FDB entries will be displayed.

**<macaddr>** - Enter the MAC address here.

---

If no parameter is specified, all multicast FDB entries will be displayed.

---

### Restrictions

None.

### Example

To display the multicast MAC address table:



```

DGS-1510-28XMP/ME:admin# show multicast_fdb
Command: show multicast_fdb

VLAN Name       : default
MAC Address     : 01-00-5E-00-00-00
Egress Ports    : 1-5
Mode            : Static

Total Entries: 1

DGS-1510-28XMP/ME:admin#

```

## 28-10 show fdb

### Description

This command is used to display the current unicast MAC address forwarding database.

### Format

```
show fdb {port <port> | [vlan <vlan_name 32> | vlanid <vidlist>] | mac_address <macaddr> | static |
aging_time | security}
```

### Parameters

---

**port** - (Optional) Specifies to display the entries for a specified port.

**<port>** - Enter the port number here.

---

**vlan** - (Optional) Specifies to display the entries for a specific VLAN. The maximum name length is 32.

**<vlan\_name 32>** - Enter the VLAN name here. The VLAN name can be up to 32 characters long.

---

**vlanid** - (Optional) Specifies to display the entries for the VLANs indicated by VID list.

**<vidlist>** - Enter the VLAN ID list here.

---

**mac\_address** - (Optional) Specifies to display a specific MAC address.

**<macaddr>** - Enter the MAC address here.

---

**static** - (Optional) Specifies to display all permanent entries.

---

**aging\_time** - (Optional) Specifies to display the unicast MAC address aging time.

---

**security** - (Optional) Specifies to display the FDB entries that are created by the security module.

---

If no parameter is specified, system will display the unicast address table.

---

### Restrictions

None.

### Example

To display the FDB table:

```
DGS-1510-28XMP/ME:admin# show fdb
```

```
Command: show fdb
```

```
Unicast MAC Address Aging Time = 300
```

VID	VLAN Name	MAC Address	Port	Type	Status
1	default	00-01-02-03-04-00	CPU	Self	Forward
1	default	00-23-7D-BC-08-44	1	Dynamic	Forward
1	default	00-23-7D-BC-2E-18	1	Dynamic	Forward
1	default	00-26-5A-AE-CA-1C	1	Dynamic	Forward
1	default	60-33-4B-C4-52-1A	1	Dynamic	Forward

```
Total Entries: 5
```

```
DGS-1510-28XMP/ME:admin#
```

To display the security FDB table:

```
DGS-1510-28XMP/ME:admin# show fdb security
```

```
Command: show fdb security
```

VID	MAC Address	Port	Type	Status	Security Module
1	00-00-00-10-00-01	1	Dynamic	Drop	802.1X
1	00-00-00-10-00-02	2	Static	Forward	WAC
1	00-00-00-10-00-04	4	Static	Forward	Port Security
1	00-00-00-10-00-0A	5	Static	Forward	MAC-based Access Control
1	00-00-00-10-00-06	6	Dynamic	Drop	Compound Authentication

```
Total Entries: 5
```

```
DGS-1510-28XMP/ME:admin#
```

## 28-11 show multicast vlan\_filtering\_mode

### Description

This command is used to show the multicast packet filtering mode for VLANs.



**NOTE:** A product supports the multicast VLAN filtering mode could not support the port filtering mode at the same time.

### Format

```
show multicast vlan_filtering_mode {[vlanid < vidlist> | vlan <vlan_name 32>]}
```

### Parameters

**vlanid** - (Optional) Specifies a list of VLANs to be configured.

---

**<vidlist>** - Enter the VLAN ID list here.

---

**vlan** - (Optional) Specifies the name of the VLAN. The maximum name length is 32.

**<vlan\_name 32>** - Enter the VLAN name here. The VLAN name can be up to 32 characters long.

---

If no parameter is specified, the device will show all multicast filtering settings in the device.

---

## Restrictions

None.

## Example

To show the multicast `vlan_filtering_mode` for VLANs:

```
DGS-1510-28XMP/ME:admin# show multicast vlan_filtering_mode
Command: show multicast vlan_filtering_mode

VLAN ID/VLAN Name                Multicast Filter Mode
-----
1 /default                        forward_unregistered_groups

DGS-1510-28XMP/ME:admin#
```

## Chapter 29 Flash File System (FFS) Command List

---

### show storage\_media\_info

---

**md** {<drive\_id>} <pathname>

---

**rd** {<drive\_id>} <pathname>

---

**cd** {<pathname>}

---

**dir** {<drive\_id>} {<pathname>}

---

**rename** {<drive\_id>} <pathname> <filename>

---

**del** {<drive\_id>} <pathname> {recursive}

---

**erase** {<drive\_id>} <pathname>

---

**move** {<drive\_id>} <pathname> {<drive\_id>} <pathname>

---

**copy** {<drive\_id>} <pathname> {<drive\_id>} <pathname>

---

### 29-1 show storage\_media\_info

#### Description

This command is used to display the information of the storage media available on the system. The information for a media includes the drive number, the media identification.

#### Format

**show storage\_media\_info**

#### Parameters

None.

#### Restrictions

None.

#### Example

To display the storage media's information:

```
DGS-1510-28XMP/ME:admin# show storage_media_info
Command: show storage_media_info

Drive  Media Type      Size  Label      FS Type
-----  -----
c:/    Flash            28 MB             FFS

DGS-1510-28XMP/ME:admin#
```

## 29-2 md

**Description**

This command is used to create a directory.

**Format**

**md** {<drive\_id>} <pathname>

**Parameters**

---

**<drive\_id>** - (Optional) Enter the drive ID used, for example, C:.

---

**<pathname>** - Enter the directory to be removed. The path name can be specified either as a full path name or partial name. For partial path name, it indicates the file is in the current directory. The drive ID also included in this parameter, for example, c:/config/bootup.cfg.

---

**Restrictions**

Only Administrators and Operators can issue this command.

**Example**

To make a directory:

```
DGS-1510-28XMP/ME:admin# md c:/abc
Command: md c:/abc

Success.

DGS-1510-28XMP/ME:admin#
```

## 29-3 rd

**Description**

This command is used to remove a directory. If there are files still existing in the directory, this command will fail and return error message.

**Format**

**rd** {<drive\_id>} <pathname>

**Parameters**

---

**<drive\_id>** - (Optional) Enter the drive ID used, for example, C:.

---

**<pathname>** - Enter the directory to be removed. The path name can be specified either as a full path name or partial name. For partial path name, it indicates the file is in the current directory.

---

**Restrictions**

Only Administrators and Operators can issue this command.

## Example

To remove a directory:

```
DGS-1510-28XMP/ME:admin# rd c:/abc
Command: rd c:/abc

Success.

DGS-1510-28XMP/ME:admin#
```

## 29-4 cd

### Description

This command is used to change the current directory. The current directory is changed under the current drive. If you want to change the working directory to the directory in another drive, then you need to change the current drive to the desired drive, and then change the current directory. The current drive and current directory will be displayed if the <pathname> is not specified.

### Format

**cd** {<pathname>}

### Parameters

---

**<pathname>** - (Optional) Specifies the directory to be removed. The path name can be specified either as a full path name or partial name. For partial path name, it indicates the file is in the current directory.

---

### Restrictions

None.

## Example

To change to other directory or display current directory path:

```
DGS-1510-28XMP/ME:admin# cd
Command: cd

Current work directory: "/c:".

DGS-1510-28XMP/ME:admin#
```

## 29-5 dir

### Description

This command is used to list all the files located in a directory of a drive.

If pathname is not specified, then all of the files in the specified drive will be displayed. If none of the parameters are specified, the files in the current drive will be displayed.

**Format****dir** {<drive\_id>} {<pathname>}**Parameters****<drive\_id>** - (Optional) Enter the drive ID used, for example, C:.**<pathname>** - (Optional) Enter the directory to be removed. The path name can be specified either as a full path name or partial name. For partial path name, it indicates the file is in the current directory.**Restrictions**

None.

**Example**

List the files:

```
DGS-1510-28XMP/ME:admin# dir
Command: dir

Directory of /c:

Idx Info      Attr Size      Update Time      Name
----
  1 RUN(*)    -rw- 5491536  2000/01/01 00:41:03  DES3200_RUNTIME_V4.00.014.had
  2 CFG(*)    -rw-  31142   2000/01/01 02:19:40  config.cfg
  3          d---          2000/01/01 00:00:16  system

29618 KB total (24127 KB free)
(*) -with boot up info      (b) -with backup info

DGS-1510-28XMP/ME:admin#
```

**29-6 rename****Description**

This command is used to rename a file. Note that for standalone device, the unit argument is not needed. This command is used to rename a file in the file system. The pathname specifies the file (in path form) to be renamed and the filename specifies the new filename. If the pathname is not a full path, then it refers to a path under the current directory for the drive. The renamed file will stay in the same directory.

**Format****rename** {<drive\_id>} <pathname> <filename>**Parameters****<drive\_id>** - (Optional) Enter the drive ID used, for example, C:.**<pathname>** - Enter the file (in path form) to be renamed.**<filename>** - Enter the new name of the file.

## Restrictions

Only Administrators and Operators can issue this command.

## Example

To rename a file:

```
DGS-1510-28XMP/ME:admin# rename run.had run1.had
Command: rename run.had run1.had

Success.

DGS-1510-28XMP/ME:admin#
```

## 29-7 del

### Description

This command is used to delete a file, either physically or softly. It is also used to delete a directory and its contents. If two files with the same name under the same directory are softly deleted sequentially, only the last one will exist. Deleting, copying, renaming or moving the already softly deleted file is not acceptable.

System will prompt if the target file is a FW or configuration whose type is bootup.

### Format

**del {<drive\_id>} <pathname> {recursive}**

### Parameters

---

**<drive\_id>** - (Optional) Enter the drive ID used, for example, C:.

---

**<pathname>**- Enter the file or directory to be deleted. If it is specified in the associated form, then it is related to the current directory.

---

**recursive** - (Optional) Specifies to delete a directory and its contents even if the directory is not empty.

---

### Restrictions

Only Administrators and Operators can issue this command.

### Example

Delete a directory with parameter "recursive":



```

DGS-1510-28XMP/ME:admin# dir
Command: dir

Directory of / c:

Idx Info      Attr Size      Update Time      Name
-----
  1          drw-  0          2000/04/02 06:02:04 12
  2 CFG(*)    -rw- 29661      2000/04/01 05:54:38 config.cfg
  3 RUN(*)    -rw- 4879040    2000/03/26 03:15:11 B019.had
  4          d---  0          2000/04/01 05:17:36 system

29618 KB total (24727 KB free)
(*) -with boot up info          (b) -with backup info

DGS-1510-28XMP/ME:admin# del 12 recursive
Command: del 12 recursive

Success.

DGS-1510-28XMP/ME:admin# dir
Command: dir

Directory of / c:

Idx Info      Attr Size      Update Time      Name
-----
  1 CFG(*)    -rw- 29661      2000/04/01 05:54:38 config.cfg
  2 RUN(*)    -rw- 4879040    2000/03/26 03:15:11 B019.had
  3          d---  0          2000/04/01 05:17:36 system

29618 KB total (24727 KB free)
(*) -with boot up info          (b) -with backup info

DGS-1510-28XMP/ME:admin#

```

## 29-8 erase

### Description

This command is used to delete a file stored in the file system.

System will prompt if the target file is a FW or configuration whose type is boot up.

### Format

**erase** {<drive\_id>} <pathname>

### Parameters

---

**<drive\_id>** - (Optional) Enter the drive ID used, for example, C:.

---

**<pathname>** - Enter the file to be deleted. If it is specified in the associated form, then it is related to the current directory.

---

## Restrictions

Only Administrators and Operators can issue this command.

## Example

To erase a file:

```
DGS-1510-28XMP/ME:admin# dir
Command: dir

Directory of /c:

Idx Info      Attr Size      Update Time      Name
-----
  1 CFG(b)  -rw- 29661      2000/04/02 06:03:19 config2.cfg
  2 CFG(*)  -rw- 29661      2000/04/01 05:54:38 config.cfg
  3 RUN(*)  -rw- 4879040    2000/03/26 03:15:11 B019.had
  4         d--- 0          2000/04/01 05:17:36 system

29618 KB total (24697 KB free)
(*) -with boot up info          (b) -with backup info

DGS-1510-28XMP/ME:admin# erase config2.cfg
Command: erase config2.cfg

Success.

DGS-1510-28XMP/ME:admin# dir
Command: dir

Directory of /c:

Idx Info      Attr Size      Update Time      Name
-----
  1 CFG(*)  -rw- 29661      2000/04/01 05:54:38 config.cfg
  2 RUN(*)  -rw- 4879040    2000/03/26 03:15:11 B019.had
  3         d--- 0          2000/04/01 05:17:36 system

29618 KB total (24727 KB free)
(*) -with boot up info          (b) -with backup info

DGS-1510-28XMP/ME:admin#
```

## 29-9 move

### Description

This command is used to move a file around the file system. Note that when a file is moved, it can be specified whether to rename at the same time.

### Format

```
move {<drive_id>} <pathname> {<drive_id>} <pathname>
```

**Parameters**


---

**<drive\_id>** - (Optional) Enter the drive ID, for example, C:.

**<pathname>** - Enter the file to be moved. The path name can be specified either as a full path name or partial name. Specifies either as a full path name or partial name. For partial path name, it indicates the file is in the current directory.

---

**<drive\_id>** - (Optional) Enter the drive ID, for example, C:.

**<pathname>** - Enter the new path where the file will be moved. The path name can be. For partial path name, it indicates the file is in the current directory.

---

**Restrictions**

Only Administrators and Operators can issue this command.

**Example**

To move a file from one location to another location:

```
DGS-1510-28XMP/ME:admin# move c:/log.txt c:/log1.txt
Command: move c:/log.txt c:/log1.txt

Success.

DGS-1510-28XMP/ME:admin#
```

## 29-10 copy

**Description**

This command is used to copy a file to another file in the file system.

**Format**

copy {<drive\_id>} <pathname> {<drive\_id>} <pathname>

**Parameters**


---

**<drive\_id>** - (Optional) Enter the drive ID, for example, C:.

**<pathname>** - Enter the file to be copied. The path name can be specified either as a full path name or partial name. For partial path name, it indicates the file is in the current directory.

---

**<drive\_id>** - (Optional) Enter the drive ID, for example, C:.

**<pathname>** - Enter the file to copy to. The path name can be specified either as a full path name or partial name. For partial path name, it indicates the file is in the current directory.

---

**Restrictions**

Only Administrators and Operators can issue this command.

**Example**

To copy a file:

```
DGS-1510-28XMP/ME:admin# copy c:/log.txt c:/log1.txt
```

```
Command: copy c:/log.txt c:/log1.txt
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```

## Chapter 30 Gratuitous ARP Command List

---

```

config gratuitous_arp send ipif_status_up [enable | disable]
config gratuitous_arp send dup_ip_detected [enable | disable]
config gratuitous_arp learning [enable | disable]
config gratuitous_arp send periodically ipif <ipif_name 12> interval <value 0-65535>
enable gratuitous_arp {ipif <ipif_name 12>} {trap | log}(1)
disable gratuitous_arp {ipif <ipif_name 12>} {trap | log}(1)
show gratuitous_arp {ipif <ipif_name 12>}

```

---

### 30-1 config gratuitous\_arp send ipif\_status\_up

#### Description

The command is used to enable/disable sending of gratuitous ARP request packet while IPIF interface become up. This is used to automatically announce the interface's IP address to other nodes. By default, the state is enabled, and only one gratuitous ARP packet will be broadcast.

#### Format

```
config gratuitous_arp send ipif_status_up [enable | disable]
```

#### Parameters

---

**enable** - Specifies to enable sending of gratuitous ARP when IPIF status become up.

---

**disable** - Specifies to disable sending of gratuitous ARP when IPIF status become up.

---

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

#### Example

To enable send gratuitous ARP request in normal situation:

```

DGS-1510-28XMP/ME:admin# config gratuitous_arp send ipif_status_up enable
Command: config gratuitous_arp send ipif_status_up enable

Success.

DGS-1510-28XMP/ME:admin#

```

### 30-2 config gratuitous\_arp send dup\_ip\_detected

#### Description

The command is used to enable/disable sending of gratuitous ARP request packet while duplicate IP is detected. By default, the state is enabled. For this command, the duplicate IP detected means that the system received an ARP request packet that is sent by an IP address that matches the system's own IP address. In this case, the

system knows that someone out there uses an IP address that is conflict with the system. In order to reclaim the correct host of this IP address, the system can send out the gratuitous ARP request packet for this duplicate IP address.

### Format

**config gratuitous\_arp send dup\_ip\_detected [enable | disable]**

### Parameters

---

**enable** - Specifies to enable sending of gratuitous ARP when duplicate IP is detected.

---

**disable** - Specifies to disable sending of gratuitous ARP when duplicate IP is detected.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To enable send gratuitous ARP request when duplicate IP is detected:

```
DGS-1510-28XMP/ME:admin# config gratuitous_arp send dup_ip_detected enable
Command: config gratuitous_arp send dup_ip_detected enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 30-3 config gratuitous\_arp learning

### Description

This command is used to configure gratuitous ARP learning. Normally, the system will only learn the ARP reply packet or a normal ARP request packet that asks for the MAC address that corresponds to the system's IP address. The command is used to enable/disable learning of ARP entry in ARP cache based on the received gratuitous ARP packet. The gratuitous ARP packet is sent by a source IP address that is identical to the IP that the packet is queries for. Note that, with the gratuitous ARP learning, the system will not learn new entry but only do the update on the ARP table based on the received gratuitous ARP packet. By default, the state is enabled status.

### Format

**config gratuitous\_arp learning [enable | disable]**

### Parameters

---

**enable** - Specifies to enable learning of ARP entry based on the received gratuitous ARP packet.

---

**disable** - Specifies to disable learning of ARP entry based on the received gratuitous ARP packet.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To show the global gratuitous ARP state:

```
DGS-1510-28XMP/ME:admin# config gratuitous_arp learning enable
Command: config gratuitous_arp learning enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 30-4 config gratuitous\_arp send periodically

### Description

The command is used to configure the interval for periodical sending of gratuitous ARP request packet. By default, the interval is 0.

### Format

**config gratuitous\_arp send periodically ipif <ipif\_name 12> interval <value 0-65535>**

### Parameters

**ipif** - Specifies the interface name of L3 interface.

**<ipif\_name 12>** - Enter the IP interface name here. This name can be up to 12 characters long.

**interval** - Specifies to periodically send gratuitous ARP interval time in seconds. 0 means not send gratuitous ARP periodically.

**<value 0-65535>** - Enter the gratuitous ARP interval time here. This value must be between 0 and 65535 seconds.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure gratuitous ARP interval to 5 for IPIF System:

```
DGS-1510-28XMP/ME:admin# config gratuitous_arp send periodically ipif System interval 5
Command: config gratuitous_arp send periodically ipif System interval 5

Success.

DGS-1510-28XMP/ME:admin#
```

## 30-5 enable gratuitous\_arp

### Description

The command is used to enable gratuitous ARP trap and log state. The switch can trap and log the IP conflict event to inform the administrator. By default, trap is disabled and event log is enabled.

## Format

**enable gratuitous\_arp {ipif <ipif\_name 12>} {trap | log}(1)**

## Parameters

---

**ipif** - (Optional) Specifies the interface name of L3 interface

**<ipif\_name 12>** - Enter the IP interface name here. This name can be up to 12 characters long.

---

**trap** - Specifies to enable the trap function.

---

**log** - Specifies to enable the log function.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To enable system interface's gratuitous ARP log and trap:

```
DGS-1510-28XMP/ME:admin# enable gratuitous_arp ipif System trap log
Command: enable gratuitous_arp ipif System trap log
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```

## 30-6 disable gratuitous\_arp

### Description

The command is used to disable gratuitous ARP trap and log state. The switch can trap and log the IP conflict event to inform the administrator. By default, trap is disabled and event log is enabled.

### Format

**disable gratuitous\_arp {ipif <ipif\_name 12>} {trap | log}(1)**

### Parameters

---

**ipif** - (Optional) Specifies the interface name of L3 interface

**<ipif\_name 12>** - Enter the IP interface name here. This name can be up to 12 characters long.

---

**trap** - Specifies to disable the trap function.

---

**log** - Specifies to disable the log function.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To disable system interface's gratuitous ARP log and trap:



```
DGS-1510-28XMP/ME:admin# disable gratuitous_arp ipif System trap log
Command: disable gratuitous_arp ipif System trap log

Success.

DGS-1510-28XMP/ME:admin#
```

## 30-7 show gratuitous\_arp

### Description

This command is used to display gratuitous ARP configuration.

### Format

**show gratuitous\_arp {ipif <ipif\_name 12>}**

### Parameters

---

**ipif** - (Optional) Specifies the interface name of L3 interface.  
**<ipif\_name>** - Enter the IP interface name here.

---

### Restrictions

None.

### Example

To display gratuitous ARP log and trap state:

```
DGS-1510-28XMP/ME:admin# show gratuitous_arp
Command: show gratuitous_arp

Send on IPIF Status Up      : Enabled
Send on Duplicate IP Detected : Enabled
Gratuitous ARP Learning     : Enabled

IP Interface Name : System
    Gratuitous ARP Trap           : Enabled
    Gratuitous ARP Log            : Enabled
    Gratuitous ARP Periodical Send Interval : 5

Total Entries: 1

DGS-1510-28XMP/ME:admin#
```

## Chapter 31 IGMP Snooping Command List

The Internet Group Management Protocol (IGMP) is a L3 protocol used to manage the membership of Internet Protocol multicast groups. IGMP is used by IP hosts and adjacent multicast routers to establish multicast group memberships. IGMP snooping is the process of listening to IGMP network traffic. IGMP snooping, as implied by the name, is a feature that allows a layer 2 switch to "listen in" on the IGMP conversation between hosts and routers by processing the layer 3 IGMP packets sent in a multicast network.

When IGMP snooping is enabled in a switch it analyzes all IGMP packets between hosts connected to the Switch and multicast routers in the network. When a switch hears an IGMP report from a host for a given multicast group, the Switch adds the host's port number to the multicast list for that group. And, when the Switch hears an IGMP Leave, it removes the host's port from the table entry.

---

<b>config igmp_snooping</b> [vlan_name <vlan_name 32>   vlanid <vlanid_list>   all] {state [enable   disable]   fast_leave [enable   disable]   report_suppression [enable   disable]}(1)
<b>config igmp_snooping rate_limit</b> [ports <portlist>   vlanid <vlanid_list>] [<value 1-1000>   no_limit]
<b>config igmp_snooping querier</b> [vlan_name <vlan_name 32>   vlanid <vlanid_list>   all] {query_interval <sec 1-65535>   max_response_time <sec 1-25>   robustness_variable <value 1-7>   last_member_query_interval <sec 1-25>   state [enable   disable]   version <value 1-3>}(1)
<b>config igmp_access_authentication ports</b> [all   <portlist>] state [enable   disable]
<b>config router_ports</b> [<vlan_name 32>   vlanid <vlanid_list> ] [add   delete] <portlist>
<b>config router_ports_forbidden</b> [ <vlan_name 32>   vlanid <vlanid_list> ] [add   delete] <portlist>
<b>enable igmp_snooping</b>
<b>disable igmp_snooping</b>
<b>create igmp_snooping static_group</b> [vlan <vlan_name 32>   vlanid <vlanid_list>] <ipaddr>
<b>delete igmp_snooping static_group</b> [vlan <vlan_name 32>   vlanid <vlanid_list>] <ipaddr>
<b>config igmp_snooping static_group</b> [vlan <vlan_name 32>   vlanid <vlanid_list>] <ipaddr> [add   delete] <portlist>
<b>show igmp_snooping static_group</b> {[vlan <vlan_name 32>   vlanid <vlanid_list>] <ipaddr>}
<b>config igmp_snooping data_driven_learning</b> [all   vlan_name <vlan_name>   vlanid <vlanid_list>] {state [enable   disable]   aged_out [enable   disable]   expiry_time <sec 1-65535>}
<b>config igmp_snooping data_driven_learning max_learned_entry</b> <value 1-1024>
<b>clear igmp_snooping data_driven_group</b> [all   [vlan_name <vlan_name>   vlanid <vlanid_list>] [<ipaddr>   all]]
<b>show igmp_snooping</b> {[vlan <vlan_name 32>   vlanid <vlanid_list>]}
<b>show igmp_snooping rate_limit</b> [ports <portlist>   vlanid <vlanid_list>]
<b>show igmp_snooping group</b> {[vlan <vlan_name 32>   vlanid <vlanid_list>   ports <portlist>] {<ipaddr>}} {data_driven}
<b>show igmp_snooping forwarding</b> {[vlan <vlan_name 32>   vlanid <vlanid_list>]}
<b>show router_ports</b> [vlan <vlan_name 32>   vlanid <vlanid_list>   all ] {[static   dynamic   forbidden]}
<b>show igmp_snooping statistic counter</b> [vlan <vlan_name>   vlanid <vlanid_list>   ports <portlist>]
<b>show igmp_access_authentication ports</b> [all   <portlist>]
<b>show igmp_snooping host</b> {[vlan <vlan_name 32>   vlanid <vlanid_list>   ports <portlist>   group <ipaddr>]}
<b>clear igmp_snooping statistics counter</b>

---

## 31-1 config igmp\_snooping

**Description**

This command is used to configure IGMP snooping on the Switch.

**Format**

**config igmp\_snooping [vlan\_name <vlan\_name 32> | vlanid <vlanid\_list> | all] {state [enable | disable] | fast\_leave [enable | disable] | report\_suppression [enable | disable]}(1)**

**Parameters**


---

<b>vlan_name</b> - Specifies the name of the VLAN for which IGMP snooping is to be configured. <b>&lt;vlan_name 32&gt;</b> - Enter the VLAN name here. The VLAN name can be up to 32 characters long.
<b>vlanid</b> - Specifies the VLAN ID for which IGMP snooping is to be configured. <b>&lt;vlanid_list&gt;</b> - Enter the VLAN ID here.
<b>all</b> - Specifies to use all configured VLANs.
<b>state</b> - Specifies to enable or disable IGMP snooping for the chosen VLAN. <b>enable</b> - Specifies to enable IGMP snooping for the chosen VLAN. <b>disable</b> - Specifies to disable IGMP snooping for the chosen VLAN.
<b>fast_leave</b> - Specifies to enable or disable the IGMP snooping fast leave function. <b>enable</b> - Specifies to enable the IGMP snooping fast leave function. If enabled, the membership is immediately removed when the system receives the IGMP leave message. <b>disable</b> - Specifies to disable the IGMP snooping fast leave function.
<b>report_suppression</b> - Specifies IGMP report suppression. When enabled, multiple IGMP reports or leave for a specific (S, G) will be integrated into one report only before sending to the router port. <b>enable</b> - Specifies to enable the IGMP report suppression. <b>disable</b> - Specifies to disable the IGMP report suppression.

---

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To configure IGMP snooping:

```
DGS-1510-28XMP/ME:admin# config igmp_snooping vlan_name default state enable
Command: config igmp_snooping vlan_name default state enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 31-2 config igmp\_snooping rate\_limit

**Description**

This command is used to configure the rate of IGMP control packet that is allowed per port or per VLAN.

## Format

```
config igmp_snooping rate_limit [ports <portlist> | vlanid <vlanid_list>] [<value 1-1000> | no_limit]
```

## Parameters

**ports** - Specifies a range of ports to be configured.

**<portlist>** - Enter the range of ports to be configured here.

**vlanid** - Specifies a range of VLANs to be configured.

**<vlanid\_list>** - Enter the VLAN ID list here.

**<value 1-1000>** - Enter the rate of the IGMP control packet that the Switch can process on a specific port/VLAN. The rate is specified in packets per second. The packets that exceed the limit will be dropped.

**no\_limit** - Specifies the rate of the IGMP control packet to be unlimited that the Switch can process on a specific port/VLAN. The rate is specified in packets per second. The packets that exceed the limit will be dropped. The default setting is no\_limit.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure the IGMP snooping per port rate\_limit:

```
DGS-1510-28XMP/ME:admin# config igmp_snooping rate_limit ports 1 100
Command: config igmp_snooping rate_limit ports 1 100

Success.

DGS-1510-28XMP/ME:admin#
```

## 31-3 config igmp\_snooping querier

### Description

This command is used to configure the time in seconds between general query transmissions, the maximum time in seconds to wait for reports from members, and the permitted packet loss that guarantees IGMP snooping.

### Format

```
config igmp_snooping querier [vlan_name <vlan_name 32> | vlanid <vlanid_list> | all] {query_interval <sec 1-65535> | max_response_time <sec 1-25> | robustness_variable <value 1-7> | last_member_query_interval <sec 1-25> | state [enable | disable] | version <value 1-3>}(1)
```

### Parameters

**vlan\_name** - Specifies the name of the VLAN for which IGMP snooping querier is to be configured.

**<vlan\_name 32>** - Enter the VLAN name here. The VLAN name can be up to 32 characters long.

**vlanid** - Specifies the VLAN ID for which IGMP snooping querier is to be configured.

**<vlanid\_list>** - Enter the VLAN ID list here.

**all** - Specifies all VLANs for which IGMP snooping querier is to be configured.

**query\_interval** - Specifies the amount of time in seconds between general query transmissions. The default

---

setting is 125 seconds.

**<sec 1-65535>** - Enter the query interval value here. This value must be between 1 and 65535 seconds.

**max\_reponse\_time** - Specifies the maximum time in seconds to wait for reports from members. The default setting is 10 seconds.

**<sec 1-25>** - Enter the maximum response time value here. This value must be between 1 and 25 seconds.

**robustness\_variable** - Specifies to provide fine-tuning to allow for expected packet loss on a subnet. The value of the robustness variable is used in calculating the following IGMP message intervals:

**<value 1-7>** - Enter the robustness variable value here. This value must be between 1 and 7. By default, the robustness variable is set to 2. You might want to increase this value if you expect a subnet to be more loose.

- Group member interval—Amount of time that must pass before a multicast router decides there are no more members of a group on a network. This interval is calculated as follows: (robustness variable x query interval) + (1 x query response interval).
- Other querier present interval—Amount of time that must pass before a multicast router decides that there is no longer another multicast router that is the querier. This interval is calculated as follows: (robustness variable x query interval) + (0.5 x query response interval).
- Last member query count—Number of group-specific queries sent before the router assumes there are no local members of a group. The default number is the value of the robustness variable.

**last\_member\_query\_interval** - Specifies the maximum amount of time between group-specific query messages, including those sent in response to leave-group messages. You might lower this interval to reduce the amount of time it takes a router to detect the loss of the last member of a group. On receiving a leave message, the router will assume there are no local members on the interface if there are no reports received after the response time (which is last member query interval \* robustness variable)

**<sec 1-25>** - Enter the last member query interval value here. This value must be between 1 and 25 seconds.

**state** - If the state is enabled, it allows the Switch to be selected as an IGMP querier (sends IGMP query packets). If the state is disabled, then the Switch cannot play the role as a querier. Note that if the Layer 3 router connected to the Switch provide only the IGMP proxy function but does not provide the multicast routing function, then this state must be configured as disabled. Otherwise, if the Layer 3 router is not selected as the querier, it will not send the IGMP query packet. Since it will not send the multicast-routing protocol packet, the port will be timed out as a router port.

**enable** - Specifies to enable this state.

**disable** - Specifies to disable this state.

**version** - Specifies the version of IGMP packet that will be sent by this device. If an IGMP packet received by the interface has a version higher than the specified version, this packet will be dropped.

**<value 1-3>** - Enter the version number here. This value must be between 1 and 3.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure the IGMP snooping querier:

```
DGS-1510-28XMP/ME:admin# config igmp_snooping querier vlan_name default query_interval 125
state enable
Command: config igmp_snooping querier vlan_name default query_interval 125 state enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 31-4 config igmp access\_authentication ports

**Description**

This command is used to enable or disable the IGMP Access Control function for the specified ports. If the IGMP Access Control function is enabled and the Switch receives an IGMP JOIN message, the Switch will send the access request to the RADIUS server for authentication.

**Format**

**config igmp access\_authentication ports [all | <portlist>] state [enable | disable]**

**Parameters**


---

**all** - Specifies all ports to be configured.

---

**<portlist>** - Specifies a range of ports to be configured.

---

**state** - Specifies the state of the RADIUS authentication function on the specified ports.

**enable** - Specifies to enable the RADIUS authentication function on the specified ports.

**disable** - Specifies to disable the RADIUS authentication function on the specified ports.

---

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To enable IGMP Access Control for all ports:

```
DGS-1510-28XMP/ME:admin#config igmp access_authentication ports all state enable

Command: config igmp access_authentication ports all state enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 31-5 config router\_ports

**Description**

This command is used to designate a range of ports as being connected to multicast-enabled routers. This will ensure that all packets with such a router as its destination will reach the multicast-enabled router, regardless of protocol, etc.

**Format**

**config router\_ports [<vlan\_name 32> | vlanid <vlanid\_list> ] [add | delete] <portlist>**

**Parameters**


---

**<vlan\_name 32>** - Specifies the name of the VLAN on which the router port resides.

---

**vlanid** - Specifies the ID of the VLAN on which the router port resides.

---

---

**<vlanid\_list>** - Enter the VLAN ID here.

---

**add** - Specifies to add the router ports.

---

**delete** - Specifies to delete the router ports.

---

**<portlist>** - Specifies a range of ports to be configured.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To set up static router ports:

```
DGS-1510-28XMP/ME:admin#config router_ports default add 1-10
Command: config router_ports default add 1-10

Success.

DGS-1510-28XMP/ME:admin#
```

## 31-6 config router\_ports\_forbidden

### Description

This command is used to designate a range of ports as being not connected to multicast-enabled routers. This ensures that the forbidden router port will not propagate routing packets out.

### Format

**config router\_ports\_forbidden [ <vlan\_name 32> | vlanid <vlanid\_list> ] [add | delete] <portlist>**

### Parameters

---

**<vlan\_name 32>** - Specifies the name of the VLAN on which the router port resides.

---

**vlanid** - Specifies the ID of the VLAN on which the router port resides.

**<vlanid\_list>** - Enter the VLAN ID list here.

---

**add** - Specifies to add the router ports.

---

**delete** - Specifies to delete the router ports.

---

**<portlist>** - Specifies a range of ports to be configured.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To set up port range 1-10 to forbidden router ports of default VLAN:

```
DGS-1510-28XMP/ME:admin#config router_ports_forbidden default add 11-12
Command: config router_ports_forbidden default add 11-12

Success.

DGS-1510-28XMP/ME:admin#
```

## 31-7 enable igmp\_snooping

### Description

This command is used to enable IGMP snooping on the Switch.

### Format

**enable igmp\_snooping**

### Parameters

None.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To enable IGMP snooping on the Switch:

```
DGS-1510-28XMP/ME:admin# enable igmp_snooping
Command: enable igmp_snooping

Success.

DGS-1510-28XMP/ME:admin#
```

## 31-8 disable igmp\_snooping

### Description

This command is used to disable IGMP snooping on the Switch. Disabling IGMP snooping allows all IGMP and IP multicast traffic to flood within a given IP interface.

### Format

**disable igmp\_snooping**

### Parameters

None.



## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To disable IGMP snooping on the Switch:

```
DGS-1510-28XMP/ME:admin# disable igmp_snooping
Command: disable igmp_snooping

Success.

DGS-1510-28XMP/ME:admin#
```

## 31-9 create igmp\_snooping static\_group

### Description

This command is used to create an IGMP snooping static group. Member ports can be added to the static group. The static member and the dynamic member port form the member ports of a group.

The static group will only take effect when IGMP snooping is enabled on the VLAN. For those static member ports, the device needs to emulate the IGMP protocol operation to the querier, and forward the traffic destined to the multicast group to the member ports.

For a layer 3 device, the device is also responsible to route the packet destined for this specific group to static member ports.

The static member port will only affect V2 IGMP operation.

The Reserved IP multicast address 224.0.0.X must be excluded from the configured group.

The VLAN must be created first before a static group can be created.

### Format

```
create igmp_snooping static_group [vlan <vlan_name 32> | vlanid <vlanid_list>] <ipaddr>
```

### Parameters

---

**vlan** - Specifies the name of the VLAN on which the router port resides.

**<vlan\_name 32>** - Enter the VLAN name here. The VLAN name can be up to 32 characters long.

---

**vlanid** - Specifies the ID of the VLAN on which the router port resides.

**<vlanid\_list>** - Enter the VLAN ID here.

---

**<ipaddr>** - Enter the multicast group IP address.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To create an IGMP snooping static group for VLAN 1, group 239.1.1.1:

```
DGS-1510-28XMP/ME:admin#create igmp_snooping static_group vlan default 239.1.1.1

Command: create igmp_snooping static_group vlan default 239.1.1.1

Success.

DGS-1510-28XMP/ME:admin#
```

## 31-10 delete igmp\_snooping static\_group

### Description

This command is used to delete an IGMP snooping multicast static group. The deletion of an IGMP snooping static group will not affect the IGMP snooping dynamic member ports for a group.

### Format

```
delete igmp_snooping static_group [vlan <vlan_name 32> | vlanid <vlanid_list>] <ipaddr>
```

### Parameters

---

**vlan** - Specifies the name of the VLAN on which the router port resides.

**<vlan\_name 32>** - Enter the VLAN name here. The VLAN name can be up to 32 characters long.

---

**vlanid** - Specifies the ID of the VLAN on which the router port resides.

**<vlanid\_list>** - Enter the VLAN ID list here.

---

**<ipaddr>** - Enter the multicast group IP address.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To delete an IGMP snooping static group for VLAN 1, group 239.1.1.1:

```
DGS-1510-28XMP/ME:admin#delete igmp_snooping static_group vlan default 239.1.1.1

Command: delete igmp_snooping static_group vlan default 239.1.1.1

Success.

DGS-1510-28XMP/ME:admin#
```

## 31-11 config igmp\_snooping static\_group

### Description

This command is used to configure IGMP snooping static group. When a port is configured as a static member port, the IGMP protocol will not operate on this port. For example, suppose that a port is a dynamic member port learned by IGMP. If this port is configured as a static member later, then the IGMP protocol will stop operating on this port. The IGMP protocol will resume once this port is removed from static member ports.

The static member port will only affect V2 IGMP operation.

## Format

**config igmp\_snooping static\_group** [vlan <vlan\_name 32> | vlanid <vlanid\_list>] <ipaddr> [add | delete] <portlist>

## Parameters

**vlan** - Specifies the name of the VLAN on which the static group resides.

**<vlan\_name 32>** - Enter the VLAN name here. The VLAN name can be up to 32 characters long.

**vlanid** - Specifies the ID of the VLAN on which the static group resides.

**<vlanid\_list>** - Enter the VLAN ID here.

**<ipaddr>** - Enter the multicast group IP address (for Layer 3 switch).

**add** - Specifies to add the member ports.

**delete** - Specifies to delete the member ports.

**<portlist>** - Enter a range of ports to be configured.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To unset port range 9-10 from IGMP snooping static member ports for group 239.1.1.1 on default VLAN:

```
DGS-1510-28XMP/ME:admin#config igmp_snooping static_group vlan default 239.1.1.1 delete 9-10
Command: config igmp_snooping static_group vlan default 239.1.1.1 delete 9-10

Success.

DGS-1510-28XMP/ME:admin#
```

## 31-12 show igmp\_snooping static\_group

### Description

This command is used to display the IGMP snooping multicast group static members.

### Format

**show igmp\_snooping static\_group** {[vlan <vlan\_name 32> | vlanid <vlanid\_list>] <ipaddr>}

### Parameters

**vlan** - (Optional) Specifies the name of the VLAN on which the static group resides.

**<vlan\_name 32>** - Enter the VLAN name here. The VLAN name can be up to 32 characters long.

**vlanid** - (Optional) Specifies the ID of the VLAN on which the static group resides.

**<vlanid\_list>** - Enter the VLAN ID here.

**<ipaddr>** - (Optional) Enter the multicast group IP address.

## Restrictions

None.

## Example

To display all the IGMP snooping static groups:

```
DGS-1510-28XMP/ME:admin#show igmp_snooping static_group
Command: show igmp_snooping static_group

VLAN ID/Name                IP Address                Static Member Ports
-----
1    /default                239.1.1.1                9-10

Total Entries : 1

DGS-1510-28XMP/ME:admin#
```

## 31-13 config igmp\_snooping data\_driven\_learning

### Description

This command is used to enable or disable the data driven learning of an IGMP snooping group.

When data-driven learning is enabled for the VLAN, when the Switch receives the IP multicast traffic on this VLAN, an IGMP snooping group will be created. That is, the learning of an entry is not activated by IGMP membership registration, but activated by the traffic. For an ordinary IGMP snooping entry, the IGMP protocol will take care of the aging out of the entry. For a data-driven entry, the entry can be specified not to be aged out or to be aged out by the aged timer.

When data driven learning is enabled, and the data driven table is not full, the multicast filtering mode for all ports is ignored. That is, the multicast packets will be forwarded to router ports. If the data driven learning table is full, the multicast packets will be forwarded according to the multicast filtering mode.

Note that if a data-driven group is created and IGMP member ports are learned later, the entry will become an ordinary IGMP snooping entry. That is, the aging out mechanism will follow the ordinary IGMP snooping entry.

### Format

```
config igmp_snooping data_driven_learning [all | vlan_name <vlan_name> | vlanid <vlanid_list>] {state [enable | disable] | aged_out [enable | disable] | expiry_time <sec 1-65535>}(1)
```

### Parameters

- 
- all** - Specifies all VLANs to be configured.

---

  - vlan\_name** - Specifies the VLAN name to be configured.  
**<vlan\_name>** - Enter the VLAN name here.

---

  - vlanid** - Specifies the VLAN ID to be configured.  
**<vlanid\_list>** - Enter the VLAN ID here.

---

  - state** - Specifies to enable or disable the data driven learning of an IGMP snooping group.  
**enable** - Specifies to enable the data driven learning option. By default, the state is enabled.
-

---

**disable** - Specifies to disable the data driven learning option.

**aged\_out** - Specifies to enable or disable the aging out of the entry.

**enable** - Specifies to enable the aging out of the entry.

**disable** - Specifies to disable the aging out of the entry. By default, the state is disabled state.

**expiry\_time** - Specifies the data driven group lifetime in seconds. This parameter is valid only when aged\_out is enabled.

**<sec 1-65535>** - Enter the expiry time here. This value must be between 1 and 65535 seconds.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To enable the data driven learning of an IGMP snooping group on the default VLAN:

```
DGS-1510-28XMP/ME:admin# config igmp_snooping data_driven_learning vlan_name default state
enable
Command: config igmp_snooping data_driven_learning vlan_name default state enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 31-14 config igmp\_snooping data\_driven\_learning max\_learned\_entry

### Description

This command is used to configure the maximum number of groups that can be learned by data driven.

When the table is full, the system will stop the learning of the new data-driven groups. Traffic for the new groups will be dropped.

### Format

**config igmp\_snooping data\_driven\_learning max\_learned\_entry <value 1-1024>**

### Parameters

---

**<value 1-1024>** - Enter the maximum learning entry value here. This value must be between 1 and 1024. The default setting is 128.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To set the maximum number of groups that can be learned by data driven:

```
DGS-1510-28XMP/ME:admin# config igmp_snooping data_driven_learning max_learned_entry 50
Command: config igmp_snooping data_driven_learning max_learned_entry 50

Success.

DGS-1510-28XMP/ME:admin#
```

## 31-15 clear igmp\_snooping data\_driven\_group

### Description

This command is used to delete the IGMP snooping group(s) learned by data driven.

### Format

```
clear igmp_snooping data_driven_group [all | [vlan_name <vlan_name> | vlanid <vlanid_list>] [<ipaddr> | all]]
```

### Parameters

---

**all** - Specifies all VLANs to which IGMP snooping groups will be deleted.

---

**vlan\_name** - Specifies the VLAN name.

**<vlan\_name>** - Enter the VLAN name here.

---

**vlanid** - Specifies the VLAN ID.

**<vlanid\_list>** - Enter the VLAN ID here.

---

**<ipaddr>** - Specifies the group's IP address learned by data driven.

---

**all** - Specifies to delete all IGMP snooping groups of specified VLANs.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To delete all the groups learned by data-driven:

```
DGS-1510-28XMP/ME:admin# clear igmp_snooping data_driven_group all
Command: clear igmp_snooping data_driven_group all

Success.

DGS-1510-28XMP/ME:admin#
```

## 31-16 show igmp\_snooping

### Description

This command is used to display the current IGMP snooping configuration on the Switch.

## Format

```
show igmp_snooping {[vlan <vlan_name 32> | vlanid <vlanid_list>]}
```

## Parameters

**vlan** - (Optional) Specifies the name of the VLAN for which you want to view the IGMP snooping configuration.

**<vlan\_name 32>** - Enter the VLAN name here. The VLAN name can be up to 32 characters long.

**vlanid** - (Optional) Specifies the ID of the VLAN for which you want to view the IGMP snooping configuration.

**<vlanid\_list>** - Enter the VLAN ID list here.

If no parameter is specified, the system will display all current IGMP snooping configurations.

## Restrictions

None.

## Example

To show IGMP snooping:

```
DGS-1510-28XMP/ME:admin# show igmp_snooping
Command: show igmp_snooping

IGMP Snooping Global State           : Enabled
Data Driven Learning Max Entries     : 128

VLAN Name                             : default
Query Interval                        : 125
Max Response Time                     : 10
Robustness Value                      : 2
Last Member Query Interval            : 1
Querier State                         : Disabled
Querier Role                          : Non-Querier
Querier IP                            : 0.0.0.0
Querier Expiry Time                   : 0 secs
State                                  : Disabled
Fast Leave                            : Disabled
Rate Limit                            : No Limitation
Report Suppression                    : Enabled
Version                               : 3
Data Driven Learning State            : Enabled
Data Driven Learning Aged Out         : Disabled
Data Driven Group Expiry Time         : 260

Total Entries: 1

DGS-1510-28XMP/ME:admin#
```

## 31-17 show igmp\_snooping rate\_limit

**Description**

This command is used to display the IGMP snooping rate limit setting.

**Format**

**show igmp\_snooping rate\_limit [ports <portlist> | vlanid <vlanid\_list>]**

**Parameters**

**ports** - Specifies the port range.

**<portlist>** - Enter the range of ports here.

**vlanid** - Specifies the VLAN range..

**<vlanid\_list>** - Enter the VLAN ID list here.

**Restrictions**

None.

**Example**

To display the IGMP snooping rate limit for ports 1 to 15:

```
DGS-1510-28XMP/ME:admin# show igmp_snooping rate_limit ports 1-15
Command: show igmp_snooping rate_limit ports 1-15

Port          Rate Limit
-----
1             No Limit
2             100
3             No Limit
4             No Limit
5             No Limit

Total Entries: 5
```

## 31-18 show igmp\_snooping group

**Description**

This command is used to display the current IGMP snooping group configuration on the Switch.

**Format**

**show igmp\_snooping group {[vlan <vlan\_name 32> | vlanid <vlanid\_list> | ports <portlist>} {<ipaddr>}}  
{data\_driven}**

**Parameters**

**vlan** - (Optional) Specifies the name of the VLAN for which you want to view IGMP snooping group information. If VLAN, ports and IP address are not specified, the system will display all current IGMP snooping group



information.

**<vlan\_name 32>** - Enter the VLAN name here. The VLAN name can be up to 32 characters long.

**vlanid** - (Optional) Specifies the ID of the VLAN for which you want to view IGMP snooping group information.

**<vlanid\_list>** - Enter the VLAN ID list here.

**ports** - (Optional) Specifies a list of ports for which you want to view IGMP snooping group information.

**<portlist>** - Enter the list of ports here.

**<ipaddr>** - (Optional) Specifies the group IP address for which you want to view IGMP snooping group information.

**data\_driven** - (Optional) Specifies to only display data driven groups.

## Restrictions

None.

## Example

To show IGMP snooping groups when IGMP v3 is supported:

```
DGS-1510-28XMP/ME:admin# show igmp_snooping group
Command: show igmp_snooping group

Source/Group      : 20.64.85.0/226.1.1.1
VLAN Name/VID     : v103/103
Member Ports      : 6
Router Ports      : 8
UP Time           : 7
Expiry Time       : 253
Filter Mode       : INCLUDE

Source/Group      : 20.64.85.1/226.1.1.1
VLAN Name/VID     : v103/103
Member Ports      : 6
Router Ports      : 8
UP Time           : 7
Expiry Time       : 252
Filter Mode       : INCLUDE

Source/Group      : 20.64.85.2/226.1.1.1
VLAN Name/VID     : v103/103
Member Ports      : 6
Router Ports      : 8
UP Time           : 7
Expiry Time       : 252
Filter Mode       : INCLUDE

Total Entries: 3

DGS-1510-28XMP/ME:admin#
```

To show IGMP snooping data driven groups:

```
DGS-1510-28XMP/ME:admin# show igmp_snooping group data_driven
Command: show igmp_snooping group data_driven

Source/Group      : NULL/226.1.1.1
VLAN Name/VID     : v103/103
Member Ports      :
Router Ports      :
UP Time           : 92
Expiry Time       : 168
Filter Mode       : EXCLUDE

Total Entries: 1

DGS-1510-28XMP/ME:admin#
```

To show IGMP snooping groups when only IGMP v2 is supported: The third item is a data-driven learned entry. If the member port list is empty, the multicast packets will be forwarded to the router ports. If the router port list is empty, the packets will be dropped.

```
DGS-1510-28XMP/ME:admin# show igmp_snooping group
Command: show igmp_snooping group

Source/Group      : NULL/226.1.1.1
VLAN Name/VID     : v103/103
Member Ports      : 6
Router Ports      : 8
UP Time           : 10
Expiry Time       : 260
Filter Mode       : EXCLUDE

Source/Group      : NULL/226.1.1.2
VLAN Name/VID     : v103/103
Member Ports      : 6
Router Ports      : 8
UP Time           : 10
Expiry Time       : 260
Filter Mode       : EXCLUDE

Source/Group      : NULL/226.1.1.3
VLAN Name/VID     : v103/103
Member Ports      :
Router Ports      : 8
UP Time           : 80
Expiry Time       : 180
Filter Mode       : EXCLUDE

Total Entries: 3

DGS-1510-28XMP/ME:admin#
```

## 31-19 show igmp\_snooping forwarding

### Description

This command is used to display the Switch's current IGMP snooping forwarding table. It provides an easy way for users to check the list of ports that the multicast group that comes from a specific sources will be forwarded to. The packet comes from the source VLAN. They will be forwarded to the forwarding VLAN. The IGMP snooping further restricts the forwarding ports.

### Format

```
show igmp_snooping forwarding {[vlan <vlan_name 32> | vlanid <vlanid_list>]}
```

### Parameters

---

**vlan** - (Optional) Specifies the name of the VLAN for which you want to view IGMP snooping forwarding table information.

**<vlan\_name 32>** - Enter the VLAN name here. The VLAN name can be up to 32 characters long.

---

**vlanid** - (Optional) Specifies the ID of the VLAN for which you want to view IGMP snooping forwarding table information.

**<vlanid\_list>** - Enter the VLAN ID list here.

---

If no parameter is specified, the system will display all current IGMP snooping forwarding table entries of the Switch.

---

### Restrictions

None.

### Example

To show all IGMP snooping forwarding entries located on the Switch:

```
DGS-1510-28XMP/ME:admin# show igmp_snooping forwarding
Command: show igmp_snooping forwarding

VLAN Name      : default
Source IP      : *
Multicast Group: 225.0.0.0
Port Member    : 2,7

VLAN Name      : default
Source IP      : *
Multicast Group: 225.0.0.1
Port Member    : 2,5

VLAN Name      : default
Source IP      : *
Multicast Group: 225.0.0.2
Port Member    : 2,8

Total Entries : 3

DGS-1510-28XMP/ME:admin#
```

## 31-20 show router\_ports

**Description**

This command is used to display the currently configured router ports on the Switch.

**Format**

**show router\_ports** [vlan <vlan\_name 32> | vlanid <vlanid\_list> | all ] {[static | dynamic | forbidden]}

**Parameters**

**vlan** - Specifies the name of the VLAN on which the router port resides.

**<vlan\_name 32>** - Enter the VLAN name here. The VLAN name can be up to 32 characters long.

**vlanid** - Specifies the ID of the VLAN on which the router port resides.

**<vlanid\_list>** - Enter the VLAN ID list here.

**all** - Specifies all VLANs on which the router port resides.

**static** - (Optional) Displays router ports that have been statically configured.

**dynamic** - (Optional) Displays router ports that have been dynamically configured.

**forbidden** - (Optional) Displays forbidden router ports that have been statically configured.

If no parameter is specified, the system will display all currently configured router ports on the Switch.

**Restrictions**

None.

**Example**

To display router ports:

```
DGS-1510-28XMP/ME:admin# show router_ports all
Command: show router_ports all

VLAN Name           : default
Static Router Port  : 1-10
Dynamic Router Port :
    Router IP       : 10.0.0.1, 10.0.0.2, 10.0.0.3
Forbidden router port :

VLAN Name           : vlan2
Static router port   :
Dynamic router port  : 13
    Router IP       : 10.0.0.4, 10.0.0.5, 10.0.0.6
Forbidden router port :

Total Entries : 2

DGS-1510-28XMP/ME:admin#
```

## 31-21 show igmp\_snooping statistics counter

### Description

This command is used to display the statistics counter for IGMP protocol packets that are received by the Switch since IGMP snooping was enabled.

### Format

**show igmp\_snooping statistic counter [vlan <vlan\_name> | vlanid <vlanid\_list> | ports <portlist>]**

### Parameters

---

**vlan** - Specifies a VLAN to be displayed.

**<vlan\_name>** - Enter the VLAN name here.

---

**vlanid** - Specifies a list of VLANs to be displayed.

**<vlanid\_list>** - Enter the VLAN ID list here.

---

**ports** - Specifies a list of ports to be displayed.

**<portlist>** - Enter the list of ports to be displayed here.

---

### Restrictions

None.

### Example

To display the IGMP snooping statistics counter:

```
DGS-1510-28XMP/ME:admin# show igmp_snooping statistic counter vlanid 67
Command: show igmp_snooping statistic counter vlanid 67

VLAN Name          : VLAN67
-----
Group Number       : 0

Receive Statistics
  Query
    IGMP v1 Query           : 0
    IGMP v2 Query           : 0
    IGMP v3 Query           : 0
    Total                   : 0
    Dropped By Rate Limitation : 0
    Dropped By Multicast VLAN : 0

  Report & Leave
    IGMP v1 Report          : 0
    IGMP v2 Report          : 0
    IGMP v3 Report          : 0
    IGMP v2 Leave           : 0
    Total                   : 0
    Dropped By Rate Limitation : 0
    Dropped By Max Group Limitation : 0
    Dropped By Group Filter : 0
    Dropped By Multicast VLAN : 0

Transmit Statistics
  Query
    IGMP v1 Query           : 0
    IGMP v2 Query           : 44
    IGMP v3 Query           : 0
    Total                   : 44

  Report & Leave
    IGMP v1 Report          : 0
    IGMP v2 Report          : 0
    IGMP v3 Report          : 0
    IGMP v2 Leave           : 0
    Total                   : 0

Total Entries : 1

DGS-1510-28XMP/ME:admin#
```

To display the IGMP snooping statistics counter for a port:

```

DGS-1510-28XMP/ME:admin# show igmp_snooping statistic counter ports 1
Command: show igmp_snooping statistic counter ports 1

Port #          : 1
-----
Group Number    : 0

Receive Statistics
  Query
    IGMP v1 Query      : 0
    IGMP v2 Query      : 0
    IGMP v3 Query      : 0
    Total               : 0
    Dropped By Rate Limitation : 0
    Dropped By Multicast VLAN : 0

  Report & Leave
    IGMP v1 Report     : 0
    IGMP v2 Report     : 0
    IGMP v3 Report     : 0
    IGMP v2 Leave      : 0
    Total              : 0
    Dropped By Rate Limitation : 0
    Dropped By Max Group Limitation : 0
    Dropped By Group Filter : 0
    Dropped By Multicast VLAN : 0

Transmit Statistics
  Query
    IGMP v1 Query      : 0
    IGMP v2 Query      : 0
    IGMP v3 Query      : 0
    Total               : 0

  Report & Leave
    IGMP v1 Report     : 0
    IGMP v2 Report     : 0
    IGMP v3 Report     : 0
    IGMP v2 Leave      : 0
    Total              : 0

Total Entries : 1

DGS-1510-28XMP/ME:admin#

```

## 31-22 show igmp access\_authentication ports

### Description

This command is used to display the current IGMP Access Control configuration.

### Format

**show igmp access\_authentication ports [all | <portlist>]**

## Parameters

---

**all** - Specifies all ports to be displayed.

---

**<portlist>** - Enter a range of ports to be displayed.

---

## Restrictions

None.

## Example

To display the IGMP Access Control status for ports 1-4:

```
DGS-1510-28XMP/ME:admin# show igmp access_authentication ports 1-4
Command: show igmp access_authentication ports 1-4

Port      State
-----  -
1         Enabled
2         Disabled
3         Disabled
4         Disabled

DGS-1510-28XMP/ME:admin#
```

To display the IGMP Access Control status for all ports:



```
DGS-1510-28XMP/ME:admin# show igmp access_authentication ports all
```

```
Command: show igmp access_authentication ports all
```

Port	State
1	Enabled
2	Disabled
3	Disabled
4	Disabled
5	Disabled
6	Disabled
7	Disabled
8	Disabled
9	Disabled
10	Disabled
11	Disabled
12	Disabled
13	Disabled
14	Disabled
15	Disabled
16	Disabled
17	Disabled
18	Disabled
19	Disabled
20	Disabled

```
CTRL+C ESC q Quit SPACE n Next Page ENTER Next Entry a All
```

## 31-23 show igmp\_snooping host

### Description

This command is used to display the IGMP hosts that are joined groups on the specific port or VALN.

### Format

```
show igmp_snooping host {[vlan <vlan_name 32>| vlanid <vlanid_list> | ports <portlist> | group <ipaddr>]}
```

### Parameters

**vlan** - (Optional) Specifies the name of VLAN.

**<vlan\_name 32>** - Enter the VLAN name.

**vlanid** - (Optional) Specifies the ID of VLAN.

**<vlanid\_list>** - Enter a list of VLAN.

**ports** - (Optional) Specifies ports to be displayed.

**<portlist>** - Enter a range of ports to be displayed.

**group** - (Optional) Specifies the group to be displayed.

**<ipaddr>** - Enter the IP address of the group

### Restrictions

None.

**Example**

To display the IGMP host IP information for VLAN:

```
DGS-1510-28XMP/ME:admin#show igmp_snooping host vlan default
Command: show igmp_snooping host vlan default
```

VLANID	Group	Port	Host
1	225.0.1.0	2	198.19.1.2
1	225.0.1.0	2	198.19.1.3
1	225.0.1.0	3	198.19.1.4
1	225.0.1.2	2	198.19.1.3
1	225.0.2.3	3	198.19.1.4
1	225.0.3.4	3	198.19.1.5
1	225.0.4.5	5	198.19.1.6
1	225.0.5.6	5	198.19.1.7
1	225.0.6.7	4	198.19.1.8
1	225.0.7.8	4	198.19.1.9
1	239.255.255.250	7	10.90.90.90

Total Entries : 11

```
DGS-1510-28XMP/ME:admin#
```

To display the host IP information for the group "225.0.1.0":

```
DGS-1510-28XMP/ME:admin# show igmp_snooping host group 225.0.1.0
Command: show igmp_snooping host group 225.0.1.0
```

VLANID	Group	Port	Host
1	225.0.1.0	2	198.19.1.2
1	225.0.1.0	2	198.19.1.3
1	225.0.1.0	3	198.19.1.4

Total Entries : 3

```
DGS-1510-28XMP/ME:admin#
```

## 31-24 clear igmp\_snooping statistics counter

**Description**

This command is used to clear the IGMP snooping statistics counter.

**Format**

```
clear igmp_snooping statistics counter
```

**Parameters**

None.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To clear the IGMP snooping statistics counter:

```
DGS-1510-28XMP/ME:admin# clear igmp_snooping statistic counter
Command: clear igmp_snooping statistic counter

Success.

DGS-1510-28XMP/ME:admin#
```

## Chapter 32 IP-MAC-Port Binding (IMPB)

### Command List

<b>create address_binding ip_mac ipaddress</b> <ipaddr> mac_address <macaddr> {ports [<portlist>   all]}
<b>config address_binding ip_mac ports</b> [<portlist>   all] {arp_inspection [strict   loose   disable]   ip_inspection [enable   disable]   protocol [ipv4]   allow_zeroip [enable   disable]   forward_dhcppt [enable   disable]   stop_learning_threshold <int 0-500>}
<b>delete address_binding blocked</b> [all   vlan_name <vlan_name> mac_address <macaddr>]
<b>delete address_binding ip_mac</b> [all   ipaddress <ipaddr> mac_address <macaddr>]
<b>config address_binding ip_mac ipaddress</b> <ipaddr> mac_address <macaddr> {ports [<portlist>   all]}
<b>show address_binding</b> {ports {<portlist>}}
<b>show address_binding blocked</b> [all   vlan_name <vlan_name> mac_address <macaddr>]
<b>show address_binding ip_mac</b> [all   [[ipaddress <ipaddr>] mac_address <macaddr>]]
<b>show address_binding</b> {[ip_mac [all   [[ipaddress <ipaddr>] [mac_address <macaddr>]]]   blocked [all   vlan_name <vlan_name> mac_address <macaddr>]   ports {<portlist>}}
<b>enable address_binding dhcp_snoop</b>
<b>disable address_binding dhcp_snoop</b>
<b>clear address_binding dhcp_snoop binding_entry ports</b> [<portlist>   all]
<b>show address_binding dhcp_snoop</b> {max_entry {ports <portlist>}}
<b>show address_binding dhcp_snoop binding_entry</b> {port <port>}
<b>config address_binding dhcp_snoop max_entry ports</b> [<portlist>   all] limit [<value 1-50>   no_limit]
<b>enable address_binding trap_log</b>
<b>disable address_binding trap_log</b>
<b>config address_binding recover_learning ports</b> [<portlist>   all]
<b>debug address_binding</b> [event   dhcp   all] state [enable   disable]
<b>no debug address_binding</b>

#### 32-1 create address\_binding ip\_mac ipaddress

##### Description

This command is used to create an IMPB entry.

##### Format

**create address\_binding ip\_mac ipaddress** <ipaddr> mac\_address <macaddr> {ports [<portlist> | all]}

##### Parameters

**<ipaddr>** - Enter the IP address used for the IMPB entry.

**mac\_address** - Specifies the MAC address used for the IMPB entry.

**<macaddr>** - Enter the MAC address used here.

**ports** - (Optional) Specifies the portlist the entry will apply to. If not ports are specified, the settings will be applied

to all ports.

**<portlist>** - Enter a list of ports used for this configuration here.

**all** - Specifies that all the ports will be included.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To create an IMPB entry:

```
DGS-1510-28XMP/ME:admin#create address_binding ip_mac ipaddress 10.1.1.1 mac_address 00-00-00-00-00-11
Command: create address_binding ip_mac ipaddress 10.1.1.1 mac_address 00-00-00-00-00-11

Success.

DGS-1510-28XMP/ME:admin#
```

## 32-2 config address\_binding ip\_mac ports

### Description

This command is used to configure the state of IMPB on the Switch for each port.

### Format

```
config address_binding ip_mac ports [<portlist> | all] {arp_inspection [strict | loose | disable] |
ip_inspection [enable | disable] | protocol [ipv4] | allow_zeroip [enable | disable] | forward_dhcppkt [enable
| disable] | stop_learning_threshold <int 0-500>}
```

### Parameters

**<portlist>** - Enter the list of ports used for this configuration here.

**all** - Specifies that all the ports will be used.

**arp\_inspection** - (Optional) Specifies that the ARP inspection option will be configured.

**strict** - In this mode, all packets are dropped by default until a legal ARP or IP packets are detected.

**loose** - In this mode, all packets are forwarded by default until an illegal ARP or broadcast IP packets are detected. If not specified strict or loose, default is strict.

**disable** - Disable ARP inspection function. The default value is disabled.

**ip\_inspection** - (Optional) Specifies that the IP inspection option will be configured.

**enable** - Enable IP inspection function. The legal IP packets will be forwarded, while the illegal IP packets will be dropped.

**disable** - Disable IP inspection function. The default value is disabled.

**protocol** - (Optional) Specifies the version used.

**ipv4** - Only IPv4 packets will be checked.

**allow\_zeroip** - (Optional) Specifies whether to allow ARP packets with a source IP address of 0.0.0.0. If the IP address 0.0.0.0 is not configured in the binding list and this setting is enabled, ARP packets with the source IP address of 0.0.0.0 will be allowed; If the IP address 0.0.0.0 is not configured in the binding list and this setting is disabled, ARP packets with the source IP address of 0.0.0.0 will not be allowed. This option does not affect the IMPB ACL Mode.

---

**enable** - Specifies that the allow zero IP option will be enabled.

**disable** - Specifies that the allow zero IP option will be disabled.

---

**forward\_dhcp** - (Optional) By default, DHCP packets with a broadcast DA will be flooded. When set to disabled, the broadcast DHCP packet received by the specified port will not be forwarded. This setting is effective when DHCP Snooping is enabled, in this case DHCP packets trapped by the CPU must be forwarded by the software. This setting controls the forwarding behavior in this situation.

**enable** - Specifies that the forward DHCP packets option will be enabled.

**disable** - Specifies that the forward DHCP packets option will be disabled.

---

**stop\_learning\_threshold** - (Optional) When the number of blocked entries exceeds the threshold, the port will stop learning new addresses. Packets with a new address will be dropped.

**<int 0-500>** - Enter the stop learning threshold value here. This value must be between 0 and 500.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To enable IMPB on port 1:

```
DGS-1510-28XMP/ME:admin#config address_binding ip_mac ports 1 arp_inspection strict
Command: config address_binding ip_mac ports 1 arp_inspection strict

Success.

DGS-1510-28XMP/ME:admin#
```

## 32-3 delete address\_binding blocked

### Description

This command is used to delete a blocked entry.

### Format

**delete address\_binding blocked [all | vlan\_name <vlan\_name> mac\_address <macaddr>]**

### Parameters

---

**all** - Specifies that all the entries the address database that the system has automatically blocked to be deleted.

**vlan\_name** - Specifies the name of the VLAN to which the blocked MAC address belongs.

**<vlan\_name>** - Enter the VLAN name.

**mac\_address** - Specifies the MAC address of the entry or the blocked MAC address.

**<macaddr>** - Enter the MAC address used.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To delete a blocked address:

```
DGS-1510-28XMP/ME:admin# delete address_binding blocked vlan_name v31 mac_address 00-00-00-00-00-11
Command: delete address_binding blocked vlan_name v31 mac_address 00-00-00-00-00-11

Success.

DGS-1510-28XMP/ME:admin#
```

## 32-4 delete address\_binding ip\_mac

### Description

This command is used to delete an IMPB entry.

### Format

**delete address\_binding ip\_mac [all | ipaddress <ipaddr> mac\_address <macaddr>]**

### Parameters

---

**all** - Specifies that all the MAC address will be used.

**ipaddress** - Specifies the learned IP address of the entry in the database.

**<ipaddr>** - Enter the IP address used.

**mac\_address** - Specifies the MAC address used for this configuration.

**<macaddr>** - Enter the MAC address used.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To delete a blocked address:

```
DGS-1510-28XMP/ME:admin# delete address_binding ip_mac ipaddress 10.1.1.1 mac_address 00-00-00-00-00-11
Command: delete address_binding ip_mac ipaddress 10.1.1.1 mac_address 00-00-00-00-00-11

Success.

DGS-1510-28XMP/ME:admin#
```

## 32-5 config address\_binding ip\_mac ipaddress

### Description

This command is used to update an IMPB entry.

### Format

**config address\_binding ip\_mac ipaddress <ipaddr> mac\_address <macaddr> {ports [<portlist> | all]}**

## Parameters

**<ipaddr>** - Enter the IP address used here.

**mac\_address** - Specifies the MAC address of the entry being updated

**<macaddr>** - Enter the MAC address used here.

**ports** - (Optional) Specifies which ports are used for the IMPB entry being updated. If not specified, then it is applied to all ports.

**<portlist>** - Enter the list of ports used here.

**all** - Specifies that all the ports will be used.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure an IMPB entry:

```
DGS-1510-28XMP/ME:admin# config address_binding ip_mac ipaddress 10.1.1.1 mac_address 00-00-00-00-00-11
Command: config address_binding ip_mac ipaddress 10.1.1.1 mac_address 00-00-00-00-00-11

Success.

DGS-1510-28XMP/ME:admin#
```

## 32-6 show address\_binding

### Description

This command is used to display the IMPB global settings or IMPB settings on specified ports.

### Format

**show address\_binding {ports {<portlist>}}**

## Parameters

**ports** - (Optional) Specifies the ports for which the information is displayed. If not specified, all ports are displayed.

**<portlist>** - (Optional) Enter the list of ports used here.

## Restrictions

None.

## Example

To show the IMPB global configuration:



```
DGS-1510-28XMP/ME:admin# show address_binding
Command: show address_binding

Trap/Log           : Disabled
DHCP Snoop         : Disabled

DGS-1510-28XMP/ME:admin#
```

To show the IMPB ports:

```
DGS-1510-28XMP/ME:admin# show address_binding ports
Command: show address_binding ports

ARP: ARP Inspection   IP: IP Inspection

Port   ARP       IP       Protocol Zero IP   DHCP Packet   Stop Learning
-----
1      Disabled Disabled IPv4   Not Allow Forward      500/Normal
2      Disabled Disabled IPv4   Not Allow Forward      500/Normal
3      Disabled Disabled IPv4   Not Allow Forward      500/Normal
4      Disabled Disabled IPv4   Not Allow Forward      500/Normal
5      Disabled Disabled IPv4   Not Allow Forward      500/Normal
6      Disabled Disabled IPv4   Not Allow Forward      500/Normal
7      Disabled Disabled IPv4   Not Allow Forward      500/Normal
8      Disabled Disabled IPv4   Not Allow Forward      500/Normal
9      Disabled Disabled IPv4   Not Allow Forward      500/Normal
10     Disabled Disabled IPv4   Not Allow Forward      500/Normal
11     Disabled Disabled IPv4   Not Allow Forward      500/Normal
12     Disabled Disabled IPv4   Not Allow Forward      500/Normal
13     Disabled Disabled IPv4   Not Allow Forward      500/Normal
14     Disabled Disabled IPv4   Not Allow Forward      500/Normal
15     Disabled Disabled IPv4   Not Allow Forward      500/Normal
16     Disabled Disabled IPv4   Not Allow Forward      500/Normal

CTRL+C  ESC q Quit  SPACE n Next Page  ENTER Next Entry  a All
```

## 32-7 show address\_binding blocked

### Description

This command is used to display the blocked MAC entries.

### Format

```
show address_binding blocked [all | vlan_name <vlan_name> mac_address <macaddr>]
```

### Parameters

---

**all** - Specifies that all the addresses in the database that the system has auto learned and blocked to be displayed.

---

**vlan\_name** - Specifies the name of the VLAN to which the blocked MAC address belongs.

**<vlan\_name>** - Enter the VLAN name used.

**mac\_address** - Specifies the MAC address of the entry or the blocked MAC address.

**<macaddr>** - Enter the MAC address of the entry or the blocked MAC address.

## Restrictions

None.

## Example

To show the IMPB entries that are blocked:

```
DGS-1510-28XMP/ME:admin# show address_binding blocked all
Command: show address_binding blocked all

VID   VLAN Name                               MAC Address                               Port
----  -
1     default                                00-0C-6E-AA-B9-C0 1

Total Entries : 1

DGS-1510-28XMP/ME:admin#
```

## 32-8 show address\_binding ip\_mac

### Description

This command is used to display the IMPB entries.

### Format

**show address\_binding ip\_mac [all | [[ipaddress <ipaddr>] mac\_address <macaddr>]]**

### Parameters

**all** - Specifies that all the IP addresses to be displayed.

**ipaddress** - Specifies the learned IP address of the entry in the database.

**<ipaddr>** - Enter the learned IP address.

**mac\_address** - (Optional) Specifies the MAC address of the entry in the database.

**<macaddr>** - Enter the MAC address here.

## Restrictions

None.

## Example

To show IMPB entries:

```
DGS-1510-28XMP/ME:admin# show address_binding ip_mac all
Command: show address_binding ip_mac all

M(Mode) - D:DHCP, S:Static ACL - A:Active I:Inactive

IP Address                               MAC Address      M  ACL Ports
-----
10.1.1.1                                 00-00-00-00-00-11 S  I  1-28

Total Entries : 1

DGS-1510-28XMP/ME:admin#
```

## 32-9 enable address\_binding dhcp\_snoop

### Description

This command is used to enable DHCP snooping mode.

By default, DHCP snooping is disabled.

If a user enables DHCP Snooping mode, all ports which have IMPB disabled will become server ports. The switch will learn the IP addresses through server ports (by using DHCP Offer and DHCP ACK packets).

Note that the DHCP discover packet cannot be passed thru the user ports if the allow\_zeroip function is disabled on the port.

The auto-learned IMPB entry will be mapped to a specific source port based on the MAC address learning function. This entry will be created as an IP-Inspection mode binding entry for this specific port. Each entry is associated with a lease time. When the lease time has expires, the expired entry will be removed from the port. The auto-learned binding entry can be moved from one port to another port if the DHCP snooping function has learned that the MAC address has moved to a different port.

If a situation occurs where a binding entry learned by DHCP snooping conflicts with a statically configured entry. The binding relation has conflicted. For example, if IP A is bound to MAC X with a static configuration and suppose that the binding entry learned by DHCP snooping is that IP A is bound to MAC Y, and then it is conflict. When the DHCP snooping learned entry binds with the static configured entry, and the DHCP snooping learned entry will not be created.

In a situation where the same IMPB pair has been statically configured, the auto-learned entry will not be created. In a situation where the learned information is consistent with the statically configured entry the auto-learned entry will not be created. In a situation where the entry is statically configured in ARP mode the auto learned entry will not be created. In a situation where the entry is statically configured on one port and the entry is auto-learned on another port, the auto-learned entry will not be created.

### Format

```
enable address_binding dhcp_snoop
```

### Parameters

None.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To enable DHCP IPv4 snooping mode:

```
DGS-1510-28XMP/ME:admin# enable address_binding dhcp_snoop
Command: enable address_binding dhcp_snoop

Success.

DGS-1510-28XMP/ME:admin#
```

## 32-10 disable address\_binding dhcp\_snoop

### Description

This command is used to disable DHCP snooping mode. When the DHCP snooping function is disabled, all of the auto-learned binding entries will be removed.

### Format

**disable address\_binding dhcp\_snoop**

### Parameters

None.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To disable DHCP IPv4 snooping mode:

```
DGS-1510-28XMP/ME:admin# disable address_binding dhcp_snoop
Command: disable address_binding dhcp_snoop

Success.

DGS-1510-28XMP/ME:admin#
```

## 32-11 clear address\_binding dhcp\_snoop binding\_entry ports

### Description

This command is used to clear the DHCP snooping entries learned for the specified ports.

### Format

**clear address\_binding dhcp\_snoop binding\_entry ports [<portlist> | all]**

### Parameters

---

**<portlist>** - Enter the list of ports used.

---

---

**all** - Specifies that all the ports will be used.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To clear DHCP IPv4 snooping entries on ports 1-3:

```
DGS-1510-28XMP/ME:admin# clear address_binding dhcp_snoop binding_entry ports 1-3
Command: clear address_binding dhcp_snoop binding_entry ports 1-3

Success.

DGS-1510-28XMP/ME:admin#
```

## 32-12 show address\_binding dhcp\_snoop

### Description

This command is used to display the DHCP snooping configuration and learning database.

### Format

**show address\_binding dhcp\_snoop {max\_entry {ports <portlist>}}**

### Parameters

---

**max\_entry** - (Optional) Specifies to show the maximum number of entries per port.

**ports** - (Optional) Specifies the ports used for this configuration.

**<portlist>** - Enter a list of ports used here.

---

If no parameter is specified, show DHCP snooping displays the enable/disable state.

---

### Restrictions

None.

### Example

To show the DHCP snooping state:

```
DGS-1510-28XMP/ME:admin#show address_binding dhcp_snoop
Command: show address_binding dhcp_snoop

DHCP Snoop(IPv4) : Disabled

DGS-1510-28XMP/ME:admin#
```

To display DHCP snooping maximum entry configuration:

```
DGS-1510-28XMP/ME:admin# show address_binding dhcp_snoop max_entry
```

```
Command: show address_binding dhcp_snoop max_entry
```

```
Port  Max Entry
----  -
```

1	No Limit
2	No Limit
3	No Limit
4	No Limit
5	No Limit
6	No Limit
7	No Limit
8	No Limit
9	No Limit
10	No Limit
11	No Limit
12	No Limit
13	No Limit
14	No Limit
15	No Limit
16	No Limit
17	No Limit
18	No Limit
19	No Limit
20	No Limit

```
CTRL+C  ESC  q  Quit  SPACE  n  Next Page  ENTER  Next Entry  a  All
```

### 32-13 show address\_binding dhcp\_snoop binding\_entry

#### Description

This command is used to display the DHCP snooping binding entries.

#### Format

```
show address_binding dhcp_snoop binding_entry {port <port>}
```

#### Parameters

---

**port** – (Optional) Specifies the port used for this configuration.

**<port>** - Enter the port number used here.

---

#### Restrictions

None.

#### Example

To display the DHCP snooping binding entries:

```

DGS-1510-28XMP/ME:admin#show address_binding dhcp_snoop binding_entry
Command: show address_binding dhcp_snoop binding_entry

S (Status) - A: Active, I: Inactive
Time - Left Time (sec)

IP Address                MAC Address          S  LT(sec)   Port
-----
-----

Total Entries : 0

DGS-1510-28XMP/ME:admin#

```

## 32-14 config address\_binding dhcp\_snoop max\_entry ports

### Description

This command is used to specify the maximum number of entries that can be learned by a specified port.

### Format

**config address\_binding dhcp\_snoop max\_entry ports [<portlist> | all] limit [<value 1-50> | no\_limit]**

### Parameters

---

**<portlist>** - Enter the list of ports used here.

---

**all** - Specifies that all the ports will be used.

---

**limit** - Specifies the maximum number. The default value is no\_limit.

**<value 1-50>** - Enter the limit value here. This value must be between 1 and 50.

**no\_limit** - Specifies that the maximum number of learned entries is unlimited.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To set the maximum number of DHCP IPv4 snooping entries that ports 1–3 can learn up to 10 entries:

```

DGS-1510-28XMP/ME:admin# config address_binding dhcp_snoop max_entry ports 1-3 limit 10.
Command: config address_binding dhcp_snoop max_entry ports 1-3 limit 10.

Success.

DGS-1510-28XMP/ME:admin#

```

## 32-15 enable address\_binding trap\_log

### Description

This command is used to send traps and logs when the IMPB module detects an illegal IP and MAC address.

### Format

**enable address\_binding trap\_log**

### Parameters

None.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To enable the IMPB traps and logs:

```
DGS-1510-28XMP/ME:admin# enable address_binding trap_log
Command: enable address_binding trap_log

Success.

DGS-1510-28XMP/ME:admin#
```

## 32-16 disable address\_binding trap\_log

### Description

This command is used to disable the IMPB traps and logs.

### Format

**disable address\_binding trap\_log**

### Parameters

None.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To disable IMPB traps and logs:

```
DGS-1510-28XMP/ME:admin# disable address_binding trap_log
Command: disable address_binding trap_log

Success.

DGS-1510-28XMP/ME:admin#
```



## 32-17 config address\_binding recover\_learning ports

### Description

This command is used to recover IMPB checking.

### Format

**config address\_binding recover\_learning ports [<portlist> | all]**

### Parameters

---

**<portlist>** - Enter the list of ports that need to recover the IMPB checking.

---

**all** - Specifies that all the ports will be used.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To recover IMPB checking for ports 6 to 7:

```
DGS-1510-28XMP/ME:admin# config address_binding recover_learning ports 6-7
Command: config address_binding recover_learning ports 6-7

Success.

DGS-1510-28XMP/ME:admin#
```

## 32-18 debug address\_binding

### Description

This command is used to start the IMPB debug when the IMPB module receives an ARP/IP packet or a DHCP packet.

### Format

**debug address\_binding [event | dhcp | all] state [enable | disable]**

### Parameters

---

**event** - Specifies to print out the debug messages when IMPB module receives ARP/IP packets.

---

**dhcp** - Specifies to print out the debug messages when the IMPB module receives the DHCP packets.

---

**all** - Specifies to print out all debug messages.

---

**state** - Specifies the IMPB debug state to be enabled or disabled.

**enable** - Specifies to enable the IMPB debug state.

**disable** - Specifies to disable the IMPB debug state.

---

## Restrictions

Only Administrators can issue this command.

## Example

To print out all debug IMPB messages:

```
DGS-1510-28XMP/ME:admin# debug address_binding all state enable
Command: debug address_binding all state enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 32-19 no debug address\_binding

### Description

This command is used to stop the IMPB debug starting when the IMPB module receives an ARP/IP packet or a DHCP packet.

### Format

**no debug address\_binding**

### Parameters

None.

### Restrictions

Only Administrators can issue this command.

## Example

To stop IMPB debug: starting when the IMPB module receives an ARP/IP or DHCP packet:

```
DGS-1510-28XMP/ME:admin# no debug address_binding
Command: no debug address_binding

Success.

DGS-1510-28XMP/ME:admin#
```

## Chapter 33 IPv6 Neighbor Discover Command List

---

```

create ipv6 neighbor_cache ipif <ipif_name 12> <ipv6addr> <macaddr>
delete ipv6 neighbor_cache ipif [<ipif_name 12> | all] [<ipv6addr> | static | dynamic | all]
show ipv6 neighbor_cache ipif [<ipif_name 12> | all] [ipv6address <ipv6addr> | static | dynamic | all]
config ipv6 nd ns ipif <ipif_name 12> retrans_time <millisecond 0-4294967295>
show ipv6 nd {ipif <ipif_name 12>}

```

---

### 33-1 create ipv6 neighbor\_cache ipif

#### Description

This command is used to add a static neighbor on an IPv6 interface.

#### Format

```
create ipv6 neighbor_cache ipif <ipif_name 12> <ipv6addr> <macaddr>
```

#### Parameters

---

**<ipif\_name 12>** - Enter the IP interface name here. This name can be up to 12 characters long.

**<ipv6addr>** - Enter the address of the neighbor.

**<macaddr>** - Enter the MAC address of the neighbor.

---

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

#### Example

Create a static neighbor cache entry:

```

DGS-1510-28XMP/ME:admin# create ipv6 neighbor_cache ipif System 3ffc::1 00-01-02-03-04-05
Command: create ipv6 neighbor_cache ipif System 3ffc::1 00-01-02-03-04-05

Success.

DGS-1510-28XMP/ME:admin#

```

### 33-2 delete ipv6 neighbor\_cache ipif

#### Description

This command is used to delete a neighbor cache entry or static neighbor cache entries from the address cache or all address cache entries on this IP interface. Both static and dynamic entries can be deleted.

**Format**

**delete ipv6 neighbor\_cache ipif [<ipif\_name 12> | all] [<ipv6addr> | static | dynamic | all]**

**Parameters**

**<ipif\_name 12>** - Enter the IP interface name here. This name can be up to 12 characters long.

**all** - Specifies that all the interfaces will be used in this configuration.

**<ipv6addr>** - Enter the neighbor's address.

**static** - Specifies to delete the static entry.

**dynamic** - Specifies to delete those dynamic entries.

**all** - Specifies that all entries include static and dynamic entries will be deleted.

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To delete a neighbor cache entry on IP interface "System":

```
DGS-1510-28XMP/ME:admin# delete ipv6 neighbor_cache ipif System 3ffc::1
```

```
Command: delete ipv6 neighbor_cache ipif System 3FFC::1
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```

**33-3 show ipv6 neighbor\_cache ipif****Description**

This command is used to display the neighbor cache entry for the specified interface. You can display a specific entry, all entries, or all static entries.

**Format**

**show ipv6 neighbor\_cache ipif [<ipif\_name 12> | all] [ipv6address <ipv6addr> | static | dynamic | all]**

**Parameters**

**<ipif\_name 12>** - Enter the IP interface name here. This name can be up to 12 characters long.

**all** - Specifies that all the interface will be displayed.

**ipv6address** - Specifies the neighbor's address.

**<ipv6addr>** - Enter the IPv6 address here.

**static** - Specifies the static neighbor cache entry.

**dynamic** - Specifies the dynamic entries.

**all** - Specifies that all entries include static and dynamic entries.

**Restrictions**

None

**Example**

Show all neighbor cache entries of IP interface "System":

```

DGS-1510-28XMP/ME:admin# show ipv6 neighbor_cache ipif System all
Command: show ipv6 neighbor_cache ipif System all

3FFC::1                               State: Static
MAC Address : 00-01-02-03-04-05       Port : NA
Interface  : System                   VID  : 1

Total Entries: 1

DGS-1510-28XMP/ME:admin#

```

**33-4 config ipv6 nd ns retrans\_time ipif****Description**

This command is used to configure the IPv6 ND neighbor solicitation retransmit time, which is between retransmissions of neighbor solicitation messages to a neighbor when resolving the address or when probing the reachability of a neighbor.

**Format**

```
config ipv6 nd ns ipif <ipif_name 12> retrans_time <millisecond 0-4294967295>
```

**Parameters**


---

<b>&lt;ipif_name 12&gt;</b>	- Enter the IP interface name here. This name can be up to 12 characters long.
<b>retrans_time</b>	- Specifies the neighbor solicitation's re-transmit timer in millisecond.
<b>&lt;millisecond 0-4294967295&gt;</b>	- Enter the re-transmit timer value here. This value must be between 0 and 4294967295 milliseconds.

---

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To configure the retransmit time of IPv6 ND neighbor solicitation:

```
DGS-1510-28XMP/ME:admin# config ipv6 nd ns ipif Zira retrans_time 1000000
Command: config ipv6 nd ns ipif Zira retrans_time 1000000

Success.

DGS-1510-28XMP/ME:admin#
```

### 33-5 show ipv6 nd

#### Description

This command is used to display information regarding neighbor detection on the Switch.

#### Format

**show ipv6 nd {ipif <ipif\_name 12>}**

#### Parameters

---

**ipif** - (Optional) The name of the interface.

**<ipif\_name 12>** - Enter the IP interface name here. This name can be up to 12 characters long.

---

If no parameter is specified, it will show the IPv6 ND related configuration of all interfaces.

---

#### Restrictions

None.

#### Example

To show IPv6 ND related configuration:

```
DGS-1510-28XMP/ME:admin# show ipv6 nd ipif System
Command: show ipv6 nd ipif System

Interface Name           : System
NS Retransmit Time      : 0 (ms)

DGS-1510-28XMP/ME:admin#
```

## Chapter 34 IPv6 Route Command List

---

```
create ipv6route [default] [<ipif_name 12> <ipv6addr> | <ipv6addr>] {<metric 1-65535>}
```

---

```
delete ipv6route [default] [<ipif_name 12> <ipv6addr> | <ipv6addr> | all]
```

---

```
show ipv6route
```

---

### 34-1 create ipv6route

#### Description

This command is used to create an IPv6 default route. If the next hop is a global address, it is not needed to indicate the interface name. If the next hop is a link local address, then the interface name must be specified.

#### Format

```
create ipv6route [default] [<ipif_name 12> <ipv6addr> | <ipv6addr>] {<metric 1-65535>}
```

#### Parameters

---

**default** - Specifies the default route.

---

**<ipif\_name 12>** - Specifies the interface for the route. This name can be up to 12 characters long.

**<ipv6addr>** - Specifies the next hop address for this route.

---

**<ipv6addr>** - Specifies the next hop address for this route.

---

**<metric 1-65535>** - (Optional) Enter the metric value here. The default setting is 1. This value must be between 1 and 65535.

---

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

#### Example

To create an IPv6 route:

```
DGS-1510-28XMP/ME:admin# create ipv6route default System 3FFC::1
Command: create ipv6route default System 3FFC::1

Success.

DGS-1510-28XMP/ME:admin#
```

### 34-2 delete ipv6route

#### Description

This command is used to delete an IPv6 static route. If the next hop is a global address, it is not needed to indicate the interface name. If the next hop is a link local address, then the interface name must be specified.

**Format**

**delete ipv6route [default] [<ipif\_name 12> <ipv6addr> | <ipv6addr> | all]**

**Parameters**

---

**default** - Specifies the default route.

---

**<ipif\_name 12>** - Enter the IP interface name used here. This name can be up to 12 characters long.

**<ipv6addr>** - Enter the next hop address for the default route.

---

**<ipv6addr>** - Enter the next hop address for the default route.

---

**all** - Specifies that all static created routes will be deleted.

---

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

**Example**

Delete an IPv6 static route:

```
DGS-1510-28XMP/ME:admin# delete ipv6route default System 3FFC::1
Command: delete ipv6route default System 3FFC::1

Success.

DGS-1510-28XMP/ME:admin#
```

**34-3 show ipv6route****Description**

This command is used to display IPv6 routes.

**Format**

**show ipv6route**

**Parameters**

None.

**Restrictions**

None.

**Example**

Show all the IPv6 routes:



```
DGS-1510-28XMP/ME:admin# show ipv6route
```

```
Command: show ipv6route
```

```
IPv6 Prefix: ::/0                                Protocol: Static  Metric: 1  
Next Hop   : 3001::254                          IPIF      : System  
Status     : Inactive
```

```
Total Entries: 1
```

```
DGS-1510-28XMP/ME:admin#
```

## Chapter 35 Jumbo Frame Command List

---

**enable jumbo\_frame**

---

**disable jumbo\_frame**

---

**show jumbo\_frame**

---

---

### 35-1 enable jumbo\_frame

#### Description

This command is used to configure the jumbo frame setting as enable.

#### Format

**enable jumbo\_frame**

#### Parameters

None.

#### Restrictions

Only Administrators and Operators can issue this command.

#### Example

To enable the Jumbo frame:

```
DGS-1510-28XMP/ME:admin#enable jumbo_frame
Command: enable jumbo_frame

The maximum size of jumbo frame is 9216 bytes.
Success.

DGS-1510-28XMP/ME:admin#
```

### 35-2 disable jumbo\_frame

#### Description

This command is used to configure the jumbo frame setting as disable.

#### Format

**disable jumbo\_frame**

#### Parameters

None.

## Restrictions

Only Administrators and Operators can issue this command.

## Example

To disable the Jumbo frame:

```
DGS-1510-28XMP/ME:admin# disable jumbo_frame
Command: disable jumbo_frame

Success.

DGS-1510-28XMP/ME:admin#
```

## 35-3 show jumbo\_frame

### Description

This command is used to display the current configuration of jumbo frame.

### Format

**show jumbo\_frame**

### Parameters

None.

### Restrictions

None.

## Example

To show the Jumbo frame:

```
DGS-1510-28XMP/ME:admin# show jumbo_frame
Command: show jumbo_frame

Jumbo Frame State : Disabled
Maximum Frame Size : 1536 Bytes

DGS-1510-28XMP/ME:admin#
```

## Chapter 36 Layer 2 Protocol Tunneling (L2PT) Command List

---

**enable l2protocol\_tunnel**

---

**disable l2protocol\_tunnel**

---

**config l2protocol\_tunnel ports** [<portlist> | all] type [uni tunneled\_protocol [{stp | gvrp | protocol\_mac [01-00-0C-CC-CC-CC | 01-00-0C-CC-CC-CD]}(1) | all] {threshold <value 0-65535>} | nni | none]

---

**show l2protocol\_tunnel** {[uni | nni]}

---

### 36-1 enable l2protocol\_tunnel

#### Description

This command is used to enable the Layer 2 protocol tunneling function.

#### Format

**enable l2protocol\_tunnel**

#### Parameters

None.

#### Restrictions

Only Administrators and Operators can issue this command.

#### Example

To enable the Layer 2 protocol tunneling function:

```
DGS-1510-28XMP/ME:admin# enable l2protocol_tunnel
Command: enable l2protocol_tunnel
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```

### 36-2 disable l2protocol\_tunnel

#### Description

This command is used to disable the L2PT function globally on the Switch.

#### Format

**disable l2protocol\_tunnel**

**Parameters**

None.

**Restrictions**

Only Administrators and Operators can issue this command.

**Example**

To disable the Layer 2 protocol tunneling function:

```
DGS-1510-28XMP/ME:admin# disable l2protocol_tunnel
Command: disable l2protocol_tunnel

Success.

DGS-1510-28XMP/ME:admin#
```

**36-3 config l2protocol\_tunnel ports****Description**

This command is used to configure Layer 2 protocol tunneling on ports. Layer 2 protocol tunneling is used to tunnel Layer 2 protocol packet. If a Layer 2 protocol is tunnel-enabled on an UNI, once received the PDU on this port, the multicast destination address of the PDU will be replaced by Layer 2 protocol tunneling multicast address. The Layer 2 protocol tunneling multicast address for STP is 01-05-5D-00-00-00, for GVRP is 01-05-5D-00-00-21, for Layer 2 protocols MAC 01-00-0C-CC-CC-CC is 01-05-5D-00-00-10 and for protocol MAC 01-00-0C-CC-CC-CD is 01-05-5D-00-00-11.

When QinQ is enabled, an S-TAG will be added to the Layer 2 PDU too. The S-TAG is assigned according QinQ VLAN configuration.

**Format**

**config l2protocol\_tunnel ports [<portlist> | all] type [uni tunneled\_protocol [{stp | gvrp | protocol\_mac [01-00-0C-CC-CC-CC | 01-00-0C-CC-CC-CD]}(1) | all] {threshold <value 0-65535>} | nni | none]**

**Parameters**

- 
- <portlist>** - Specifies a list of ports on which the Layer 2 protocol tunneling to be configured.
- 
- all** – Specifies to have all ports to be configured
- 
- type** - Specifies the type of the ports.
- uni** - Specifies the ports as UNI ports.
  - tunneled\_protocol** - Specifies tunneled protocols on the UNI ports.
    - stp** - Specifies to use the STP protocol.
    - gvrp** - Specifies to use the GVRP protocol.
    - protocol\_mac** - Specifies the destination MAC address of the L2 protocol packets that will tunneled on these UNI ports.
      - 01-00-0C-CC-CC-CC** - Specifies the MAC address as 01-00-0C-CC-CC-CC.
      - 01-00-0C-CC-CC-CD** - Specifies the MAC address as 01-00-0C-CC-CC-CD.
    - all** - Specifies that all tunnel-abled Layer 2 protocols will be tunneled on the ports.
  - threshold** - (Optional) Specifies the drop threshold for packets-per-second accepted on the UNI ports. The ports drop the PDU if the protocol's threshold is exceeded.
    - <value 0-65535>** - Enter the range of the threshold value is 0 to 65535 (packet/second). The value 0
-

---

means no limit. By default, the value is 0.

**nni** - Specifies the ports as NNI ports.

**none** - Specifies to disable tunnel on it.

---

## Restrictions

Only Administrators and Operators can issue this command.

## Example

To configure the STP tunneling on ports 1-4:

```
DGS-1510-28XMP/ME:admin# config l2protocol_tunnel ports 1-4 type uni tunneled_protocol stp
Command: config l2protocol_tunnel ports 1-4 type uni tunneled_protocol stp
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```

## 36-4 show l2protocol\_tunnel

### Description

This command is used to display Layer 2 protocol tunneling information.

### Format

**show l2protocol\_tunnel** {[uni | nni]}

### Parameters

---

**uni** - (Optional) Specifies to show UNI detail information, include tunneled and dropped PDU statistic.

---

**nni** - (Optional) Specifies to show NNI detail information, include de-capsulated Layer 2 PDU statistic.

---

### Restrictions

None.

### Example

To show Layer 2 protocol tunneling information summary:

```
DGS-1510-28XMP/ME:admin# show l2protocol_tunnel
Command: show l2protocol_tunnel
```

```
Global State : Enabled
```

```
UNI Ports    : 1-4
```

```
NNI Ports    :
```

```
DGS-1510-28XMP/ME:admin#
```

To show Layer 2 protocol tunneling information summary:

```
DGS-1510-28XMP/ME:admin# show l2protocol_tunnel uni
```

```
Command: show l2protocol_tunnel uni
```

UNI	Tunneled	Threshold
Port	Protocol	(packet/sec)
----	-----	-----
1	STP	0
2	STP	0
3	STP	0
4	STP	0

```
DGS-1510-28XMP/ME:admin#
```

## Chapter 37 Link Aggregation Command List

---

```
create link_aggregation group_id <value> {type [lACP | static]}
```

---

```
delete link_aggregation group_id <value>
```

---

```
config link_aggregation group_id <value> {master_port <port> | ports <portlist> | state [enable | disable]}
```

---

```
config link_aggregation algorithm [mac_source | mac_destination|mac_source_dest | ip_source | ip_destination | ip_source_dest]
```

---

```
show link_aggregation {group_id <value> | algorithm}
```

---

```
config lacp_port <portlist> mode [active | passive]
```

---

```
show lacp_port {<portlist>}
```

---

### 37-1 create link\_aggregation group\_id

#### Description

This command is used to create a link aggregation group on the Switch.

#### Format

```
create link_aggregation group_id <value> {type [lACP | static]}
```

#### Parameters

---

**<value >** - Enter the group ID value here.

---

**type** - (Optional) Specifies the group type is belong to static or LACP. If type is not specified, the default is static type.

**lACP** - Specifies to use LACP as the group type.

**static** - Specifies to use static as the group type.

---

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

#### Example

To create link aggregation group:

```
DGS-1510-28XMP/ME:admin# create link_aggregation group_id 1 type lacp
Command: create link_aggregation group_id 1 type lacp
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```



## 37-2 delete link\_aggregation group\_id

### Description

This command is used to delete a previously configured link aggregation group.

### Format

**delete link\_aggregation group\_id <value>**

### Parameters

---

**<value>** - Enter the group ID value here.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To delete link aggregation group:

```
DGS-1510-28XMP/ME:admin# delete link_aggregation group_id 3
Command: delete link_aggregation group_id 3

Success.

DGS-1510-28XMP/ME:admin#
```

## 37-3 config link\_aggregation group\_id

### Description

This command is used to configure a previously created link aggregation group. Port locking, port mirroring, traffic control, and 802.1X must not be enabled on the trunk group.

### Format

**config link\_aggregation group\_id <value> {master\_port <port> | ports <portlist> | state [enable | disable]}**

### Parameters

---

**<value>** - Enter the group ID value here.

---

**master\_port** - (Optional) Specifies the master port ID. Specifies which port (by port number) of the link aggregation group will be the master port. All of the ports in a link aggregation group will share the port configuration with the master port.

**<port>** - Enter the master port number here.

---

**ports** - (Optional) Specifies a range of ports that will belong to the link aggregation group.

**<portlist>** - Enter the list of ports used for the configuration here.

---

**state** - (Optional) Specifies to enable or disable the specified link aggregation group. If not specified, the group will keep the previous state. The default state is disabled. If configure LACP group, the ports' state machine will start.

---

---

**enable** - Specifies to enable the specified link aggregation group.

**disable** - Specifies to disable the specified link aggregation group.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To define a load-sharing group of ports:

```
DGS-1510-28XMP/ME:admin# config link_aggregation group_id 1 master_port 5 ports 5-7
```

```
Command: config link_aggregation group_id 1 master_port 5 ports 5-7
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```

## 37-4 config link\_aggregation algorithm

### Description

This command is used to configure the part of the packet examined by the Switch when selecting the egress port for transmitting load-sharing data. This feature is available using the address-based load-sharing algorithm, only.

### Format

```
config link_aggregation algorithm [mac_source | mac_destination|mac_source_dest | ip_source | ip_destination | ip_source_dest]
```

### Parameters

---

**mac\_source** - Specifies that the Switch should examine the MAC source address.

---

**mac\_destination** - Specifies that the Switch should examine the MAC destination address.

---

**mac\_source\_dest** - Specifies that the Switch should examine the MAC source and destination address.

---

**ip\_source** - Specifies that the Switch should examine the IP source address.

---

**ip\_destination** - Specifies that the Switch should examine the IP destination address.

---

**ip\_source\_dest** - Specifies that the Switch should examine the IP source address and destination address.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To configure link aggregation algorithm for mac-source-dest:

```
DGS-1510-28XMP/ME:admin# config link_aggregation algorithm mac_source_dest
Command: config link_aggregation algorithm mac_source_dest

Success.

DGS-1510-28XMP/ME:admin#
```

## 37-5 show link\_aggregation

### Description

This command is used to display the current link aggregation configuration on the Switch.

### Format

**show link\_aggregation {group\_id <value> | algorithm}**

### Parameters

**group\_id** - (Optional) Specifies the group id. The group number identifies each of the groups.

**<value>** - Enter the group ID value here.

**algorithm** - (Optional) Specifies to allow you to specify the display of link aggregation by the algorithm in use by that group.

If no parameter is specified, system will display all link aggregation information.

### Restrictions

None.

### Example

Link aggregation group enable:

```
DGS-1510-28XMP/ME:admin# show link_aggregation
Command: show link_aggregation

Link Aggregation Algorithm = MAC-Source-Dest

Group ID      : 1
Type         : LACP
Master Port   : 5
Member Port   : 5-7
Active Port   :
Status        : Enabled
Flooding Port : 7

Total Entries : 1

DGS-1510-28XMP/ME:admin#
```

Link aggregation group enable and no member linkup:

```
DGS-1510-28XMP/ME:admin# show link_aggregation
Command: show link_aggregation

Link Aggregation Algorithm = MAC-Source-Dest

Group ID      : 1
Type          : LACP
Master Port   : 5
Member Port   : 5-7
Active Port   :
Status        : Enabled
Flooding Port :

Total Entries : 1

DGS-1510-28XMP/ME:admin#
```

#### Link aggregation group disabled:

```
DGS-1510-28XMP/ME:admin# show link_aggregation
Command: show link_aggregation

Link Aggregation Algorithm = MAC-Source-Dest

Group ID      : 1
Type          : LACP
Master Port   : 5
Member Port   : 5-7
Active Port   :
Status        : Disabled
Flooding Port : 7

Total Entries : 1

DGS-1510-28XMP/ME:admin#
```

## 37-6 config lacp\_port

### Description

This command is used to configure per-port LACP mode.

### Format

**config lacp\_port <portlist> mode [active | passive]**

### Parameters

---

**<portlist>** - Enter the list of ports used for the configuration here.

---

**mode** - Specifies the LACP mode used.

**active** - Specifies to set the LACP mode as active.

**passive** - Specifies to set the LACP mode as passive.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure LACP mode on port 1-12:

```
DGS-1510-28XMP/ME:admin# config lacp_port 1-12 mode active
command: config lacp_port 1-12 mode active

Success.

DGS-1510-28XMP/ME:admin#
```

## 37-7 show lacp\_port

### Description

This command is used to display the current mode of LACP of the ports.

### Format

**show lacp\_port {<portlist>}**

### Parameters

---

**<portlist>** - (Optional) Enter the list of ports used for this configuration here.

---

If no parameter is specified, the system will display current LACP and all port status.

---

### Restrictions

None.

### Example

To show the LACP mode of the ports:

```
DGS-1510-28XMP/ME:admin#show lacp_port
```

```
Command: show lacp_port
```

```
Port      Activity
```

```
-----
```

```
1         Active
2         Active
3         Active
4         Active
5         Active
6         Active
7         Active
8         Active
9         Active
10        Active
11        Active
12        Active
13        Passive
14        Passive
15        Passive
16        Passive
17        Passive
18        Passive
```

```
CTRL+C ESC q Quit SPACE n Next Page ENTER Next Entry a All
```

## Chapter 38 Link Layer Discovery Protocol (LLDP) Command List

<b>enable lldp</b>
<b>disable lldp</b>
<b>config lldp</b> [message_tx_interval <sec 5-32768>   message_tx_hold_multiplier <int 2-10>   tx_delay <sec 1-8192>   reinit_delay <sec 1-10>]
<b>config lldp notification_interval</b> <sec 5-3600>
<b>config lldp ports</b> [<portlist>   all] [notification [enable   disable]   admin_status [tx_only   rx_only   tx_and_rx   disable]   mgt_addr [ipv4 <ipaddr>   ipv6 <ipv6addr>] [enable   disable]   basic_tlvs [{all}   {port_description   system_name   system_description   system_capabilities}] [enable   disable]   dot1_tlv_pvid [enable   disable]   dot1_tlv_protocol_vid [vlan [all   <vlan_name 32> ]   vlanid <vidlist>] [enable   disable]   dot1_tlv_vlan_name [vlan [all   <vlan_name 32> ]   vlanid <vidlist> ] [enable   disable]   dot1_tlv_protocol_identity [all   {eapol   lacp   gvrp   stp}] [enable   disable]   dot3_tlvs [{all}   {mac_phy_configuration_status   link_aggregation   power_via_mdi   maximum_frame_size}] [enable   disable]]
<b>config lldp forward_message</b> [enable   disable]
<b>show lldp</b>
<b>show lldp mgt_addr</b> {[ipv4 <ipaddr>   ipv6 <ipv6addr>]}
<b>show lldp ports</b> {<portlist>}
<b>show lldp local_ports</b> {<portlist>} {mode [brief   normal   detailed]}
<b>show lldp remote_ports</b> {<portlist>} {mode [brief   normal   detailed]}
<b>show lldp statistics</b>
<b>show lldp statistics ports</b> {<portlist>}

### 38-1 enable lldp

#### Description

This command is used to globally enable the LLDP function.

When this function is enabled, the Switch can start to transmit LLDP packets and receive and process the LLDP packets. The specific function of each port will depend on the per-port LLDP setting.

For the advertisement of LLDP packets, the Switch announces the information to its neighbor through ports. For the receiving of LLDP packets, the Switch will learn the information from the LLDP packets advertised from the neighbor in the neighbor table. The default state for LLDP is disabled.

#### Format

**enable lldp**

#### Parameters

None.

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To enable LLDP:

```
DGS-1510-28XMP/ME:admin# enable lldp
Command: enable lldp

Success.

DGS-1510-28XMP/ME:admin#
```

## 38-2 disable lldp

### Description

This command is used to stop sending and receiving of LLDP advertisement packet.

### Format

**disable lldp**

### Parameters

None.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To disable LLDP:

```
DGS-1510-28XMP/ME:admin# disable lldp
Command: disable lldp

Success.

DGS-1510-28XMP/ME:admin#
```

## 38-3 config lldp

### Description

This command is used to change the packet transmission interval.

### Format

**config lldp [message\_tx\_interval <sec 5-32768> | message\_tx\_hold\_multiplier <int 2-10> | tx\_delay <sec 1-8192> | reinit\_delay <sec 1-10>]**

### Parameters

---

**message\_tx\_interval** - Specifies to change the interval between consecutive transmissions of LLDP

---



---

advertisements on any given port. The default value is 30 seconds.

**<sec 5-32768>** - Enter the message transmit interval value here. This value must be between 5 and 32768 seconds.

---

**message\_tx\_hold\_multiplier** - Specifies to configure the message hold multiplier. The default value is 4.

**<int 2-10>** - Enter the message transmit hold multiplier value here. This value must be between 2 and 10.

---

**tx\_delay** - Specifies the minimum interval between sending of LLDP messages due to constantly change of MIB content. The default value is 2 seconds.

**<sec 1-8192>** - Enter the transmit delay value here. This value must be between 1 and 8192 seconds.

---

**reinit\_delay** - Specifies the minimum time of reinitialization delay interval. The default value is 2 seconds.

**<sec 1-10>** - Enter the re-initiate delay value here. This value must be between 1 and 10 seconds.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To change the packet transmission interval:

```
DGS-1510-28XMP/ME:admin# config lldp message_tx_interval 30
Command: config lldp message_tx_interval 30

Success.

DGS-1510-28XMP/ME:admin#
```

## 38-4 config lldp notification\_interval

### Description

This command is used to configure the timer of notification interval for sending notification to configured SNMP trap receiver(s).

### Format

**config lldp notification\_interval <sec 5-3600>**

### Parameters

---

**<sec 5-3600>** - Enter the notification interval value here. This value must be between 5 and 3600 seconds. The default setting is 5 seconds.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To changes the notification interval to 10 second:

```
DGS-1510-28XMP/ME:admin# config lldp notification_interval 10
Command: config lldp notification_interval 10

Success.

DGS-1510-28XMP/ME:admin#
```

## 38-5 config lldp ports

### Description

This command is used to configure each port for sending a notification to configure the SNMP trap receiver(s).

### Format

```
config lldp ports [<portlist> | all] [notification [enable | disable] | admin_status [tx_only | rx_only |
tx_and_rx | disable] | mgt_addr [ipv4 <ipaddr> | ipv6 <ipv6addr>] [enable | disable] | basic_tlvs [{all} |
{port_description | system_name | system_description | system_capabilities}] [enable | disable] |
dot1_tlv_pvid [enable | disable] | dot1_tlv_protocol_vid [vlan [all | <vlan_name 32> ] | vlanid <vidlist>]
[enable | disable] | dot1_tlv_vlan_name [vlan [all | <vlan_name 32> ] | vlanid <vidlist> ] [enable | disable] |
dot1_tlv_protocol_identity [all | {eapol | lacp | gvrp | stp}] [enable | disable] | dot3_tlvs [{all} |
{mac_phy_configuration_status | link_aggregation | power_via_mdi | maximum_frame_size}] [enable |
disable]]
```

### Parameters

---

**<portlist>** - Enter a list of ports used for the configuration here.

---

**all** - Specifies that all the ports will be used for this configuration.

---

**notification** - Specifies to enable or disable the SNMP trap notification of LLDP data changes detected on advertisements received from neighbor devices. The default notification state is disable.

**enable** - Specifies that the SNMP trap notification of LLDP data changes detected will be enabled.

**disable** - Specifies that the SNMP trap notification of LLDP data changes detected will be disabled.

---

**admin\_status** - Specifies the per-port transmit and receive modes.

**tx\_only** - Specifies to transmit LLDP packets, but block inbound LLDP packets from neighbor devices.

**rx\_only** - Specifies to receive LLDP packets from neighbors, but block outbound packets to neighbors.

**tx\_and\_rx** - Specifies to both transmit and receive LLDP packets.

**disable** - Specifies to disable LLDP packet transmit and receive on the specified port(s).

---

**mgt\_addr** - Specifies the management address used.

**ipv4** - Specifies the IPv4 address used.

**<ipaddr>** - Enter the IP address used for this configuration here.

**ipv6** - Specifies the IPv6 address used.

**<ipv6addr>** - Enter the IPv6 address used for this configuration here.

**enable** - Specifies that the advertising indicated management address instance will be enabled.

**disable** - Specifies that the advertising indicated management address instance will be disabled.

---

**basic\_tlvs** - Specifies the basic TLV data types used from outbound LLDP advertisements.

**all** - (Optional) Specifies that all the basic TLV data types will be used.

**port\_description** - (Optional) Specifies that the LLDP agent should transmit 'Port Description TLV' on the port. The default state is disable.

**system\_name** - (Optional) Specifies that the LLDP agent should transmit 'System Name TLV'. The default state is disable.

**system\_description** - (Optional) Specifies that the LLDP agent should transmit 'System Description TLV'. The

---

---

default state is disable.

**system\_capabilities** - (Optional) Specifies that the LLDP agent should transmit 'System Capabilities TLV'. The system capability will indicate whether the device provides repeater, bridge, or router function, and whether the provided functions are currently enabled. The default state is disable.

**enable** - Specifies that the basic TLV data types used from outbound LLDP advertisements will be enabled.

**disable** - Specifies that the basic TLV data types used from outbound LLDP advertisements will be disabled.

---

**dot1\_tlv\_pvid** - Specifies that whether the IEEE 802.1 organizationally defined port VLAN ID TLV transmission is allowed on a given LLDP transmission capable port. The default state is disable.

**enable** - Specifies that the Dot1 TLV PVID option will be enabled.

**disable** - Specifies that the Dot1 TLV PVID option will be disabled.

---

**dot1\_tlv\_protocol\_vid** - Specifies that whether the IEEE 802.1 organizationally defined port and protocol VLAN ID TLV transmission is allowed on a given LLDP transmission capable port. The default state is disable.

**vlan** - Specifies the VLAN used for this configuration.

**all** - Specifies that all the configured VLANs will be used for this configuration.

**<vlan\_name 32>** - Enter the name of the VLAN here. This name can be up to 32 characters long.

**vlanid** - Specifies the VLAN ID used for this configuration.

**<vlanid\_list>** - Enter the ID of the VLAN here.

**enable** - Specifies that the Dot1 TLV protocol VID will be enabled.

**disable** - Specifies that the Dot1 TLV protocol VID will be disabled.

---

**dot1\_tlv\_vlan\_name** - Specifies that whether the corresponding Local System's VLAN name instance will be transmitted on the port. If a port is associated with multiple VLANs, those enabled VLAN ID will be advertised. The default state is disable.

**vlan** - Specifies the VLAN used for this configuration.

**all** - Specifies that all the configured VLANs will be used for this configuration.

**<vlan\_name 32>** - Enter the name of the VLAN here. This name can be up to 32 characters long.

**vlanid** - Specifies the VLAN ID used for this configuration.

**<vlanid\_list>** - Enter the ID of the VLAN here.

**enable** - Specifies that the Dot1 TLV VLAN name will be enabled.

**disable** - Specifies that the Dot1 TLV VLAN name will be disabled.

---

**dot1\_tlv\_protocol\_identity** - Specifies that whether the corresponding Local System's Protocol Identity instance will be transmitted on the port. The Protocol Identity TLV provides a way for stations to advertise protocols that are important to the operation of the network. Such as Spanning Tree Protocol, the Link Aggregation Control Protocol, and numerous vendor proprietary variations are responsible for maintaining the topology and connectivity of the network. If EAPOL, GVRP, STP (including MSTP), and LACP protocol identity is enabled on this port and it is enabled to be advertised, then this protocol identity will be advertised. The default state is disable.

**all** - Specifies that all the vendor proprietary protocols will be advertised.

**eapol** - (Optional) Specifies that the EAPOL protocol will be advertised.

**lACP** - (Optional) Specifies that the LACP protocol will be advertised.

**gvrp** - (Optional) Specifies that the GVRP protocol will be advertised.

**stp** - (Optional) Specifies that the STP protocol will be advertised.

**enable** - Specifies that the protocol identity TLV according to the protocol specified will be advertised.

**disable** - Specifies that the protocol identity TLV according to the protocol specified will not be advertised.

---

**dot3\_tlvs** - Specifies that the IEEE 802.3 specific TLV data type will be configured.

**all** - (Optional) Specifies that all the IEEE 802.3 specific TLV data type will be used.

**mac\_phy\_configuration\_status** - (Optional) Specifies that the LLDP agent should transmit 'MAC/PHY configuration/status TLV'. This type indicates it is possible for two ends of an IEEE 802.3 link to be configured with different duplex and/or speed settings and still establish some limited network connectivity. More precisely, the information includes whether the port supported the auto-negotiation function, whether the function is enabled, the auto-negotiated advertised capability, and the operational MAU type. The default state is disabled.

**link\_aggregation** - (Optional) Specifies that the LLDP agent should transmit 'Link Aggregation TLV'. This type indicates the current link aggregation status of IEEE 802.3 MACs. More precisely, the information should

---

include whether the port is capable of doing link aggregation, whether the port is aggregated in a aggregated link, and the aggregated port ID. The default state is disable.

**power\_via\_mdi** - (Optional) Specifies that the LLDP agent should transmit 'Power via MDI TLV'. Three IEEE 802.3 PMD implementations (10BASE-T, 100BASE-TX, and 1000BASE-T) allow power to be supplied over the link for connected non-powered systems. The Power Via MDI TLV allows network management to advertise and discover the MDI power support capabilities of the sending IEEE 802.3 LAN station. The default state is disabled.

**maximum\_frame\_size** - (Optional) Specifies that the LLDP agent should transmit 'Maximum-frame-size TLV'. The default state is disabled.

**enable** - Specifies that the IEEE 802.3 specific TLV data type selected will be advertised.

**disable** - Specifies that the IEEE 802.3 specific TLV data type selected will be not advertised.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To enable SNMP notifications from port 1-5:

```
DGS-1510-28XMP/ME:admin# config lldp ports 1-5 notification enable
Command: config lldp ports 1-5 notification enable

Success.

DGS-1510-28XMP/ME:admin#
```

To configure port 1-5 to transmit and receive:

```
DGS-1510-28XMP/ME:admin# config lldp ports 1-5 admin_status tx_and_rx
Command: config lldp ports 1-5 admin_status tx_and_rx

Success.

DGS-1510-28XMP/ME:admin#
```

To enable ports 1-2 for manage address entry:

```
DGS-1510-28XMP/ME:admin# config lldp ports 1-2 mgt_addr ipv4 10.90.90.90 enable
Command: config lldp ports 1-2 mgt_addr ipv4 10.90.90.90 enable

Success.

DGS-1510-28XMP/ME:admin#
```

To configure exclude the system name TLV from the outbound LLDP advertisements for all ports:

```
DGS-1510-28XMP/ME:admin# config lldp ports all basic_tlvs system_name enable
Command: config lldp ports all basic_tlvs system_name enable

Success.

DGS-1510-28XMP/ME:admin#
```

To configure exclude the vlan nameTLV from the outbound LLDP advertisements for all ports:

```
DGS-1510-28XMP/ME:admin# config lldp ports all dot1_tlv_pvid enable
Command: config lldp ports all dot1_tlv_pvid enable

Success.

DGS-1510-28XMP/ME:admin#
```

To configure exclude the port and protocol VLAN ID TLV from the outbound LLDP advertisements for all ports:

```
DGS-1510-28XMP/ME:admin# config lldp ports all dot1_tlv_protocol_vid vlanid 1-3 enable
Command: config lldp ports all dot1_tlv_protocol_vid vlanid 1-3 enable

Success.

DGS-1510-28XMP/ME:admin#
```

To configure exclude the VLAN name TLV from the outbound LLDP advertisements for all ports:

```
DGS-1510-28XMP/ME:admin# config lldp ports all dot1_tlv_vlan_name vlanid 1-3 enable
Command: config lldp ports all dot1_tlv_vlan_name vlanid 1-3 enable

Success.

DGS-1510-28XMP/ME:admin#
```

To configure exclude the protocol identity TLV from the outbound LLDP advertisements for all ports:

```
DGS-1510-28XMP/ME:admin# config lldp ports all dot1_tlv_protocol_identity all enable
Command: config lldp ports all dot1_tlv_protocol_identity all enable

Success.

DGS-1510-28XMP/ME:admin#
```

To configure exclude the MAC/PHY configuration/status TLV from the outbound LLDP advertisements for all ports:

```
DGS-1510-28XMP/ME:admin# config lldp ports all dot3_tlvs mac_phy_configuration_status enable
Command: config lldp ports all dot3_tlvs mac_phy_configuration_status enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 38-6 config lldp forward\_message

### Description

This command is used to configure forwarding of LLDP PDU packet when LLDP is disabled.

### Format

**config lldp forward\_message [enable | disable]**

### Parameters

---

**enable** - Specifies to enable the forwarding of the LLDP PDU packets when LLDP is disabled.

---

**disable** - Specifies to disable the forwarding of the LLDP PDU packets when LLDP is disabled.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To configure LLDP to forward LLDP PDUs:

```
DGS-1510-28XMP/ME:admin# config lldp forward_message enable
Command: config lldp forward_message enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 38-7 show lldp

### Description

This command is used to display the Switch's general LLDP configuration status.

### Format

**show lldp**

### Parameters

None.

### Restrictions

None.

### Example

To display the LLDP system level configuration status:

```

DGS-1510-28XMP/ME:admin# show lldp
Command: show lldp

LLDP System Information
  Chassis ID Subtype      : MAC Address
  Chassis ID              : 00-01-02-03-04-00
  System Name             :
  System Description      : Fast Ethernet Switch
  System Capabilities     : Repeater, Bridge

LLDP Configurations
  LLDP Status             : Enabled
  LLDP Forward Status     : Enabled
  Message TX Interval    : 30
  Message TX Hold Multiplier: 4
  ReInit Delay           : 2
  TX Delay                : 2
  Notification Interval  : 10

DGS-1510-28XMP/ME:admin#

```

## 38-8 show lldp mgt\_addr

### Description

This command is used to display the LLDP management address information.

### Format

**show lldp mgt\_addr {[ipv4 <ipaddr> | ipv6 <ipv6addr>]}**

### Parameters

---

**ipv4** - (Optional) Specifies the IPv4 address used for the display.

**<ipaddr>** - Enter the IPv4 address used for this configuration here.

---

**ipv6** - (Optional) Specifies the IPv6 address used for the display.

**<ipv6addr>** - Enter the IPv6 address used for this configuration here.

---

### Restrictions

None.

### Example

To display management address information:

```
DGS-1510-28XMP/ME:admin# show lldp mgt_addr ipv4 10.90.90.90
Command: show lldp mgt_addr ipv4 10.90.90.90

Address 1 :
-----
Subtype                : IPv4
Address                : 10.90.90.90
IF Type               : IfIndex
OID                   : 1.3.6.1.4.1.171.10.113.8.1
Advertising Ports     : 1-2,5

DGS-1510-28XMP/ME:admin#
```

## 38-9 show lldp ports

### Description

This command is used to display the LLDP per port configuration for advertisement options.

### Format

**show lldp ports {<portlist>}**

### Parameters

---

**<portlist>** - (Optional) Specifies a range of ports to be displayed.

---

If no parameter is specified, information for all the ports will be displayed.

---

### Restrictions

None.

### Example

To display the LLDP port 1 TLV option configuration:



```

DGS-1510-28XMP/ME:admin# show lldp ports 1
Command: show lldp ports 1

Port ID                : 1
-----
Admin Status           : TX_and_RX
Notification Status    : Enabled
Advertised TLVs Option :
  Port Description      Disabled
  System Name           Enabled
  System Description    Disabled
  System Capabilities   Disabled
  Enabled Management Address
    10.90.90.90
  Port VLAN ID          Enabled
  Enabled Port_and_Protocol_VLAN_ID
    1, 2, 3
  Enabled VLAN Name     1-3
  Enabled Protocol_Identity
    (None)
  MAC/PHY Configuration/Status Disabled
  Power Via MDI         Disabled
  Link Aggregation      Disabled
  Maximum Frame Size    Disabled

DGS-1510-28XMP/ME:admin#

```

## 38-10 show lldp local\_ports

### Description

This command is used to display the per-port information currently available for populating outbound LLDP advertisements.

### Format

**show lldp local\_ports** {<portlist>} {mode [brief | normal | detailed]}

### Parameters

**<portlist>** - (Optional) Specifies a range of ports to be configured. When port list is not specified, information for all ports will be displayed.

**mode** - (Optional) Specifies the display mode.

**brief** - Specifies to display the information in brief mode.

**normal** - Specifies to display the information in normal mode. This is the default display mode.

**detailed** - Specifies to display the information in detailed mode.

### Restrictions

None.

## Example

To display outbound LLDP advertisements for port 1 in detailed mode. Port description on the display should use the same value as ifDescr.

```
DGS-1510-28XMP/ME:admin# show lldp local_ports 1 mode detailed
Command: show lldp local_ports 1 mode detailed

Port ID : 1
-----
Port ID Subtype           : Local
Port ID                   : 1
Port Description          : D-Link DGS-1510-28XMP/ME R1.00.
                          018 Port 1
Port PVID                 : 1
Management Address Count : 1
  Subtype                 : IPv4
  Address                  : 10.90.90.90
  IF Type                  : IfIndex
  OID                     : 1.3.6.1.4.1.171.10.141.8.1

PPVID Entries Count      : 0
  (None)
VLAN Name Entries Count  : 1
  Entry 1 :
    VLAN ID               : 1
    VLAN Name              : default

Protocol Identity Entries Count : 0
CTRL+C ESC q Quit SPACE n Next Page ENTER Next Entry a All
```

To display outbound LLDP advertisements for port 1 in normal mode:

```
DGS-1510-28XMP/ME:admin# show lldp local_ports 1 mode normal
Command: show lldp local_ports 1 mode normal

Port ID : 1
-----
Port ID Subtype           : Local
Port ID                   : 1
Port Description          : D-Link DGS-1510-28XMP/ME R1.00.
                          018 Port 1
Port PVID                  : 1
Management Address Count  : 1
PPVID Entries Count       : 0
VLAN Name Entries Count   : 1
Protocol Identity Entries Count : 0
MAC/PHY Configuration/Status : (See Detail)
Power Via MDI              : (See Detail)
Link Aggregation          : (See Detail)
Maximum Frame Size        : 1536

DGS-1510-28XMP/ME:admin#
```

To display outbound LLDP advertisements for port 1 in brief mode:

```
DGS-1510-28XMP/ME:admin# show lldp local_ports 1 mode brief
Command: show lldp local_ports 1 mode brief

Port ID : 1
-----
Port ID Subtype           : Local
Port ID                   : 1
Port Description          : D-Link DGS-1510-28XMP/ME R1.00.
                          018 Port 1

DGS-1510-28XMP/ME:admin#
```

## 38-11 show lldp remote\_ports

### Description

This command is used to display the information learned from the neighbor parameters.

### Format

**show lldp remote\_ports** {<portlist>} {mode [brief | normal | detailed]}

### Parameters

---

**<portlist>** - (Optional) Specifies a range of ports to be configured. When port list is not specified, information for all ports will be displayed.

---

**mode** – (Optional) Specifies to display the information in various modes.

---

**brief** - Specifies to display the information in brief mode.

**normal** - Specifies to display the information in normal mode. This is the default display mode.

**detailed** - Specifies to display the information in detailed mode.

---

## Restrictions

None.

## Example

To display remote table in brief mode:

```
DGS-1510-28XMP/ME:admin# show lldp remote_ports 3 mode brief
Command: show lldp remote_ports 3 mode brief

Port ID : 3
-----
Remote Entities Count : 1
Entity 1
  Chassis ID Subtype      : MAC Address
  Chassis ID              : 00-12-13-04-05-00
  Port ID Subtype        : MAC Address
  Port ID                 : 00-12-13-04-05-03
  Port Description       : D-Link DGS-1510-28XMP/ME
                        R1.00.018 Port 3

DGS-1510-28XMP/ME:admin#
```

To display remote table in normal mode:

```
DGS-1510-28XMP/ME:admin# show lldp remote_ports 3 mode normal
Command: show lldp remote_ports 3 mode normal

Port ID : 3
-----
Remote Entities Count : 1
Entity 1
  Chassis ID Subtype      : MAC Address
  Chassis ID              : 00-12-13-04-05-00
  Port ID Subtype        : MAC Address
  Port ID                 : 00-12-13-04-05-03
  Port Description        : D-Link DGS-1510-28XMP/ME
                          R1.00.018 Port 3
  System Name             :
  System Description      : Gigabit Ethernet Switch
  System Capabilities     : Repeater, Bridge
  Management Address Count : 1
  Port PVID               : 1
  PPVID Entries Count     : 0
  VLAN Name Entries Count : 0
  Protocol ID Entries Count : 0
  MAC/PHY Configuration/Status : (See Detail)
  Power Via MDI           : (None)
  Link Aggregation        : (See Detail)
  Maximum Frame Size      : 1536
  Unknown TLVs Count      : 0

DGS-1510-28XMP/ME:admin#
```

To display remote table in detailed mode:

```
DGS-1510-28XMP/ME:admin# show lldp remote_ports 3 mode detailed
```

```
Command: show lldp remote_ports 3 mode detailed
```

```
Port ID : 3
```

```
-----  
Remote Entities Count : 1
```

```
Entity 1
```

```
Chassis ID Subtype      : MAC Address  
Chassis ID              : 00-12-13-04-05-00  
Port ID Subtype        : MAC Address  
Port ID                 : 00-12-13-04-05-03  
Port Description       : D-Link DGS-1510-28XMP/ME  
                        R1.00.018 Port 3
```

```
System Name             :  
System Description     : Gigabit Ethernet Switch  
System Capabilities    : Repeater, Bridge  
Management Address Count : 1
```

```
Entry 1 :
```

```
Subtype                 : IPv4  
Address                 : 10.90.90.90  
IF Type                 : IfIndex  
OID                     : 1.3.6.1.4.1.171.10.113.9.1
```

```
Port PVID               : 1
```

```
PPVID Entries Count    : 0  
(None)
```

```
VLAN Name Entries Count : 0  
(None)
```

```
Protocol ID Entries Count : 0  
(None)
```

```
MAC/PHY Configuration/Status :  
Auto-Negotiation Support    : Supported  
Auto-Negotiation Status     : Enabled  
Auto-Negotiation Advertised Capability : 6c00(hex)  
Auto-Negotiation Operational MAU Type : 0010(hex)
```

```
Power Via MDI           : (None)
```

```
Link Aggregation        :  
Aggregation Capability   : Aggregated  
Aggregation Status      : Not Currently in Aggregation  
Aggregation Port ID     : 0
```

```
Maximum Frame Size      : 1536
```

```
Unknown TLVs Count     : 0  
(None)
```

```
DGS-1510-28XMP/ME:admin#
```

## 38-12 show lldp statistics

### Description

This command is used to display an overview of neighbor detection activity on the Switch.

### Format

**show lldp statistics**

### Parameters

None.

### Restrictions

None.

### Example

To display global statistics information:

```
DGS-1510-28XMP/ME:admin# show lldp statistics
Command: show lldp statistics

Last Change Time      : 1792
Number of Table Insert : 0
Number of Table Delete : 0
Number of Table Drop   : 0
Number of Table Ageout : 0

DGS-1510-28XMP/ME:admin#
```

## 38-13 show lldp statistics ports

### Description

This command is used to display per-port LLDP statistics

### Format

**show lldp statistics ports {<portlist>}**

### Parameters

---

**<portlist>** - (Optional) Specifies a range of ports to be configured.

---

If no parameter is specified, information for all ports will be displayed.

---

### Restrictions

None.

**Example**

To display statistics information of port 1:

```
DGS-1510-28XMP/ME:admin# show lldp statistics ports 1
```

```
Command: show lldp statistics ports 1
```

```
Port ID : 1
```

```
-----  
LLDPStatsTXPortFramesTotal      : 23  
LLDPStatsRXPortFramesDiscardedTotal : 0  
LLDPStatsRXPortFramesErrors     : 0  
LLDPStatsRXPortFramesTotal      : 0  
LLDPStatsRXPortTLVsDiscardedTotal : 0  
LLDPStatsRXPortTLVsUnrecognizedTotal : 0  
LLDPStatsRXPortAgeoutsTotal     : 0
```

```
DGS-1510-28XMP/ME:admin#
```



## Chapter 39 LLDP-MED Command List

---

```
config lldp_med fast_start repeat_count <value 1 - 10>
```

---

```
config lldp_med log state [enable | disable]
```

---

```
config lldp_med notification topo_change ports [<portlist> | all] state [enable | disable]
```

---

```
config lldp_med ports [<portlist> | all] med_transmit_capabilities [all | {capabilities | network_policy | power_pse | inventory}(1)] state [enable | disable]
```

---

```
show lldp_med ports {<portlist>}
```

---

```
show lldp_med
```

---

```
show lldp_med local_ports {<portlist>}
```

---

```
show lldp_med remote_ports {<portlist>}
```

---

### 39-1 config lldp\_med fast\_start repeat\_count

#### Description

This command is used to configure the fast start repeat count. When an LLDP-MED Capabilities TLV is detected for an MSAP identifier not associated with an existing LLDP remote system MIB, the application layer shall start the fast start mechanism and set the 'medFastStart' timer to 'medFastStartRepeatCount' times 1.

#### Format

```
config lldp_med fast_start repeat_count <value 1 - 10>
```

#### Parameters

---

```
<value 1-10> - Enter a fast start repeat count value between 1 and 10. The default value is 4.
```

---

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

#### Example

To configure a LLDP-MED fast start repeat count of 5:

```
DGS-1510-28XMP/ME:admin#config lldp_med fast_start repeat_count 5
Command: config lldp_med fast_start repeat_count 5

Success.

DGS-1510-28XMP/ME:admin#
```

### 39-2 config lldp\_med log state

#### Description

This command is used to configure the log state of LLDP-MED events.

## Format

**config lldp\_med log state [enable | disable]**

## Parameters

---

**enable** - Specifies to enable the log state for LLDP-MED events.

---

**disable** - Specifies to disable the log state for LLDP-MED events. The default is disabled.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To enable the log state of LLDP-MED events:

```
DGS-1510-28XMP/ME:admin#config lldp_med log state enable
Command: config lldp_med log state enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 39-3 config lldp\_med notification topo\_change ports

### Description

This command is used to enable or disable each port for sending topology change notification to configured SNMP trap receiver(s) if an endpoint device is removed or moved to another port.

### Format

**config lldp\_med notification topo\_change ports [<portlist> | all] state [enable | disable]**

### Parameters

---

**<portlist>** - Enter a range of ports to be configured.

---

**all** - Specifies to set all ports in the system.

---

**state** - Specifies to enable or disable the SNMP trap notification of topology change detected state.

**enable** - Specifies to enable the SNMP trap notification of topology change detected.

**disable** - Specifies to disable the SNMP trap notification of topology change detected. The default notification state is disabled.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To enable topology change notification on ports 1 to 2:

```
DGS-1510-28XMP/ME:admin#config lldp_med notification topo_change ports 1-2 state enable
Command: config lldp_med notification topo_change ports 1-2 state enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 39-4 config lldp\_med ports

### Description

This command is used to enable or disable transmitting LLDP-MED TLVs. It effectively disables LLDP-MED on a per-port basis by disabling transmission of TLV capabilities. In this case, the remote table's objects in the LLDP-MED MIB corresponding to the respective port will not be populated.

### Format

```
config lldp_med ports [<portlist> | all] med_transmit_capabilities [all | {capabilities | network_policy |
power_pse | inventory}(1)] state [enable | disable]
```

### Parameters

---

**<portlist>** - Enter a range of ports to be configured.

---

**all** - Specifies to set all ports in the system.

---

**med\_transmit\_capabilities** - Specifies to send the LLDP-MED TLV capabilities specified.

**all** - Specifies to send capabilities, network policy, and inventory.

**capabilities** - Specifies that the LLDP agent should transmit "LLDP-MED capabilities TLV." If a user wants to transmit LLDP-MED PDU, this TLV type should be enabled. Otherwise, this port cannot transmit LLDP-MED PDU.

**network\_policy** - Specifies that the LLDP agent should transmit "LLDP-MED network policy TLV."

**power\_pse** - Specifies that the LLDP agent should transmit 'LLDP-MED extended Power via MDI TLV' if the local device is a PSE device.

---

**inventory** - Specifies that the LLDP agent should transmit "LLDP-MED inventory TLV."

---

**state** - Specifies to enable or disable the transmitting of LLDP-MED TLVs.

**enable** - Specifies to enable the transmitting of LLDP-MED TLVs.

---

**disable** - Specifies to disable the transmitting of LLDP-MED TLVs.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To enable transmitting all capabilities on all ports:

```
DGS-1510-28XMP/ME:admin#config lldp_med ports all med_transmit_capabilities all state enable
Command: config lldp_med ports all med_transmit_capabilities all state enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 39-5 show lldp\_med ports

### Description

This command is used to display LLDP-MED per port configuration for advertisement options.

### Format

**show lldp\_med ports {<portlist>}**

### Parameters

---

**<portlist>** - (Optional) Enter a range of ports to be displayed.

---

If a port list is not specified, information for all ports will be displayed.

---

### Restrictions

None.

### Example

To display LLDP-MED configuration information for port 1:

```
DGS-1510-28XMP/ME:admin#show lldp_med ports 1
Command: show lldp_med ports 1

Port ID                : 1
-----
Topology Change Notification Status      :Enabled
LLDP-MED Capabilities TLV                :Enabled
LLDP-MED Extended Power Via MDI PSE TLV  :Enabled
LLDP-MED Inventory TLV                   :Enabled
```

```
DGS-1510-28XMP/ME:admin#
```

## 39-6 show lldp\_med

### Description

This command is used to display the Switch's general LLDP-MED configuration status.

### Format

**show lldp\_med**

### Parameters

None.

### Restrictions

None.

**Example**

To display the Switch's general LLDP-MED configuration status:

```
DGS-1510-28XMP/ME:admin#show lldp_med
Command: show lldp_med

LLDP-MED System Information:
  Device Class           : Network Connectivity Device
  Hardware Revision      : A1
  Firmware Revision      : 1.00.001
  Software Revision      : 1.00.012
  Serial Number          : T3941C1000029
  Manufacturer Name      : D-Link
  Model Name             : DGS-1510-28XMP/ME Gigabit Ethern
  Asset ID               :
  PoE Device Type        : PSE Device
  PoE PSE Power Source   : Primary

LLDP-MED Configuration:
  Fast Start Repeat Count : 5

LLDP-MED Log State:Enabled

DGS-1510-28XMP/ME:admin#
```

**39-7 show lldp\_med local\_ports****Description**

This command is used to display the per-port LLDP-MED information currently available for populating outbound LLDP-MED advertisements.

**Format**

```
show lldp_med local_ports {<portlist>}
```

**Parameters**


---

**<portlist>** - (Optional) Enter a range of ports to be displayed.

---

**Restrictions**

None.

**Example**

To display LLDP-MED information currently available for populating outbound LLDP-MED advertisements for port 1:

```
DGS-1510-28XMP/ME:admin#show lldp_med local_ports 1
```

```
Command: show lldp_med local_ports 1
```

```
Port ID          : 1
```

```
-----  
LLDP-MED Capabilities Support:
```

```
  Capabilities          :Support  
  Network Policy       :Not Support  
  Location Identification :Not Support  
  Extended Power Via MDI PSE :Support  
  Extended Power Via MDI PD :Not Support  
  Inventory            :Support
```

```
Extended Power Via MDI:
```

```
  Power Priority        :Low  
  Power Value          :162
```

```
DGS-1510-28XMP/ME:admin#
```

## 39-8 show lldp\_med remote\_ports

### Description

This command is used to display LLDP-MED information learned from neighbors.

### Format

```
show lldp_med remote_ports {<portlist>}
```

### Parameters

---

**<portlist>** - (Optional) Enter a range of ports to be displayed.

---

### Restrictions

None.

### Example

To display remote entry information:

```

DGS-1510-28XMP/ME:admin#show lldp_med remote_ports 1
Command: show lldp_med remote_ports 1

Port ID : 1
-----
Remote Entities Count : 1
Entity 1
  Chassis ID Subtype      : MAC Address
  Chassis ID              : 00-01-02-03-04-00
  Port ID Subtype        : Net Address
  Port ID                 : 172.18.10.11

LLDP-MED capabilities:
  LLDP-MED Device Class: Endpoint Device Class III
  LLDP-MED Capabilities Support:
    Capabilities          : Support
    Network Policy        : Support
    Location Identification : Support
    Extended Power Via MDI : Support
    Inventory             : Support
  LLDP-MED Capabilities Enabled:
    Capabilities          : Enabled
    Network Policy        : Enabled
    Location Identification : Enabled
    Extended Power Via MDI : Enabled
    Inventory             : Enabled

Network Policy:
  Application Type : Voice
  VLAN ID         :
  Priority         :
  DSCP            :
  Unknown         : True
  Tagged          :
  Application Type : Softphone Voice
  VLAN ID         : 200
  Priority         : 7
  DSCP            : 5
  Unknown         : False
  Tagged          : True

Location Identification:
  Location Subtype: CoordinateBased
    Location Information :
  Location Subtype: CivicAddress
    Location Information :

Extended Power Via MDI
  Power Device Type: PD Device

    Power Priority      : High
    Power Source        : From PSE
    Power Request       : 8 Watts

Inventory Management:

```

Hardware Revision	:
Firmware Revision	:
Software Revision	:
Serial Number	:
Manufacturer Name	:
Model Name	:
Asset ID	:

DGS-1510-28XMP/ME:admin#



# Chapter 40 Loop Back Detection (LBD)

## Command List

---

```
config loopdetect {recover_timer [<value 0> | <sec 60-1000000>] | interval <sec 1-32767> | mode [port-based |
vlan-based]}
```

---

```
config loopdetect ports [<portlist> | all] state [enable | disable]
```

---

```
enable loopdetect
```

---

```
disable loopdetect
```

---

```
show loopdetect
```

---

```
show loopdetect ports {<portlist>}
```

---

```
config loopdetect trap [none | loop_detected | loop_cleared | both]
```

---

```
config loopdetect log state [enable | disable]
```

---

### 40-1 config loopdetect

#### Description

This command is used to setup the loop-back detection function (LBD) for the entire Switch.

#### Format

```
config loopdetect {recover_timer [<value 0> | <sec 60-1000000>] | interval <sec 1-32767> | mode [port-
based | vlan-based]}
```

#### Parameters

---

**recover\_timer** - (Optional) Specifies the time interval, in seconds, used by the Auto-Recovery mechanism to decide how long to check before determining that the loop status has gone. The valid range is from 60 to 1000000. The default value is 60 seconds.

**<value 0>** - Enter 0 to disable the auto-recovery mechanism. When the auto-recovery mechanism is disabled, a user would need to manually recover a disabled port.

**<sec 60-1000000>** - Enter the recovery timer value here. This value must be between 60 and 1000000 seconds.

---

**interval** - (Optional) Specifies the time interval, in seconds, that the device will transmit all the CTP (Configuration Test Protocol) packets to detect a loop-back event. The default value is 10 seconds.

**<sec 1-32767>** - Enter the time interval value here. This value must be between 1 and 32767 seconds.

---

**mode** - (Optional) Specifies the loop-detection operation mode. In port-based mode, the port will be shut down (disabled) when loop has been detected. In VLAN-based mode, the port cannot process the packets of the VLAN that has detected the loop.

**port-based** - Specifies that the loop-detection operation mode will be set to port-based mode.

**vlan-based** - Specifies that the loop-detection operation mode will be set to VLAN-based mode.

---

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To set the auto-recover time to 0, which disables the auto-recovery mechanism, the interval to 20 seconds and specify VLAN-based mode:

```
DGS-1510-28XMP/ME:admin# config loopdetect recover_timer 0 interval 20 mode vlan-based
Command: config loopdetect recover_timer 0 interval 20 mode vlan-based

Success.

DGS-1510-28XMP/ME:admin#
```

## 40-2 config loopdetect ports

### Description

This command is used to setup the loop-back detection function for the interfaces on the Switch.

### Format

**config loopdetect ports [<portlist> | all] state [enable | disable]**

### Parameters

**<portlist>** - Enter a list of ports

**all** - Specifies to configure all ports in the system, you may use the "all" parameter.

**state** - Specifies whether the LBD function should be enabled or disabled on the ports specified in the port list. The default state is disabled.

**enable** - Specifies to enable the LBD function.

**disable** - Specifies to disable the LBD function.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To enable the LBD function on ports 1-5:

```
DGS-1510-28XMP/ME:admin# config loopdetect ports 1-5 state enable
Command: config loopdetect ports 1-5 state enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 40-3 enable loopdetect

### Description

This command is used to enable the LBD function globally on the Switch. The default state is disabled.

## Format

**enable loopdetect**

## Parameters

None.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To enable the LBD function globally:

```
DGS-1510-28XMP/ME:admin# enable loopdetect
Command: enable loopdetect

Success.

DGS-1510-28XMP/ME:admin#
```

## 40-4 disable loopdetect

### Description

This command is used to disable the LBD function globally on the Switch.

### Format

**disable loopdetect**

### Parameters

None.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To disable the LBD function globally:

```
DGS-1510-28XMP/ME:admin# disable loopdetect
Command: disable loopdetect

Success.

DGS-1510-28XMP/ME:admin#
```

## 40-5 show loopdetect

### Description

This command is used to display the LBD global configuration.

### Format

**show loopdetect**

### Parameters

None.

### Restrictions

Only Administrators and Operators can issue this command.

### Example

To show the LBD global settings:

```
DGS-1510-28XMP/ME:admin# show loopdetect
Command: show loopdetect

LBD Global Settings
-----
Status          : Disabled
Mode            : Port-based
Interval        : 10 sec
Recover Time    : 60 sec
Trap State      : None
Log State       : Enabled

DGS-1510-28XMP/ME:admin#
```

## 40-6 show loopdetect ports

### Description

This command is used to display the LBD per-port configuration.

### Format

**show loopdetect ports {<portlist>}**

### Parameters

---

**<portlist>** - Enter the list of ports to be displayed.

---

If no parameter is specified, the configuration for all ports will be displayed.

---

## Restrictions

None.

## Example

To show the LBD settings on ports 1-9:

```
DGS-1510-28XMP/ME:admin# show loopdetect ports 1-9
Command: show loopdetect ports 1-9
```

Port	Loopdetect State	Loop Status
1	Enabled	Normal
2	Enabled	Normal
3	Enabled	Normal
4	Enabled	Normal
5	Enabled	Loop!
6	Enabled	Normal
7	Enabled	Loop!
8	Enabled	Normal
9	Enabled	Normal

```
DGS-1510-28XMP/ME:admin#
```

## 40-7 config loopdetect trap

### Description

This command is used to configure the trap modes for LBD.

### Format

**config loopdetect trap [none | loop\_detected | loop\_cleared | both]**

### Parameters

- 
- none** - Specifies that there is no trap in the LBD function.

---

  - loop\_detected** - Specifies that trap will only be sent when the loop condition is detected.

---

  - loop\_cleared** - Specifies that trap will only be sent when the loop condition is cleared.

---

  - both** - Specifies that trap will either be sent when the loop condition is detected or cleared.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To specify that traps will be sent when the loop condition is detected or cleared:

```
DGS-1510-28XMP/ME:admin# config loopdetect trap both
Command: config loopdetect trap both

Success.

DGS-1510-28XMP/ME:admin#
```

## 40-8 config loopdetect log

### Description

This command is used to configure the log state for LBD. The default value is enabled.

### Format

**config loopdetect log state [enable | disable]**

### Parameters

---

**enable** - Specifies to enable the LBD log feature.

---

**disable** - Specifies to disable the LBD log feature. All LBD-related logs will not be recorded.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To enable the log state for LBD:

```
DGS-1510-28XMP/ME:admin# config loopdetect log state enable
Command: config loopdetect log state enable

Success.

DGS-1510-28XMP/ME:admin#
```

## Chapter 41 MAC Notification Command List

---

**enable mac\_notification**

---

**disable mac\_notification**

---

**config mac\_notification** {interval <sec 1-2147483647> | historysize <int 1-500>}

---

**config mac\_notification ports** [<portlist> | all] [enable | disable]

---

**show mac\_notification**

---

**show mac\_notification ports** {<portlist>}

---

### 41-1 enable mac\_notification

#### Description

This command is used to enable global MAC address table notification on the Switch.

#### Format

**enable mac\_notification**

#### Parameters

None.

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

#### Example

To enable MAC notification function:

```
DGS-1510-28XMP/ME:admin# enable mac_notification
Command: enable mac_notification
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```

### 41-2 disable mac\_notification

#### Description

This command is used to disable global MAC address table notification on the Switch.

#### Format

**disable mac\_notification**

## Parameters

None.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To disable MAC notification function:

```
DGS-1510-28XMP/ME:admin# disable mac_notification
Command: disable mac_notification

Success.

DGS-1510-28XMP/ME:admin#
```

## 41-3 config mac\_notification

### Description

This command is used to configure the Switch's MAC address table notification global settings.

### Format

**config mac\_notification {interval <sec 1-2147483647> | historysize <int 1-500>}**

### Parameters

---

**interval** - (Optional) Specifies the time in seconds between notifications.

**<sec 1-2147483647>** - Enter the interval time here. This value must be between 1 and 2147483647 seconds.

**historysize** - (Optional) Specifies the maximum number of entries listed in the history log used for notification. Up to 500 entries can be specified.

**<int 1-500>** - Enter the history log size here. This value must be between 1 and 500.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To configure the Switch's Mac address table notification global settings:

```
DGS-1510-28XMP/ME:admin# config mac_notification interval 1 historysize 500
Command: config mac_notification interval 1 historysize 500

Success.

DGS-1510-28XMP/ME:admin#
```



## 41-4 config mac\_notification ports

### Description

This command is used to configure the port's MAC address table notification status settings.

### Format

**config mac\_notification ports [<portlist> | all] [enable | disable]**

### Parameters

---

**<portlist>** - Enter a list of ports used for the configuration here.

---

**all** - Specifies that all the ports will be used for this configuration.

---

**enable** - Specifies to enable the port's MAC address table notification.

---

**disable** - Specifies to disable the port's MAC address table notification.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To enable the MAC address table notification on port 7:

```
DGS-1510-28XMP/ME:admin# config mac_notification ports 7 enable
Command: config mac_notification ports 7 enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 41-5 show mac\_notification

### Description

This command is used to display the Switch's Mac address table notification global settings.

### Format

**show mac\_notification**

### Parameters

None.

### Restrictions

None.

### Example

To show the Switch's Mac address table notification global settings:

```
DGS-1510-28XMP/ME:admin# show mac_notification
Command: show mac_notification

Global MAC Notification Settings

State          : Disabled
Interval       : 1
History Size   : 1

DGS-1510-28XMP/ME:admin#
```

## 41-6 show mac\_notification ports

### Description

This command is used to display the port's Mac address table notification status settings.

### Format

**show mac\_notification ports {<portlist>}**

### Parameters

---

**<portlist>** - (Optional) Enter a list of ports used for the configuration here.

---

### Restrictions

None.

### Example

To display all port's Mac address table notification status settings:

```
DGS-1510-28XMP/ME:admin# show mac_notification ports
```

```
Command: show mac_notification ports
```

```
Port      MAC Address Table Notification State
```

```
-----
```

```
1          Disabled
2          Disabled
3          Disabled
4          Disabled
5          Disabled
6          Disabled
7          Disabled
8          Disabled
9          Disabled
10         Disabled
11         Disabled
12         Disabled
13         Disabled
14         Disabled
15         Disabled
16         Disabled
17         Disabled
18         Disabled
19         Disabled
20         Disabled
```

```
CTRL+C ESC q Quit SPACE n Next Page p Previous Page r Refresh
```

## Chapter 42 MAC-based Access Control Command List

---

<b>enable mac_based_access_control</b>
<b>disable mac_based_access_control</b>
<b>config mac_based_access_control password</b> <passwd 16>
<b>config mac_based_access_control method</b> [local   radius]
<b>config mac_based_access_control guest_vlan ports</b> <portlist>
<b>config mac_based_access_control ports</b> [<portlist>   all] {state [enable   disable]   mode [port_based   host_based]   aging_time [infinite   <min 1-1440>]   block_time <sec 0-300>   max_users [<value 1-1000>   no_limit]}(1)
<b>create mac_based_access_control</b> [guest_vlan <vlan_name 32>   guest_vlanid <vlanid 1-4094>]
<b>delete mac_based_access_control</b> [guest_vlan <vlan_name 32>   guest_vlanid <vlanid 1-4094>]
<b>clear mac_based_access_control auth_state</b> [ports [all   <portlist>]   mac_addr <macaddr>]
<b>create mac_based_access_control_local</b> mac <macaddr> {[vlan <vlan_name 32>   vlanid <vlanid 1-4094>]}
<b>config mac_based_access_control_local</b> mac <macaddr> [vlan <vlan_name 32>   vlanid <vlanid 1-4094>   clear_vlan]
<b>delete mac_based_access_control_local</b> [mac <macaddr>   vlan <vlan_name 32>   vlanid <vlanid 1-4094>]
<b>config mac_based_access_control authorization attributes</b> {radius [enable   disable]   local [enable   disable]}(1)
<b>show mac_based_access_control</b> {ports {<portlist>}}
<b>show mac_based_access_control_local</b> {[mac <macaddr>   vlan <vlan_name 32>   vlanid <vlanid 1-4094>]}
<b>show mac_based_access_control auth_state</b> ports {<portlist>}
<b>config mac_based_access_control max_users</b> [<value 1-1000>   no_limit]
<b>config mac_based_access_control trap</b> state [enable   disable]
<b>config mac_based_access_control log</b> state [enable   disable]

---

### 42-1 enable mac\_based\_access\_control

#### Description

This command is used to enable MAC-based Access Control.

#### Format

```
enable mac_based_access_control
```

#### Parameters

None.

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To enable the MAC-based Access Control global state:

```
DGS-1510-28XMP/ME:admin# enable mac_based_access_control
Command: enable mac_based_access_control

Success.

DGS-1510-28XMP/ME:admin#
```

## 42-2 disable mac\_based\_access\_control

### Description

This command is used to disable MAC-based Access Control.

### Format

**disable mac\_based\_access\_control**

### Parameters

None.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To disable the MAC-based Access Control global state:

```
DGS-1510-28XMP/ME:admin# disable mac_based_access_control
Command: disable mac_based_access_control

Success.

DGS-1510-28XMP/ME:admin#
```

## 42-3 config mac\_based\_access\_control password

### Description

This command is used to configure the RADIUS authentication password for MAC-based Access Control.

### Format

**config mac\_based\_access\_control password <passwd 16>**

---

**Parameters**

---

**<password>** - Enter the password used here. The maximum length of the key is 16. The default password is "default".

---

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To set the MAC-based Access Control password:

```
DGS-1510-28XMP/ME:admin# config mac_based_access_control password switch
Command: config mac_based_access_control password switch

Success.

DGS-1510-28XMP/ME:admin#
```

#### 42-4 config mac\_based\_access\_control method

**Description**

This command is used to configure the MAC-based Access Control authentication method.

**Format**

**config mac\_based\_access\_control method [local | radius]**

**Parameters**

---

**local** - Specifies to authenticate via the local database.

---

**radius** - Specifies to authenticate via a RADIUS server.

---

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To set the MAC-based Access Control authentication method as local:

```
DGS-1510-28XMP/ME:admin# config mac_based_access_control method local
Command: config mac_based_access_control method local

Success.

DGS-1510-28XMP/ME:admin#
```

## 42-5 config mac\_based\_access\_control guest\_vlan ports

### Description

This command is used to assign a specified port list to the MAC-based Access Control guest VLAN. Ports that are not contained in port list will be removed from the MAC-based Access Control guest VLAN.

For detailed information on the operation of MAC-based Access Control guest VLANs, refer to the description for the **config mac\_based\_access\_control ports** command.

### Format

**config mac\_based\_access\_control guest\_vlan ports <portlist>**

### Parameters

---

**<portlist>** - Enter a list of ports to be configured.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To set the MAC-based Access Control guest VLAN membership:

```
DGS-1510-28XMP/ME:admin# config mac_based_access_control guest_vlan ports 1-8
Command: config mac_based_access_control guest_vlan ports 1-8

Success.

DGS-1510-28XMP/ME:admin#
```

## 42-6 config mac\_based\_access\_control ports

### Description

This command is used to configure MAC-based Access Control port's setting.

When the MAC-based Access Control function is enabled for a port and the port is not a MAC-based Access Control guest VLAN member, the user who is attached to this port will not be forwarded unless the user passes the authentication.

- A user that does not pass the authentication will not be serviced by the Switch.
- If the user passes the authentication, the user will be able to forward traffic operated under the assigned VLAN.

When the MAC-based Access Control function is enabled for a port, and the port is a MAC-based Access Control guest VLAN member, the port(s) will be removed from the original VLAN(s) member ports, and added to MAC-based Access Control guest VLAN member ports.

- Before the authentication process starts, the user is able to forward traffic under the guest VLAN.
- After the authentication process, the user will be able to access the assigned VLAN.

If the port authorize mode is port based mode, when the port has been moved to the authorized VLAN, the subsequent users will not be authenticated again. They will operate in the current authorized VLAN.

If the port authorize mode is host based mode, then each user will be authorized individually and be capable of getting its own assigned VLAN.

If port's block time is set to "infinite", it means that a failed authentication client will never be blocked. Block time will be set to "0".

## Format

```
config mac_based_access_control ports [<portlist> | all] {state [enable | disable] | mode [port_based | host_based] | aging_time [infinite | <min 1-1440>] | block_time <sec 0-300> | max_users [<value 1-1000> | no_limit]}(1)
```

## Parameters

---

<b>&lt;portlist&gt;</b>	- Enter a list of ports to be configured.
<b>all</b>	- Specifies all existed ports of switch for configuring the MAC-based Access Control function parameters.
<b>state</b>	- Specifies whether the port's MAC-based Access Control function is enabled or disabled.
<b>enable</b>	- Specifies that the port's MAC-based Access Control states will be enabled.
<b>disable</b>	- Specifies that the port's MAC-based Access Control states will be disabled.
<b>mode</b>	- Specifies the MAC-based access control port mode used.
<b>port_based</b>	- Specifies that the MAC-based access control port mode will be set to port-based.
<b>host_based</b>	- Specifies that the MAC-based access control port mode will be set to host-based.
<b>aging_time</b>	- Specifies a time period during which an authenticated host will be kept in an authenticated state. When the aging time has timed-out, the host will be moved back to unauthenticated state.
<b>infinite</b>	- Specifies that the authorized clients will not be aged out automatically.
<b>&lt;min 1-1440&gt;</b>	- Enter the aging time value here. This value must be between 1 and 1440 minutes.
<b>block_time</b>	- Specifies the block time. If a host fails to pass the authentication, the next authentication will not start within the block time unless the user clears the entry state manually.
<b>&lt;sec 0-300&gt;</b>	- Enter the block time value here. This value must be between 0 and 300 seconds. If the block time is set to 0, it means do not block the client that failed authentication.
<b>max_users</b>	- Specifies maximum number of users per port. The default value is 128.
<b>&lt;value 1-1000&gt;</b>	- Enter the maximum number of users per port here. This value must be between 1 and 1000.
<b>no_limit</b>	- Specifies to not limit the maximum number of users on the port.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure an unlimited number of maximum users for MAC-based Access Control on ports 1 to 8:

```
DGS-1510-28XMP/ME:admin# config mac_based_access_control ports 1-8 max_users no_limit
Command: config mac_based_access_control ports 1-8 max_users no_limit

Success.

DGS-1510-28XMP/ME:admin#
```

To configure the MAC-based Access Control timer parameters to have an infinite aging time and a block time of 120 seconds on ports 1 to 8:



```
DGS-1510-28XMP/ME:admin# config mac_based_access_control ports 1-8 aging_time infinite
block_time 120
Command: config mac_based_access_control ports 1-8 aging_time infinite block_time 120

Success.

DGS-1510-28XMP/ME:admin#
```

## 42-7 create mac\_based\_access\_control

### Description

This command is used to assign a static 802.1Q VLAN as a MAC-based Access Control guest VLAN.

### Format

```
create mac_based_access_control [guest_vlan <vlan_name 32> | guest_vlanid <vlanid 1-4094>]
```

### Parameters

---

**guest\_vlan** - Specifies MAC-based Access Control guest VLAN by name, it must be a static 1Q VLAN.

**<vlan\_name 32>** - Enter the VLAN name here. This name can be up to 32 characters long.

---

**guest\_vlanid** - Specifies MAC-based Access Control guest VLAN by VID, it must be a static 1Q VLAN.

**<vlanid 1-4094>** - Enter the VLAN ID here. This value must be between 1 and 4094.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To create a MAC-based Access Control guest VLAN:

```
DGS-1510-28XMP/ME:admin# create mac_based_access_control guest_vlan VLAN8
Command: create mac_based_access_control guest_vlan VLAN8

Success.

DGS-1510-28XMP/ME:admin#
```

## 42-8 delete mac\_based\_access\_control

### Description

This command is used to remove a MAC-based Access Control guest VLAN.

### Format

```
delete mac_based_access_control [guest_vlan <vlan_name 32> | guest_vlanid <vlanid 1-4094>]
```

## Parameters

**guest\_vlan** - Specifies the name of the MAC-based Access Control's guest VLAN.

**<vlan\_name 32>** - Enter the VLAN name here. This name can be up to 32 characters long.

**guest\_vlanid** - Specifies the VID of the MAC-based Access Control's guest VLAN.

**<vlanid 1-4094>** - Enter the VLAN ID here. This value must be between 1 and 4094.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To delete the MAC-based Access Control guest VLAN called default:

```
DGS-1510-28XMP/ME:admin# delete mac_based_access_control guest_vlan default
Command: delete mac_based_access_control guest_vlan default

Success.

DGS-1510-28XMP/ME:admin#
```

## 42-9 clear mac\_based\_access\_control auth\_state

### Description

This command is used to clear the authentication state of a user (or port). The port (or the user) will return to an un-authenticated state. All the timers associated with the port (or the user) will be reset.

### Format

**clear mac\_based\_access\_control auth\_state [ports [all | <portlist>] | mac\_addr <macaddr>]**

## Parameters

**ports** - Specifies the port range to delete MAC addresses on them.

**all** - Specifies all MAC-based Access Control enabled ports to delete MAC addresses.

**<portlist>** - Enter the list of ports used for this configuration here.

**mac\_addr** - Specifies to delete a specified host with this MAC address.

**<macaddr>** - Enter the MAC address used here.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To clear MAC-based Access Control clients' authentication information for all ports:

```
DGS-1510-28XMP/ME:admin# clear mac_based_access_control auth_state ports all
Command: clear mac_based_access_control auth_state ports all

Success.

DGS-1510-28XMP/ME:admin#
```

To delete the MAC-based Access Control authentication information for the host that has a MAC address of 00-00-00-47-04-65:

```
DGS-1510-28XMP/ME:admin# clear mac_based_access_control auth_state mac_addr 00-00-00-47-04-65
Command: clear mac_based_access_control auth_state mac_addr 00-00-00-47-04-65

Success.

DGS-1510-28XMP/ME:admin#
```

## 42-10 create mac\_based\_access\_control\_local mac

### Description

This command is used to create a MAC-based Access Control local database entry that will be used for authentication. This command can also specify the VLAN that an authorized host will be assigned to.

### Format

**create mac\_based\_access\_control\_local mac <macaddr> {[vlan <vlan\_name 32> | vlanid <vlanid 1-4094>]}**

### Parameters

**<macaddr>** - Enter the MAC address that can pass local authentication.

**vlan** - (Optional) Specifies the target VLAN by using the VLAN name. When this host is authorized, it will be assigned to this VLAN.

**<vlan\_name 32>** - Enter the VLAN name here. This name can be up to 32 characters long.

**vlanid** - (Optional) Specifies the target VLAN by using the VID. When this host is authorized, it will be assigned to this VLAN if the target VLAN exists.

**<vlanid 1-4094>** - Enter the VLAN ID here. This value must be between 1 and 4094.

If no vlanid or vlan parameter is specified, the target VLAN is not specified for this host.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To create one MAC-based Access Control local database entry for MAC address 00-00-00-00-00-01 and specify that the host will be assigned to the "default" VLAN after the host has been authorized:

```
DGS-1510-28XMP/ME:admin# create mac_based_access_control_local mac 00-00-00-00-00-01 vlan
default
Command: create mac_based_access_control_local mac 00-00-00-00-00-01 vlan default

Success.

DGS-1510-28XMP/ME:admin#
```

## 42-11 config mac\_based\_access\_control\_local mac

### Description

This command is used to configure a MAC-based Access Control local database entry.

### Format

```
config mac_based_access_control_local mac <macaddr> [vlan <vlan_name 32> | vlanid <vlanid 1-4094> |
clear_vlan]
```

### Parameters

---

**<macaddr>** - Enter the authenticated host's MAC address here.

---

**vlan** - Specifies the target VLAN by VLAN name. When this host is authorized, the host will be assigned to this VLAN.

**<vlan\_name 32>** - Enter the VLAN name here. This name can be up to 32 characters long.

---

**vlanid** - Specifies the target VLAN by VID. When this host is authorized, the host will be assigned to this VLAN if the target VLAN exists.

**<vlanid 1-4094>** - Enter the VLAN ID here. This value must be between 1 and 4094.

---

**clear\_vlan** - Specifies to clear the VLAN to not be the target VLAN. When this host is authorized, it will not be assigned to the target VLAN.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To configure the target VLAN "default" for the MAC-based Access Control local database entry 00-00-00-00-00-01:

```
DGS-1510-28XMP/ME:admin# config mac_based_access_control_local mac 00-00-00-00-00-01 vlan
default
Command: config mac_based_access_control_local mac 00-00-00-00-00-01 vlan default

Success.

DGS-1510-28XMP/ME:admin#
```

## 42-12 delete mac\_based\_access\_control\_local

### Description

This command is used to delete a MAC-based Access Control local database entry.

**Format**

**delete mac\_based\_access\_control\_local** [**mac** <macaddr> | **vlan** <vlan\_name 32> | **vlanid** <vlanid 1-4094>]

**Parameters**

**mac** - Specifies to delete local database entry by specific MAC address.

**<macaddr>** - Enter the MAC address used here.

**vlan** - Specifies to delete local database entries by specific target VLAN name.

**<vlan\_name 32>** - Enter the VLAN name here. This name can be up to 32 characters long.

**vlanid** - Specifies to delete local database entries by specific target VLAN ID.

**<vlanid 1-4094>** - Enter the VLAN ID here. This value must be between 1 and 4094.

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To delete the MAC-based Access Control local database entry for MAC address 00-00-00-00-00-01:

```
DGS-1510-28XMP/ME:admin# delete mac_based_access_control_local mac 00-00-00-00-00-01
Command: delete mac_based_access_control_local mac 00-00-00-00-00-01
```

Success.

```
DGS-1510-28XMP/ME:admin#
```

To delete the MAC-based Access Control local database entry for the VLAN name VLAN3:

```
DGS-1510-28XMP/ME:admin# delete mac_based_access_control_local vlan VLAN3
Command: delete mac_based_access_control_local vlan VLAN3
```

Success.

```
DGS-1510-28XMP/ME:admin#
```

**42-13 config mac\_based\_access\_control authorization attributes****Description**

This command is used to enable or disable the acceptance of an authorized configuration.

When authorization is enabled for MAC-based Access Controls with RADIUS authentication, the authorized attributes (for example VLAN, 802.1p default priority, and ACL) assigned by the RADIUS server will be accepted if the global authorization status is enabled.

When authorization is enabled for MAC-based Access Controls with local authentication, the authorized attributes assigned by the local database will be accepted.

## Format

**config mac\_based\_access\_control authorization attributes {radius [enable | disable] | local [enable | disable]}(1)**

## Parameters

**radius** - Specifies to enable or disable the RADIUS attributes.

**enable** - Specifies to enable the RADIUS attributes. The authorized attributes (for example VLAN, 802.1p default priority, and ACL) assigned by the RADIUS server will be accepted if the global authorization status is enabled. This is the default option.

**disable** - Specifies to disable the RADIUS attributes.

**local** - Specifies to enable or disable the local attributes.

**enable** - Specifies to enable the local attributes. The authorized attributes assigned by the local database will be accepted if the global authorization status is enabled. This is the default option.

**disable** - Specifies to disable the local attributes.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

The following example will disable the configuration authorized from the local database:

```
DGS-1510-28XMP/ME:admin# config mac_based_access_control authorization attributes local
disable
Command: config mac_based_access_control authorization attributes local disable

Success.

DGS-1510-28XMP/ME:admin#
```

## 42-14 show mac\_based\_access\_control

### Description

This command is used to display the MAC-based Access Control setting.

### Format

**show mac\_based\_access\_control {ports {<portlist>}}**

### Parameters

**ports** – (Optional) Specifies to display the MAC-based Access Control settings for a specific port or range of ports.

**<portlist>** - (Optional) Enter a list of ports used for this configuration here.

If no parameter is specified, the global MAC-based Access Control settings will be displayed.

### Restrictions

None.

## Example

To show the MAC-based Access Control port configuration for ports 1 to 4:

```
DGS-1510-28XMP/ME:admin# show mac_based_access_control ports 1-4
Command: show mac_based_access_control ports 1-4
```

Port	State	Aging Time (min)	Block Time (sec)	Auth Mode	Max User
1	Disabled	1440	300	Host-based	128
2	Disabled	1440	300	Host-based	128
3	Disabled	1440	300	Host-based	128
4	Disabled	1440	300	Host-based	128

```
DGS-1510-28XMP/ME:admin#
```

## 42-15 show mac\_based\_access\_control\_local

### Description

This command is used to display the MAC-based Access Control local database entry(s).

### Format

**show mac\_based\_access\_control\_local** {[**mac** <macaddr> | **vlan** <vlan\_name 32> | **vlanid** <vlanid 1-4094>]}

### Parameters

**mac** - (Optional) Specifies to display MAC-based Access Control local database entries for a specific MAC address.

**<macaddr>** - Enter the MAC address used here.

**vlan** - (Optional) Specifies to display MAC-based Access Control local database entries for a specific target VLAN name.

**<vlan\_name 32>** - Enter the VLAN name here. This name can be up to 32 characters long.

**vlanid** - (Optional) Specifies to display MAC-based Access Control local database entries for a specific target VLAN ID.

**<vlanid 1-4094>** - Enter the VLAN ID here. This value must be between 1 and 4094.

If no parameter is specified, all of the MAC-based Access Control local database entries will be displayed.

### Restrictions

None.

### Example

To show MAC-based Access Control local database for the VLAN called 'default':

```
DGS-1510-28XMP/ME:admin#show mac_based_access_control_local vlan default
Command: show mac_based_access_control_local vlan default

MAC Address          VID
-----
00-11-22-33-44-55  1

Total Entries:1

DGS-1510-28XMP/ME:admin#
```

## 42-16 show mac\_based\_access\_control auth\_state ports

### Description

This command is used to display the MAC-based Access Control authentication status on port.

### Format

**show mac\_based\_access\_control auth\_state ports {<portlist>}**

### Parameters

---

**<portlist>** - (Optional) Enter the list of ports used for this configuration here.

---

If no parameter is specified, all of the MAC-based Access Control ports authentication status will be displayed.

---

### Restrictions

None.

### Example

To display the MAC-based Access Control authentication status on port 1-4:

```
DGS-1510-28XMP/ME:admin# show mac_based_access_control auth_state ports 1-4
Command: show mac_based_access_control auth_state ports 1-4

(P): Port-based

Port MAC Address          State          VID Priority Aging Time/
-----
                               Block Time

Total Authenticating Hosts : 0
Total Authenticated Hosts  : 0
Total Blocked Hosts       : 0

DGS-1510-28XMP/ME:admin#
```



## 42-17 config mac\_based\_access\_control max\_users

**Description**

This command is used to configure the maximum number of authorized clients.

**Format**

**config mac\_based\_access\_control max\_users [<value 1-1000> | no\_limit]**

**Parameters**

---

**<value 1-1000>** - Enter the maximum number of authorized clients on the whole device. This value must be between 1 and 1000.

---

**no\_limit** - Specifies not to limit the maximum number of users on the system. This is the default option.

---

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To configure the maximum number of users of the MAC-based Access Control system supports to 128:

```
DGS-1510-28XMP/ME:admin# config mac_based_access_control max_users 128
Command: config mac_based_access_control max_users 128

Success.

DGS-1510-28XMP/ME:admin#
```

## 42-18 config mac\_based\_access\_control trap state

**Description**

This command is used to enable or disable sending of MAC-based Access Control traps.

**Format**

**config mac\_based\_access\_control trap state [enable | disable]**

**Parameters**

---

**enable** - Specifies to enable trap for MAC-based Access Control. The trap of MAC-based Access Control will be sent out.

---

**disable** - Specifies to disable trap for MAC-based Access Control.

---

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

## Example

To enable trap state of MAC-based Access Control:

```
DGS-1510-28XMP/ME:admin# config mac_based_access_control trap state enable
Command: config mac_based_access_control trap state enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 42-19 config mac\_based\_access\_control log state

### Description

This command is used to enable or disable generating of MAC-based Access Control logs.

### Format

**config mac\_based\_access\_control log state [enable | disable]**

### Parameters

---

**enable** - Specifies to enable log for MAC-based Access Control. The log of MAC-based Access Control will be generated.

---

**disable** - Specifies to disable log for MAC-based Access Control.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To disable log state of MAC-based Access Control:

```
DGS-1510-28XMP/ME:admin# config mac_based_access_control log state disable
Command: config mac_based_access_control log state disable

Success.

DGS-1510-28XMP/ME:admin#
```

## Chapter 43 MAC-based VLAN Command List

---

```
create mac_based_vlan mac_address <macaddr> [vlan <vlan_name 32> | vlanid <vlanid 1-4094>]
```

---

```
delete mac_based_vlan {mac_address <macaddr> [vlan <vlan_name 32> | vlanid <vlanid 1-4094>]}
```

---

```
show mac_based_vlan {mac_address <macaddr> | [vlan <vlan_name 32> | vlanid <vlanid 1-4094>]}
```

---

### 43-1 create mac\_based\_vlan mac\_address

#### Description

This command is used to create a static MAC-based VLAN entry.

This command only needs to be supported by the model which supports MAC-based VLAN.

There is a global limitation of the maximum entries supported for the static MAC-based entry.

#### Format

```
create mac_based_vlan mac_address <macaddr> [vlan <vlan_name 32> | vlanid <vlanid 1-4094>]
```

#### Parameters

---

**<macaddr>** - Enter the MAC address here.

---

**vlan** - Specifies the VLAN to be associated with the MAC address.

**<vlan\_name 32>** - Enter the VLAN name here. This name can be up to 32 characters long.

---

**vlanid** - Specifies the VLAN by VLAN ID.

**<vlanid 1-4094>** - Enter the VLAN ID here. This value must be between 1 and 4094.

---

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

#### Example

To create a static MAC-based VLAN entry:

```
DGS-1510-28XMP/ME:admin# create mac_based_vlan mac_address 00-11-22-33-44-55 vlanid 100
```

```
Command: create mac_based_vlan mac_address 00-11-22-33-44-55 vlanid 100
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```

### 43-2 delete mac\_based\_vlan

#### Description

This command is used to delete the static MAC-based VLAN entry.

**Format**

**delete mac\_based\_vlan {mac\_address <macaddr> [vlan <vlan\_name 32> | vlanid <vlanid 1-4094>]}**

**Parameters**

**mac\_address** - (Optional) Specifies the MAC address used.

**<macaddr>** - Enter the MAC address used here.

**vlan** - (Optional) Specifies the VLAN to be associated with the MAC address.

**<vlan\_name 32>** - Enter the VLAN name here. This name can be up to 32 characters long.

**vlanid** - (Optional) Specifies the VLAN by VLAN ID.

**<vlanid 1-4094>** - Enter the VLAN ID here. This value must be between 1 and 4094.

If no parameter is specified, all of the static configured entries will be removed.

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To delete a static MAC-based VLAN entry:

```
DGS-1510-28XMP/ME:admin# delete mac_based_vlan mac_address 00-11-22-33-44-55 vlanid 100
Command: delete mac_based_vlan mac_address 00-11-22-33-44-55 vlanid 100
```

Success.

```
DGS-1510-28XMP/ME:admin#
```

**43-3 show mac\_based\_vlan****Description**

This command is used to display the static or dynamic MAC-Based VLAN entry.

**Format**

**show mac\_based\_vlan {mac\_address <macaddr> | [vlan <vlan\_name 32> | vlanid <vlanid 1-4094>]}**

**Parameters**

**mac\_address** - (Optional) Specifies the entry that you would like to display.

**<macaddr>** - Enter the MAC address used here.

**vlan** - (Optional) Specifies the VLAN that you would like to display.

**<vlan\_name 32>** - Enter the VLAN name here. This name can be up to 32 characters long.

**vlanid** - (Optional) Specifies the VLAN by VLAN ID.

**<vlanid 1-4094>** - Enter the VLAN ID here. This value must be between 1 and 4094.

If no parameter is specified, all static and dynamic entries will be displayed.

## Restrictions

None.

## Example

In the following example, MAC address "00-80-c2-33-c3-45" is assigned to VLAN 300 by manual config. It is assigned to VLAN 400 by Voice VLAN. Since Voice VLAN has higher priority than manual configuration, the manual configured entry will become inactive. To display the MAC-based VLAN entry:

```
DGS-1510-28XMP/ME:admin# show mac_based_vlan
```

MAC Address	VLAN ID	Status	Type
00-80-e0-14-a7-57	200	Active	Static
00-80-c2-33-c3-45	300	Inactive	Static
00-80-c2-33-c3-45	400	Active	Voice VLAN

Total Entries : 3

```
DGS-1510-28XMP/ME:admin#
```

## Chapter 44 Mirror Command List

---

**config mirror port** <port> {[add | delete] source ports <portlist> [rx | tx | both]}

---

**enable mirror**

---

**disable mirror**

---

**show mirror**

---

### 44-1 config mirror port

#### Description

This command is used to configure a mirror port – source port pair on the Switch. Traffic from any source port to a target port can be mirrored for real-time analysis. A logic analyzer or an RMON probe then can be attached to study the traffic crossing the source port in a completely unobtrusive manner. When mirroring port traffic, please note that the target port must be configured in the same VLAN and operates at the same speed as the source port. If the target port is operating at a lower speed, the source port will be forced to drop its operating speed to match that of the target port.

#### Format

**config mirror port** <port> {[add | delete] source ports <portlist> [rx | tx | both]}

#### Parameters

---

**<port>** - Enter the port number that will receive the packets duplicated at the mirror port..

---

**add** - (Optional) Specifies the mirror entry to be added.

---

**delete** - (Optional) Specifies the mirror entry to be deleted.

---

**source ports** - (Optional) Specifies the port that will be mirrored. All packets entering and leaving the source port can be duplicated in the mirror port.

**<portlist>** - Enter the list of ports to be configured here.

---

**rx** - (Optional) Specifies to allow the mirroring packets received (flowing into) the port or ports in the port list.

---

**tx** - (Optional) Specifies to allow the mirroring packets sent (flowing out of) the port or ports in the port list.

---

**both** - (Optional) Specifies to mirror all the packets received or sent by the port or ports in the port list.

---

#### Restrictions

Only Administrators and Operators can issue this command.

#### Example

To add the mirroring ports:

```
DGS-1510-28XMP/ME:admin# config mirror port 3 add source ports 7-12 both
Command: config mirror port 3 add source ports 7-12 both

Success.

DGS-1510-28XMP/ME:admin#
```

## 44-2 enable mirror

### Description

This command is used to enable mirror function without having to modify the mirror session configuration.

### Format

**enable mirror**

### Parameters

None.

### Restrictions

Only Administrators and Operators can issue this command.

### Example

To enable mirroring function:

```
DGS-1510-28XMP/ME:admin# enable mirror
Command: enable mirror

Success.

DGS-1510-28XMP/ME:admin#
```

## 44-3 disable mirror

### Description

This command is used to disable mirror function without having to modify the mirror session configuration.

### Format

**disable mirror**

### Parameters

None.

### Restrictions

Only Administrators and Operators can issue this command.

### Example

To disable mirroring function:

```
DGS-1510-28XMP/ME:admin# disable mirror
Command: disable mirror

Success.

DGS-1510-28XMP/ME:admin#
```

## 44-4 show mirror

### Description

This command is used to display the current mirror function state and mirror session configuration on the Switch.

### Format

**show mirror**

### Parameters

None.

### Restrictions

None.

### Example

To display mirroring configuration:

```
DGS-1510-28XMP/ME:admin# show mirror
Command: show mirror

Current Settings
Mirror Status: Enabled
Target Port   : 3
Mirrored Port
              RX: 7-12
              TX: 7-12

DGS-1510-28XMP/ME:admin#
```



## Chapter 45 MLD Snooping Command List

The Multicast Listener Discovery (MLD) is used by IPv6 routers to discover multicast listeners on a directly attached link, much as IGMP is used in IPv4. The protocol is embedded in ICMPv6 instead of using a separate protocol. MLDv1 is similar to IGMPv2 and MLDv2 similar to IGMPv3.

The Switch only supports IGMP and MLD snooping awareness. This means that the multicast traffic forwarding is only based on L2 MAC addresses associated to groups that the Switch has joined. The source IP address of the multicast traffic will be ignored.

<b>config mld_snooping</b> [vlan_name <vlan_name 32>   vlanid <vlanid_list>   all] {state [enable   disable]   fast_done [enable  disable]   report_suppression [enable   disable]}(1)
<b>config mld_snooping querier</b> [vlan_name <vlan_name 32>   vlanid <vlanid_list>   all] {query_interval <sec 1-65535>   max_response_time <sec 1-25>   robustness_variable <value 1-7>   last_listener_query_interval <sec 1-25>   state [enable   disable]   version <value 1-2>}(1)
<b>config mld_snooping mrouter_ports</b> [vlan <vlan_name 32>   vlanid <vlanid_list>] [add   delete] <portlist>
<b>config mld_snooping mrouter_ports forbidden</b> [vlan <vlan_name 32>   vlanid <vlanid_list>] [add   delete] <portlist>
<b>enable mld_snooping</b>
<b>disable mld_snooping</b>
<b>show mld_snooping</b> {[vlan <vlan_name 32>   vlanid <vlanid_list>]}
<b>show mld_snooping group</b> {[vlan <vlan_name 32>   vlanid <vlanid_list>   ports <portlist>] {<ipv6addr>} {data_driven}}
<b>show mld_snooping forwarding</b> {[vlan <vlan_name 32>   vlanid <vlanid_list>]}
<b>show mld_snooping mrouter_ports</b> [vlan <vlan_name 32>   vlanid <vlanid_list>   all] {[static   dynamic   forbidden]}
<b>create mld_snooping static_group</b> [vlan <vlan_name 32>   vlanid <vlanid_list>] <ipv6addr>
<b>delete mld_snooping static_group</b> [vlan <vlan_name 32>   vlanid <vlanid_list>] <ipv6addr>
<b>config mld_snooping static_group</b> [vlan <vlan_name 32>   vlanid <vlanid_list>] <ipv6addr> [add   delete] <portlist>
<b>show mld_snooping static_group</b> {[vlan <vlan_name 32>   vlanid <vlanid_list>] <ipv6addr>}
<b>config mld_snooping data_driven_learning</b> [all   vlan_name <vlan_name>   vlanid <vlanid_list>] {state [enable   disable]   aged_out [enable   disable]   expiry_time <sec 1-65535>}(1)
<b>config mld_snooping data_driven_learning max_learned_entry</b> <value 1-1024>
<b>clear mld_snooping data_driven_group</b> [all   [vlan_name <vlan_name>   vlanid <vlanid_list>] [<ipv6addr>  all]]
<b>show mld_snooping statistic counter</b> [vlan <vlan_name>   vlanid <vlanid_list>   ports <portlist>]
<b>clear mld_snooping statistics counter</b>
<b>config mld_snooping rate_limit</b> [ports <portlist>   vlanid <vlanid_list>] [<value 1-1000>   no_limit]
<b>show mld_snooping rate_limit</b> [ports <portlist>   vlanid <vlanid_list>]
<b>show mld_snooping host</b> {[vlan <vlan_name 32>  vlanid <vlanid_list>   ports <portlist>   group <ipv6addr>]}

## 45-1 config mld\_snooping

**Description**

This command is used to configure MLD snooping on the Switch.

**Format**

**config mld\_snooping [vlan\_name <vlan\_name 32> | vlanid <vlanid\_list> | all] {state [enable | disable] | fast\_done [enable | disable] | report\_suppression [enable | disable]}**

**Parameters**


---

<b>vlan_name</b>	- Specifies the name of the VLAN for which MLD snooping is to be configured. <b>&lt;vlan_name 32&gt;</b> - Enter the VLAN name here. The VLAN name can be up to 32 characters long.
<b>vlanid</b>	- Specifies the ID of the VLAN for which MLD snooping is to be configured. <b>&lt;vlanid_list&gt;</b> - Enter the VLAN ID list here.
<b>all</b>	- Specifies all VLANs for which MLD snooping is to be configured.
<b>state</b>	- Specifies to enable or disable MLD snooping for the chosen VLAN. <b>enable</b> - Specifies to enable MLD snooping for the chosen VLAN. <b>disable</b> - Specifies to disable MLD snooping for the chosen VLAN.
<b>fast_done</b>	- Specifies to enable or disable MLD snooping fast done function. <b>enable</b> - Specifies to enable the MLD snooping fast done function. If enable, the membership is immediately removed when the system receive the MLD leave message. <b>disable</b> - Specifies to disable the MLD snooping fast done function.
<b>report_suppression</b>	- Specifies MLD snooping report suppression. <b>enable</b> - Specifies to enable the MLD snooping report suppression function. <b>disable</b> - Specifies to disable the MLD snooping report suppression function.

---

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To configure MLD snooping:

```
DGS-1510-28XMP/ME:admin# config mld_snooping vlan_name default state enable
Command: config mld_snooping vlan_name default state enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 45-2 config mld\_snooping querier

**Description**

This command is used to configure the timer in seconds between general query transmissions, the maximum time in seconds to wait for reports from listeners, and the permitted packet loss that is guaranteed by MLD snooping.

## Format

```
config mld_snooping querier [vlan_name <vlan_name 32> | vlanid <vlanid_list> | all] {query_interval <sec 1-65535> | max_response_time <sec 1-25> | robustness_variable <value 1-7> | last_listener_query_interval <sec 1-25> | state [enable | disable] | version <value 1-2>}(1)
```

## Parameters

**vlan\_name** - Specifies the name of the VLAN for which MLD snooping querier is to be configured.

**<vlan\_name 32>** - Enter the VLAN name here. The VLAN name can be up to 32 characters long.

**vlanid** - Specifies the ID of the VLAN for which MLD snooping querier is to be configured.

**<vlanid\_list>** - Enter the VLAN ID list here.

**all** - Specifies all VLANs for which MLD snooping querier is to be configured.

**query\_interval** - Specifies the amount of time in seconds between general query transmissions. The default setting is 125 seconds.

**<sec 1-65535>** - Enter the query interval value here. This value must be between 1 and 65535 seconds.

**max\_reponse\_time** - Specifies the maximum time in seconds to wait for reports from listeners. The default setting is 10 seconds.

**<sec 1-25>** - Enter the maximum response time value here. This value must be between 1 and 25 seconds.

**robustness\_variable** - Specifies to provide fine-tuning to allow for expected packet loss on a subnet. The value of the robustness variable is used in calculating the following MLD message intervals:

**<value 1-7>** - Enter the robustness variable value here. This value must be between 1 and 7.

- Group listener interval—Amount of time that must pass before a multicast router decides there are no more listeners of a group on a network. This interval is calculated as follows: (robustness variable \* query interval) + (1 \* query response interval).
- Other querier present interval—Amount of time that must pass before a multicast router decides that there is no longer another multicast router that is the querier. This interval is calculated as follows: (robustness variable \* query interval) + (0.5 \* query response interval).
- Last listener query count—Number of group-specific queries sent before the router assumes there are no local listeners of a group. The default number is the value of the robustness variable.
- By default, the robustness variable is set to 2. You might want to increase this value if you expect a subnet to be loosely.

**last\_listener\_query\_interval** - Specifies the maximum amount of time between group-specific query messages, including those sent in response to done-group messages. You might lower this interval to reduce the amount of time it takes a router to detect the loss of the last listener of a group. The default setting is 1 second.

**<sec 1-25>** - Enter the last listener query interval value here. This value must be between 1 and 25 seconds.

**state** - Specifies the Switch as an MLD querier (sends MLD query packets) or a Non-querier (does not send MLD query packets).

**enable** - Specifies to enable the MLD querier state.

**disable** - Specifies to disable the MLD querier state.

**version** - Specifies the version of MLD packet that will be sent by the Switch.

**<value 1-2>** - Enter the version number value here. This value must be between 1 and 2.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure the MLD snooping querier:

```
DGS-1510-28XMP/ME:admin# config mld_snooping querier vlan_name default query_interval 125
state enable
Command: config mld_snooping querier vlan_name default query_interval 125 state enable

Success.

DGS-1510-28XMP/ME:admin#
```

### 45-3 config mld\_snooping router\_ports

#### Description

This command is used to designate a range of ports as being connected to multicast-enabled routers. This will ensure that all packets with such a router as its destination will reach the multicast-enabled router, regardless of protocol, etc.

#### Format

```
config mld_snooping mrouter_ports [vlan <vlan_name 32> | vlanid <vlanid_list>] [add | delete] <portlist>
```

#### Parameters

**vlan** - Specifies the name of the VLAN on which the router port resides.

**<vlan\_name 32>** - Enter the VLAN name here. The VLAN name can be up to 32 characters long.

**vlanid** - Specifies the ID of the VLAN on which the router port resides.

**<vlanid\_list>** - Enter the VLAN ID list here.

**add** - Specifies to add the router ports.

**delete** - Specifies to delete the router ports.

**<portlist>** - Enter a range of ports to be configured.

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

#### Example

To set up static router ports:

```
DGS-1510-28XMP/ME:admin# config mld_snooping mrouter_ports vlan default add 1-10
Command: config mld_snooping mrouter_ports vlan default add 1-10

Success.

DGS-1510-28XMP/ME:admin#
```

### 45-4 config mld\_snooping router\_ports\_forbidden

#### Description

This command is used to designate a range of ports as being not connected to multicast-enabled routers. This ensures that the forbidden router port will not propagate routing packets out.

**Format**

```
config mld_snooping mrouter_ports_forbidden [vlan <vlan_name 32> | vlanid <vlanid_list>] [add | delete]
<portlist>
```

**Parameters**

**vlan** - Specifies the name of the VLAN on which the forbidden router port resides.

**<vlan\_name 32>** - Enter the VLAN name here. The VLAN name can be up to 32 characters long.

**vlanid** - Specifies the ID of the VLAN on which the forbidden router port resides.

**<vlanid\_list>** - Enter the VLAN ID list here.

**add** - Specifies to add the forbidden router ports.

**delete** - Specifies to delete the forbidden router ports.

**<portlist>** - Enter a range of ports to be configured.

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To set up port 11 as the forbidden router port of the default VLAN:

```
DGS-1510-28XMP/ME:admin# config mld_snooping mrouter_ports_forbidden vlan default add 11
Command: config mld_snooping mrouter_ports_forbidden vlan default add 11
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```

**45-5 enable mld\_snooping****Description**

This command is used to enable MLD snooping on the Switch. When the Switch receives an MLD report packet from a port, this port will be learned as a member port of the multicast group that the port is reported, and the router will be a default member of this multicast group. The multicast packet destined for this multicast group will be forwarded to all the members of this multicast group.

**Format**

```
enable mld_snooping
```

**Parameters**

None.

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

## Example

To enable MLD snooping on the Switch:

```
DGS-1510-28XMP/ME:admin# enable mld_snooping
Command: enable mld_snooping

Success.

DGS-1510-28XMP/ME:admin#
```

## 45-6 disable mld\_snooping

### Description

This command is used to disable MLD snooping on the Switch. This is the default option.

### Format

**disable mld\_snooping**

### Parameters

None.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To disable MLD snooping on the Switch:

```
DGS-1510-28XMP/ME:admin# disable mld_snooping
Command: disable mld_snooping

Success.

DGS-1510-28XMP/ME:admin#
```

## 45-7 show mld\_snooping

### Description

This command is used to display the current MLD snooping configuration on the Switch.

### Format

**show mld\_snooping {[vlan <vlan\_name 32> | vlanid <vlanid\_list>]}**

### Parameters

---

**vlan** - (Optional) Specifies the name of the VLAN for which you want to view the MLD snooping configuration.

---

---

**<vlan\_name 32>** - Enter the VLAN name here. The VLAN name can be up to 32 characters long.

---

**vlanid** - (Optional) Specifies the ID of the VLAN for which you want to view the MLD snooping configuration.

**<vlanid\_list>** - Enter the VLAN ID list here.

---

If no parameter is specified, the system will display all current MLD snooping configurations.

---

## Restrictions

None.

## Example

To show MLD snooping:

```
DGS-1510-28XMP/ME:admin# show mld_snooping
Command: show mld_snooping

MLD Snooping Global State           : Enabled
Data Driven Learning Max Entries    : 128

VLAN Name                           : default
Query Interval                       : 125
Max Response Time                    : 10
Robustness Value                     : 2
Last Listener Query Interval        : 1
Querier State                        : Enabled
Querier Role                         : Querier
Querier IP                           : FE80::201:2FF:FE03:400
Querier Expiry Time                  : 0 secs
State                                : Enabled
Fast Done                            : Disabled
Rate Limit                           : No Limitation
Report Suppression                   : Enabled
Version                              : 2
Data Driven Learning State           : Enabled
Data Driven Learning Aged Out        : Disabled
Data Driven Group Expiry Time        : 260

Total Entries: 1

DGS-1510-28XMP/ME:admin#
```

## 45-8 show mld\_snooping group

### Description

This command is used to display the current MLD snooping group information on the Switch.

### Format

```
show mld_snooping group {[vlan <vlan_name 32> | vlanid <vlanid_list> | ports <portlist>] {<ipv6addr>}}
{data_driven}
```

## Parameters

**vlan** - (Optional) Specifies the name of the VLAN for which you want to view MLD snooping group information. If VLAN and ports and IP address are not specified, the system will display all current MLD snooping group information.

**<vlan\_name 32>** - Enter the VLAN name here. The VLAN name can be up to 32 characters long.

**vlanid** - (Optional) Specifies the ID of the VLAN for which you want to view MLD snooping group information.

**<vlanid\_list>** - Enter the VLAN ID list here.

**ports** - (Optional) Specifies a list of ports for which you want to view MLD snooping group information.

**<portlist>** - Enter the list of ports here.

**<ipv6addr>** - (Optional) Specifies the group IPv6 address for which you want to view MLD snooping group information.

**data\_driven** - (Optional) Specifies to display the data driven groups.

---

## Restrictions

None.

## Example

To show an MLD snooping group when MLD v2 is supported:

The first two items mean that for ports 1-2 / port 3, the data from the FE1E::1 will be forwarded.

The third item means that for ports 4-5, the data from FE1E::2 will be forwarded.

The fourth item is a data-driven learned entry. The member port list is empty. The multicast packets will be forwarded to the router ports. If the router port list is empty, the packet will be dropped.



```
DGS-1510-28XMP/ME:admin# show mld_snooping group
```

```
Command: show mld_snooping group
```

```
Source/Group      : NULL/FF13::1
VLAN Name/VID     : v103/103
Member Ports     : 6
Router Ports     : 8
UP Time          : 172
Expiry Time      : 89
Filter Mode      : EXCLUDE
```

```
Source/Group      : NULL/FF13::2
VLAN Name/VID     : v103/103
Member Ports     :
Router Ports     : 8
UP Time          : 6
Expiry Time      : 254
Filter Mode      : EXCLUDE
```

```
Source/Group      : NULL/FF13::3
VLAN Name/VID     : v103/103
Member Ports     :
Router Ports     : 8
UP Time          : 6
Expiry Time      : 254
Filter Mode      : EXCLUDE
```

```
Source/Group      : NULL/FF13::4
VLAN Name/VID     : v103/103
Member Ports     :
Router Ports     : 8
UP Time          : 17
Expiry Time      : 243
Filter Mode      : EXCLUDE
```

```
Source/Group      : NULL/FF13::5
VLAN Name/VID     : v103/103
Member Ports     :
Router Ports     : 8
UP Time          : 17
Expiry Time      : 243
Filter Mode      : EXCLUDE
```

```
Total Entries : 5
```

```
DGS-1510-28XMP/ME:admin#
```

To show MLD snooping data driven groups:

```
DGS-1510-28XMP/ME:admin# show mld_snooping group data_driven
Command: show mld_snooping group data_driven

Source/Group          : NULL/FF13::1
VLAN Name/VID         : v103/103
Member Ports          :
Router Ports          : 8
UP Time               : 97
Expiry Time           : 163
Filter Mode           : EXCLUDE

Total Entries: 1

DGS-1510-28XMP/ME:admin#
```

## 45-9 show mld\_snooping forwarding

### Description

This command is used to display the Switch's current MLD snooping forwarding table. It provides an easy way for users to check the list of ports that the multicast group that comes from specific sources will be forwarded to. The packet comes from the source VLAN. They will be forwarded to the forwarding VLAN.

### Format

**show mld\_snooping forwarding** {[vlan <vlan\_name 32> | vlanid <vlanid\_list>]}

### Parameters

**vlan** - (Optional) Specifies the name of the VLAN for which you want to view MLD snooping forwarding table information.

**<vlan\_name 32>** - Enter the VLAN name here. The VLAN name can be up to 32 characters long.

**vlanid** - (Optional) Specifies the ID of the VLAN for which you want to view MLD snooping forwarding table information.

**<vlanid\_list>** - Enter the VLAN ID list here.

If no parameter is specified, the system will display all current MLD snooping forwarding table entries of the Switch.

### Restrictions

None.

### Example

To show all MLD snooping forwarding entries located on the Switch.

```

DGS-1510-28XMP/ME:admin# show mld_snooping forwarding
Command: show mld_snooping forwarding

VLAN Name      : default
Source IP      : *
Multicast Group: FE1E::1
Port Member    : 2,7

VLAN Name      : default
Source IP      : *
Multicast Group: FF1E::1
Port Member    : 5

Total Entries : 2

DGS-1510-28XMP/ME:admin#

```

## 45-10 show mld\_snooping mrouter\_ports

### Description

This command is used to display the currently configured router ports on the Switch.

### Format

**show mld\_snooping mrouter\_ports [vlan <vlan\_name 32> | vlanid <vlanid\_list> | all] {[static | dynamic | forbidden]}**

### Parameters

---

**vlan** - Specifies the name of the VLAN on which the router port resides.

**<vlan\_name 32>** - Enter the VLAN name here. The VLAN name can be up to 32 characters long.

---

**vlanid** - Specifies the ID of the VLAN on which the router port resides.

**<vlanid\_list>** - Enter the VLAN ID list here.

---

**all** - Specifies all VLANs on which the router port resides.

---

**static** - (Optional) Specifies to display router ports that have been statically configured.

---

**dynamic** - (Optional) Specifies to display router ports that have been dynamically configured.

---

**forbidden** - (Optional) Specifies to display forbidden router ports that have been statically configured.

---

If no parameter is specified, the system will display all currently configured router ports on the Switch.

---

### Restrictions

None.

### Example

To display the mld\_snooping mrouter ports:

```

DGS-1510-28XMP/ME:admin# show mld_snooping mrouter_ports vlan default
Command: show mld_snooping mrouter_ports vlan default

VLAN Name           : default
Static Router Port   : 1-10
Dynamic Router Port  :
Router IP            :
Forbidden Router Port : 11

Total Entries: 1

DGS-1510-28XMP/ME:admin#

```

## 45-11 create mld\_snooping static\_group

### Description

This command is used to create an MLD snooping static group. Member ports can be added to the static group. The static member and the dynamic member ports form the member ports of a group.

The static group will only take effect when MLD snooping is enabled on the VLAN. An **active** static group must be equal to a static MLD group with a link-up member port. For those static member ports, the device needs to emulate the MLD protocol operation to the querier, and forward the traffic destined to the multicast group to the member ports.

The Reserved IP multicast addresses FF0x::/16 must be excluded from the configured group.

The VLAN must be created first before a static group can be created.

### Format

```
create mld_snooping static_group [vlan <vlan_name 32> | vlanid <vlanid_list>] <ipv6addr>
```

### Parameters

---

**vlan** - Specifies the name of the VLAN on which the static group resides.

**<vlan\_name 32>** - Enter the VLAN name here. The VLAN name can be up to 32 characters long.

---

**vlanid** - Specifies the ID of the VLAN on which the static group resides.

**<vlanid\_list>** - Enter the VLAN ID list here.

---

**<ipv6addr>** - Specifies the multicast group IPv6 address.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To create an MLD snooping static group for VLAN 1, group FF1E::1:

```
DGS-1510-28XMP/ME:admin# create mld_snooping static_group vlan default FF1E::1
Command: create mld_snooping static_group vlan default FF1E::1

Success.

DGS-1510-28XMP/ME:admin#
```

## 45-12 delete mld\_snooping static\_group

### Description

This command is used to delete a MLD Snooping multicast static group.

### Format

```
delete mld_snooping static_group [vlan <vlan_name 32> | vlanid <vlanid_list>] <ipv6addr>
```

### Parameters

**vlan** - Specifies the name of the VLAN on which the static group resides.

**<vlan\_name 32>** - Enter the VLAN name here. The VLAN name can be up to 32 characters long.

**vlanid** - Specifies the ID of the VLAN on which the static group resides.

**<vlanid\_list>** - Enter the VLAN ID list here.

**<ipv6addr>** - Enter the multicast group IP address.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To delete an MLD snooping static group for VLAN 1, group FF1E::1:

```
DGS-1510-28XMP/ME:admin# delete mld_snooping static_group vlan default FF1E::1
Command: delete mld_snooping static_group vlan default FF1E::1

Success.

DGS-1510-28XMP/ME:admin#
```

## 45-13 config mld\_snooping static\_group

### Description

This command is used to configure an MLD snooping multicast group static member port. When a port is configured as a static member port, the MLD protocol will not operate on this port. For example, suppose that a port is a dynamic member port learned by MLD. If this port is configured as a static member later, then the MLD protocol will stop operating on this port. The MLD protocol will resume once this port is removed from static member ports.

**Format**

```
config mld_snooping static_group [vlan <vlan_name 32> | vlanid <vlanid_list>] <ipv6addr> [add | delete]
<portlist>
```

**Parameters**

**vlan** - Specifies the name of the VLAN on which the static group resides.

**<vlan\_name 32>** - Enter the VLAN name here. The VLAN name can be up to 32 characters long.

**vlanid** - Specifies the ID of the VLAN on which the static group resides.

**<vlanid\_list>** - Enter the VLAN ID list here.

**<ipv6addr>** - Enter the multicast group IPv6 address.

**add** - Specifies to add the member ports.

**delete** - Specifies to delete the member ports.

**<portlist>** - Specifies a range of ports to be configured.

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To unset port range 9-10 from MLD snooping static member ports for group FF1E::1 on default VLAN:

```
DGS-1510-28XMP/ME:admin# config mld_snooping static_group vlan default FF1E::1 delete
9-10
Command: config mld_snooping static_group vlan default FF1E::1 delete 9-10

Success.

DGS-1510-28XMP/ME:admin#
```

## 45-14 show mld\_snooping static\_group

**Description**

This command used to display the MLD snooping multicast group static members.

**Format**

```
show mld_snooping static_group {[vlan <vlan_name 32> | vlanid <vlanid_list>] <ipv6addr>}
```

**Parameters**

**vlan** - (Optional) Specifies the name of the VLAN on which the static group resides.

**<vlan\_name 32>** - Enter the VLAN name here. The VLAN name can be up to 32 characters long.

**vlanid** - (Optional) Specifies the ID of the VLAN on which the static group resides.

**<vlanid\_list>** - Enter the VLAN ID list here.

**<ipv6addr>** - (Optional) Enter the multicast group IPv6 address.

## Restrictions

None.

## Example

To display all the MLD snooping static groups:

```
DGS-1510-28XMP/ME:admin# show mld_snooping static_group
VLAN ID/Name          IP Address          Static Member Ports
-----
1 / Default           FF1E ::1           9-10

Total Entries : 1

DGS-1510-28XMP/ME:admin#
```

## 45-15 config mld\_snooping data\_driven\_learning

### Description

This command is used to enable or disable the data-driven learning of an MLD snooping group.

When data-driven learning is enabled for the VLAN, when the Switch receives the IP multicast traffic, on this VLAN, an MLD snooping group will be created. That is, the learning of an entry is not activated by MLD membership registration, but activated by the traffic. For an ordinary MLD snooping entry, the MLD protocol will take care the aging out of the entry. For a data-driven entry, the entry can be specified not to be aged out or to be aged out by the aged timer.

When the data driven learning is enabled, and the data driven table is not full, the multicast filtering mode for all ports is ignored. That is, the multicast packets will be forwarded to router ports. If the data driven learning table is full, the multicast packets will be forwarded according to the multicast filtering mode.

Note that if a data-driven group is created and MLD member ports are learned later, the entry will become an ordinary MLD snooping entry. That is, the aging out mechanism will follow the ordinary MLD snooping entry.

### Format

```
config mld_snooping data_driven_learning [all | vlan_name <vlan_name> | vlanid <vlanid_list>] {state [enable | disable] | aged_out [enable | disable] | expiry_time <sec 1-65535>}(1)
```

### Parameters

---

**all** - Specifies that all VLANs are to be configured.

---

**vlan\_name** - Specifies the VLAN name to be configured.

**<vlan\_name>** - Enter the VLAN name here.

---

**vlanid** - Specifies the VLAN ID to be configured.

**<vlanid\_list>** - Enter the VLAN ID list here.

---

**state** - (Optional) Specifies to enable or disable the data driven learning of MLD snooping groups. By default, the state is enable.

**enable** - Enter enable to enable the data driven learning state.

**disable** - Enter disable to disable the data driven learning state.

---

**aged\_out** - (Optional) Enable or disable the aging out of entries. By default, the state is disable.

**enable** - Specifies to enable the aged out option.

**disable** - Specifies to disable the aged out option.

---

---

**expiry\_time** - (Optional) Specifies the data driven group lifetime, in seconds. This parameter is valid only when aged\_out is enabled.

**<sec 1-65535>** - Enter the expiry time value here. This value must be between 1 and 65535 seconds.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To enable the data driven learning of an MLD snooping group on the default VLAN:

```
DGS-1510-28XMP/ME:admin# config mld_snooping data_driven_learning vlan default state enable
Command: config mld_snooping data_driven_learning vlan default state enable
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```

## 45-16 config mld\_snooping data\_driven\_learning max\_learned\_entry

### Description

This command is used to configure the maximum number of groups that can be learned by data driven.

When the table is full, the system will stop the learning of the new data-driven groups. Traffic for the new groups will be dropped.

### Format

**config mld\_snooping data\_driven\_learning max\_learned\_entry <value 1-1024>**

### Parameters

---

**<value 1-1024>** - Enter the maximum number of groups that can be learned by data driven. This value must be between 1 and 1024. The default setting is 128.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To set the maximum number of groups that can be learned by data driven:

```
DGS-1510-28XMP/ME:admin# config mld_snooping data_driven_learning max_learned_entry 50
Command: config mld_snooping data_driven_learning max_learned_entry 50
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```



## 45-17 clear mld\_snooping data\_driven\_group

**Description**

This command is used to delete the MLD snooping groups learned by data driven.

**Format**

**clear mld\_snooping data\_driven\_group [all | [vlan\_name <vlan\_name> | vlanid <vlanid\_list>] [<ipv6addr>|all]]**

**Parameters**


---

**all** - Specifies all VLANs to which MLD snooping groups will be deleted.

---

**vlan\_name** - Specifies the VLAN name.

**<vlan\_name>** - Enter the VLAN name here.

---

**vlanid** - Specifies the VLAN ID.

**<vlanid\_list>** - Enter the VLAN ID list here.

---

**<ipv6addr>** - Enter the group's IP address learned by data driven.

---

**all** - Specifies to clear all data driven groups of the specified VLAN.

---

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To clear all the groups learned by data-driven:

```
DGS-1510-28XMP/ME:admin# clear mld_snooping data_driven_group all
Command: clear mld_snooping data_driven_group all

Success.

DGS-1510-28XMP/ME:admin#
```

## 45-18 show mld\_snooping statistic counter

**Description**

This command is used to display the statistics counter for MLD protocol packets that are received by the Switch since MLD snooping was enabled.

**Format**

**show mld\_snooping statistic counter [vlan <vlan\_name> | vlanid <vlanid\_list> | ports <portlist>]**

**Parameters**


---

**vlan** - Specifies a VLAN to be displayed.

**<vlan\_name>** - Enter the VLAN name here.

---

**vlanid** - Specifies a list of VLANs to be displayed.

**<vlanid\_list>** - Enter the VLAN ID list here.

**ports** - Specifies a list of ports to be displayed.

**<portlist>** - Enter the list of ports here.

## Restrictions

None.

## Example

To show MLD snooping statistics counters:

```
DGS-1510-28XMP/ME:admin# show mld_snooping statistic counter vlanid 1
Command: show mld_snooping statistic counter vlanid 1

VLAN Name   : Default
-----
  Total Groups           : 10
Receive Statistics
  Query
MLD v1 Query           : 1
MLD v2 Query           : 1
Total                   : 2
Dropped By Rate Limitation : 1
Dropped By Multicast VLAN   : 1

  Report & Leave
MLD v1 Report          : 0
MLD v2 Report          : 10
MLD v1 Done            : 1
Total                   : 11
Dropped By Rate Limitation : 0
Dropped By Max Group Limitation : 90
Dropped By Group Filter   : 0
Dropped By Multicast VLAN   : 1

Transmit Statistics
  Query
MLD v1 Query           : 1
MLD v2 Query           : 1
Total                   : 2
  Report & Leave
MLD v1 Report          : 0
MLD v2 Report          : 10
MLD v1 Done            : 1
Total                   : 11

Total Entries : 1

DGS-1510-28XMP/ME:admin#
```

## 45-19 clear mld\_snooping statistics counter

### Description

This command is used to clear MLD snooping statistics counters.

### Format

**clear mld \_snooping statistics counter**

### Parameters

None.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To clear MLD snooping statistics counter:

```
DGS-1510-28XMP/ME:admin# clear mld_snooping statistics counter
Command: clear mld_snooping statistics counter

Success.

DGS-1510-28XMP/ME:admin#
```

## 45-20 config mld\_snooping rate\_limit

### Description

This command is used to configure the rate limit of MLD control packets that are allowed by each port or VLAN.

### Format

**config mld\_snooping rate\_limit [ports <portlist> | vlanid <vlanid\_list>] [<value 1-1000> | no\_limit]**

### Parameters

---

**ports** - Specifies a range of ports to be configured.

**<portlist>** - Enter the range of ports to be configured here.

---

**vlanid** - Specifies a range of VLANs to be configured.

**<vlanid\_list>** - Enter the VLAN ID list here.

---

**<value 1-1000>** - Specifies the rate limit of MLD control packets that the Switch can process on a specific port or VLAN. The rate is specified in packet per second. The packets that exceed the limited rate will be dropped.

---

**no\_limit** - Specifies the rate limit of MLD control packets that the Switch can process on a specific port or VLAN. The rate is specified in packet per second. The packets that exceed the limited rate will be dropped. The default setting is no\_limit.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure the MLD snooping per port rate limit:

```
DGS-1510-28XMP/ME:admin# config mld_snooping rate_limit ports 1 100
Command: config mld_snooping rate_limit ports 1 100

Success.

DGS-1510-28XMP/ME:admin#
```

## 45-21 show mld\_snooping rate\_limit

### Description

This command is used to display the rate limit of MLD control packets that are allowed by each port or VLAN.

### Format

**show mld\_snooping rate\_limit [ports <portlist> | vlanid <vlanid\_list>]**

### Parameters

---

**ports** - Specifies a list of ports.

**<portlist>** - Enter the range of ports to be configured here.

---

**vlanid** - Specifies a list of VLANs.

**<vlanid\_list>** - Enter the VLAN ID list here.

---

### Restrictions

None.

### Example

To display the MLD snooping rate limit from port 1 to 5:

```
DGS-1510-28XMP/ME:admin# show mld_snooping rate_limit ports 1-5
Command: show mld_snooping rate_limit ports 1-5

Port      Rate Limit
-----
1         100
2         No Limit
3         No Limit
4         No Limit
5         No Limit

Total Entries: 5

DGS-1510-28XMP/ME:admin#
```

## 45-22 show mld\_snooping host

### Description

This command is used to display the MLD hosts that are joined groups on the specific port or VALN.

### Format

**show mld\_snooping host {[vlan <vlan\_name 32>| vlanid <vlanid\_list> | ports <portlist> | group <ipv6addr>]}**

### Parameters

---

**vlan** - (Optional) Specifies the name of VLAN.  
**<vlan\_name 32>** - Enter the VLAN name.

---

**vlanid** - (Optional) Specifies the ID of VLAN.  
**<vlanid\_list>** - Enter a list of VLAN.

---

**ports** - (Optional) Specifies ports to be displayed.  
**<portlist>** - Enter a range of ports to be displayed.

---

**group** - (Optional) Specifies the group to be displayed.  
**<ipaddr>** - Enter the IP address of the group

---

### Restrictions

None.

### Example

To display the MLD host IP information:

```
DGS-1510-28XMP/ME:admin#show mld_snooping host vlan default
Command: show mld_snooping host vlan default

VLAN ID      : 1
Group        : FF12::1:FF11:11
Port         : 3
Host         : FE80::200:FF:FE70:3

VLAN ID      : 1
Group        : FF13::1:3
Port         : 3
Host         : FE80::845:B9BE:A863:A1FD

Total Entries : 2

DGS-1510-28XMP/ME:admin#
```

To display the host IP information for the group "FF32:3::1234:5600":

```
DGS-1510-28XMP/ME:admin# show mld_snooping host group FF32:3::1234:5600
Command: show mld_snooping host group FF32:3::1234:5600

VLAN ID      : 1
Group        : FF32:3::1234:5600
Port         : 3
Host         : FE80::200:4FF:FE01:1

Total Entries : 1

DGS-1510-28XMP/ME:admin#
```

## Chapter 46 MSTP debug enhancement

### Command List

---

```
debug stp config ports [<portlist> | all] [event | bpdu | state_machine | all] state [disable | brief | detail]
```

---

```
debug stp show information
```

---

```
debug stp show flag {ports <portlist>}
```

---

```
debug stp show counter {ports [<portlist> | all]}
```

---

```
debug stp clear counter {ports [<portlist> | all]}
```

---

```
debug stp state [enable | disable]
```

---

#### 46-1 debug stp config ports

##### Description

This command is used to configure per-port STP debug level on the specified ports.

##### Format

```
debug stp config ports [<portlist> | all] [event | bpdu | state_machine | all] state [disable | brief | detail]
```

##### Parameters

---

**<portlist>** - Enter the STP port range to debug.

---

**all** - Specifies to debug all ports on the Switch.

---

**event** - Specifies to debug the external operation and event processing.

---

**bpdu** - Specifies to debug the BPDU's that have been received and transmitted.

---

**state\_machine** - Specifies to debug the state change of the STP state machine.

---

**all** - Specifies to debug all of the above.

---

**state** - Specifies the state of the debug mechanism.

**disable** - Specifies to disable the debug mechanism.

**brief** - Specifies the debug level to brief.

**detail** - Specifies the debug level to detail.

---

##### Restrictions

Only Administrators can issue this command.

##### Example

To configure all STP debug flags to brief level on all ports:

```
DGS-1510-28XMP/ME:admin# debug stp config ports all all state brief
Command: debug stp config ports all all state brief

Success.

DGS-1510-28XMP/ME:admin#
```

## 46-2 debug stp show information

### Description

This command is used to display STP detailed information, such as the hardware tables, the STP state machine, etc.

### Format

**debug stp show information**

### Parameters

None.

### Restrictions

Only Administrators can issue this command.

### Example

To show STP debug information:



```

DGS-1510-28XMP/ME:admin# debug stp show information
Command: debug stp show information

Warning: only support local device.
Spanning Tree Debug Information:
-----
Port Status In Hardware Table:
Instance 0:
Port 1   : FOR   Port 2   : FOR   Port 3   : FOR   Port 4   : FOR   Port 5   : FOR
Port 6   : FOR
Port 7   : FOR   Port 8   : FOR   Port 9   : FOR   Port 10  : FOR   Port 11  : FOR
Port 12  : FOR
Port 13  : FOR   Port 14  : FOR   Port 15  : FOR   Port 16  : FOR   Port 17  : FOR
Port 18  : FOR
Port 19  : FOR   Port 20  : FOR   Port 21  : FOR   Port 22  : FOR   Port 23  : FOR
Port 24  : FOR
Port 25  : FOR   Port 26  : FOR   Port 27  : FOR   Port 28  : FOR
-----
Root Priority And Times:
Instance 0:
  Designated Root Bridge : 29683/DD-FE-F7-F8-DF-DA
  External Root Cost     : -336244805
  Regional Root Bridge   : 57055/6F-D1-FD-2F-08-B7
  Internal Root Cost     : -107020353
  Designated Bridge      : 57851/FD-EF-EF-C9-FC-9B
CTRL+C  ESC  q  Quit  SPACE  n  Next Page  ENTER  Next Entry  a  All

```

## 46-3 debug stp show flag

### Description

This command is used to display the STP debug level on specified ports.

### Format

**debug stp show flag {ports <portlist>}**

### Parameters

**ports** - (Optional) Specifies the STP ports to display.

**<portlist>** - Enter the list of ports used for this configuration here.

If no parameter is specified, all ports on the Switch will be displayed.

### Restrictions

Only Administrators can issue this command.

### Example

To display the debug STP levels on all ports:

```

DGS-1510-28XMP/ME:admin# debug stp show flag
DGS-1510-28XMP/ME:admin# debug stp show flag
Command: debug stp show flag

Global State: Disabled

Port Index      Event Flag      BPDU Flag      State Machine Flag
-----
1               Disabled       Disabled       Disabled
2               Disabled       Disabled       Disabled
3               Disabled       Disabled       Disabled
4               Disabled       Disabled       Disabled
5               Disabled       Disabled       Disabled
5               Disabled       Disabled       Disabled
7               Disabled       Disabled       Disabled
8               Disabled       Disabled       Disabled
9               Disabled       Disabled       Disabled
10              Disabled       Disabled       Disabled
11              Disabled       Disabled       Disabled
12              Disabled       Disabled       Disabled
13              Disabled       Disabled       Disabled
14              Disabled       Disabled       Disabled
15              Disabled       Disabled       Disabled
16              Disabled       Disabled       Disabled
17              Disabled       Disabled       Disabled
18              Disabled       Disabled       Disabled
19              Disabled       Disabled       Disabled
20              Disabled       Disabled       Disabled
21              Disabled       Disabled       Disabled
22              Disabled       Disabled       Disabled
23              Disabled       Disabled       Disabled
24              Disabled       Disabled       Disabled
25              Disabled       Disabled       Disabled
26              Disabled       Disabled       Disabled
27              Disabled       Disabled       Disabled
28              Disabled       Disabled       Disabled

DGS-1510-28XMP/ME:admin#

```

#### 46-4 debug stp show counter

##### Description

This command is used to display the STP counters.

##### Format

**debug stp show counter {ports [<portlist> | all]}**

##### Parameters

**ports** - (Optional) Specifies the STP ports for display.

**<portlist>** - Enter the list of ports used for this configuration here.

**all** - Specifies to display all port's counters.

If no parameter is specified, the global counters will be displayed.

## Restrictions

Only Administrators can issue this command.

## Example

To show the STP counters for port 9:

```
DGS-1510-28XMP/ME:admin# debug stp show counter ports 9
Command: debug stp show counter ports 9

STP Counters
-----
Port 9      :
Receive:
Total STP Packets      : 0
Configuration BPDU    : 0
TCN BPDU              : 0
RSTP TC-Flag          : 0
RST BPDU              : 0
Transmit:
Total STP Packets      : 0
Configuration BPDU    : 0
TCN BPDU              : 0
RSTP TC-Flag          : 0
RST BPDU              : 0

Discard:
Total Discarded BPDU  : 0
Global STP Disabled   : 0
Port STP Disabled     : 0
Invalid packet Format  : 0
Invalid Protocol      : 0
Configuration BPDU Length : 0
TCN BPDU Length       : 0
RST BPDU Length       : 0
Invalid Type          : 0
Invalid Timers        : 0

CTRL+C  ESC  q  Quit  SPACE  n  Next Page  p  Previous Page  r  Refresh
```

## 46-5 debug stp clear counter

### Description

This command is used to clear the STP counters.

### Format

**debug stp clear counter {ports[<portlist> | all]}**

### Parameters

**ports** - (Optional) Specifies the port range.

**<portlist>** - Enter the list of ports used for this configuration here.

**all** - Specifies to clear all port counters.

## Restrictions

Only Administrators can issue this command.

## Example

To clear all STP counters on the Switch:

```
DGS-1510-28XMP/ME:admin# debug stp clear counter ports all
Command: debug stp clear counter ports all

Success.

DGS-1510-28XMP/ME:admin#
```

## 46-6 debug stp state

### Description

This command is used to enable or disable the STP debug state.

### Format

**debug stp state [enable | disable]**

### Parameters

---

**enable** - Specifies to enable the STP debug state.

---

**disable** - Specifies to disable the STP debug state.

---

## Restrictions

Only Administrators can issue this command.

## Example

To configure the STP debug state to enable, and then disable the STP debug state:

```
DGS-1510-28XMP/ME:admin# debug stp state enable
Command: debug stp state enable

Success.

DGS-1510-28XMP/ME:admin# debug stp state disable
Command: debug stp state disable

Success.

DGS-1510-28XMP/ME:admin#
```

## Chapter 47 Multicast Filter Command List

---

<b>create mcast_filter_profile</b> {[ipv4   ipv6]} profile_id <value 1-24> profile_name <name 1-32>
<b>config mcast_filter_profile</b> [profile_id <value 1-24>   profile_name <name 1-32>] {profile_name <name 1-32>   [add   delete] <mcast_address_list>}(1)
<b>config mcast_filter_profile ipv6</b> [profile_id <value 1-24>   profile_name <name 1-32> ] {profile_name <name 1-32>   [add   delete] <mcastv6_address_list>}(1)
<b>delete mcast_filter_profile</b> {[ipv4   ipv6]} [profile_id [<value 1-24>   all]   profile_name <name 1-32>]
<b>show mcast_filter_profile</b> {[ipv4   ipv6]} {[profile_id <value 1-24>   profile_name <name 1-32>]}
<b>config limited_multicast_addr</b> [ports <portlist>   vlanid <vlanid_list>] {[ipv4   ipv6]} { [add   delete] [profile_id <value 1-24>   profile_name <name 1-32>]   access [permit   deny]}
<b>config max_mcast_group</b> [ports <portlist>   vlanid <vlanid_list>] {[ipv4   ipv6]} {max_group [<value 1-1024>   infinite]   action [ drop   replace]}(1)
<b>show max_mcast_group</b> [ports <portlist>   vlanid <vlanid_list>] {[ipv4   ipv6]}
<b>show limited_multicast_addr</b> [ports <portlist>   vlanid <vlanid_list>] {[ipv4   ipv6]}
<b>config cpu_filter I3_control_pkt</b> <portlist> [{dvmrp pim igmp_query  ospf   rip   vrrp}   all] state [enable   disable]
<b>show cpu_filter I3_control_pkt ports</b> {<portlist>}

---

### 47-1 create mcast\_filter\_profile

#### Description

This command is used to configure a multicast address profile. Multiple ranges of multicast addresses can be defined in the profile. If the IPv4 or ipv6 option is not specified, IPv4 is implied.

#### Format

**create mcast\_filter\_profile** {[ipv4 | ipv6]} profile\_id <value 1-24> profile\_name <name 1-32>

#### Parameters

**ipv4** - (Optional) Specifies to add an IPv4 multicast profile.

**ipv6** - (Optional) Specifies to add an IPv6 multicast profile.

**profile\_id** - Specifies the ID of the profile.

**<value 1-24>** - Enter the profile ID value here. This value must be between 1 and 24.

**profile\_name** - Specifies to provide a meaningful description for the profile.

**<name 1-32>** - Enter the profile name here. The profile name can be up to 32 characters long.

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

#### Example

To create a multicast address profile with a profile ID of 2 and a profile name of MOD:

```
DGS-1510-28XMP/ME:admin# create mcast_filter_profile profile_id 2 profile_name MOD
Command: create mcast_filter_profile profile_id 2 profile_name MOD

Success.

DGS-1510-28XMP/ME:admin#
```

## 47-2 config mcast\_filter\_profile

### Description

This command is used to add or delete a range of multicast IP addresses to or from the profile.

### Format

```
config mcast_filter_profile [profile_id <value 1-24> | profile_name <name 1-32>] {profile_name <name 1-32>
| [add | delete] <mcast_address_list>}(1)
```

### Parameters

**profile\_id** - Specifies the ID of the profile.

**<value 1-24>** - Enter the profile ID value here. This value must be between 1 and 24.

**profile\_name** - Specifies a meaningful description for the profile.

**<name 1-32>** - Enter the profile name here. The profile name can be up to 32 characters long.

**profile\_name** - Specifies a meaningful description for the profile.

**<name 1-32>** - Enter the profile name here. The profile name can be up to 32 characters long.

**add** - Specifies to add a multicast address.

**delete** - Specifies to delete a multicast address.

**<mcast\_address\_list>** - Enter a list of the multicast addresses to be put in the profile. You can either specify a single multicast IP address or a range of multicast addresses using -.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To add the multicast address range 225.1.1.1 to 225.1.1.10 to the profile:

```
DGS-1510-28XMP/ME:admin# config mcast_filter_profile profile_id 2 add 225.1.1.1 - 225.1.1.10
Command: config mcast_filter_profile profile_id 2 add 225.1.1.1 - 225.1.1.10

Success.

DGS-1510-28XMP/ME:admin#
```

## 47-3 config mcast\_filter\_profile ipv6

### Description

This command is used to add or delete a range of IPv6 multicast addresses to the profile.

## Format

```
config mcast_filter_profile ipv6 [profile_id <value 1-24> | profile_name <name 1-32> ] {profile_name <name 1-32> | [add | delete] <mcastv6_address_list>}(1)
```

## Parameters

**profile\_id** - Specifies the ID of the profile.

**<value 1-24>** - Enter the profile ID value here. This value must be between 1 and 24.

**profile\_name** - Specifies a meaningful description for the profile.

**<name 1-32>** - Enter the profile name here. The profile name can be up to 32 characters long.

**profile\_name** - Specifies a meaningful description for the profile.

**<name 1-32>** - Enter the profile name here. The profile name can be up to 32 characters long.

**add** - Specifies to add an IPv6 multicast address.

**delete** - Specifies to delete an IPv6 multicast address.

**<mcastv6\_address\_list>** - Enter a list of the IPv6 multicast addresses to put in the profile. You can either specify a single IPv6 multicast IP address or a range of IPv6 multicast addresses connected by '-'.  
 \_\_\_\_\_

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To add the IPv6 multicast address range FFF0E::100:0:0:20 – FFF0E::100:0:0:22 to profile ID 3:

```
DGS-1510-28XMP/ME:admin# config mcast_filter_profile ipv6 profile_id 3 add FF0E::100:0:0:20-
FFF0E::100:0:0:22
Command: config mcast_filter_profile ipv6 profile_id 3 add FF0E::100:0:0:20-
FFF0E::100:0:0:22

Success.

DGS-1510-28XMP/ME:admin#
```

## 47-4 delete mcast\_filter\_profile

### Description

This command is used to delete a multicast address profile. If the IPv4 or IPv6 option is not specified, IPv4 is implied.

### Format

```
delete mcast_filter_profile {[ipv4 | ipv6]} [profile_id [<value 1-24> | all] | profile_name <name 1-32>]
```

### Parameters

**ipv4** - (Optional) Specifies to delete an IPv4 multicast profile.

**ipv6** - (Optional) Specifies to delete an IPv6 multicast profile.

**profile\_id** - Specifies the ID of the profile

**<value 1-24>** - Enter the profile ID value here. This value must be between 1 and 24.

**all** - Specifies that all multicast address profiles will be deleted.

**profile\_name** - Specifies to display a profile based on the profile name.

**<name 1-32>** - Enter the profile name value here. The profile name can be up to 32 characters long.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To delete the multicast address profile with a profile ID of 3:

```
DGS-1510-28XMP/ME:admin# delete mcast_filter_profile profile_id 3
Command: delete mcast_filter_profile profile_id 3
Success.

DGS-1510-28XMP/ME:admin#
```

To delete the multicast address profile called MOD:

```
DGS-1510-28XMP/ME:admin# delete mcast_filter_profile profile_name MOD
Command: delete mcast_filter_profile profile_name MOD

Total entries: 2

DGS-1510-28XMP/ME:admin#
```

## 47-5 show mcast\_filter\_profile

### Description

This command is used to display the defined multicast address profiles. If the IPv4 or IPv6 option is not specified, IPv4 is implied.

### Format

**show mcast\_filter\_profile** {[ipv4 | ipv6]} {[profile\_id <value 1-24> | profile\_name <name 1-32>]}

### Parameters

**ipv4** - (Optional) Specifies to delete an IPv4 multicast profile.

**ipv6** - (Optional) Specifies to delete an IPv6 multicast profile.

**profile\_id** - (Optional) Specifies the ID of the profile

**<value 1-24>** - Enter the profile ID value here. This value must be between 1 and 24.

**profile\_name** - (Optional) Specifies to display a profile based on the profile name.

**<name 1-32>** - Enter the profile name here. The profile name can be up to 32 characters long.



## Restrictions

None.

## Example

To display all the defined multicast address profiles:

```
DGS-1510-28XMP/ME:admin# show mcast_filter_profile
Command: show mcast_filter_profile

Profile ID      Name      Multicast Addresses
-----
1              MOD      234.1.1.1 - 238.244.244.244
              234.1.1.1 - 238.244.244.244
2              customer 224.19.62.34 - 224.19.162.200

Total Entries : 2

DGS-1510-28XMP/ME:admin#
```

## 47-6 config limited\_multicast\_addr

### Description

This command is used to configure the multicast address filtering function on a port or VLAN. When there are no profiles specified with a port or VLAN, the limited function is not effective. When the function is configured on a port, it limits the multicast group operated by the IGMP or MLD snooping function. When this function is configured on a VLAN, the multicast group is limited to only operate the IGMP or MLD layer 3 functions. If the IPv4 or IPv6 option is not specified, IPv4 is implied.

### Format

```
config limited_multicast_addr [ports <portlist> | vlanid <vlanid_list>] {[ipv4 | ipv6]} {[add | delete]
[profile_id <value 1-24> | profile_name <name 1-32> ] | access [permit | deny]}
```

### Parameters

- 
- ports** - Specifies the range of ports to configure the multicast address filtering function.  
**<portlist>** - Enter the list of ports to be configured here.
- 
- vlanid** - Specifies the VLAN ID of the VLAN that the multicast address filtering function will be configured on.  
**<vlanid\_list>** - Enter the VLAN ID list here.
- 
- ipv4** - (Optional) Specifies the IPv4 multicast profile.
- 
- ipv6** - (Optional) Specifies the IPv6 multicast profile.
- 
- add** - (Optional) Specifies to add a multicast address profile to a port.
- 
- delete** - (Optional) Specifies to delete a multicast address profile to a port.
- 
- profile\_id** - (Optional) Specifies a profile to be added to or deleted from the port.  
**<value 1-24>** - Enter the profile ID value here. This value must be between 1 and 24.
- 
- profile\_name** - (Optional) Specifies the profile name used.  
**<name 1-32>** - Enter the profile name here. The profile name can be up to 32 characters long.
- 
- access** - (Optional) Specifies the access of packets matching the addresses defined in the profiles.  
**permit** - Specifies that packets matching the addresses defined in the profiles will be permitted. The default
-

mode is permit.

**deny** - Specifies that packets matching the addresses defined in the profiles will be denied.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To add multicast address profile 2 to ports 1 and 3:

```
DGS-1510-28XMP/ME:admin# config limited_multicast_addr ports 1,3 add profile_id 2
Command: config limited_multicast_addr ports 1,3 add profile_id 2
```

Success.

```
DGS-1510-28XMP/ME:admin#
```

## 47-7 config max\_mcast\_group

### Description

This command is used to configure the maximum number of multicast groups that a port can join.

If the IPv4 or IPv6 option is not specified, IPv4 is implied.

When the joined groups for a port or a VLAN have reached the maximum number, the newly learned group will be dropped if the action is specified as drop. The newly learned group will replace the eldest group if the action is specified as replace.

### Format

```
config max_mcast_group [ports <portlist> | vlanid <vlanid_list> {[ipv4 | ipv6]} {max_group [<value 1-1024> | infinite] | action [ drop | replace]}(1)
```

### Parameters

**ports** - Specifies the range of ports to configure the max\_mcast\_group.

**<portlist>** - Enter the list of ports to be configured here.

**vlanid** - Specifies the VLAN ID to configure max\_mcast\_group.

**<vlanid\_list>** - Enter the VLAN ID list here.

**ipv4** - (Optional) Specifies that the maximum number of IPv4 learned addresses should be limited.

**ipv6** - (Optional) Specifies that the maximum number of IPv6 learned addresses should be limited.

**max\_group** - Specifies the maximum number of multicast groups. The range is from 1 to n or infinite. "Infinite" means that the maximum number of multicast groups per port or VLAN is not limited by the Switch.

**<value 1-1024>** - Enter the maximum group value here. This value must be between 1 and 1024.

**infinite** - Specifies that the maximum group value will be set to infinite.

**action** - Specifies the action for handling newly learned groups when the register is full.

**drop** - Specifies the new group will be dropped.

**replace** - Specifies the new group will replace the eldest group in the register table.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure the maximum number of multicast group that ports 1 and 3 can join to 100:

```
DGS-1510-28XMP/ME:admin# config max_mcast_group ports 1, 3 max_group 100
Command: config max_mcast_group ports 1, 3 max_group 100

Success.

DGS-1510-28XMP/ME:admin#
```

## 47-8 show max\_mcast\_group

### Description

This command is used to display the maximum number of multicast groups that a port can join. If the IPv4 or IPv6 option is not specified, IPv4 is implied.

### Format

**show max\_mcast\_group [ports <portlist> | vlanid <vlanid\_list>] {[ipv4 | ipv6]}**

### Parameters

---

**ports** - Specifies the range of ports for displaying information about the maximum number of multicast groups that the specified ports can join.

**<portlist>** - Enter the list of ports to be configured here.

---

**vlanid** - Specifies the VLAN ID for displaying the maximum number of multicast groups.

**<vlanid\_list>** - Enter the VLAN ID list here.

---

**ipv4** - (Optional) Specifies to display the maximum number of IPv4 learned addresses.

---

**ipv6** - (Optional) Specifies to display the maximum number of IPv6 learned addresses.

---

### Restrictions

None.

### Example

To display the maximum number of multicast groups that ports 1 and 2 can join:

```
DGS-1510-28XMP/ME:admin# show max_mcast_group ports 1-2
```

```
Command: show max_mcast_group ports 1-2
```

Port	Max Multicast Group Number	Action
1	100	Drop
2	Infinite	Drop

```
Total Entries: 2
```

```
DGS-1510-28XMP/ME:admin#
```

To display the maximum number of multicast groups that VLANs 1 and 2 can join:

```
DGS-1510-28XMP/ME:admin# show max_mcast_group vlanid 1-2
```

```
Command: show max_mcast_group vlanid 1-2
```

VLAN	Max Multicast Group Number	Action
1	Infinite	Drop
2	10	Drop

```
Total Entries: 2
```

```
DGS-1510-28XMP/ME:admin#
```

## 47-9 show limited\_multicast\_addr

### Description

This command is used to display the multicast address range by port or by VLAN.

When the function is configured on a port, it limits the multicast groups operated by the IGMP or MLD snooping function and layer 3 functions. When the function is configured on a VLAN, it limits the multicast groups operated by the IGMP or MLD layer 3 functions.

If the IPv4 or IPv6 option is not specified, IPv4 is implied.

### Format

```
show limited_multicast_addr [ports <portlist> | vlanid <vlanid_list>] {[ipv4 | ipv6]}
```

### Parameters

**ports** - Specifies the range of ports that require information displaying about the multicast address filtering function.

**<portlist>** - Enter the list of ports to be configured here.

**vlanid** - Specifies the VLAN ID of VLANs that require information displaying about the multicast address filtering function.

**<vlanid\_list>** - Enter the VLAN ID list here.

**ipv4** - (Optional) Specifies to display the IPv4 multicast profile associated with the port.

**ipv6** - (Optional) Specifies to display the IPv6 multicast profile associated with the port.

**Restrictions**

None.

**Example**

To show the limited multicast address range on ports 1 and 3:

```
DGS-1510-28XMP/ME:admin# show limited_multicast_addr ports 1,3
Command: show limited_multicast_addr ports 1,3

Port      : 1
Access    : Deny

Profile ID      Name                Multicast Addresses
-----
1              customer            224.19.62.34 - 224.19.162.200

Port      : 3
Access    : Deny

Profile ID      Name                Multicast Addresses
-----
1              customer            224.19.62.34 - 224.19.162.200

DGS-1510-28XMP/ME:admin#
```

To show the limited multicast settings configured on VLAN 1:

```
DGS-1510-28XMP/ME:admin# show limited_multicast_addr vlan 1
Command: show limited_multicast_addr vlan 1

VLAN ID     : 1
Access      : Deny

Profile ID   Name                Multicast Addresses
-----
1           customer            224.19.62.34 - 224.19.162.200

Success.

DGS-1510-28XMP/ME:admin#
```

## 47-10 config cpu\_filter l3\_control\_pkt

**Description**

This command is used to configure the port state for the Layer 3 control packet filter.

**Format**

**config cpu\_filter l3\_control\_pkt <portlist> [{dvmp|pim|igmp\_query |ospf | rip | vrrp} | all] state [enable | disable]**

**Parameters**


---

<b>&lt;portlist&gt;</b>	- Specifies the port list to filter control packets.
<b>dvmp</b>	- (Optional) Specifies to filter the DVMP control packets.
<b>pim</b>	- (Optional) Specifies to filter the PIM control packets.
<b>igmp_query</b>	- (Optional) Specifies to filter the IGMP query control packets.
<b>ospf</b>	- (Optional) Specifies to filter the OSPF control packets.
<b>rip</b>	- (Optional) Specifies to filter the RIP control packets.
<b>vrrp</b>	- (Optional) Specifies to filter the VRRP control packets.
<b>all</b>	- Specifies to filter all the L3 protocol control packets.
<b>state</b>	- Specifies the filter function status. The default state is disable.
<b>enable</b>	- Specifies to enable the filtering function.
<b>disable</b>	- Specifies to disable the filtering function.

---

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To filter the DVMP control packets on ports 1 to 2:

```
DGS-1510-28XMP/ME:admin# config cpu_filter l3_control_pkt 1-2 dvmp state enable
Command: config cpu_filter l3_control_pkt 1-2 dvmp state enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 47-11 show cpu\_filter l3\_control\_pkt ports

**Description**

This command is used to display the L3 control packet CPU filtering state.

**Format**

**show cpu\_filter l3\_control\_pkt ports {<portlist>}**

**Parameters**


---

<b>&lt;portlist&gt;</b>	- (Optional) Specifies the port list to display the L3 control packet CPU filtering state.
-------------------------	--

---

**Restrictions**

None.

**Example**

To display the filtering status for port 1 and 2:

```
DGS-1510-28XMP/ME:admin#show cpu_filter l3_control_pkt ports 1-2
```

```
Command: show cpu_filter l3_control_pkt ports 1-2
```

Port	IGMP Query	DVMRP	PIM	OSPF	RIP	VRRP
1	Disabled	Enabled	Disabled	Disabled	Disabled	Disabled
2	Disabled	Enabled	Disabled	Disabled	Disabled	Disabled

```
DGS-1510-28XMP/ME:admin#
```

## Chapter 48 Multicast VLAN Command List

---

```
create igmp_snooping multicast_vlan <vlan_name 32> <vlanid 2-4094> {remap_priority [<value 0-7> | none]
  {replace_priority}}
```

---

```
config igmp_snooping multicast_vlan <vlan_name 32> {[add | delete] [member_port <portlist> | [source_port
  <portlist> | untag_source_port <portlist>] | tag_member_port <portlist>] | state [enable|disable] |
  replace_source_ip <ipaddr> | remap_priority [<value 0-7> | none] {replace_priority}}(1)
```

---

```
create igmp_snooping multicast_vlan_group_profile <profile_name 1-32>
```

---

```
config igmp_snooping multicast_vlan_group_profile <profile_name 1-32> [add | delete]
  <mcast_address_list>
```

---

```
delete igmp_snooping multicast_vlan_group_profile [profile_name <profile_name 1-32> | all]
```

---

```
show igmp_snooping multicast_vlan_group_profile {< profile_name 1-32>}
```

---

```
config igmp_snooping multicast_vlan_group <vlan_name 32> [add | delete] profile_name <profile_name 1-
  32>
```

---

```
show igmp_snooping multicast_vlan_group {<vlan_name 32>}
```

---

```
delete igmp_snooping multicast_vlan <vlan_name 32>
```

---

```
enable igmp_snooping multicast_vlan
```

---

```
disable igmp_snooping multicast_vlan
```

---

```
config igmp_snooping multicast_vlan forward_unmatched [enable | disable]
```

---

```
show igmp_snooping multicast_vlan {<vlan_name 32>}
```

---

### 48-1 create igmp\_snooping multicast\_vlan

#### Description

This command is used to create a multicast VLAN and implements relevant parameters as specified. More than one multicast VLANs can be configured. The maximum number of configurable VLANs is 5.

Newly created IGMP snooping multicast VLANs must use a unique VLAN ID and name, i.e. they cannot use the VLAN ID or name of any existing 802.1q VLAN.

Also keep in mind the following conditions:

- Multicast VLANs cannot be configured or displayed using 802.1Q VLAN commands.
- An IP interface cannot be bound to a multicast VLAN.
- The multicast VLAN snooping function co-exists with the 802.1q VLAN snooping function.

#### Format

```
create igmp_snooping multicast_vlan <vlan_name 32> <vlanid 2-4094> {remap_priority [<value 0-7> | none]
  {replace_priority}}
```

#### Parameters

---

**<vlan\_name 32>** - Enter the multicast VLAN here. The VLAN name can be up to 32 characters long.

---

**<vlanid 2-4094>** - Enter the VLAN ID of the multicast VLAN to be created. This value must be between 2 and 4094.

---

**remap\_priority** - (Optional) Specifies the remap priority (0 to 7) to be associated with the data traffic to be

---



forwarded on the multicast VLAN. If none is specified, the packet's original priority will be used. The default setting is none.

**<value 0-7>** - Enter the remap priority value here. This value must be between 0 and 7.

**none** - Specifies that the remap priority value will be set to none.

**replace\_priority** - (Optional) Specifies that packet's priority will be changed by the Switch, based on the remap priority. This flag will only take effect when the remap priority is set.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To create an IGMP snooping multicast VLAN with the VLAN name mv1 and the VID 2:

```
DGS-1510-28XMP/ME:admin# create igmp_snoop multicast_vlan mv1 2
Command: create igmp_snoop multicast_vlan mv1 2

Success.

DGS-1510-28XMP/ME:admin#
```

## 48-2 config igmp\_snooping multicast\_vlan

### Description

This command is used to add member ports and source ports to a list of multicast VLAN member ports. Member ports automatically become untagged members of the multicast VLAN and source ports automatically become tagged members of the multicast VLAN. However, member ports of one multicast VLAN are allowed to overlap with member ports on a different multicast VLAN.

A multicast VLAN must first be created using the **create igmp\_snooping multicast\_vlan** command before the multicast VLAN can be configured.

### Format

```
config igmp_snooping multicast_vlan <vlan_name 32> {[add | delete] [member_port <portlist> |
[source_port <portlist> | untag_source_port <portlist>] | tag_member_port <portlist>] | state
[enable|disable] | replace_source_ip <ipaddr> | remap_priority [<value 0-7> | none] {replace_priority}}(1)
```

### Parameters

**<vlan\_name 32>** - Enter the multicast VLAN here. The VLAN name can be up to 32 characters long.

**add** - Specifies that the port will be added to the specified multicast VLAN.

**delete** - Specifies that the port will be deleted from the specified multicast VLAN.

**member\_port** - Specifies a member port or range of member ports to be added to the multicast VLAN. The specified range of ports will become untagged members of the multicast VLAN.

**<portlist>** - Enter the list of ports to be configured here.

**source\_port** - Specifies a port or range of ports to be added to the multicast VLAN.

**<portlist>** - Enter the list of ports to be configured here.

**untag\_source\_port** - Specifies the source port or range of source ports as untagged members of the multicast VLAN. The PVID of the untagged source port is automatically changed to the multicast VLAN. Source ports must be either tagged or untagged for any single multicast VLAN, i.e. both types cannot be members of the

same multicast VLAN.

**<portlist>** - Enter the list of ports to be configured here.

**tag\_member\_port** - Specifies the port or range of ports that will become tagged members of the multicast VLAN.

**<portlist>** - Enter the list of ports to be configured here.

**state** - Specifies to enable or disable the multicast VLAN for a chosen VLAN.

**enable** - Specifies to enable the multicast VLAN for a chosen VLAN.

**disable** - Specifies to disable the multicast VLAN for a chosen VLAN.

**replace\_source\_ip** - Specifies that the source IP address in the join packet must be replaced by this IP address before forwarding the report packet sent by the host. If 0.0.0.0 is specified, the source IP address will not be replaced.

**<ipaddr>** - Enter the replace source IP address here.

**remap\_priority** - Specifies the remap priority value to be associated with the data traffic to be forwarded on the multicast VLAN. If none is specified, the packet's original priority is used. The default setting is none.

**<value 0-7>** - Enter the remap priority value here. This value must be between 0 and 7.

**none** - Specifies that the remap priority value will be set to none.

**replace\_priority** - (Optional) Specifies that the packet priority will be changed to the remap\_priority, but only if remap\_priority is set.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure an IGMP snooping multicast VLAN with the name "mv1", make ports 1 and 3 members of the VLAN, and set the state to enable:

```
DGS-1510-28XMP/ME:admin# config igmp_snooping multicast_vlan mv1 add member_port 1,3 state
enable
Command: config igmp_snooping multicast_vlan mv1 add member_port 1,3 state enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 48-3 create igmp\_snooping multicast\_vlan\_group\_profile

### Description

This command is used to create an IGMP snooping multicast group profile on the Switch.

### Format

**create igmp\_snooping multicast\_vlan\_group\_profile <profile\_name 1-32>**

### Parameters

**<profile\_name 1-32>** - Enter the multicast VLAN group profile name here. The name can be up to 32 characters long.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To create an IGMP snooping multicast group profile with the name "test":

```
DGS-1510-28XMP/ME:admin# create igmp_snooping multicast_vlan_group_profile test
Command: create igmp_snooping multicast_vlan_group_profile test

Success.

DGS-1510-28XMP/ME:admin#
```

## 48-4 config igmp\_snooping multicast\_vlan\_group\_profile

### Description

This command is used to configure an IGMP snooping multicast group profile on the Switch and add or delete multicast addresses for the profile.

### Format

**config igmp\_snooping multicast\_vlan\_group\_profile <profile\_name 1-32> [add | delete] <mcast\_address\_list>**

### Parameters

- 
- <profile\_name 1-32>** - Enter the multicast VLAN group name here. This name can be up to 32 characters long.
- 
- add** - Specifies to add a multicast address list to or from this multicast VLAN profile.
- 
- delete** - Specifies to delete a multicast address list to or from this multicast VLAN profile.
- 
- <mcast\_address\_list>** - Enter the multicast VLAN IP address here. This can be a continuous single multicast addresses, such as 225.1.1.1, 225.1.1.3, 225.1.1.8, or a multicast address range, such as 225.1.1.1-225.2.2.2, or both types, such as 225.1.1.1, 225.1.1.18-225.1.1.20.
- 

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To add the single multicast address 225.1.1.1 to the IGMP snooping multicast VLAN profile named "test":

```
DGS-1510-28XMP/ME:admin# config igmp_snooping multicast_vlan_group_profile test add 225.1.1.1
Command: config igmp_snooping multicast_vlan_group_profile test add 225.1.1.1

Success.

DGS-1510-28XMP/ME:admin#
```

---

## 48-5 delete igmp\_snooping multicast\_vlan\_group\_profile

### Description

This command is used to delete an IGMP snooping multicast group profile on the Switch. Specifies a profile name to delete it. Specifies all to remove all profiles along with the groups that belong to that profile.

### Format

**delete igmp\_snooping multicast\_vlan\_group\_profile [profile\_name <profile\_name 1-32> | all]**

### Parameters

---

**profile\_name** - Specifies the multicast VLAN profile name.

**<profile\_name 1-32>** - Enter the multicast VLAN profile name here. This name can be up to 32 characters long.

---

**all** - Specifies to delete all the multicast VLAN profiles.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To delete an IGMP snooping multicast group profile with the name "MOD":

```
DGS-1510-28XMP/ME:admin# delete igmp_snooping multicast_vlan_group_profile profile_name MOD
Command: delete igmp_snooping multicast_vlan_group_profile profile_name MOD

Success.

DGS-1510-28XMP/ME:admin#
```

## 48-6 show igmp\_snooping multicast\_vlan\_group\_profile

### Description

This command is used to show the IGMP snooping multicast group profiles.

### Format

**show igmp\_snooping multicast\_vlan\_group\_profile {< profile\_name 1-32>}**

### Parameters

---

**<profile\_name 1-32>** - (Optional) Enter the multicast VLAN group profile name here. The name can be up to 32 characters long.

---

### Restrictions

None.

## Example

To display all IGMP snooping multicast VLAN profiles:

```
DGS-1510-28XMP/ME:admin# show igmp_snooping multicast_vlan_group_profile
Command: show igmp_snooping multicast_vlan_group_profile

Profile Name          Multicast Addresses
-----
MOD                   234.1.1.1 - 238.244.244.244
                     239.1.1.1 - 239.2.2.2
Customer              224.19.62.34 - 224.19.162.200

Total Entries : 2

DGS-1510-28XMP/ME:admin#
```

## 48-7 config igmp\_snooping multicast\_vlan\_group

### Description

This command is used to configure the multicast group learned with the specific multicast VLAN. The following two cases can be considered for examples:

Case 1- The multicast group is not configured, multicast VLANs do not have any member ports overlapping and the join packet received by the member port is learned on only the multicast VLAN that this port is a member of.

Case 2-,The join packet is learned with the multicast VLAN that contains the destination multicast group. If the destination multicast group of the join packet cannot be classified into any multicast VLAN to which this port belongs, then the join packet will be learned on the natural VLAN of the packet.

Note that a profile cannot overlap in different multicast VLANs. Multiple profiles can be added to a multicast VLAN.

### Format

**config igmp\_snooping multicast\_vlan\_group <vlan\_name 32> [add | delete] profile\_name <profile\_name 1-32>**

### Parameters

**<vlan\_name 32>** - Enter the multicast VLAN name here. The VLAN name can be up to 32 characters long.

**add** - Specifies to associate a profile to a multicast VLAN.

**delete** - Specifies to de-associate a profile from a multicast VLAN.

**profile\_name** - Specifies the multicast VLAN profile name.

**<profile\_name 1-32>** - Enter the multicast VLAN profile name here. The name can be up to 32 characters long.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To add an IGMP snooping profile to a multicast VLAN group with the name "v1":

```
DGS-1510-28XMP/ME:admin# config igmp_snooping multicast_vlan_group v1 add profile_name
channel_1
Command: config igmp_snooping multicast_vlan_group v1 add profile_name channel_1
Success.

DGS-1510-28XMP/ME:admin#
```

## 48-8 show igmp\_snooping multicast\_vlan\_group

### Description

This command is used to show an IGMP snooping multicast VLAN group.

### Format

**show igmp\_snooping multicast\_vlan\_group {<vlan\_name 32>}**

### Parameters

---

**<vlan\_name 32>** - (Optional) Enter the VLAN name here. The VLAN name can be up to 32 characters long.

---

### Restrictions

None.

### Example

To show all IGMP snooping multicast VLAN groups setup on the Switch:

```
DGS-1510-28XMP/ME:admin# show igmp_snooping multicast_vlan_group
Command: show igmp_snooping multicast_vlan_group

VLAN Name                               VLAN ID      Multicast Group Profiles
-----
mv1                                       2            test

DGS-1510-28XMP/ME:admin#
```

## 48-9 delete igmp\_snooping multicast\_vlan

### Description

This command is used to delete an IGMP snooping multicast VLAN.

### Format

**delete igmp\_snooping multicast\_vlan <vlan\_name 32>**

---

**Parameters**

---

**vlan\_name 32>** -Enter the multicast VLAN name here. The VLAN name can be up to 32 characters long.

---

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To delete an IGMP snooping multicast VLAN called "v1":

```
DGS-1510-28XMP/ME:admin# delete igmp_snooping multicast_vlan v1
Command: delete igmp_snooping multicat_vlan v1

Success.

DGS-1510-28XMP/ME:admin#
```

## 48-10 enable igmp\_snooping multicast\_vlan

**Description**

This command is used to control the status of the multicast VLAN function.

**Format**

**enable igmp\_snooping multicast\_vlan**

**Parameters**

None.

**Restrictions**

Only Administrators can issue this command.

**Example**

To enable the IGMP snooping multicast VLAN function globally:

```
DGS-1510-28XMP/ME:admin# enable igmp_snooping multicast_vlan
Command: enable igmp_snooping multicast_vlan

Success.

DGS-1510-28XMP/ME:admin#
```

## 48-11 disable igmp\_snooping multicast\_vlan

**Description**

This command is used to disable the IGMP multicast VLAN function. The command disable igmp\_snooping is used to disable the ordinary IGMP snooping function. By default, the multicast VLAN is disabled.

**Format****disable igmp\_snooping multicast\_vlan****Parameters**

None.

**Restrictions**

Only Administrators can issue this command.

**Example**

To disable the IGMP snooping multicast VLAN function:

```
DGS-1510-28XMP/ME:admin# disable igmp_snooping multicast_vlan
Command: disable igmp_snooping multicast_vlan

Success.

DGS-1510-28XMP/ME:admin#
```

**48-12 config igmp\_snooping multicast\_vlan forward\_unmatched****Description**

This command is used to configure the forwarding mode for multicast VLAN unmatched packets. When the Switch receives an IGMP snooping packet, it will match the packet against the multicast profile to determine which multicast VLAN to associate with. If the packet does not match all profiles, the packet will be forwarded or dropped based on this setting.

By default, the packet will be dropped.

**Format****config igmp\_snooping multicast\_vlan forward\_unmatched [enable | disable]****Parameters**

---

**enable** - Specifies that the packet will be flooded on the VLAN.

---

**disable** - Specifies that the packet will be dropped.

---

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To configure the forwarding mode for multicast VLAN unmatched packets :



```
DGS-1510-28XMP/ME:admin# config igmp_snooping multicast_vlan forward_unmatched enable
Command: config igmp_snooping multicast_vlan forward_unmatched enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 48-13 show igmp\_snooping multicast\_vlan

### Description

This command is used to display information for IGMP snooping multicast VLANs.

### Format

**show igmp\_snooping multicast\_vlan {<vlan\_name 32>}**

### Parameters

---

**<vlan\_name 32>** - (Optional) Enter the VLAN name here. The VLAN name can be up to 32 characters long.

---

### Restrictions

None.

### Example

To display all IGMP snooping multicast VLANs:

```
DGS-1510-28XMP/ME:admin# show igmp_snooping multicast_vlan
Command: show igmp_snooping multicast_vlan

IGMP Multicast VLAN Global State      : Disabled
IGMP Multicast VLAN Forward Unmatched : Disabled

VLAN Name                             : test
VID                                     : 100

Member(Untagged) Ports                 : 1
Tagged Member Ports                    :
Source Ports                           : 3
Untagged Source Ports                  :
Status                                 : Disabled
Replace Source IP                      : 0.0.0.0
Remap Priority                          : None

Total Entries: 1

DGS-1510-28XMP/ME:admin#
```

## Chapter 49 Multiple Spanning Tree Protocol (MSTP) Command List

<b>enable stp</b>
<b>disable stp</b>
<b>config stp</b> {maxage <value 6-40>   maxhops <value 6-40>   hellotime <value 1-2>   forwarddelay <value 4-30>   txholdcount <value 1-10>   fbpdu [enable   disable]   nni_bpdu_addr [dot1d   dot1ad]}
<b>show stp</b>
<b>create stp instance_id</b> <value 1-7>
<b>config stp instance_id</b> <value 1-7> [add_vlan   remove_vlan] <vidlist>
<b>delete stp instance_id</b> <value 1-7>
<b>config stp mst_config_id</b> {revision_level <int 0-65535>   name <string>}
<b>show stp mst_config_id</b>
<b>config stp mst_ports</b> <portlist> instance_id <value 0-7> { internalCost [auto   <value 1-200000000>]   priority <value 0-240>}
<b>config stp ports</b> <portlist> {externalCost [auto   <value 1-200000000>]   hellotime <value 1-2>   migrate [yes   no]   edge [true   false   auto]   p2p [true   false   auto]   state [enable   disable]   restricted_role [true   false]   restricted_tcn [true   false]   fbpdu [enable   disable]}
<b>show stp ports</b> {<portlist>}
<b>config stp priority</b> <value 0-61440> instance_id <value 0-7>
<b>config stp version</b> [mstp   rstp   stp]
<b>show stp instance</b> {<value 0-7>}

### 49-1 enable stp

#### Description

This command is used to enable STP globally.

#### Format

```
enable stp
```

#### Parameters

None.

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

#### Example

To enable STP:

```
DGS-1510-28XMP/ME:admin# enable stp
Command: enable stp

Success.

DGS-1510-28XMP/ME:admin#
```

## 49-2 disable stp

### Description

This command is used to disable STP globally.

### Format

**disable stp**

### Parameters

None.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To disable STP:

```
DGS-1510-28XMP/ME:admin# disable stp
Command: disable stp

Success.

DGS-1510-28XMP/ME:admin#
```

## 49-3 config stp

### Description

This command is used to configure the bridge parameters global settings.

### Format

**config stp {maxage <value 6-40> | maxhops <value 6-40> | hellotime <value 1-2> | forwarddelay <value 4-30> | txholdcount <value 1-10> | fbpdu [enable | disable] | nni\_bpdu\_addr [dot1d | dot1ad]}**

### Parameters

---

**maxage** - (Optional) Specifies to determine if a BPDU is valid. The default value is 20.

**<value 6-40>** - Enter the maximum age value here. This value must be between 6-40.

---

**maxhops** - (Optional) Specifies to restrict the forwarded times of one BPDU. The default value is 20.

---

---

**<value 6-40>** - Enter the maximum hops value here. This value must be between 6 and 40.

**hello\_time** - (Optional) Specifies the time interval for sending configuration BPDUs by the Root Bridge. The default value is 2 seconds. This parameter is for STP and RSTP version. MSTP version uses per-port hellotime parameter.

**<value 1-2>** - Enter the hello time value here. This value must be between 1 and 2.

**forwarddelay** - (Optional) Specifies the maximum delay time for one BPDU to be transmitted by a bridge and received from another bridge. The default value is 15.

**<value 4-30>** - Enter the maximum delay time here. This value must be between 4 and 30.

**txholdcount** - (Optional) Specifies to restrict the numbers of BPDU transmitted in a time interval.

**<value 1-10>** - Enter the transmitted BPDU restriction value here. This value must be between 1 and 10.

**fbpdu** - (Optional) Specifies whether the bridge will flood STP BPDU when STP functionality is disabled.

**enable** - Specifies that the bridge will flood STP BPDU when STP functionality is disabled.

**disable** - Specifies that the bridge will not flood STP BPDU when STP functionality is disabled.

**nni\_bpdu\_addr** - (Optional) Specifies to determine the BPDU protocol address for GVRP in service provide site. It can use 802.1d GVRP address, 802.1ad service provider GVRP address or an user defined multicast address. The range of the user-defined address is 0180C2000000 - 0180C2FFFFFF.

**dot1d** - Specifies that the NNI BPDU protocol address value will be set to Dot1d.

**dot1ad** - Specifies that the NNI BPDU protocol address value will be set to Dot1ad.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure STP:

```
DGS-1510-28XMP/ME:admin# config stp maxage 25
Command: config stp maxage 25

Success.

DGS-1510-28XMP/ME:admin#
```

## 49-4 show stp

### Description

This command is used to show the bridge parameters global settings.

### Format

**show stp**

### Parameters

None.

### Restrictions

None.

## Example

To show STP:

```
DGS-1510-28XMP/ME:admin# show stp
Command: show stp

STP Bridge Global Settings
-----
STP Status           : Enabled
STP Version          : RSTP
Max Age              : 25
Hello Time           : 2
Forward Delay        : 15
Max Hops              : 20
TX Hold Count        : 6
Forwarding BPDU      : Disabled
NNI BPDU Address     : dot1d

DGS-1510-28XMP/ME:admin#
```

## 49-5 create stp instance\_id

### Description

This command is used to create an MST Instance without mapping the corresponding VLANs.

### Format

```
create stp instance_id <value 1-7>
```

### Parameters

---

<value 1-7> - Enter the MSTP instance ID here. This value must be between 1 and 7.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To create MSTP instance:

```
DGS-1510-28XMP/ME:admin# create stp instance_id 2
Command: create stp instance_id 2

Success.

DGS-1510-28XMP/ME:admin#
```

## 49-6 config stp instance\_id

### Description

This command is used to map or remove the VLAN range of the specified MST instance for the existed MST instances.

### Format

**config stp instance\_id <value 1-7> [add\_vlan | remove\_vlan] <vidlist>**

### Parameters

---

**<value 1-7>** - Enter the MSTP instance ID here. This value must be between 1 and 7.

---

**add\_vlan** - Specifies to map the specified VLAN list to an existing MST instance.

---

**remove\_vlan** - Specifies to delete the specified VLAN list from an existing MST instance.

---

**<vidlist>** - Specifies a list of VLANs by VLAN ID.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To map a VLAN ID to an MSTP instance:

```
DGS-1510-28XMP/ME:admin# config stp instance_id 2 add_vlan 1-3
Command: config stp instance_id 2 add_vlan 1-3

Success.

DGS-1510-28XMP/ME:admin#
```

To remove a VLAN ID from an MSTP instance:

```
DGS-1510-28XMP/ME:admin# config stp instance_id 2 remove_vlan 2
Command: config stp instance_id 2 remove_vlan 2

Success.

DGS-1510-28XMP/ME:admin#
```

## 49-7 delete stp instance\_id

### Description

This command is used to delete an MST Instance.

### Format

**delete stp instance\_id <value 1-7>**

## Parameters

---

**<value 1-7>** - Enter the MSTP instance ID here. This value must be between 1 and 7.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To delete an MSTP instance:

```
DGS-1510-28XMP/ME:admin# delete stp instance_id 2
Command: delete stp instance_id 2

Success.

DGS-1510-28XMP/ME:admin#
```

## 49-8 config stp mst\_config\_id

### Description

This command is used to change the name or the revision level of the MST configuration identification.

### Format

**config stp mst\_config\_id {revision\_level <int 0-65535> | name <string>}**

### Parameters

---

**revision\_level** - (Optional) Specifies the same given name with different revision level also represents different MST regions.

**<int 0-65535>** - Enter the revision level here. This value must be between 0 and 65535.

---

**name** - (Optional) Specifies the name given for a specific MST region.

**<string>** - Enter the MST region name here.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To change the name and revision level of the MST configuration identification:

```
DGS-1510-28XMP/ME:admin# config stp mst_config_id name R&D_BlockG revision_level 1
Commands: config stp mst_config_id name R&D_BlockG revision_level 1

Success.

DGS-1510-28XMP/ME:admin#
```

## 49-9 show stp mst\_config\_id

**Description**

This command is used to show the MST configuration identification.

**Format**

**show stp mst\_config\_id**

**Parameters**

None.

**Restrictions**

None.

**Example**

show STP MST configuration ID:

```
DGS-1510-28XMP/ME:admin# show stp mst_config_id
Command: show stp mst_config_id

Current MST Configuration Identification
-----

Configuration Name : 00-22-22-22-22-00          Revision Level :0
MSTI ID      Vid list
-----      -
   CIST      1-4094

DGS-1510-28XMP/ME:admin#
```

## 49-10 config stp mst\_ports

**Description**

This command is used to configure the ports management parameters.

**Format**

**config stp mst\_ports <portlist> instance\_id <value 0-7> {internalCost [auto | <value 1-200000000>] | priority <value 0-240>}**

**Parameters**


---

**<portlist>** - Enter a list of ports to be distinguished from the parameters of ports only at CIST level.

---

**instance\_id** - Specifies the instance ID used.

**<value 0-7>** - Enter the instance ID used here. This value must be between 0 and 7.

---

**internalCost** - (Optional) Specifies the port path cost used in MSTP.

**auto** - Specifies that the internal cost value will be set to auto.

---



---

**<value 1-200000000>** - Enter the internal cost value here. This value must be between 1 and 200000000.

---

**priority** - (Optional) Specifies the port priority value.

**<value 0-240>** - Enter the port priority value here. This value must be between 0 and 240.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure STP MST ports:

```
DGS-1510-28XMP/ME:admin# config stp mst_ports 1 instance_id 0 internalCost auto
Command: config stp mst_ports 1 instance_id 0 internalCost auto

Success.

DGS-1510-28XMP/ME:admin#
```

## 49-11 config stp ports

### Description

This command is used to configure all the parameters of ports, except for Internal Path Cost and Port Priority.

### Format

**config stp ports <portlist> {externalCost [auto | <value 1-200000000>] | hellotime <value 1-2> | migrate [yes | no] | edge [true | false | auto] | p2p [true | false | auto] | state [enable | disable] | restricted\_role [true | false] | restricted\_tcn [true | false] | fbpdud [enable | disable]}**

### Parameters

---

**<portlist>** - Enter a list of ports used for the configuration here.

---

**external\_cost** - (Optional) Specifies the path cost between MST regions from the transmitting Bridge to the CIST Root Bridge. It is only used at CIST level.

**auto** - Specifies that the external cost value will be set to automatic.

**<value 1-200000000>** - Enter the external cost value here. This value must be between 1 and 200000000.

---

**hellotime** - (Optional) Specifies the hello time. The default value is 2. This parameter is for MSTP version. For STP and RSTP version, uses the per system hellotime parameter.

**<value 1-2>** - Enter the hello time value here. This value must be between 1 and 2.

---

**migrate** - (Optional) Specifies whether the port will send MSTP BPDU for a delay time.

**yes** - Specifies that the MSTP BPDU for a delay time will be sent.

**no** - Specifies that the MSTP BPDU for a delay time will not be sent.

---

**edge** - (Optional) Specifies whether this port is connected to a LAN or a Bridged LAN.

**true** - Specifies that the specified port(s) is edge.

**false** - Specifies that the specified port(s) is not edge.

**auto** - Specifies that the bridge will delay for a period to become edge port if no bridge BPDU is received. The default is auto mode.

---

**p2p** - (Optional) Specifies whether this port is in Full-Duplex or Half-Duplex mode.

**true** - Specifies that the port(s) is in Full-Duplex mode.

---

**false** - Specifies that the port(s) is in Half-Duplex mode.

**auto** - Specifies that the port(s) is in Full-Duplex and Half-Duplex mode.

**state** - (Optional) Specifies whether this port supports the STP functionality.

**enable** - Specifies that STP functionality on the port(s) is enabled.

**disable** - Specifies that STP functionality on the port(s) is disabled.

**restricted\_role** - (Optional) Specifies whether this port not to be selected as Root Port. The default value is false.

**true** - Specifies that the port can be specified as the root port.

**false** - Specifies that the port cannot be specified as the root port.

**restricted\_tcn** - (Optional) Specifies whether this port not to propagate topology change. The default value is false.

**true** - Specifies that the port can be set to propagate a topology change.

**false** - Specifies that the port cannot be set to propagate a topology change.

**fbpdu** - (Optional) Specifies whether this port will flood STP BPDU when STP functionality is disabled. When the state is set to enable, the received BPDU will be forwarded. When the state is set to disable, the received BPDU will be dropped.

**enable** - Specifies that the port can be set to flood the STP BPDU when the STP functionality is disabled.

**disable** - Specifies that the port cannot be set to flood the STP BPDU when the STP functionality is disabled.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure STP ports:

```
DGS-1510-28XMP/ME:admin# config stp ports 1 externalCost auto
Command: config stp ports 1 externalCost auto

Success.

DGS-1510-28XMP/ME:admin#
```

## 49-12 show stp ports

### Description

This command is used to show the port information includes parameters setting and operational value.

### Format

**show stp ports {<portlist>}**

### Parameters

**<portlist>** - (Optional) Enter a list of ports used for the configuration here.

### Restrictions

None.

## Example

To show STP ports:

```
DGS-1510-28XMP/ME:admin# show stp ports
Command: show stp ports

MSTP Port Information
-----
Port Index      : 1      , Hello Time: 2 /2 , Port STP : Enabled ,
External PathCost : Auto/200000 , Edge Port : Auto /No , P2P : Auto /Yes
Port RestrictedRole : False, Port RestrictedTCN : False
Port Forward BPDU : Disabled
MSTI   Designated Bridge   Internal PathCost   Prio   Status       Role
-----
0      N/A                  200000              128   Forwarding   NonStp
```

```
CTRL+C ESC q Quit SPACE n Next Page p Previous Page r Refresh
```

## 49-13 config stp priority

### Description

This command is used to configure the instance priority.

### Format

**config stp priority <value 0-61440> instance\_id <value 0-7>**

### Parameters

---

**<value 0-61440>** - Enter the bridge priority value here. This value must be divisible by 4096. This value must be between 0 and 61440.

---

**instance\_id** - Identifier to distinguish different STP instances.

**<value 0-7>** - Enter the STP instance ID here. This value must be between 0 and 7.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To configure the STP instance ID:

```
DGS-1510-28XMP/ME:admin# config stp priority 61440 instance_id 0
Command: config stp priority 61440 instance_id 0

Success.

DGS-1510-28XMP/ME:admin#
```

## 49-14 config stp version

### Description

This command is used to enable STP globally.

### Format

**config stp version [mstp | rstp | stp]**

### Parameters

---

**mstp** - Specifies to run under Multiple Spanning Tree Protocol.

---

**rstp** - Specifies to run under Rapid Spanning Tree Protocol.

---

**stp** - Specifies to run under Spanning Tree Protocol.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To configure STP version:

```
DGS-1510-28XMP/ME:admin# config stp version mstp
Command: config stp version mstp

Success.

DGS-1510-28XMP/ME:admin#
```

To config STP version with the same value of old configuration:

```
DGS-1510-28XMP/ME:admin# config stp version mstp
Command: config stp version mstp

Configure value is the same with current value.
Success.

DGS-1510-28XMP/ME:admin#
```

## 49-15 show stp instance

**Description**

This command is used to display each instance parameters settings. Value means the instance ID, if there is no input of this value, all instance will be shown.

**Format**

**show stp instance {<value 0-7>}**

**Parameters**

---

**<value 0-7>** - (Optional) Enter the MSTP instance ID value here. This value must be between 0 and 7.

---

**Restrictions**

None.

**Example**

To show STP instance:

```
DGS-1510-28XMP/ME:admin# show stp instance
Command: show stp instance

STP Instance Settings
-----
Instance Type           : CIST
Instance Status        : Enabled
Instance Priority       : 32768(bridge priority : 32768, sys ID ext : 0 )

STP Instance Operational Status
-----
Designated Root Bridge : 32768/00-22-22-22-22-00
External Root Cost     : 0
Regional Root Bridge   : 32768/00-22-22-22-22-00
Internal Root Cost     : 0
Designated Bridge      : 32768/00-22-22-22-22-00
Root Port              : None
Max Age                 : 20
Forward Delay          : 15
Last Topology Change   : 2430
Topology Changes Count : 0

DGS-1510-28XMP/ME:admin#
```

# Chapter 50 Network Load Balancing (NLB) Command List

---

```

create nlb unicast_fdb <macaddr>
config nlb unicast_fdb <macaddr> [add | delete] <portlist>
delete nlb unicast_fdb <macaddr>
create nlb multicast_fdb [<vlan_name 32> | vlanid <vlanid>] <macaddr>
config nlb multicast_fdb [<vlan_name 32> | vlanid <vlanid>] <macaddr> [add | delete] <portlist>
delete nlb multicast_fdb [<vlan_name 32> | vlanid <vlanid>] <macaddr>
show nlb fdb

```

---

## 50-1 create nlb unicast\_fdb

### Description

This command is used to create the NLB unicast FDB entry.

The network load balancing command set is used to support the Microsoft server load balancing application where multiple servers can share the same IP address and MAC address. The requests from clients will be forwarded to all servers, but will only be processed by one of them. The server can work in two different modes – unicast mode and multicast mode. In unicast mode, the client use unicast MAC address as the destination MAC to reach the server. In multicast mode, the client use the multicast MAC address as the destination MAC to reach the server. Regarding of the mode, this destination Mac is the named the shared MAC. The server uses its own MAC address (rather than the shared MAC) as the source MAC address of the reply packet.

### Format

```
create nlb unicast_fdb <macaddr>
```

### Parameters

---

**<macaddr>** - Specifies the MAC address of the NLB unicast FDB entry to be created.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To create an NLB unicast MAC forwarding entry, for the product that support the VLAN information on the unicast forwarding:

```

DGS-1510-28XMP/ME:admin# create nlb unicast_fdb 02-bf-01-01-01-01
Command: create nlb unicast_fdb 02-BF-01-01-01-01

Success.

DGS-1510-28XMP/ME:admin#

```

## 50-2 config nlb unicast\_fdb

### Description

This command is used to add or delete the forwarding ports for the specified NLB unicast FDB entry.

### Format

**config nlb unicast\_fdb <macaddr>[add | delete] <portlist>**

### Parameters

---

**<macaddr>** - Enter the MAC address of the NLB unicast FDB entry to be configured.

---

**add** - Specifies to add the ports.

---

**delete** - Specifies to delete the ports.

---

**<portlist>** - Enter a list of forwarding ports to be added or removed.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To configure NLB unicast FDB entry, for the product that support the VLAN information on the unicast forwarding:

```
DGS-1510-28XMP/ME:admin# config nlb unicast_fdb 02-bf-01-01-01-01 add 1-5
Command: config nlb unicast_fdb 02-BF-01-01-01-01 add 1-5

Success.

DGS-1510-28XMP/ME:admin#
```

## 50-3 delete nlb unicast\_fdb

### Description

This command is used to delete the NLB unicast FDB entry.

### Format

**delete nlb unicast\_fdb <macaddr>**

### Parameters

---

**<macaddr>** - Enter the MAC address of the NLB unicast FDB entry to be deleted.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To delete the NLB unicast FDB entry, for the product that support the VLAN information on the unicast forwarding:

```
DGS-1510-28XMP/ME:admin# delete nlb unicast_fdb 02-bf-01-01-01-01
Command: delete nlb unicast_fdb 02-BF-01-01-01-01

Success.

DGS-1510-28XMP/ME:admin#
```

## 50-4 create nlb multicast\_fdb

**Description**

This command is used to create a NLB multicast FDB entry.

The NLB multicast FDB entry will be mutual exclusive with the L2 multicast entry.

**Format**

**create nlb multicast\_fdb [<vlan\_name 32> | vlanid <vlanid>] <macaddr>**

**Parameters**


---

**<vlan\_name 32>** - Enter the VLAN name here. The VLAN name can be up to 32 characters long.

---

**vlanid** - Specifies the VLAN by the VLAN ID.

**<vlanid>** - Enter the VLAN ID here.

---

**<macaddr>** - Enter the MAC address of the NLB multicast FDB entry to be created.

---

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To create a NLB multicast FDB entry:

```
DGS-1510-28XMP/ME:admin# create nlb multicast_fdb default 03-bf-01-01-01-01
Command: create nlb multicast_fdb default 03-bf-01-01-01-01

Success.

DGS-1510-28XMP/ME:admin#
```

## 50-5 config nlb multicast\_fdb

**Description**

This command is used to add or delete the forwarding ports for the specified NLB multicast FDB entry.

**Format**

**config nlb multicast\_fdb [<vlan\_name 32> | vlanid <vlanid>] <macaddr> [add | delete] <portlist>**



## Parameters

---

**<vlan\_name 32>** - Enter the VLAN of the NLB multicast FDB entry to be configured.

---

**vlanid** - Specifies the VLAN by the VLAN ID.

**<vlanid>** - Enter the VLAN ID here.

---

**<macaddr>** - Enter the Mac address of the NLB multicast FDB entry to be configured.

---

**add** - Specifies a list of forwarding ports to be added.

---

**delete** - Specifies a list of forwarding ports to be deleted.

---

**<portlist>** - Enter the list of ports used for this configuration.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure NLB multicast MAC forwarding database:

```
DGS-1510-28XMP/ME:admin# config nlb multicast_fdb default 03-bf-01-01-01-01 add 1-5
Command: config nlb multicast_fdb default 03-bf-01-01-01-01 add 1-5

Success.

DGS-1510-28XMP/ME:admin#
```

## 50-6 delete nlb multicast\_fdb

### Description

This command is used to delete the NLB multicast FDB entry.

### Format

**delete nlb multicast\_fdb [<vlan\_name 32> | vlanid <vlanid>] <macaddr>**

## Parameters

---

**<vlan\_name 32>** - Enter the VLAN of the NLB multicast FDB entry to be deleted.

---

**vlanid** - Specifies the VLAN by VLAN ID.

**<vlanid>** - Enter the VLAN ID here.

---

**<macaddr>** - Enter the MAC address of the NLB multicast FDB entry to be deleted.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To delete NLB multicast FDB entry:

```
DGS-1510-28XMP/ME:admin# delete nlb multicast_fdb default 03-bf-01-01-01-01
Command: delete nlb multicast_fdb default 03-bf-01-01-01-01

Success.

DGS-1510-28XMP/ME:admin#
```

## 50-7 show nlb fdb

### Description

This command is used to show the NLB Configured entry.

### Format

**show nlb fdb**

### Parameters

None.

### Restrictions

None.

### Example

To display the NLB forwarding table:

```
DGS-1510-28XMP/ME:admin# show nlb fdb
Command: show nlb fdb

  MAC Address          VLAN ID   Egress Ports
  -----
  02-BF-01-01-01-01 -      1-5

Total Entries :1

DGS-1510-28XMP/ME:admin#
```

## Chapter 51 Network Monitoring Command List

---

---

**show packet ports** <portlist>

---

**show error ports** <portlist>

---

**show utilization** [cpu | ports]

---

**show utilization dram**

---

**show utilization flash**

---

**clear counters** {ports <portlist>}

---

### 51-1 show packet ports

#### Description

This command is used to display statistics about the packets sent and received by the Switch.

#### Format

**show packet ports** <portlist>

#### Parameters

---

**<portlist>** - Enter a range of ports to be displayed.

---

#### Restrictions

None.

#### Example

To display the packets analysis for port 7:

```

DGS-1510-28XMP/ME:admin# show packet ports 7
Command: show packet ports 7

Port Number : 7
=====
Frame Size/Type      Frame Counts      Frames/sec
-----
64                   0                 0
65-127               0                 0
128-255              0                 0
256-511              0                 0
512-1023             0                 0
1024-1518            0                 0
Unicast RX           0                 0
Multicast RX         0                 0
Broadcast RX         0                 0

Frame Type           Total              Total/sec
-----
RX Bytes             0                 0
RX Frames            0                 0
TX Bytes             0                 0
TX Frames            0                 0

CTRL+C  ESC  q  Quit  SPACE  n  Next Page  p  Previous Page  r  Refresh

```

## 51-2 show error ports

### Description

This command is used to display the error statistics for a range of ports.

### Format

**show errors ports <portlist>**

### Parameters

---

**<portlist>** - Enter a range of ports to be displayed.

---

### Restrictions

None.

### Example

To display the errors of the port:

```
DGS-1510-28XMP/ME:admin# show error ports 3
```

```
Command: show error ports 3
```

```
Port Number : 3
```

	RX Frames		TX Frames
	-----		-----
CRC Error	0	Excessive Deferral	0
Undersize	0	CRC Error	0
Oversize	0	Late Collision	0
Fragment	0	Excessive Collision	0
Jabber	0	Single Collision	0
Drop Pkts	0	Collision	0
Symbol Error	0		

```
CTRL+C  ESC  q  Quit  SPACE  n  Next Page  p  Previous Page  r  Refresh
```

## 51-3 show utilization

### Description

This command is used to display real-time CPU or port utilization statistics.

### Format

```
show utilization [cpu | ports]
```

### Parameters

---

**cpu** - Specifies to display information regarding the CPU.

---

**ports** - Specifies all ports to be displayed.

---

### Restrictions

None.

### Example

To display the ports utilization:

```
DGS-1510-28XMP/ME:admin# show utilization ports
```

```
Command: show utilization ports
```

Port	TX/sec	RX/sec	Util	Port	TX/sec	RX/sec	Util
1	0	0	0	21	0	0	0
2	0	0	0	22	0	0	0
3	0	0	0	23	0	0	0
4	0	0	0	24	0	0	0
5	0	0	0	25	0	0	0
6	0	0	0	26	0	0	0
7	0	0	0	27	0	0	0
8	0	0	0	28	0	0	0
9	0	0	0				
10	0	0	0				
11	0	0	0				
12	0	0	0				
13	0	0	0				
14	0	0	0				
15	0	0	0				
16	0	0	0				
17	0	0	0				
18	0	0	0				
19	0	0	0				
20	0	0	0				

```
CTRL+C ESC q Quit SPACE n Next Page p Previous Page r Refresh
```

To display the CPU utilization:

```
DGS-1510-28XMP/ME:admin# show utilization cpu
```

```
Command: show utilization cpu
```

```
CPU Utilization
```

```
-----  
Five seconds - 10 %           One minute - 10 %           Five minutes - 10 %
```

```
CTRL+C ESC q Quit SPACE n Next Page p Previous Page r Refresh
```

## 51-4 show utilization dram

### Description

This command is used to show DRAM memory utilization.

### Format

**show utilization dram**

### Parameters

None.

### Restrictions

None.

### Example

To display DRAM utilization:

```
DGS-1510-28XMP/ME:admin# show utilization dram
Command: show utilization dram

DRAM Utilization :
    Total DRAM      : 262144      KB
    Used DRAM       : 162461      KB
    Utilization     : 61 %

CTRL+C  ESC  q  Quit  SPACE  n  Next Page  p  Previous Page  r  Refresh
```

## 51-5 show utilization flash

### Description

This command is used to show the flash memory utilization.

### Format

**show utilization flash**

### Parameters

None.

### Restrictions

None.

## Example

To display FLASH utilization:

```
DGS-1510-28XMP/ME:admin#show utilization flash
Command: show utilization flash

Flash Memory Utilization :
  Total Flash      : 29937      KB
  Used Flash      : 28834      KB
  Utilization     : 96 %

CTRL+C ESC q Quit SPACE n Next Page p Previous Page r Refresh
```

## 51-6 clear counters

### Description

This command is used to clear the Switch's statistics counters.

### Format

**clear counters {ports <portlist>}**

### Parameters

**ports** - (Optional) Specifies a range of ports to be configured. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash.

**<portlist>** - Enter a list of ports used for the configuration here.

If no parameter is specified, system will display counters of all the ports .

### Restrictions

Only Administrators and Operators can issue this command.

### Example

To clear the Switch's statistics counters:

```
DGS-1510-28XMP/ME:admin# clear counters ports 7-9
Command: clear counters ports 7-9

Success.

DGS-1510-28XMP/ME:admin#
```



## Chapter 52 OAM Commands

---

```
config ethernet_oam ports [<portlist> | all] [mode [active | passive] | state [enable | disable] | link_monitor
  [error_symbol {threshold <range 0-4294967295> | window <millisecond 1000-60000> | notify_state [enable |
  disable]](1) | error_frame {threshold <range 0-4294967295> | window <millisecond 1000-60000> |
  notify_state [enable | disable]](1) | error_frame_seconds {threshold <range 1-900> | window <millisecond
  10000-900000> | notify_state [enable | disable]](1) | error_frame_period {threshold <range 0-4294967295> |
  window <number 148810-100000000> | notify_state [enable | disable]](1) | critical_link_event [dying_gasp |
  critical_event] notify_state [enable | disable] | remote_loopback [start | stop] | received_remote_loopback
  [process | ignore]]
```

---

```
show ethernet_oam ports {<portlist>} [status | configuration | statistics | event_log {index <value_list>}]
```

---

```
clear ethernet_oam ports [<portlist> | all] [event_log | statistics]
```

---

### 52-1 config ethernet\_oam ports

#### Description

This command is used to configure Ethernet OAM. The parameter to configure port Ethernet OAM mode operates in active or passive mode. The following two actions are allowed by ports in active mode, but disallowed by ports in passive mode: Initiate OAM discovery and start or stop remote loopback. Note that when a port is OAM-enabled, changing the OAM mode will cause the OAM discovery to be re-started.

The command used to enable or disable port's Ethernet OAM function. The parameter enabling a port's OAM will cause the port to start OAM discovery. If a port's is active, it initiates the discovery. Otherwise it reacts to the discovery received from peer. Disabling a port's OAM will cause the port to send out a dying gasp event to peers and then disconnect the established OAM link.

The link monitoring parameter is used to configure port Ethernet OAM link monitoring error symbols. The link monitoring function provides a mechanism to detect and indicate link faults under a variety of conditions. OAM monitors the statistics on the number of frame errors as well as the number of coding symbol errors. When the number of symbol errors is equal to or greater than the specified threshold in a period and the event notification state is enabled, it generates an error symbol period event to notify the remote OAM peer. The Ethernet OAM link monitoring error frames parameter provides a mechanism to detect and indicate link faults under a variety of conditions. OAM monitors the counter on the number of frame errors as well as the number of coding symbol errors. When the number of frame errors is equal to or greater than the specified threshold in a period and the event notification state is enabled, it generates an error frame event to notify the remote OAM peer.

The link event parameter configures the capability of the Ethernet OAM critical link event. If the capability for an event is disabled, the port will never send out the corresponding critical link event. The command is used to configure the client to process or to ignore the received Ethernet OAM remote loopback command. In remote loopback mode, all user traffic will not be processed. Ignoring the received remote loopback command will prevent the port from entering remote loopback mode.

#### Format

```
config ethernet_oam ports [<portlist> | all] [mode [active | passive] | state [enable | disable] | link_monitor
  [error_symbol {threshold <range 0-4294967295> | window <millisecond 1000-60000> | notify_state [enable |
  disable]](1) | error_frame {threshold <range 0-4294967295> | window <millisecond 1000-60000> |
  notify_state [enable | disable]](1) | error_frame_seconds {threshold <range 1-900> | window <millisecond
  10000-900000> | notify_state [enable | disable]](1) | error_frame_period {threshold <range 0-4294967295> |
  window <number 148810-100000000> | notify_state [enable | disable]](1) | critical_link_event [dying_gasp |
  critical_event] notify_state [enable | disable] | remote_loopback [start | stop] | received_remote_loopback
  [process | ignore]]
```

#### Parameters

---

```
<portlist> - Enter a range of ports to be configured.
```

---

---

**all** - Specifies all ports are to be configured.

---

**mode** - Specifies the operation mode. The default mode is active.

**active** - Specifies to operate in active mode.

**passive** - Specifies to operate in passive mode.

---

**state** - Specifies the OAM function status.

**enable** - Specifies to enable the OAM function.

**disable** - Specifies to disable the OAM function.

---

**link\_monitor** - Specifies to detect and indicate link faults under a variety of conditions.

**error\_symbol** - Specifies to generate an error symbol period event to notify the remote OAM peer.

**threshold** - Specifies the number of symbol errors in the period that is required to be equal to or greater than in order for the event to be generated. The default value of threshold is 1 symbol error.

**<range 0-4294967295>** - Enter the range from 0 to 4294967295.

**window** - Specifies the range from 1000 to 60000 ms. The default value is 1000ms.

**<millisecond 1000-60000>** - Enter the range from 1000 to 60000 ms.

**notify\_state** - Specifies the event notification status. The default state is enable.

**enable** - Specifies to enable event notification.

**disable** - Specifies to disable event notification.

**error\_frame** - Specifies the error frame.

**threshold** - Specifies a threshold range.

**<range 0-4294967295>** - Enter a threshold range between 0 and 4294967295.

**window** - Specifies the range from 1000 to 60000 milliseconds. The default value is 1000 milliseconds.

**<millisecond 1000-60000>** - Enter the range from 1000 to 60000 milliseconds.

**notify\_state** - Specifies the event notification status. The default state is enable.

**enable** - Specifies to enable event notification.

**disable** - Specifies to disable event notification.

**error\_frame\_seconds** - Specifies error frame time.

**threshold** - Specifies a threshold range between 1 and 900.

**<range 1-900>** - Enter a threshold range between 1 and 900.

**window** - Specifies the range from 1000 to 900000 milliseconds.

**<millisecond 1000-900000>** - Enter the range from 1000 to 900000 milliseconds.

**notify\_state** - Specifies the event notification status. The default state is enable.

**enable** - Specifies to enable event notification.

**disable** - Specifies to disable event notification.

**error\_frame\_period** - Specifies error frame period.

**threshold** - Specifies a threshold range between 0 and 4294967295.

**<range 0-4294967295>** - Enter a threshold range between 0 and 4294967295.

**window** - Specifies the range from 148810 to 100000000 milliseconds.

**<number 148810-100000000>** - Enter the range from 148810 to 100000000 milliseconds.

**notify\_state** - Specifies the event notification status. The default state is enable.

**enable** - Specifies to enable event notification.

**disable** - Specifies to disable event notification.

---

**critical\_link\_event** - Specifies critical link event.

**dying\_gasp** - Specifies that an unrecoverable local failure condition has occurred.

**critical\_event** - Specifies that an unspecified critical event has occurred.

**notify\_state** - Specifies the event notification status. The default state is enable.

**enable** - Specifies to enable event notification.

**disable** - Specifies to disable event notification.

---

**remote\_loopback** - Specifies remote loop.

**start** - Specifies to request the peer to change to the remote loopback mode.

---

**stop** - Specifies to request the peer to change to the normal operation mode.

---

**received\_remote\_loopback** - Specifies receive remote loop-back.

**process** - Specifies to process the received Ethernet OAM remote loopback command.

**ignore** - Specifies to ignore the received Ethernet OAM remote loopback command. This is the default method.

---

## Restrictions

Only Administrators and Operators can issue this command.

## Example

To configure Ethernet OAM on ports 1 to 2 in active mode:

```
DGS-1510-28XMP/ME:admin# config ethernet_oam ports 1-2 mode active
Command: config ethernet_oam ports 1-2 mode active

Success.

DGS-1510-28XMP/ME:admin#
```

To enable Ethernet OAM on port 1:

```
DGS-1510-28XMP/ME:admin# config ethernet_oam ports 1 state enable
Command: config ethernet_oam ports 1 state enable

Success.

DGS-1510-28XMP/ME:admin#
```

To configure the error symbol threshold to 2 and period to 1000ms for port 1:

```
DGS-1510-28XMP/ME:admin# config ethernet_oam ports 1 link_monitor error_symbol threshold 2
window 1000 notify_state enable
Command: config ethernet_oam ports 1 link_monitor error_symbol threshold 2 window 1000
notify_state enable

Success.

DGS-1510-28XMP/ME:admin#
```

To configure the error frame threshold to 2 and period to 1000 ms for port 1:

```
DGS-1510-28XMP/ME:admin# config ethernet_oam ports 1 link_monitor error_frame threshold 2
window 1000 notify_state enable
Command: config ethernet_oam ports 1 link_monitor error_frame threshold 2 window 1000
notify_state enable

Success.

DGS-1510-28XMP/ME:admin#
```

To configure the error frame seconds threshold to 2 and period to 10000 ms for port 1:

```
DGS-1510-28XMP/ME:admin# config ethernet_oam ports 1 link_monitor error_frame_seconds
threshold 2 window 10000 notify_state enable
Command: config ethernet_oam ports 1 link_monitor error_frame_seconds threshold 2 window
10000 notify_state enable

Success.

DGS-1510-28XMP/ME:admin#
```

To configure the error frame threshold to 10 and period to 1000000 ms for port 1:

```
DGS-1510-28XMP/ME:admin# config ethernet_oam ports 1 link_monitor error_frame_period
threshold 10 window 1000000 notify_state enable
Command: config ethernet_oam ports 1 link_monitor error_frame_period threshold 10 window
1000000 notify_state enable

Success.

DGS-1510-28XMP/ME:admin#
```

To configure a dying gasp event for port 1:

```
DGS-1510-28XMP/ME:admin# config ethernet_oam ports 1 critical_link_event dying_gasp
notify_state enable
Command: config ethernet_oam ports 1 critical_link_event dying_gasp notify_state enable

Success.

DGS-1510-28XMP/ME:admin#
```

To start remote loopback on port 1:

```
DGS-1510-28XMP/ME:admin# config ethernet_oam ports 1 remote_loopback start
Command: config ethernet_oam ports 1 remote_loopback start

Success.

DGS-1510-28XMP/ME:admin#
```

To configure the method of processing the received remote loopback command as “process” on port 1:

```
DGS-1510-28XMP/ME:admin# config ethernet_oam ports 1 received_remote_loopback process
Command: config ethernet_oam ports 1 received_remote_loopback process

Success.

DGS-1510-28XMP/ME:admin#
```

## 52-2 show ethernet\_oam ports

### Description

This command is used to display Ethernet OAM information, including status, configuration, statistics, and event log, on specified ports.

The status information includes:

1. OAM administration status: enabled or disabled.
2. OAM operation status. It maybe the below value:
  - Disable: OAM is disabled on this port.
  - LinkFault: The link has detected a fault and is transmitting OAMPDUs with a link fault indication.
  - PassiveWait: The port is passive and is waiting to see if the peer device is OAM capable.
  - ActiveSendLocal: The port is active and is sending local information.
  - SendLocalAndRemote: The local port has discovered the peer but has not yet accepted or rejected the configuration of the peer.
  - SendLocalAndRemoteOk: The local device agrees the OAM peer entity.
  - PeeringLocallyRejected: The local OAM entity rejects the remote peer OAM entity.
  - PeeringRemotelyRejected: The remote OAM entity rejects the local device.
  - Operational: The local OAM entity learns that both it and the remote OAM entity have accepted the peering.
  - NonOperHalfDuplex: Since Ethernet OAM functions are not designed to work completely over half-duplex port. This value indicates Ethernet OAM is enabled but the port is in half-duplex operation.
3. OAM mode: passive or active.
4. Maximum OAMPDU size: The largest OAMPDU that the OAM entity supports. OAM entities exchange maximum OAMPDU sizes and negotiate to use the smaller of the two maximum OAMPDU sizes between the peers.
5. OAM configuration revision: The configuration revision of the OAM entity as reflected in the latest OAMPDU sent by the OAM entity. The config revision is used by OAM entities to indicate that configuration changes have occurred, which might require the peer OAM entity to re-evaluate whether OAM peering is allowed.
6. OAM mode change.
7. OAM Functions Supported: The OAM functions supported on this port. These functions include:
  - Unidirectional: It indicates that the OAM entity supports the transmission of OAMPDUs on links that are operating in unidirectional mode (traffic flowing in one direction only).
  - Loopback: It indicates that the OAM entity can initiate and respond to loopback commands.
  - Link Monitoring: It indicates that the OAM entity can send and receive Event Notification OAMPDUs.
  - Variable: It indicates that the OAM entity can send and receive variable requests to monitor the attribute value as described in the IEEE 802.3 Clause 30 MIB.

The event log displays Ethernet OAM event log information. The switch can buffer 1000 event logs. The event log is different from sys-log as it provides more detailed information than sys-log. Each OAM event will be recorded in both OAM event log and syslog.

### Format

```
show ethernet_oam ports {<portlist>} [status | configuration | statistics | event_log {index <value_list>}]
```

### Parameters

---

**<portlist>** - (Optional) Enter a range of ports to be displayed.

---

---

**status** - Specifies to display the Ethernet OAM status.

---

**configuration** - Specifies to display the Ethernet OAM configuration.

---

**statistics** - Specifies to display Ethernet OAM statistics.

---

**event\_log** - Specifies to display the Ethernet OAM event log information.

**index** - (Optional) Specifies an index range to display.

**<value\_list>** - (Optional) Enter an index range to display.

---

## Restrictions

Only Administrators and Operators can issue this command.

## Example

To display Ethernet OAM statistics information for port 1:

```
DGS-1510-28XMP/ME:admin# show ethernet_oam ports 1 statistics
Command: show ethernet_oam ports 1 statistics
```

```
Port 1
```

```
-----
Information OAMPDU TX           : 0
Information OAMPDU RX           : 0
Unique Event Notification OAMPDU TX : 0
Unique Event Notification OAMPDU RX : 0
Duplicate Event Notification OAMPDU TX: 0
Duplicate Event Notification OAMPDU RX: 0
Loopback Control OAMPDU TX      : 0
Loopback Control OAMPDU RX      : 0
Variable Request OAMPDU TX      : 0
Variable Request OAMPDU RX      : 0
Variable Response OAMPDU TX     : 0
Variable Response OAMPDU RX     : 0
Organization Specific OAMPDU TX : 0
Organization Specific OAMPDU RX : 0
Unsupported OAMPDU TX           : 0
Unsupported OAMPDU RX           : 0
Frames Lost Due To OAM         : 0
```

```
DGS-1510-28XMP/ME:admin#
```

## 52-3 clear ethernet\_oam ports

### Description

This command is used to clear Ethernet OAM information.

### Format

**clear ethernet\_oam ports [<portlist> | all] [event\_log | statistics]**

## Parameters

---

**<portlist>** - Enter a range of Ethernet OAM ports to be cleared.

---

**all** - Specifies to clear all Ethernet OAM ports.

---

**event\_log** - Specifies to clear Ethernet OAM event log information.

---

**statistics** - Specifies to clear Ethernet OAM statistics.

---

## Restrictions

Only Administrators and Operators can issue this command.

## Example

To clear port 1 OAM statistics:

```
DGS-1510-28XMP/ME:admin# clear ethernet_oam ports 1 statistics
Command: clear ethernet_oam ports 1 statistics

Success.

DGS-1510-28XMP/ME:admin#
```

To clear port 1 OAM events:

```
DGS-1510-28XMP/ME:admin# clear ethernet_oam ports 1 event_log
Command: clear ethernet_oam ports 1 event_log

Success.

DGS-1510-28XMP/ME:admin#
```

## Chapter 53 Peripherals Command List

---

**show device\_status**

---

**show environment**

---

**config temperature threshold** {high <temperature -500-500> | low <temperature -500-500>}(1)

---

**config temperature** [trap | log] state [enable | disable]

---

### 53-1 show device\_status

#### Description

This command is used to display the current status of power(s) and right fan on the system. When any fan is failed, only the failed fan(s) will display in the fan field. Take DGS-1510-28XMP/ME as an example. DGS-1510-28XMP/ME has two fans on the right side. If two fans are working normally, the Right Fan field displays “OK”. If the fan 2 works failed, the Right Fan field displays “2 Fail”.

#### Format

**show device\_status**

#### Parameters

None.

#### Restrictions

None.

#### Example

To show device status:

```
DGS-1510-28XMP/ME:admin#show device_status
Command: show device_status

    Internal Power: (Not Support)
    External Power: None
    Right Fan      : 2 Fail

DGS-1510-28XMP/ME:admin#
```

### 53-2 show environment

#### Description

This command is used to display current status of power(s) and fan(s) on the system.

#### Format

**show environment**



## Parameters

None.

## Restrictions

None.

## Example

To display the device environment:

```
DGS-1510-28XMP/ME:admin#show environment
Command: show environment

Temperature Trap State      : Enabled
Temperature Log State      : Enabled
Internal Power             : (Not Support)
External Power             : None
Current Temperature(Celsius) : 28
High Warning Temperature Threshold(Celsius) : 79
Low Warning Temperature Threshold(Celsius) : 11

DGS-1510-28XMP/ME:admin#
```

## 53-3 config temperature threshold

### Description

This command is used to configure the warning threshold for high and low temperature.

### Format

**config temperature threshold {high <temperature -500-500> | low <temperature -500-500>}(1)**

### Parameters

---

**high** - Specifies the high threshold value. The high threshold must bigger than the low threshold.

**<temperature -500-500>** - Enter the high threshold temperature.

---

**low** - Specifies the low threshold value.

**<temperature -500-500>** - Enter the low threshold temperature.

---

### Restrictions

Only Administrators and Operators can issue this command.

### Example

To configure the warning temperature threshold:

```
DGS-1510-28XMP/ME:admin# config temperature threshold high 80
Command: config temperature threshold high 80

Success.

DGS-1510-28XMP/ME:admin#
```

## 53-4 config temperature

### Description

This command is used to configure the trap state for temperature warning event.

### Format

**config temperature [trap | log] state [enable | disable]**

### Parameters

---

**trap** - Specifies the trap state for the warning temperature event.

---

**log** - Specifies the log state for the warning temperature event.

---

**state** - Specifies the trap or log state for the warning temperature event.

**enable** - Specifies to enable trap or log state for warning temperature event. The default state is enabled.

**disable** - Specifies to disable trap or log state for warning temperature event.

---

### Restrictions

Only Administrators and Operators can issue this command.

### Example

To configure the warning temperature trap state:

```
DGS-1510-28XMP/ME:admin# config temperature trap state enable
Command: config temperature trap state enable

Success.

DGS-1510-28XMP/ME:admin#
```

## Chapter 54 Ping Command List

---

**ping** <ipaddr> {times <value 1-255> | timeout <sec 1-99>}

---

**ping6** <ipv6addr> {times <value 1-255> | size <value 1-6000> | timeout <sec 1-99>}

### 54-1 ping

#### Description

This command is used to send Internet Control Message Protocol (ICMP) echo messages to a remote IP address. The remote IP address will then “echo” or return the message. This is used to confirm connectivity between the Switch and the remote device.

#### Format

**ping** <ipaddr> {times <value 1-255> | timeout <sec 1-99>}

#### Parameters

---

**<ipaddr>** - Enter the IP address of the host.

---

**times** - (Optional) Specifies the number of individual ICMP echo messages to be sent. A value of 0 will send an infinite ICMP echo messages. The maximum value is 255. The default is 0, indicating infinity. Press "CTRL+C" to break the ping test.**<value 1-255>** - Enter the number of individual ICMP echo messages to be sent here. This value must be between 1 and 255.

---

**timeout** - (Optional) Specifies the time-out period while waiting for a response from the remote device. A value of 1 to 99 seconds can be specified. The default is 1 second.**<sec 1-99>** - Enter the time-out period here. This value must be between 1 and 99 seconds.

#### Restrictions

None.

#### Example

To send ICMP echo message to “10.51.17.1” for 4 times:

```
DGS-1510-28XMP/ME:admin# ping 10.51.17.1 times 4
Command: ping 10.51.17.1 times 4

Reply from 10.51.17.1, time<10ms
Reply from 10.51.17.1, time<10ms
Reply from 10.51.17.1, time<10ms
Reply from 10.51.17.1, time<10ms

Ping Statistics for 10.51.17.1
Packets: Sent =4, Received =4, Lost =0

DGS-1510-28XMP/ME:admin#
```

## 54-2 ping6

**Description**

This command is used to send IPv6 Internet Control Message Protocol (ICMP) echo messages to a remote IPv6 address. The remote IPv6 address will then “echo” or return the message. This is used to confirm the IPv6 connectivity between the Switch and the remote device.

**Format**

**ping6 <ipv6addr> {times <value 1-255> | size <value 1-6000> | timeout <sec 1-99>}**

**Parameters**

---

**<ipv6addr>** - Enter the IPv6 address here.

**times** - (Optional) Specifies the number of individual ICMP echo messages to be sent. A value of 0 will send an infinite ICMP echo messages. The maximum value is 255. The default is 0, indicating infinity. Press "CTRL+C" to break the ping test.

**<value 1-255>** - Enter the number of individual ICMP echo messages to be sent here. This value must be between 1 and 255.

**size** - (Optional) Specifies the size of the test packet.

**<value 1-6000>** - Enter the size of the test packet here. This value must be between 1 and 6000.

**timeout** - (Optional) Specifies the time-out period while waiting for a response from the remote device.

**<sec 1-99>** - Enter the time-out period here. This value must be between 1 and 99 seconds. The default is 1 second.

---

**Restrictions**

None.

**Example**

To send ICMP echo message to “3000::1” for 4 times:

```
DGS-1510-28XMP/ME:admin# ping6 3000::1 times 4
Command: ping6 3000::1 times 4

Reply from 3000::1, bytes=200, time<10ms
Reply from 3000::1, bytes=200, time<10ms
Reply from 3000::1, bytes=200, time<10ms
Reply from 3000::1, bytes=200, time<10ms

Ping Statistics for 3000::1
Packets: Sent =4, Received =4, Lost =0

DGS-1510-28XMP/ME:admin#
```

## Chapter 55 Port Security Command List

---

<b>config port_security system max_learning_addr</b> [<max_lock_no 1-3328>   no_limit]
<b>config port_security ports</b> [<portlist>   all] [{admin_state [enable   disable]   max_learning_addr <max_lock_no 0-3328>   lock_address_mode [permanent   deleteontimeout   deleteonreset]} (1)] {vlan [<vlan_name 32>   vlanid <vidlist>] max_learning_addr [<max_lock_no 0-3328>   no_limit]}(1)
<b>config port_security vlan</b> [<vlan_name 32>   vlanid <vidlist>] max_learning_addr [<max_lock_no 0-3328>   no_limit]
<b>delete port_security_entry</b> [vlan <vlan_name 32>   vlanid <vlanid 1-4094>] mac_address <macaddr>
<b>clear port_security_entry</b> {ports [<portlist>   all] {[vlan <vlan_name 32>   vlanid <vidlist>]}}
<b>show port_security_entry</b> {ports {<portlist>} {[vlan <vlan_name 32>   vlanid <vidlist>]}}
<b>show port_security</b> {ports {<portlist>} {[vlan <vlan_name 32>   vlanid <vidlist>]}}
<b>enable port_security trap_log</b>
<b>disable port_security trap_log</b>

---

### 55-1 config port\_security system max\_learning\_addr

#### Description

This command is used to set the maximum number of port security entries that can be authorized system wide.

There are four levels of limitations on the learned entry number; for the entire system, for a port, for a VLAN, and for a specific VLAN on a port. If any limitation is exceeded, the new entry will be discarded.

The setting for system level maximum learned users must be greater than the total of maximum learned users allowed on all ports.

#### Format

**config port\_security system max\_learning\_addr** [<max\_lock\_no 1-3328> | no\_limit]

#### Parameters

**<max\_lock\_no 1-3328>** - Specifies the maximum number of port security entries that can be learned by the system. If the setting is smaller than the number of current learned entries on all enabled ports, the command will be rejected. This value must be between 1 and 3328.

**no\_limit** - Specifies that there is no limitation on the number of port security entries that can be learned by the system. This is the default option.

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

#### Example

To configure the maximum number of port security entries on the Switch to be 256:

```
DGS-1510-28XMP/ME:admin# config port_security system max_learning_addr 256
Command: config port_security system max_learning_addr 256

Success.

DGS-1510-28XMP/ME:admin#
```

## 55-2 config port\_security ports

### Description

This command is used to configure the admin state, the maximum number of addresses that can be learnt and the lock address mode.

There are four levels that limit the number of learned entries; the entire system, a port, a VLAN, and a specific VLAN on a port. If any limitation is exceeded, the new entry will be discarded.

### Format

```
config port_security ports [<portlist> | all] [{admin_state [enable | disable] | max_learning_addr <max_lock_no 0-3328> | lock_address_mode [permanent | deleteontimeout | deleteonreset]}(1) | {vlan [<vlan_name 32> | vlanid <vidlist>] max_learning_addr [<max_lock_no 0-3328> | no_limit]}(1)]
```

### Parameters

---

**<portlist>** - Enter the list of ports used for this configuration here.

---

**all** - Specifies that all ports will be configured.

---

**admin\_state** - Specifies the state of the port security function on the port.

**enable** - Specifies to enable the port security function on the port.

**disable** - Specifies to disable the port security function on the port. By default, the setting is disabled.

---

**max\_learning\_addr** - Specifies the maximum number of port security entries that can be learned on this port. If the value is set to 0, it means that no user can be authorized by the port security function on this port. If the setting is smaller than the number of current learned entries on the port, the command will be rejected. The default value is 32.

**<max\_lock\_no 0-3328>** - Enter the maximum number of port security entries that can be learned here. This value must be between 0 and 3328.

---

**lock\_address\_mode** - Specifies the lock address mode.

**permanent** - Specifies that the address will never be deleted unless the user removes it manually, the VLAN of the entry is removed, the port is removed from the VLAN, or port security is disabled on the port where the address resides.

**deleteontimeout** - Specifies that this entry will be removed if the entry is idle for the specified aging time.

**deleteonreset** - Specifies that this address will be removed if the Switch is reset or rebooted. Events that cause permanent entries to be deleted also apply to the deleteonreset entries. This is the default mode.

---

**vlan** - Specifies the VLAN name used here.

**<vlan\_name 32>** - Enter the VLAN name used here. This name can be up to 32 characters long.

**vlanid** - Specifies the VLAN ID used here.

**<vidlist>** - Enter the VLAN ID used here.

---

**max\_learning\_addr** - Specifies the maximum learning address value.

**<max\_lock\_no 0-3328>** - Enter the maximum learning address value here. This value must be between 0 and 3328.

**no\_limit** - Specifies that the maximum learning address value will be set to no limit.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure the port-based port security setting so that the maximum number of port security entries is restricted to 10, and the lock address mode is set to permanent on port 6:

```
DGS-1510-28XMP/ME:admin# config port_security ports 6 admin_state enable max_learning_addr 10
lock_address_mode permanent
Command: config port_security ports 6 admin_state enable max_learning_addr 10
lock_address_mode permanent

Success.

DGS-1510-28XMP/ME:admin#
```

## 55-3 config port\_security vlan

### Description

This command is used to set the maximum number of port security entries that can be learned on a specific VLAN.

There are four levels that limit the number of learned entries; the entire system, a port, a VLAN, and a specific VLAN on a port. If any limitation is exceeded, the new entry will be discarded.

### Format

**config port\_security vlan [<vlan\_name 32> | vlanid <vidlist>] max\_learning\_addr [<max\_lock\_no 0-3328> | no\_limit]**

### Parameters

---

**<vlan\_name 32>** - Enter the VLAN name here. This name can be up to 32 characters long.

---

**vlanid** - Specifies a list of VLANs by VLAN ID.

**<vidlist>** - Enter the VLAN ID list here.

---

**max\_learning\_addr** - Specifies the maximum number of port security entries that can be learned by this VLAN. If this parameter is set to 0, it means that no user can be authorized on this VLAN. If the setting is lower than the number of current learned entries on the VLAN, the command will be rejected.

**<max\_lock\_no 0-3328>** - Enter the maximum number of port security entries that can be learned here. This value must be between 0 and 3328.

**no\_limit** - Specifies that there is no limitation on the number of port security entries that can be learned by a specific VLAN. This is the default.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure the maximum number of VLAN-based port security entries on VLAN 1 to be 64:

```
DGS-1510-28XMP/ME:admin# config port_security vlan vlanid 1 max_learning_addr 64
Command: config port_security vlan vlanid 1 max_learning_addr 64

Success.

DGS-1510-28XMP/ME:admin#
```

## 55-4 delete port\_security\_entry

### Description

This command is used to delete a port security entry.

### Format

**delete port\_security\_entry [vlan <vlan\_name 32> | vlanid <vlanid 1-4094>] mac\_address <macaddr>**

### Parameters

**vlan** - Specifies the VLAN by VLAN name.

**<vlan\_name 32>** - Enter the VLAN name here. This name can be up to 32 characters long.

**vlanid** - Specifies the VLAN by VLAN ID.

**<vlanid 1-4094>** - Enter the VLAN ID list here. This value must be between 1 and 4094.

**mac\_address** - Specifies the MAC address of the entry.

**<macaddr>** - Enter the MAC address used here.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To delete the port security entry with a MAC address of 00-00-00-00-00-01 on VLAN 1:

```
DGS-1510-28XMP/ME:admin# delete port_security_entry vlanid 1 mac_address 00-00-00-00-00-01
Command: delete port_security_entry vlanid 1 mac_address 00-00-00-00-00-01

Success.

DGS-1510-28XMP/ME:admin#
```

## 55-5 clear port\_security\_entry

### Description

This command is used to clear the MAC entries learned by the port security function.

### Format

**clear port\_security\_entry {ports [<portlist> | all] {[vlan <vlan\_name 32> | vlanid <vidlist>]}}**



## Parameters

**ports** - (Optional) Specifies a range of ports to be configured.

**<portlist>** - Enter the port security entries learned on the specified port will be cleared.

**all** - Specifies that all the port security entries learned by the system will be cleared.

**vlan** - (Optional) Specifies that the port security entries learned on the specified VLANs will be cleared.

**<vlan\_name 32>** - Enter the VLAN name here. This name can be up to 32 characters long.

**vlanid** - (Optional) Specifies a list of VLANs by VLAN ID.

**<vidlist>** - Enter the VLAN ID list here.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To clear the port security entries on port 6:

```
DGS-1510-28XMP/ME:admin# clear port_security_entry ports 6
Command: clear port_security_entry ports 6

Success.

DGS-1510-28XMP/ME:admin#
```

## 55-6 show port\_security\_entry

### Description

This command is used to display the port security entries.

If more than one parameter is selected, only the entries matching all the selected parameters will be displayed.

If the user specifies ports and VLAN (either the VLAN name or VLAN ID list), only the entries matching all the parameters will be displayed.

### Format

**show port\_security\_entry {ports {<portlist>} {[vlan <vlan\_name 32> | vlanid <vidlist>]}}**

## Parameters

**ports** - (Optional) Specifies the range of ports that will display the port security entries.

**<portlist>** - (Optional) Enter the list of ports used for this configuration here.

**vlan** - (Optional) Specifies the name of the VLAN that the port security settings will be displayed for.

**<vlan\_name 32>** - Enter the VLAN name here. This name can be up to 32 characters long.

**vlanid** - (Optional) Specifies the ID of the VLAN that the port security entries will be displayed for.

**<vidlist>** - Enter the VLAN ID list here.

If no parameter is specified, the entries on all ports will be displayed.

## Restrictions

None.

## Example

To show all the port security entries:

```
DGS-1510-28XMP/ME:admin# show port_security_entry
Command: show port_security_entry

MAC Address          VID   Port   Lock Mode
-----
00-00-00-00-00-01   1     25    DeleteOnTimeout

Total Entries: 1

DGS-1510-28XMP/ME:admin#
```

## 55-7 show port\_security

### Description

This command is used to display the port security related information, including state, maximum learned addresses and lock address mode on a port and/or on a VLAN.

If both ports and vlanid (or vlan\_name) are specified, configurations matching any of these parameters will be displayed.

### Format

**show port\_security {ports <portlist> [[vlan <vlan\_name 32> | vlanid <vidlist>]]}**

### Parameters

**ports** - (Optional) Specifies the range of ports that will show their configuration.

**<portlist>** - (Optional) Enter the list of ports used for this configuration here.

**vlan** - (Optional) Specifies the name of the VLAN that will show its configuration.

**<vlan\_name 32>** - Enter the VLAN name here. This name can be up to 32 characters long.

**vlanid** - (Optional) Specifies the ID of the VLAN that will show its configuration.

**<vidlist>** - Enter the VLAN ID list here.

If no parameter is specified, the entries on all ports will be displayed.

### Restrictions

None.

### Example

To display the global configuration of port security:

```
DGS-1510-28XMP/ME:admin# show port_security
Command: show port_security

Port Security Trap/Log      : Disabled
System Maximum Address     : 256

VLAN Configuration (Only VLANs with limitation are displayed)
VID   VLAN Name                Max. Learning Addr.
-----
1     default                   64

DGS-1510-28XMP/ME:admin#
```

## 55-8 enable port\_security trap\_log

### Description

This command is used to enable port security traps/logs. When this command is enabled, if there's a new MAC that violates the pre-defined port security configuration, a trap will be sent out with the MAC and port information and the relevant information will be logged.

### Format

**enable port\_security trap\_log**

### Parameters

None.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To enable a port security trap:

```
DGS-1510-28XMP/ME:admin# enable port_security trap_log
Command: enable port_security trap_log

Success.

DGS-1510-28XMP/ME:admin#
```

## 55-9 disable port\_security trap\_log

### Description

This command is used to disable a port security trap/log. If the port security trap is disabled, no trap will be sent out for MAC violations, and no log will be recorded.

## Format

**disable port\_security trap\_log**

## Parameters

None.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To prevent a port security trap from being sent from the Switch:

```
DGS-1510-28XMP/ME:admin# disable port_security trap_log
Command: disable port_security trap_log

Success.

DGS-1510-28XMP/ME:admin#
```

# Chapter 56 Power over Ethernet (PoE)

## Command List (DGS-1510-28LP/ME and DGS-1510-28XMP/ME Only)

---

<b>config poe system</b> {power_limit <value 37-193>   power_disconnect_method [deny_next_port   deny_low_priority_port]   legacy_pd [enable   disable]} (DGS-1510-28LP/ME Only)
<b>config poe system</b> {power_limit <value 37-370>   power_disconnect_method [deny_next_port   deny_low_priority_port]   legacy_pd [enable   disable]} (DGS-1510-28XMP/ME Only)
<b>config poe ports</b> [all   <portlist>] { state [enable   disable] [time_range <range_name 32>   clear_time_range] priority [critical   high   low]   power_limit [class_0   class_1   class_2   class_3   user_define <value 1000-35000>]}
<b>show poe system</b>
<b>show poe ports</b> {<portlist>}

---

### 56-1 config poe system

#### Description

This command is used to configure the parameters for the POE system-wise function.

#### Format

**config poe system** {power\_limit <value 37-193> | power\_disconnect\_method [deny\_next\_port | deny\_low\_priority\_port] | legacy\_pd [enable | disable]} (DGS-1510-28LP/ME Only)

**config poe system** {power\_limit <value 37-370> | power\_disconnect\_method [deny\_next\_port | deny\_low\_priority\_port] | legacy\_pd [enable | disable]} (DGS-1510-28XMP/ME Only)

#### Parameters

**power\_limit** - (Optional) Specifies to configure the power budget of PoE system. The range of value which can be specified is determined by the system.

**<value 37-193>** - Enter the power limit value here. This value must be between 37 and 193. (DGS-1510-28LP/ME Only)

**<value 37-370>** - Enter the power limit value here. This value must be between 37 and 370. (DGS-1510-28XMP/ME Only)

**power\_disconnect\_method** - (Optional) Specifies to configure the disconnection method that will be used when the power budget is running out. When the system attempts to supply power to a new port, if the power budget is insufficient to do this, PoE controller will initiate port disconnection procedure to prevent overloading the power supply. The controller uses one of the following two ways to perform the disconnection procedure.

**deny\_next\_port** - Specifies that the port with max port number will be denied regardless of its priority. Note that if the disconnect\_method is set to deny\_next\_port, then the power provision will not utilize the system's maximum power. There is a 19W safe margin. That is, when the system has only 19W remaining, this power cannot be utilized.

**deny\_low\_priority\_port** - Specifies that if there are ports that have been supplied power that have a priority lower than the new port, the port with the lowest priority will be disconnected. This process will stop until enough power is released for the new port. Note that if the disconnect\_method is set to deny\_low\_priority\_port, then the power provision can utilize the system's maximum power.

**legacy\_pd** - Specifies to configure legacy PDs detection status.

**enable** - Specifies that the legacy PDs detection status will be enabled.

---

**disable** - Specifies that the legacy PDs detection status will be disabled.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To config PoE system-wise was setting:

```
DGS-1510-28XMP/ME:admin# config poe system power_limit 150 power_disconnect_method
deny_low_priority_port
Command: config poe system power_limit 150 power_disconnect_method deny_low_priority_port

Success.

DGS-1510-28XMP/ME:admin#
```

## 56-2 config poe ports

### Description

This command is used to configure the PoE port settings.

Based on 802.3af, there are 5 kinds of PD classes, class 0, class 1, class 2, and class 3. The power consumption ranges for them are 0.44~12.95W, 0.44~3.84W, 3.84~6.49W, 6.49~12.95W, and 12.95~ 29.5W, respectively.

The five pre-defined settings are for users' convenience: The following is the power limit applied to the port for these four classes. For each class, the power limit is a little more than the power consumption range for the class. This takes the factor of the power loss on cable into account. Thus, the following are the typical values defined by the chip vendor.

Class 0: 15400mW

Class 1: 4000mW

Class 2: 7000mW

Class 3: 15400mW

Other than these four pre-defined settings, users can directly specify any value that the chip supported, Normally, the minimum setting is 1000mW, and the maximum setting is 15400mW for 802.3af and >=35000mW for 802.3at.

**NOTE:** If the switch fails to supply power to the Powered Device (PD) that supports the IEEE 802.3at standard,



1. Check if the PD connected to the port supports the IEEE 802.3at standard.
2. Manually configure the corresponding port's power limit value to 30 Watts using the **config poe ports [all | <portlist>] power\_limit user\_define 30000** command.

### Format

```
config poe ports [all | <portlist>] { state [enable | disable] | [time_range <range_name 32> |
clear_time_range] | priority [critical | high | low] | power_limit [class_0 | class_1 | class_2 | class_3 |
user_define <value 1000-35000>]}
```

## Parameters

**ports** - Specifies the list of ports whose setting is under configuration.

**all** - Specifies that all the ports will be included in this configuration.

**<portlist>** - Enter the list of ports used for this configuration here.

**state** - (Optional) Specifies to enable or disable the power supply to the powered device of the specific ports.

**enable** - Specifies that state will be enabled.

**disable** - Specifies that state will be disabled.

**time\_range** - (Optional) Specifies the time range that applies to the port of the POE. If time range is configured, the power can only be supplied during the period specified by time range.

**<range\_name 32>** - Enter the time range name here. This name can be up to 32 characters long.

**clear\_time\_range** - (Optional) Specifies to remove the time range.

**priority** - (Optional) Specifies the priority that the system attempts to supply power to the specific ports. There are three levels of priority that can be selected, critical, high, and low. When multiple ports happen to have the same level of priority, the port ID will be used to determine the priority. The lower port ID has higher priority. The setting of priority will affect the ordering of supplying power. Whether the disconnect\_method is set to deny\_low\_priority\_port, priority of port will be used by the system to manage to supply power to ports.

**critical** - Specifies that the priority will be set to critical.

**high** - Specifies that the priority will be set to high.

**low** - Specifies that the priority will be set to low.

**power\_limit** - (Optional) Specifies to configure the per-port power limit. If a port exceeds its power limit, it will be shut down.

**class\_0** - Specifies that the power limit will be set to class 0.

**class\_1** - Specifies that the power limit will be set to class 1.

**class\_2** - Specifies that the power limit will be set to class 2.

**class\_3** - Specifies that the power limit will be set to class 3.

**user\_define** - (Optional) Specifies that a user defined per-port power limit will be used.

**<value 1000-35000>** - Enter the user defined per-port power limit here. This value must be between m and n.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To config PoE port:

```
DGS-1510-28XMP/ME:admin# config poe ports 1-4 state enable priority critical power_limit class_1
Command: config poe ports 1-4 state enable priority critical power_limit class_1

Success.

DGS-1510-28XMP/ME:admin# config poe ports 5 state enable priority critical power_limit user_define 1000
Command: config poe ports 5 state enable priority critical power_limit user_define 1000

Success.

DGS-1510-28XMP/ME:admin#
```

## 56-3 show poe system

### Description

This command is used to display the setting and actual values of the whole PoE system.

### Format

**show poe system**

### Parameters

None.

### Restrictions

None.

### Example

To display PoE system:

```
DGS-1510-28XMP/ME:admin#show poe system
Command: show poe system

PoE System Information
-----
Power Limit           : 370(Watts)
Power Consumption     : 0(Watts)
Power Remained        : 351(Watts)
Power Disconnection Method : Deny Next Port
Detection Legacy PD   : Disabled
```

If Power Disconnection Method is set to deny next port, then the system can not utilize out of its maximum power capacity. The maximum unused watt is 19W.

**CTRL+C** **ESC** **q** Quit **SPACE** **n** Next Page **p** Previous Page **r** Refresh

## 56-4 show poe ports

### Description

This command is used to display the setting and actual values of PoE port.



## Format

**show poe ports {<portlist>}**

## Parameters

**<portlist>** - (Optional) Specifies a list of ports to be displayed.

If no parameter is specified, the system will display the status for all ports.

## Restrictions

None.

## Example

To display PoE port:

```
DGS-1510-28XMP/ME:admin# show poe ports 1-6
Command: show poe ports 1-6
```

Port	State	Priority	Power Limit(mW)	Time Range
	Class	Power(mW)	Voltage(decivolt)	Current (mA)
	Status			
=====				
1	Enabled	Low	16200(Class 0)	
	0	0	0	0
	OFF : Interim state during line detection			
2	Enabled	Low	16200(Class 0)	
	0	0	0	0
	OFF : Interim state during line detection			
3	Enabled	Low	16200(Class 0)	
	0	0	0	0
	OFF : Interim state during line detection			
4	Enabled	Low	16200(Class 0)	
	0	0	0	0
	OFF : Interim state during line detection			
5	Enabled	Low	16200(Class 0)	
	0	0	0	0
	OFF : Interim state during line detection			
6	Enabled	Low	16200(Class 0)	
	0	0	0	0
	OFF : Interim state during line detection			

**CTRL+C** **ESC** **q** Quit **SPACE** **n** Next Page **p** Previous Page **r** Refresh

## Chapter 57 PPPoE Circuit ID Insertions

### Command List

---

```
config pppoe circuit_id_insertion state [enable | disable]
```

---

```
config pppoe circuit_id_insertion ports <portlist> {state [enable | disable] | circuit_id [mac | ip | udf <string 32>]}(1)
```

---

```
show pppoe circuit_id_insertion
```

---

```
show pppoe circuit_id_insertion ports {<portlist>}
```

---

#### 57-1 config pppoe circuit\_id\_insertion state

##### Description

This command is used to enable or disable PPPoE circuit ID insertion function. When both port and global state are enabled, the system will insert the circuit ID tag to the received PPPoE discover and request packet if the tag is absent, and remove the circuit ID tag from the received PPPoE offer and session confirmation packet. The insert circuit ID contains the following information: Client MAC address, Device ID and Port number. By default, Switch IP address is used as the device ID to encode the circuit ID option.

##### Format

```
config pppoe circuit_id_insertion state [enable | disable]
```

##### Parameters

---

**enable** - Specifies to enable the PPPoE circuit ID insertion on the Switch.

---

**disable** - Specifies to disable the PPPoE circuit ID insertion on the Switch. This is the default.

---

##### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

##### Example

To enable the PPPoE circuit insertion state:

```
DGS-1510-28XMP/ME:admin# config pppoe circuit_id_insertion state enable
Command: config pppoe circuit_id_insertion state enable

Success.

DGS-1510-28XMP/ME:admin#
```

#### 57-2 config pppoe circuit\_id\_insertion ports

##### Description

This command is used to configure port's PPPoE Circuit ID insertion function. When the port's state and the global state are enabled, the system will insert the Circuit ID TAG to the received PPPoE discovery initiation and request

packet if the TAG is absent, and remove the Circuit ID TAG from the received PPPoE offer and session confirmation packet.

## Format

```
config pppoe circuit_id_insertion ports <portlist> {state [enable | disable] | circuit_id [mac | ip | udf <string 32>]}(1)
```

## Parameters

---

**<portlist>** - Specifies a list of ports to be configured.

**state** - Specifies to enable or disable port's PPPoE circuit ID insertion function. The default setting is enable.

**enable** - Specifies to enable port's PPPoE circuit ID insertion function.

**disable** - Specifies to disable port's PPPoE circuit ID insertion function.

---

**circuit\_id** - Specifies to configure the device ID part for encoding of the circuit ID option.

**mac** - Specifies to use the MAC address of the Switch to encode the circuit ID option.

**ip** - Specifies to use the Switch's IP address will be used to encode the circuit ID option. This is the default.

**udf** - Specifies a user-defined string to be used to encode the circuit ID option.

**<string 32>** - Enter a string with the maximum length of 32.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To enable port 5 PPPoE circuit ID insertion function:

```
DGS-1510-28XMP/ME:admin# config pppoe circuit_id_insertion ports 5 state enable
Command: config pppoe circuit_id_insertion ports 5 state enable
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```

## 57-3 show pppoe circuit\_id\_insertion

### Description

This command is used to display PPPoE circuit ID insertion status.

### Format

```
show pppoe circuit_id_insertion
```

### Parameters

None.

### Restrictions

None.

## Example

To display PPPoE circuit ID insertion status:

```
DGS-1510-28XMP/ME:admin# show pppoe circuit_id_insertion
Command: show pppoe circuit_id_insertion

Global PPPoE State: Enabled

DGS-1510-28XMP/ME:admin#
```

## 57-4 show pppoe circuit\_id\_insertion ports

### Description

This command is used to display Switch's port PPPoE Circuit ID insertion configuration.

### Format

**show pppoe circuit\_id\_insertion ports {<portlist>}**

### Parameters

---

**<portlist>** - (Optional) Specifies a list of ports to be displayed.

---

### Restrictions

None.

## Example

To display port 2-5 PPPoE circuit ID insertion configuration:

```
DGS-1510-28XMP/ME:admin# show pppoe circuit_id_insertion ports 2-5
Command: show pppoe circuit_id_insertion ports 2-5

Port State      Circuit ID
-----
2      Enabled      Switch IP
3      Enabled      Switch IP
4      Enabled      Switch IP
5      Enabled      Switch IP

DGS-1510-28XMP/ME:admin#
```

## Chapter 58 Protocol VLAN Command List

---

```
create dot1v_protocol_group group_id <id> {group_name <name 32>}
```

---

```
config dot1v_protocol_group [group_id <id> | group_name <name 32>] [add protocol [ethernet_2 |
ieee802.3_snap | ieee802.3_llc] <protocol_value> | delete protocol [ethernet_2 | ieee802.3_snap |
ieee802.3_llc] <protocol_value>]
```

---

```
delete dot1v_protocol_group [group_id <id> | group_name <name 32> | all]
```

---

```
show dot1v_protocol_group {[group_id <id> | group_name <name 32>]}
```

---

```
config port dot1v ports [<portlist> | all] [add protocol_group [group_id <id> | group_name <name 32>] [vlan
<vlan_name 32> | vlanid <id>] {priority <value 0-7>} | delete protocol_group [group_id <id> | all]]
```

---

```
show port dot1v {ports <portlist>}
```

---

### 58-1 create dot1v\_protocol\_group group\_id

#### Description

This command is used to create a protocol group for protocol VLAN function.

#### Format

```
create dot1v_protocol_group group_id < id> {group_name <name 32>}
```

#### Parameters

---

**<id>** - Enter the group ID for protocol VLAN here.

---

**group\_name** - (Optional) Specifies the name of the protocol group. The maximum length is 32 chars.

**<name 32>** - Enter the group name here. This name can be up to 32 characters long.

---

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

#### Example

To create a protocol group:

```
DGS-1510-28XMP/ME:admin# create dot1v_protocol_group group_id 10 group_name General_Group
Command: create dot1v_protocol_group group_id 10 group_name General_Group

Success.

DGS-1510-28XMP/ME:admin#
```

### 58-2 config dot1v\_protocol\_group

#### Description

This command is used to add a protocol to a protocol group. The selection of a protocol can be a pre-defined protocol type or a user-defined protocol.

## Format

```
config dot1v_protocol_group [group_id <id> | group_name <name 32>] [add protocol [ethernet_2 |
ieee802.3_snap | ieee802.3_llc] <protocol_value> | delete protocol [ethernet_2 | ieee802.3_snap |
ieee802.3_llc] <protocol_value>]
```

## Parameters

**group\_id** - Specifies the ID of the protocol group which is used to identify a set of protocols.

**<id>** - Enter the group ID used here.

**group\_name** - Specifies the name of the protocol group.

**<name 32>** - Enter the group name here. This name can be up to 32 characters long.

**add** - Specifies that the protocol will be added to the specified group.

**delete** - Specifies that the protocol will be removed from the specified group.

**protocol** - Specifies the protocol value is used to identify a protocol of the frame type specified.

**ethernet\_2** - Specifies that the Ethernet 2 protocol will be used.

**ieee802.3\_snap** - Specifies that the IEEE 802.3 Snap protocol will be used.

**ieee802.3\_llc** - Specifies that the IEEE 802.3 LLC protocol will be used.

**<protocol\_value>** - Enter the protocol value here.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To add a protocol ipv6 to protocol group 10:

```
DGS-1510-28XMP/ME:admin# config dot1v_protocol_group group_id 10 add protocol ethernet_2 86dd
Command: config dot1v_protocol_group group_id 10 add protocol ethernet_2 86DD

Success.

DGS-1510-28XMP/ME:admin#
```

## 58-3 delete dot1v\_protocol\_group

### Description

This command is used to delete a protocol group

### Format

```
delete dot1v_protocol_group [group_id <id> | group_name <name 32> | all]
```

### Parameters

**group\_id** - Specifies the group ID to be deleted.

**<id>** - Enter the group ID used here.

**group\_name** - Specifies the name of the group to be deleted.

---

**<name 32>** - Enter the group name here. This name can be up to 32 characters long.

---

**all** - Specifies that all the protocol group will be deleted.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To delete protocol group 100:

```
DGS-1510-28XMP/ME:admin# delete dot1v_protocol_group group_id 100
Command: delete dot1v_protocol_group group_id 100

Success.

DGS-1510-28XMP/ME:admin#
```

## 58-4 show dot1v\_protocol\_group

### Description

This command is used to display the protocols defined in a protocol group.

### Format

**show dot1v\_protocol\_group {[group\_id <id> | group\_name <name 32>]}**

### Parameters

---

**group\_id** - (Optional) Specifies the ID of the group to be displayed.

**<id>** - Enter the group ID used here.

---

**group\_name** - (Optional) Specifies the name of the protocol group to be displayed.

**<name 32>** - Enter the group name here. This name can be up to 32 characters long.

---

If no parameter is specified, all the configured protocol groups will be displayed.

---

### Restrictions

None.

### Example

To display the protocol group ID 10:

```
DGS-1510-28XMP/ME:admin# show dot1v_protocol_group group_id 10
Command: show dot1v_protocol_group group_id 10

Protocol Group ID Protocol Group Name           Frame Type      Protocol Value
-----
10                General_Group   EthernetII      86DD

Total Entries: 1

DGS-1510-28XMP/ME:admin#
```

## 58-5 config port dot1v

### Description

This command is used to assign the VLAN for untagged packets ingress from the port list based on the protocol group configured. This assignment can be removed by using the **delete protocol\_group** parameter.

When priority is not specified in the command, the port default priority will be the priority for those untagged packets classified by the protocol VLAN.

### Format

```
config port dot1v ports [<portlist> | all] [add protocol_group [group_id <id> | group_name <name 32>]
[vlan <vlan_name 32> | vlanid <id>] {priority <value 0-7>} | delete protocol_group [group_id <id> | all]]
```

### Parameters

**<portlist>** - Enter a list of ports used for the configuration here.

**all** - Specifies that all the ports will be used for this configuration.

**add** - Specifies that the group specified will be added.

**protocol\_group** - Specifies that parameters for the group will follow.

**group\_id** - Specifies the group ID of the protocol group.

**<id>** - Enter the group ID used here.

**group\_name** - Specifies the name of the protocol group.

**<name 32>** - Enter the name of the group used here. This name can be up to 32 characters long.

**vlan** - The VLAN that is to be associated with this protocol group on this port.

**<vlan\_name 32>** - Enter the name of the VLAN here. This name can be up to 32 characters long.

**vlanid** - Specifies the VLAN ID.

**<id>** - Enter the VLAN ID used here.

**priority** - (Optional) Specifies the priority to be associated with the packet which has been classified to the specified VLAN by the protocol.

**<value 0-7>** - Enter the priority value here. This value must be between 0 and 7.

**delete** - Specifies that the group specified will be deleted.

**protocol\_group** - Specifies that parameters for the group will follow.

**group\_id** - Specifies the group ID of the protocol group.

**<id>** - Enter the group ID used here.

**all** - Specifies that all the groups will be deleted.



## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure the group ID 10 on port 3 to be associated with VLAN marketing-1:

```
DGS-1510-28XMP/ME:admin# config port dot1v ports 3 add protocol_group group_id 10 vlan
marketing-1
Command: config port dot1v ports 3 add protocol_group group_id 10 vlan marketing-1

Success.

DGS-1510-28XMP/ME:admin#
```

58-6 show port dot1v

## Description

This command is used to display the VLAN to be associated with ingress untagged packet on a port based on the protocol group.

## Format

**show port dot1v {ports <portlist>}**

## Parameters

---

**ports** - (Optional) Specifies a range of ports to be displayed.

**<portlist>** - Enter a list of ports used for the configuration here.

---

If no parameter is specified, information for all ports will be displayed.

---

## Restrictions

None.

## Example

The example display the protocol VLAN information for ports 1:

```
DGS-1510-28XMP/ME:admin# show port dot1v ports 1
```

```
Command: show port dot1v ports 1
```

```
Port: 1
```

Protocol Group ID	VLAN Name	Protocol Priority
-----	-----	-----
1	default	-
2	VLAN2	-
3	VLAN3	-
4	VLAN4	-

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```

## Chapter 59 QinQ Command List

---

**enable qinq**

**disable qinq**

**config qinq inner\_tpid** <hex 0x1-0xffff>

**config qinq ports** [<portlist> | all] {role [uni | nni] | missdrop [enable | disable] | outer\_tpid <hex 0x1-0xffff> | add\_inner\_tag [<hex 0x1-0xffff> | disable]}(1)

**show qinq**

**show qinq inner\_tpid**

**show qinq ports** {<portlist>}

**create vlan\_translation ports** [<portlist> | all] [add cvid <vidlist> | replace cvid <vlanid 1-4094>] svid <vlanid 1-4094> {priority <priority 0-7>}

**delete vlan\_translation ports** [<portlist> | all] {cvid <vidlist>}

**show vlan\_translation** {[ports <portlist> | cvid <vidlist>]}

---

### 59-1 enable qinq

#### Description

This command is used to enable QinQ. When QinQ is enabled, all network port roles will be NNI ports and outer TPID will be set to 0x88A8; all existing static VLANs will run as S-VLAN; all dynamic learned L2 address will be cleared; all dynamic registered VLAN entries will be cleared; and GVRP will be disabled.

To run GVRP on the Switch, the administrator should enable GVRP manually. In QinQ mode, GVRP protocol will employ reserve address 01-80-C2-00-00-0D.

#### Format

**enable qinq**

#### Parameters

None.

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

#### Example

To enable QinQ:

```
DGS-1510-28XMP/ME:admin# enable qinq
Command: enable qinq

Success.

DGS-1510-28XMP/ME:admin#
```

## 59-2 disable qinq

### Description

This command is used to disable the QinQ. When QinQ is disabled, all dynamic learned L2 addresses will be cleared, all dynamic registered VLAN entries will be cleared, and GVRP will be disabled.

To run GVRP on the Switch, the administrator should enable GVRP manually.

### Format

**disable qinq**

### Parameters

None.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To disable QinQ:

```
DGS-1510-28XMP/ME:admin# disable qinq
Command: disable qinq

Success.

DGS-1510-28XMP/ME:admin#
```

## 59-3 config qinq inner\_tpid

### Description

The command is used to configure the inner TPID of the system. The inner TPID is used to decide if the ingress packet is c-tagged. Inner tag TPID is per system configurable.

### Format

**config qinq inner\_tpid <hex 0x1-0xffff>**

### Parameters

---

**<hex 0x1-0xffff>** - Enter the inner-TPID of the system here.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To configure the inner TPID in the system to 0x9100:

```
DGS-1510-28XMP/ME:admin# config qinq inner_tpid 0x9100
Command: config qinq inner_tpid 0x9100

Success.

DGS-1510-28XMP/ME:admin#
```

## 59-4 config qinq ports

### Description

This command is used to configure the QinQ port's parameters.

### Format

```
config qinq ports [<portlist> | all] {role [uni | nni] | missdrop [enable | disable] | outer_tpid <hex 0x1-0xffff> |
add_inner_tag [<hex 0x1-0xffff> | disable]}(1)
```

### Parameters

**<portlist>** - Enter the list of ports to be configured here.

**all** - Specifies that all the ports will be used for the configuration.

**role** - Specifies the port role in QinQ mode.

**uni** - Specifies that the port is connecting to the customer network.

**nni** - Specifies that the port is connecting to the service provider network.

**missdrop** - Specifies the state of the miss drop of ports option.

**enable** - Specifies that the miss drop of ports option will be enabled.

**disable** - Specifies that the miss drop of ports option will be disabled.

**outer\_tpid** - Specifies the outer-TPID of a port.

**<hex 0x1-0xffff>** - Enter the outer-TPID value used here.

**add\_inner\_tag** - Specifies to add an inner tag for ingress untagged packets. If set, the inner tag will be added for the ingress untagged packets and therefore the packets that egress to the NNI port will be double tagged. If disable, only the s-tag will be added for ingress untagged packets.

**<hex 0x1-0xffff>** - Enter the inner tag value used here.

**disable** - Specifies that the add inner tag option will be disabled.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To configure port list 1-4 as NNI port and set the TPID to 0x88A8:

```
DGS-1510-28XMP/ME:admin# config qinq ports 1-4 role nni outer_tpid 0x88A8
Command: config qinq ports 1-4 role nni outer_tpid 0x88A8

Success.

DGS-1510-28XMP/ME:admin#
```

## 59-5 show qinq

### Description

This command is used to display the global QinQ status.

### Format

**show qinq**

### Parameters

None.

### Restrictions

None.

### Example

To display the global QinQ status:

```
DGS-1510-28XMP/ME:admin# show qinq
Command: show qinq

  QinQ Status : Enabled

DGS-1510-28XMP/ME:admin#
```

## 59-6 show qinq inner\_tpid

### Description

This command is used to display the inner-TPID of a system.

### Format

**show qinq inner\_tpid**

### Parameters

None.

### Restrictions

None.

### Example

To display the inner-TPID of a system:

```
DGS-1510-28XMP/ME:admin# show qinq inner_tpid
Command: show qinq inner_tpid

Inner TPID: 0x9100

DGS-1510-28XMP/ME:admin#
```

## 59-7 show qinq ports

### Description

This command is used to display the QinQ configuration of the ports.

### Format

**show qinq ports {<portlist>}**

### Parameters

---

**<portlist>** - (Optional) Enter the list of ports to be displayed here.

---

### Restrictions

None.

### Example

To show the QinQ mode for ports 1-2:

```
DGS-1510-28XMP/ME:admin# show qinq ports 1-2
Command: show qinq ports 1-2

Port ID:    1
-----
Role:                NNI
Miss Drop:           Disabled
Outer Tpid:          0x8100
Add Inner Tag:       Disabled

Port ID:    2
-----
Role:                NNI
Miss Drop:           Disabled
Outer Tpid:          0x8100
Add Inner Tag:       Disabled

DGS-1510-28XMP/ME:admin#
```

## 59-8 create vlan\_translation ports

**Description**

This command is used to create a VLAN translation rule. This setting will not be effective when the QinQ mode is disabled.

This configuration is only effective for a UNI port. At UNI port, the ingress C-VLAN tagged packets will be translated to S-VLAN tagged packets by adding or replacing according the configured rule. The S-VLAN Tag of egress packets at this port will be recovered to C-VLAN Tag or stripped.

**Format**

**create vlan\_translation ports** [<portlist> | all] [add cvid <vidlist> | replace cvid <vlanid 1-4094>] svid <vlanid 1-4094> {priority <priority 0-7>}

**Parameters**


---

<b>&lt;portlist&gt;</b>	- Enter the list of ports to be configured here.
<b>all</b>	- Specifies that all the ports will be used for the configuration.
<b>add</b>	- Specifies to add an S-Tag to the packet.
<b>cvid</b>	- Specifies the customer VLAN ID used.
<b>&lt;vidlist&gt;</b>	- Enter the customer VLAN ID used here.
<b>replace</b>	- Specifies to replace the C-Tag with the S-Tag.
<b>cvid</b>	- Specifies the customer VLAN ID used.
<b>&lt;vlanid 1-4094&gt;</b>	- Enter the customer VLAN ID used here.
<b>svid</b>	- Specifies the service provider VLAN ID used.
<b>&lt;vlanid 1-4094&gt;</b>	- Enter the service provider VLAN ID used here.
<b>priority</b>	- (Optional) Specifies to assign an 802.1p priority to the S-Tag. If the priority is not specified, the priority of the ports will be set to S-TAG by default.
<b>&lt;priority 0-7&gt;</b>	- Enter the 802.1p S-Tag priority value here. This value must be between 0 and 7.

---

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To replace the C-Tag in which the CVID is 20, with the S-Tag and the S-VID is 200 at UNI Port 1:

```
DGS-1510-28XMP/ME:admin# create vlan_translation ports 1 replace cvid 20 svid 200
Command: create vlan_translation ports 1 replace cvid 20 svid 200

Success.

DGS-1510-28XMP/ME:admin#
```

To add S-Tag, when the S-VID is 300, to a packet in which the CVID is 30 at UNI Port 1:



```
DGS-1510-28XMP/ME:admin# create vlan_translation ports 1 add cvid 30 svid 300
Command: create vlan_translation ports 1 add cvid 30 svid 300

Success.

DGS-1510-28XMP/ME:admin#
```

## 59-9 delete vlan\_translation ports

### Description

This command is used to delete translation relationships between the C-VLAN and the S-VLAN.

### Format

**delete vlan\_translation ports [<portlist> | all] {cvid <vidlist>}**

### Parameters

---

**<portlist>** - Enter the list of ports to be configured here.

---

**all** - Specifies that all the ports will be used for the configuration.

---

**cvid** - (Optional) Specifies the rules for the specified CVIDs. If the CVID is not specified, all rules configured for the port will be deleted.

---

**<vidlist>** - Enter the CVID value here.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To delete a VLAN translation rule on ports 1-4:

```
DGS-1510-28XMP/ME:admin# delete vlan_translation ports 1-4
Command: delete vlan_translation ports 1-4

Success.

DGS-1510-28XMP/ME:admin#
```

## 59-10 show vlan\_translation

### Description

This command is used to display the existing C-VLAN-based VLAN translation rules.

### Format

**show vlan\_translation {[ports <portlist> | cvid <vidlist>]}**

## Parameters

**ports** – (Optional) Specifies a list of ports to be displayed.

**<portlist>** - Enter the list of ports to be displayed here.

**cvid** - (Optional) Specifies the rules for the specified CVIDs.

**<vidlist>** - Enter the CVID value used here.

## Restrictions

None.

## Example

To show C-VLANs based on VLAN translation rules in the system:

```
DGS-1510-28XMP/ME:admin# show vlan_translation
```

```
Command: show vlan_translation
```

Port	CVID	SPVID	Action	Priority
1	20	200	Replace	-
1	30	300	Add	-

```
Total Entries: 2
```

```
DGS-1510-28XMP/ME:admin#
```

## Chapter 60 Quality of Service (QoS) Command List

<b>config bandwidth_control</b> [<portlist>   all] {rx_rate [no_limit   <value 64-10240000>]   tx_rate [ no_limit   <value 64-10240000>]}
<b>show bandwidth_control</b> {<portlist>}
<b>config per_queue bandwidth_control</b> {ports [<portlist>   all ]} <cos_id_list 0-7> {{min_rate [no_limit   <value 64-10240000>]} max_rate [no_limit   <value 64-10240000>}(1)}
<b>show per_queue bandwidth_control</b> {<portlist>}
<b>config scheduling</b> {ports [<portlist>   all]} <class_id 0-7> [strict   weight <value 1-127>]
<b>config scheduling_mechanism</b> {ports [<portlist>   all]} [strict   wrr]
<b>show scheduling</b> {<portlist>}
<b>show scheduling_mechanism</b> {<portlist>}
<b>config 802.1p user_priority</b> <priority 0-7> <class_id 0-7>
<b>show 802.1p user_priority</b>
<b>config 802.1p default_priority</b> [<portlist>   all] <priority 0-7>
<b>show 802.1p default_priority</b> {<portlist>}
<b>enable hol_prevention</b>
<b>disable hol_prevention</b>
<b>show hol_prevention</b>
<b>config 802.1p map</b> {[<portlist>   all]} 1p_color <priority_list> to [green   red   yellow]
<b>show 802.1p map 1p_color</b> {<portlist>}
<b>config dscp trust</b> [<portlist>   all] state [enable   disable]
<b>show dscp trust</b> {<portlist>}
<b>config dscp map</b> {[<portlist>   all]} [dscp_priority <dscp_list> to <priority 0-7>   dscp_dscp <dscp_list> to <dscp 0-63>   dscp_color <dscp_list> to [green   red   yellow]]
<b>show dscp map</b> {<portlist>} [dscp_priority   dscp_dscp   dscp_color] {dscp <dscp_list>}

### 60-1 config bandwidth\_control

#### Description

This command is used to configure the port bandwidth limit control.

#### Format

```
config bandwidth_control [<portlist> | all] {rx_rate [no_limit | <value 64-10240000>] | tx_rate [ no_limit | <value 64-10240000>]}
```

#### Parameters

**<portlist>** - Enter a range of ports to be configured.

**all** - Specifies that all the ports will be used for this configuration.

**rx\_rate** - (Optional) Specifies the limitation applied to receive data rate.

**no\_limit** - Specifies that there is no limit on receiving bandwidth of the configured ports. An integer value from m to n sets a maximum limit in Kbits/sec. The actual bandwidth will be an adjusted value based on the user specified bandwidth. The actual limit may be equal to the user specified limit, but will not exceed it. The actual limit recognized by the device, will be displayed when the command is executed.

**<value 64-10240000>** - Enter the receiving data rate here. This value must be between 64 and 10240000.

**tx\_rate** - (Optional) Specifies the limitation applied to transmit data rate.

**no\_limit** - Specifies that there is no limit on port TX bandwidth. An integer value from m to n sets a maximum limit in Kbits/sec. The actual bandwidth will be an adjusted value based on the user specified bandwidth. The actual limit may be equal to the user specified limit, but will not exceed it. The actual limit recognized by the device, will be displayed when the command is executed.

**<value 64-10240000>** - Enter the transmitting data rate here. This value must be between 64 and 10240000.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure the port bandwidth:

```
DGS-1510-28XMP/ME:admin#config bandwidth_control 1-10 rx_rate 100
Command: config bandwidth_control 1-10 rx_rate 100

Granularity: RX: 64, TX: 64. Actual Rate: RX: 64.

Success.

DGS-1510-28XMP/ME:admin#
```

## 60-2 show bandwidth\_control

### Description

This command is used to display the port bandwidth configurations.

The bandwidth can also be assigned by the RADIUS server through the authentication process. If RADIUS server has assigned the bandwidth, then the RADIUS-assigned bandwidth will be the effective bandwidth. The authentication with the RADIUS sever can be per port or per user. For per-user authentication, there may be multiple bandwidth control values assigned when there are multiple users attached to this specific port. In this case, the largest assigned bandwidth value will be applied to the effective bandwidth for this specific port. Note that only devices that support MAC-based VLAN can provide per user authentication.

### Format

**show bandwidth\_control {<portlist>}**

### Parameters

**<portlist>** - (Optional) Specifies a range of ports to be displayed.

If no parameter is specified, system will display all ports bandwidth configurations.

## Restrictions

None.

## Example

To display port bandwidth control table:

```
DGS-1510-28XMP/ME:admin# show bandwidth_control 1-10
Command: show bandwidth_control 1-10

Bandwidth Control Table

Port    RX Rate      TX Rate      Effective RX  Effective TX
      (Kbit/sec) (Kbit/sec)  (Kbit/sec)   (Kbit/sec)
-----  -
1       No Limit     64           No Limit      64
2       No Limit     64           No Limit      64
3       No Limit     64           No Limit      64
4       No Limit     64           No Limit      64
5       No Limit     64           No Limit      64
6       No Limit     64           No Limit      64
7       No Limit     64           No Limit      64
8       No Limit     64           No Limit      64
9       No Limit     64           No Limit      64
10      No Limit     64           No Limit      64

DGS-1510-28XMP/ME:admin#
```

## 60-3 config per\_queue bandwidth\_control

### Description

This command is used to configure per port CoS bandwidth control.

### Format

```
config per_queue bandwidth_control {ports [<portlist> | all ]} <cos_id_list 0-7> {{min_rate [no_limit | <value 64-10240000>]} max_rate [no_limit | <value 64-10240000>]}(1)
```

### Parameters

---

**ports** - (Optional) Specifies a range of ports to be configured. If not specified, all ports will be configured.

**<portlist>** - Enter the list of ports used for this configuration here.

**all** - Specifies that all the ports will be used for this configuration.

---

**<cos\_id\_list 0-7>** - Specifies a list of priority queues. The priority queue number is ranged from 0 to 7.

---

**min\_rate** - (Optional) Specifies the minimum rate at which the above specified class will be allowed to receive packets.

**no\_limit** - Specifies that there will be no limit on the rate of packets received by the above specified class.

**<value 64-10240000>** - Specifies the packet limit, in Kbps, that the above ports will be allowed to receive. If the specified rate is not multiple of minimum granularity, the rate will be adjusted.

---

**max\_rate** - Specifies the maximum rate at which the above specified class will be allowed to transmit packets.

---

---

**no\_limit** - Specifies that there will be no limit on the rate of packets received by the above specified class.

**<value 64-10240000>** - Specifies the packet limit, in Kbps, that the above ports will be allowed to receive. If the specified rate is not multiple of minimum granularity, the rate will be adjusted.

---

### Restrictions

Only Administrators can issue this command.

### Example

To configure the ports 1-10 CoS bandwidth queue 1 min rate to 130 and max rate to 100000:

```
DGS-1510-28XMP/ME:admin# config per_queue bandwidth_control ports 1-10 1 min_rate 130
max_rate 1000
Command: config per_queue bandwidth_control ports 1-10 1 min_rate 130 max_rate 1000

Granularity: TX: 64. Actual Rate: MIN: 128, MAX: 960.

Success.
```

## 60-4 show per\_queue bandwidth\_control

### Description

This command is used to display per port CoS bandwidth control settings.

### Format

**show per\_queue bandwidth\_control {<portlist>}**

### Parameters

---

**<portlist>** - (Optional) Specifies a range of ports to be displayed.

---

If no parameter is specified, system will display all ports CoS bandwidth configurations.

---

### Restrictions

None.

### Example

Display per port CoS bandwidth control table:

```
DGS-1510-28XMP/ME:admin# show per_queue bandwidth_control 10
Command: show per_queue bandwidth_control 10

Queue Bandwidth Control Table On Port: 10

Queue      Min Rate(Kbit/sec)    Max Rate(Kbit/sec)
0          640                   No Limit
1          640                   No Limit
2          640                   No Limit
3          640                   No Limit
4          No Limit              No Limit
5          No Limit              No Limit
6          No Limit              No Limit
7          No Limit              No Limit

DGS-1510-28XMP/ME:admin#
```

## 60-5 config scheduling

### Description

This command is used to configure the traffic scheduling mechanism for each CoS queue.

### Format

**config scheduling {ports [<portlist> | all]} <class\_id 0-7> [strict | weight <value 1-127>]**

### Parameters

---

**ports** - (Optional) Specifies a range of ports to be configured. If not specified, all ports will be configured.

**<portlist>** - Enter the list of ports used for this configuration here.

**all** - Specifies that all the ports will be used for this configuration.

---

**<class\_id 0-7>** - Enter the 8 hardware priority queues. The 8 hardware priority queues are identified by number from 0 to 7 with the 0 queue being the lowest priority.

---

**strict** - Specifies that the queue will operate in strict mode.

---

**weight** - Specifies the weights for weighted round robin.

**<value 1-127>** - Enter the weights for weighted round robin value here. This value must be between 1 and 127.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To configure the traffic scheduling CoS queue 1 to weight 25 on port 10:

```
DGS-1510-28XMP/ME:admin# config scheduling ports 10 1 weight 25
Command: config scheduling ports 10 1 weight 25

Success.

DGS-1510-28XMP/ME:admin#
```

## 60-6 config scheduling\_mechanism

### Description

This command is used to configure the traffic scheduling mechanism for each CoS queue.

### Format

**config scheduling\_mechanism {ports [<portlist> | all]} [strict | wrr]**

### Parameters

---

**ports** - (Optional) Specifies a range of ports to be configured. If not specified, all ports will be configured.

**<portlist>** - Enter the list of ports used for this configuration here.

**all** - Specifies that all the ports will be used for this configuration.

---

**strict** - Specifies that all queues operate in strict mode.

---

**wrr** - Specifies that each queue operates based on its setting.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To configure the traffic scheduling mechanism for each CoS queue:

```
DGS-1510-28XMP/ME:admin# config scheduling_mechanism strict
Command: config scheduling_mechanism strict

Success.

DGS-1510-28XMP/ME:admin#
```

To configure the traffic scheduling mechanism for CoS queue on port 1:

```
DGS-1510-28XMP/ME:admin# config scheduling_mechanism ports 1 strict
Command: config scheduling_mechanism ports 1 strict

Success.

DGS-1510-28XMP/ME:admin#
```



## 60-7 show scheduling

### Description

This command is used to display the current traffic scheduling parameters.

### Format

**show scheduling {<portlist>}**

### Parameters

---

**<portlist>** - (Optional) Specifies a range of ports to be displayed.

---

If no parameter is specified, system will display all ports scheduling configurations.

---

### Restrictions

None.

### Example

To display the traffic scheduling parameters for each CoS queue on port 1 (take eight hardware priority queues for example):

```
DGS-1510-28XMP/ME:admin# show scheduling 1
Command: show scheduling 1
```

```
QOS Output Scheduling On Port: 1
```

```
Class ID  Weight
```

```
-----  -
```

```
Class-0    1
```

```
Class-1    2
```

```
Class-2    3
```

```
Class-3    4
```

```
Class-4    5
```

```
Class-5    6
```

```
Class-6    7
```

```
Class-7    8
```

```
DGS-1510-28XMP/ME:admin#
```

## 60-8 show scheduling\_mechanism

### Description

This command is used to show the traffic scheduling mechanism.

### Format

**show scheduling\_mechanism {<portlist>}**

## Parameters

**<portlist>** - (Optional) Specifies a range of ports to be displayed.

If no parameter is specified, system will display all ports scheduling mechanism configurations.

## Restrictions

None.

## Example

To show scheduling mechanism:

```
DGS-1510-28XMP/ME:admin# show scheduling_mechanism
```

```
Command: show scheduling_mechanism
```

Port	Mode
1	Strict
2	Strict
3	Strict
4	Strict
5	Strict
6	Strict
7	Strict
8	Strict
9	Strict
10	Strict
11	Strict
12	Strict
13	Strict
14	Strict
15	Strict
16	Strict
17	Strict
18	Strict
19	Strict
20	Strict
21	Strict
22	Strict
23	Strict
24	Strict
25	Strict
26	Strict
27	Strict
28	Strict

```
DGS-1510-28XMP/ME:admin#
```

## 60-9 config 802.1p user\_priority

### Description

This command is used to map the 802.1p user priority of an incoming packet to one of the eight hardware queues available on the Switch.

### Format

**config 802.1p user\_priority <priority 0-7> <class\_id 0-7>**

### Parameters

---

**<priority 0-7>** - Enter the 802.1p user priority you want to associate with the **<class\_id 0-7>** (the number of the hardware queue) with.

---

**<class\_id 0-7>** - Enter the number of the Switch's hardware priority queue. The switch has 8 hardware priority queues available. They are numbered between 0 (the lowest priority) and 7 (the highest priority).

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To configure the 802.1p user priority:

```
DGS-1510-28XMP/ME:admin# config 802.1p user_priority 1 3
Command: config 802.1p user_priority 1 3

Success.

DGS-1510-28XMP/ME:admin#
```

## 60-10 show 802.1p user\_priority

### Description

This command is used to display 802.1p user priority for ports.

### Format

**show 802.1p user\_priority**

### Parameters

None.

### Restrictions

None.

### Example

To display the 802.1p user priority:

```
DGS-1510-28XMP/ME:admin# show 802.1p user_priority
Command: show 802.1p user_priority

QoS Class of Traffic:
Priority-0  -> <Class-2>
Priority-1  -> <Class-0>
Priority-2  -> <Class-1>
Priority-3  -> <Class-3>
Priority-4  -> <Class-4>
Priority-5  -> <Class-5>
Priority-6  -> <Class-6>
Priority-7  -> <Class-7>

DGS-1510-28XMP/ME:admin#
```

## 60-11 config 802.1p default\_priority

### Description

This command is used to configure the 802.1p default priority settings on the Switch. If an untagged packet is received by the Switch, the priority configured with this command will be written to the packet's priority field.

### Format

**config 802.1p default\_priority [<portlist> | all] <priority 0-7>**

### Parameters

---

**<portlist>** - Enter a range of ports for which the default priority is to be configured. That is, a range of ports for which all untagged packets received will be assigned the priority specified below. The port list is specified by listing the beginning port number on the Switch, separated by a colon. Then highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash.

---

**all** - Specifies that the command apply to all ports on the Switch.

---

**<priority 0-7>** - Enter the priority value (0 to 7) assigned to untagged packets received by the Switch or a range of ports on the Switch.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To configure the 802.1p default priority settings on the Switch:

```
DGS-1510-28XMP/ME:admin# config 802.1p default_priority all 5
Command: config 802.1p default_priority all 5

Success.

DGS-1510-28XMP/ME:admin#
```

## 60-12 show 802.1p default\_priority

**Description**

This command is used to display the current configured default priority settings on the Switch.

The default priority can also be assigned by the RADIUS server through the authentication process. The authentication with the RADIUS sever can be per port or port user. For per port authentication, the priority assigned by RADIUS server will be the effective port default priority. For per user authentication, the priority assigned by RADIUS will not be the effective port default priority whereas it will become the priority associated with MAC address. Note that only devices supporting MAC-based VLAN can provide per user authentication.

**Format**

**show 802.1p default\_priority {<portlist>}**

**Parameters**


---

**<portlist>** - (Optional) Specifies a range of ports to be displayed.

---

If no parameter is specified, all ports for 802.1p default priority will be displayed.

---

**Restrictions**

None.

**Example**

To display 802.1p default priority:

```
DGS-1510-28XMP/ME:admin# show 802.1p default_priority 1-10
Command: show 802.1p default_priority 1-10
```

Port	Priority	Effective Priority
----	-----	-----
1	5	5
2	5	5
3	5	5
4	5	5
5	5	5
6	5	5
7	5	5
8	5	5
9	5	5
10	5	5

```
DGS-1510-28XMP/ME:admin#
```

## 60-13 enable hol\_prevention

**Description**

This command is used to enable head of line prevention on the Switch.

**Format**

**enable hol\_prevention**

### Parameters

None.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To enable HOL prevention on the Switch:

```
DGS-1510-28XMP/ME:admin#enable hol_prevention
Command: enable hol_prevention

Success.

DGS-1510-28XMP/ME:admin#
```

## 60-14 disable hol\_prevention

### Description

This command is used to disable head of line prevention on the Switch.

### Format

**disable hol\_prevention**

### Parameters

None.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To disable HOL prevention on the Switch:

```
DGS-1510-28XMP/ME:admin#disable hol_prevention
Command: disable hol_prevention

Success.

DGS-1510-28XMP/ME:admin#
```

## 60-15 show hol\_prevention

### Description

This command is used to display head of line prevention state on the Switch.

**Format****show hol\_prevention****Parameters**

None.

**Restrictions**

None.

**Example**

To display HOL prevention state on the Switch.

```
DGS-1510-28XMP/ME:admin#show hol_prevention
Command: show hol_prevention

Device HOL Prevention State: Enabled

DGS-1510-28XMP/ME:admin#
```

**60-16 config 802.1p map****Description**

This command is used to configure the mapping of 802.1p to the packet's initial color. The mapping of 802.1p to a color is used to determine the initial color of the packet when the policing function of the packet is color aware and the packet is 1p-trusted.

**Format****config 802.1p map** {[<portlist> | all]} **1p\_color** <priority\_list> **to** [green | red | yellow]**Parameters**

- 
- <portlist>** - (Optional) Enter the list of ports used for this configuration.
- 
- all** - (Optional) Specifies that the command apply to all ports on the Switch.
- 
- 1p\_color** - Specifies the list of source priority for incoming packets.  
**<priority\_list>** - Enter the list of source priority for incoming packets.
- 
- to** - Specifies the mapped color for a packet.  
**green** - Specifies green as the mapped color.  
**red** - Specifies red as the mapped color.  
**yellow** - Specifies yellow as the mapped color.
- 

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

## Example

If a product supports per-port 802.1p mapping configuration, configure the mapping of 802.1p priority 1 to red on ports 1-8.

```
DGS-1510-28XMP/ME:admin# config 802.1p map 1-8 lp_color 1 to red
Command: config 802.1p map 1-8 lp_color 1 to red

Success.

DGS-1510-28XMP/ME:admin#
```

## 60-17 show 802.1p map 1p\_color

### Description

This command is used to display the 802.1p to color mapping.

### Format

**show 802.1p map 1p\_color {<portlist>}**

### Parameters

---

**<portlist>** - (Optional) Specifies a list of ports.

---

### Restrictions

None.

### Example

To show the 802.1p color mapping on port 1:

```
DGS-1510-28XMP/ME:admin# show 802.1p map lp_color 1
Command: show 802.1p map lp_color 1

802.1p to Color Mapping:
-----
Port 0      1      2      3      4      5      6      7
-----
1   Green  Green  Green  Green  Green  Green  Green  Green

DGS-1510-28XMP/ME:admin#
```

## 60-18 config dscp trust

### Description

This command is used to configure the state of DSCP trust per port. When DSCP is not trusted, 802.1p is trusted.

### Format

**config dscp trust [<portlist> | all] state [enable | disable]**



## Parameters

---

**<portlist>** - Enter a list of ports used for this configuration.

---

**all** - Specifies that the command apply to all ports on the Switch.

---

**state** - Enable or disable to trust DSCP.

**enable** - Specifies that the DSCP trust state will be enabled.

**disable** - Specifies that the DSCP trust state will be disabled. This is the default.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

Enable DSCP trust on ports 1-8.

```
DGS-1510-28XMP/ME:admin# config dscp trust 1-8 state enable
Command: config dscp trust 1-8 state enable

Success.

DGS-1510-28XMP/ME:admin#
```

60-19 show dscp trust

## Description

This command is used to display DSCP trust state for the specified ports on the Switch.

## Format

**show dscp trust {<portlist>}**

## Parameters

---

**<portlist>** - (Optional) Specifies a range of ports to display.

---

If no parameter is specified, all ports for DSCP trust status on the Switch will be displayed.

---

## Restrictions

None.

## Example

Display DSCP trust status on ports 1-8.

```
DGS-1510-28XMP/ME:admin# show dscp trust 1-8
```

```
Command: show dscp trust 1-8
```

```
Port DSCP-Trust
```

```
-----
```

```
1 Disabled
2 Disabled
3 Disabled
4 Disabled
5 Disabled
6 Disabled
7 Disabled
8 Disabled
```

```
DGS-1510-28XMP/ME:admin#
```

## 60-20 config dscp map

### Description

This command is used to configure DSCP mapping. The mapping of DSCP to priority will be used to determine the priority of the packet (which will be then used to determine the scheduling queue) when the port is in DSCP trust state.

The mapping of DSCP to color will be used to determine the initial color of the packet when the policing function of the packet is color aware and the packet is DSCP-trusted.

The DSCP-to-DSCP mapping is used in the swap of DSCP of the packet when the packet is ingresses to the port. The remaining processing of the packet will base on the new DSCP. By default, the DSCP is mapped to the same DSCP.

These DSCP mapping will take effect at the same time when IP packet ingress from a DSCP-trusted port.

### Format

```
config dscp map {[<portlist> | all]} [dscp_priority <dscp_list> to <priority 0-7> | dscp_dscp <dscp_list> to <dscp 0-63> | dscp_color <dscp_list> to [green | red | yellow]]
```

### Parameters

---

**<portlist>** - Enter the list of ports used for this configuration here.

---

**all** - Specifies that all the ports will be included in this configuration.

---

**dscp\_priority** - Specifies a list of DSCP value to be mapped to a specific priority.

**<dscp\_list>** - Enter the DSCP priority list here.

**to** - Specifies that the above or following parameter will be mapped to the previously mentioned parameter.

**<priority 0-7>** - Enter the result priority of mapping.

---

**dscp\_dscp** - Specifies a list of DSCP value to be mapped to a specific DSCP.

**<dscp\_list>** - Enter the DSCP to DSCP list here.

**to** - Specifies that the above or following parameter will be mapped to the previously mentioned parameter.

**<dscp 0-63>** - Enter the result DSCP of mapping.

---

**dscp\_color** - Specifies a list of DSCP value to be mapped to a specific color.

**<dscp\_list>** - Enter the DSCP to color list here.

**to** - Specifies that the above or following parameter will be mapped to the previously mentioned parameter.

**green** - Specifies the result color of mapping to be green.

---

**red** - Specifies the result color of mapping to be red.

**yellow** - Specifies the result color of mapping to be yellow.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure the mapping of the DSCP priority to priority 1:

```
DGS-1510-28XMP/ME:admin# config dscp map 1-8 dscp_priority 1 to 1
Command: config dscp map 1-8 dscp_priority 1 to 1

Success.

DGS-1510-28XMP/ME:admin#
```

To configure the global mapping of the DSCP priority to priority 1:

```
DGS-1510-28XMP/ME:admin# config dscp map dscp_priority 1 to 1
Command: config dscp map dscp_priority 1 to 1

Success.

DGS-1510-28XMP/ME:admin#
```

## 60-21 show dscp map

### Description

This command is used to show DSCP trusted port list and mapped color, priority and DSCP.

### Format

**show dscp map {<portlist>} [dscp\_priority | dscp\_dscp | dscp\_color] {dscp <dscp\_list>}**

### Parameters

**<portlist>** - (Optional) Enter a range of ports to show. If no parameter is specified, all ports' DSCP mapping will be displayed.

**dscp\_priority** - Specifies a list of DSCP value to be mapped to a specific priority.

**dscp\_dscp** - Specifies a list of DSCP value to be mapped to a specific DSCP.

**dscp\_color** - Specifies a list of DSCP value to be mapped to a specific color.

**dscp** - (Optional) Specifies the DSCP value that will be mapped.

**<dscp\_list>** - Enter the DSCP list here.

### Restrictions

None.

**Example**

To show DSCP map configuration on port 1:

```
DGS-1510-28XMP/ME:admin# show dscp map 1 dscp_dscp
Command: show dscp map 1 dscp_dscp
```

DSCP to DSCP Mapping:

Port 1	0	1	2	3	4	5	6	7	8	9
0	0	1	2	3	4	5	6	7	8	9
1	10	11	12	13	14	15	16	17	18	19
2	20	21	22	23	24	25	26	27	28	29
3	30	31	32	33	34	35	36	37	38	39
4	40	41	42	43	44	45	46	47	48	49
5	50	51	52	53	54	55	56	57	58	59
6	60	61	62	63						

```
DGS-1510-28XMP/ME:admin#
```

## Chapter 61 RADIUS Client Command List

---

```
config radius add <server_index 1-3> <server_ip> [key <password 32>] [default | {auth_port <udp_port_number 1-65535> | acct_port <udp_port_number 1-65535> | timeout<sec 1-255> | retransmit<int 1-20>}(1)]
```

---

```
config radius delete <server_index 1-3>
```

---

```
config radius <server_index 1-3> {ipaddress <server_ip> | [key <password 32>] | auth_port [<udp_port_number 1-65535> | default] | acct_port [<udp_port_number 1-65535> | default] | timeout [<sec 1-255> | default] | retransmit [<int 1-20> | default]}(1)
```

---

```
show radius
```

---

```
show auth_statistics {ports <portlist>}
```

---

```
show auth_diagnostics {ports <portlist>}
```

---

```
show auth_session_statistics {ports <portlist>}
```

---

```
show auth_client
```

---

```
show acct_client
```

---

```
config accounting service [network | shell | system] state [enable | disable]
```

---

```
show accounting service
```

---

### 61-1 config radius add

#### Description

This command is used to add a new RADIUS server. The server with lower index has higher authenticating priority.

#### Format

```
config radius add <server_index 1-3> <server_ip> [key <password 32>] [default | {auth_port <udp_port_number 1-65535> | acct_port <udp_port_number 1-65535> | timeout<sec 1-255> | retransmit<int 1-20>}(1)]
```

#### Parameters

---

**<server\_index 1-3>** - Enter the RADIUS server index. This value must be between 1 and 3.

---

**<server\_ip>** - Enter the IP address of the RADIUS server here.

---

**key** - Specifies the key pre-negotiated between switch and the RADIUS server. It is used to encrypt user's authentication data before being transmitted over internet.

**<password 32>** - Enter the password here. The password can be up to 32 characters long.

---

**default** - Specifies to set the authentication UDP port number to 1812 accounting UDP port number to 1813, timeout to 5 seconds and retransmit to 2.

---

**auth\_port** - Specifies the UDP port number which is used to transmit RADIUS authentication data between the Switch and the RADIUS server.

**<udp\_port\_number 1-65535>** - Enter the authentication port number here. This value must be between 1 and 65535.

---

**acct\_port** - Specifies the UDP port number which is used to transmit RADIUS accounting statistics between the Switch and the RADIUS server.

**<udp\_port\_number 1-65535>** - Enter the accounting port number here. This value must be between 1 and 65535.

---

**timeout** - Specifies the time in second for waiting server reply. The default value is 5 seconds.

---

**<sec 1-255>** - Enter the timeout value here. This value must be between 1 and 255 seconds.

---

**retransmit** - Specifies the count for re-transmitting. The default value is 2.

**<int 1-20>** - Enter the re-transmit value here. This value must be between 1 and 20.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To add a new RADIUS server:

```
DGS-1510-28XMP/ME:admin# config radius add 1 10.48.74.121 key dlink default
Command: config radius add 1 10.48.74.121 key dlink default
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```

## 61-2 config radius delete

### Description

This command is used to delete a RADIUS server.

### Format

**config radius delete <server\_index 1-3>**

### Parameters

---

**<server\_index 1-3>** - Enter the RADIUS server index to be deleted.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To delete a radius server:

```
DGS-1510-28XMP/ME:admin# config radius delete 1
Command: config radius delete 1
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```

## 61-3 config radius

**Description**

This command is used to configure a RADIUS server.

**Format**

```
config radius <server_index 1-3> {ipaddress <server_ip> | [key <password 32>] | auth_port
[<udp_port_number 1-65535> | default] | acct_port [<udp_port_number 1-65535> | default] | timeout [<sec
1-255> | default] | retransmit [<int 1-20> | default]}(1)
```

**Parameters**


---

<b>&lt;server_index 1-3&gt;</b>	- Enter the RADIUS server index here. This value must be between 1 and 3.
<b>ipaddress</b>	- Specifies the IP address of the RADIUS server.
<b>&lt;server_ip&gt;</b>	- Enter the RADIUS server IP address here.
<b>key</b>	- Specifies the key pre-negotiated between switch and RADIUS server. It is used to encrypt user's authentication data before being transmitted over internet.
<b>&lt;password 32&gt;</b>	- Enter the key here. The key can be up to 32 characters long.
<b>auth_port</b>	- Specifies the UDP port number which is used to transmit RADIUS authentication data between the Switch and the RADIUS server. The default value is 1812.
<b>&lt;udp_port_number 1-65535&gt;</b>	- Enter the authentication port number here. This value must be between 1 and 65535.
<b>default</b>	- Specifies that the default port number will be used.
<b>acct_port</b>	- Specifies the UDP port number which is used to transmit RADIUS accounting statistics between the Switch and the RADIUS server. The default value is 1813.
<b>&lt;udp_port_number 1-65535&gt;</b>	- Enter the accounting port number here. This value must be between 1 and 65535.
<b>default</b>	- Specifies that the default port number will be used.
<b>timeout</b>	- Specifies the time in second for waiting server reply. The default value is 5 seconds.
<b>&lt;sec 1-255&gt;</b>	- Enter the timeout value here. This value must be between 1 and 255 seconds.
<b>default</b>	- Specifies that the default timeout value will be used.
<b>retransmit</b>	- Specifies the count for re-transmitting. The default value is 2.
<b>&lt;int 1-20&gt;</b>	- Enter the re-transmit value here. This value must be between 1 and 20.
<b>default</b>	- Specifies that the default re-transmit value will be used.

---

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To configure a radius server:

```
DGS-1510-28XMP/ME:admin# config radius 1 auth_port 60
Command: config radius 1 auth_port 60

Success.

DGS-1510-28XMP/ME:admin#
```

## 61-4 show radius

**Description**

This command is used to display RADIUS server configurations.

**Format**

**show radius**

**Parameters**

None.

**Restrictions**

None.

**Example**

To display RADIUS server configurations:

```
DGS-1510-28XMP/ME:admin# show radius
Command: show radius

Index  IP Address          Auth-Port Acct-Port  Timeout  Retransmit  Key
-----  -----
1      10.48.74.121       60        1813      5        2          dlink

Total Entries : 1

DGS-1510-28XMP/ME:admin#
```

## 61-5 show auth\_statistics

**Description**

This command is used to display information of authenticator statistics.

**Format**

**show auth\_statistics {ports <portlist>}**

**Parameters**

**ports** - (Optional) Specifies a range of ports to be displayed.

**<portlist>** - Enter the list of ports that will be displayed here.

**Restrictions**

None.



## Example

To display authenticator statistics information for port 1:

```

DGS-1510-28XMP/ME:admin# show auth_statistics ports 1
Command: show auth_statistics ports 1

Port Number : 1

EapolFramesRx                0
EapolFramesTx                9
EapolStartFramesRx          0
EapolReqIdFramesTx          6
EapolLogoffFramesRx         0
EapolReqFramesTx            0
EapolRespIdFramesRx         0
EapolRespFramesRx           0
InvalidEapolFramesRx        0
EapLengthErrorFramesRx      0

LastEapolFrameVersion        0
LastEapolFrameSource         00-00-00-00-00-00

CTRL+C  ESC  q  Quit  SPACE  n  Next Page  p  Previous Page  r  Refresh

```

## 61-6 show auth\_diagnostics

### Description

This command is used to display information of authenticator diagnostics.

### Format

**show auth\_diagnostics {ports <portlist>}**

### Parameters

**ports** - (Optional) Specifies a range of ports to be displayed.

**<portlist>** - Enter the list of ports that will be displayed here.

### Restrictions

None.

### Example

To display authenticator diagnostics information for port 1:

```

DGS-1510-28XMP/ME:admin# show auth_diagnostics ports 1
Command: show auth_diagnostics ports 1

Port Number : 1

EntersConnecting                11
EapLogoffsWhileConnecting      0
EntersAuthenticating           0
SuccessWhileAuthenticating     0
TimeoutsWhileAuthenticating    0
FailWhileAuthenticating        0
ReauthsWhileAuthenticating     0
EapStartsWhileAuthenticating   0
EapLogoffWhileAuthenticating   0
ReauthsWhileAuthenticated     0
EapStartsWhileAuthenticated   0
EapLogoffWhileAuthenticated    0
BackendResponses               0
BackendAccessChallenges        0
BackendOtherRequestsToSupplicant 0
BackendNonNakResponsesFromSupplicant 0
BackendAuthSuccesses           0
BackendAuthFails               0

CTRL+C  ESC  q  Quit  SPACE  n  Next Page  p  Previous Page  r  Refresh

```

## 61-7 show auth\_session\_statistics

### Description

This command is used to display information of authenticator session statistics.

### Format

```
show auth_session_statistics {ports <portlist>}
```

### Parameters

- 
- ports** - (Optional) Specifies a range of ports to be displayed.
  - <portlist>** - Enter the list of ports that will be displayed here.
- 

### Restrictions

None.

### Example

To display authenticator session statistics information for port 1:

```
DGS-1510-28XMP/ME:admin# show auth_session_statistics ports 1
```

```
Command: show auth_session_statistics ports 1
```

```
Port Number : 1
```

```
SessionOctetsRx           0
SessionOctetsTx           0
SessionFramesRx           0
SessionFramesTx           0
SessionId
SessionAuthenticMethod    Remote Authentication Server
SessionTime                0
SessionTerminateCause     SupplicantLogoff
SessionUserName
```

```
CTRL+C ESC q Quit SPACE n Next Page p Previous Page r Refresh
```

## 61-8 show auth\_client

### Description

This command is used to display information of RADIUS authentication client.

### Format

```
show auth_client
```

### Parameters

None.

### Restrictions

None.

### Example

To display authentication client information:

```
DGS-1510-28XMP/ME:admin# show auth_client
Command: show auth_client

radiusAuthClient ==>
 radiusAuthClientInvalidServerAddresses    0
 radiusAuthClientIdentifier

radiusAuthServerEntry ==>
 radiusAuthServerIndex :1

radiusAuthServerAddress                    0.0.0.0
radiusAuthClientServerPortNumber          0
radiusAuthClientRoundTripTime             0
radiusAuthClientAccessRequests           0
radiusAuthClientAccessRetransmissions     0
radiusAuthClientAccessAccepts            0
radiusAuthClientAccessRejects            0
radiusAuthClientAccessChallenges         0
radiusAuthClientMalformedAccessResponses  0
radiusAuthClientBadAuthenticators        0
radiusAuthClientPendingRequests          0
radiusAuthClientTimeouts                 0
radiusAuthClientUnknownTypes             0
radiusAuthClientPacketsDropped           0

DGS-1510-28XMP/ME:admin#
```

## 61-9 show acct\_client

### Description

This command is used to display information of RADIUS accounting client.

### Format

**show acct\_client**

### Parameters

None.

### Restrictions

None.

### Example

To display information of RADIUS accounting client:

```

DGS-1510-28XMP/ME:admin# show acct_client
Command: show acct_client

radiusAcctClient ==>
radiusAcctClientInvalidServerAddresses    0
radiusAcctClientIdentifier

radiusAuthServerEntry ==>
radiusAccServerIndex : 1

radiusAccServerAddress                    0.0.0.0
radiusAccClientServerPortNumber          0
radiusAccClientRoundTripTime              0
radiusAccClientRequests                   0
radiusAccClientRetransmissions            0
radiusAccClientResponses                   0
radiusAccClientMalformedResponses         0
radiusAccClientBadAuthenticators          0
radiusAccClientPendingRequests            0
radiusAccClientTimeouts                   0
radiusAccClientUnknownTypes               0
radiusAccClientPacketsDropped             0

DGS-1510-28XMP/ME:admin#

```

## 61-10 config accounting service

### Description

This command is used to configure the state of the specified RADIUS accounting service.

### Format

**config accounting service [network | shell | system] state [enable | disable]**

### Parameters

---

**network** - Accounting service for 802.1X port access control. By default, the service is disabled.

**shell** - Accounting service for shell events: When user logs on or out the Switch (via the console, Telnet, or SSH) and timeout occurs, accounting information will be collected and sent to RADIUS server. By default, the service is disabled.

**system** - Accounting service for system events: reset, reboot. By default, the service is disabled.

**state** - Specifies the state of the specified service.

**enable** - Specifies to enable the specified accounting service.

**disable** - Specifies to disable the specified accounting service.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To enable it to configure accounting shell state:

```
DGS-1510-28XMP/ME:admin# config accounting service shell state enable
Command: config accounting service shell state enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 61-11 show accounting service

### Description

This command is used to show the status of RADIUS accounting services.

### Format

**show accounting service**

### Parameters

None.

### Restrictions

None.

## Example

To show information of RADIUS accounting services:

```
DGS-1510-28XMP/ME:admin# show accounting service
Command: show accounting service

Accounting Service
-----
Network      : Enabled
Shell        : Enabled
System       : Enabled

DGS-1510-28XMP/ME:admin#
```

## Chapter 62 Safeguard Engine Command List

---

```
config safeguard_engine {state [enable | disable] | utilization {rising <20-100> | falling <20-100>} | trap_log
  [enable | disable] | mode [strict | fuzzy]}
```

---

```
show safeguard_engine
```

---

### 62-1 config safeguard\_engine

#### Description

This command is used to configure the CPU protection control for the system.

#### Format

```
config safeguard_engine {state [enable | disable] | utilization {rising <20-100> | falling <20-100>} | trap_log
  [enable | disable] | mode [strict | fuzzy]}
```

#### Parameters

---

**state** - (Optional) Specifies to configure CPU protection state to enable or disable.

**enable** - Specifies that CPU protection will be enabled.

**disable** - Specifies that CPU protection will be enabled.

---

**utilization** - (Optional) Specifies the CPU protection threshold.

**rising** - Specifies utilization rising threshold , the range is between 20%-100% , if the CPU utilization is over the rising threshold, the Switch enters exhausted mode.

**<20-100>** - Enter the utilization rising value here. This value must be between 20 and 100.

**falling** - Specifies utilization falling threshold , the range is between 20%-100% , if the CPU utilization is lower than the falling threshold, the Switch enters normal mode.

**<20-100>** - Enter the utilization falling value here. This value must be between 20 and 100.

---

**trap\_log** - (Optional) Specifies the state of CPU protection related trap/log mechanism to be enabled or disabled.

**enable** - Specifies that the CPU protection trap or log mechanism will be enabled. When enabled, trap and log will be active while CPU protection current mode changed.

**disable** - Specifies that the CPU protection trap or log mechanism will be disabled. When disabled, current mode change will not trigger trap and log events.

---

**mode** - (Optional) Specifies to determine the controlling method of broadcast traffic. Here are two modes (strict and fuzzy).

**strict** - Specifies as the strict mode. The Switch will stop receiving all 'IP broadcast' packets, packets from the untrusted IP address and reduce the bandwidth of 'ARP not to me' packets (the protocol address of the target in ARP packet is the Switch itself) to the Switch. That means that no matter what the reasons are that cause high CPU utilization (may not be caused by an ARP storm), the Switch reluctantly processes the specified traffic, mentioned previously in the Exhausted mode.

**fuzzy** - Specifies as the fuzzy mode. The Switch will adjust the bandwidth dynamically depending on some reasonable algorithm.

---

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To configure CPU protection:

```
DGS-1510-28XMP/ME:admin# config safeguard_engine state enable utilization rising 50 falling
30 trap_log enable
Command: config safeguard_engine state enable utilization rising 50 falling 30 trap_log
enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 62-2 show safeguard\_engine

**Description**

This command is used to show safeguard engine information.

**Format**

**show safeguard\_engine**

**Parameters**

None.

**Restrictions**

None.

**Example**

To show safeguard engine information:

```
DGS-1510-28XMP/ME:admin# show safeguard_engine
Command: show safeguard_engine

Safeguard Engine State          : Disabled
Safeguard Engine Current Status : Normal Mode
=====
CPU Utilization Information:
Rising Threshold   : 30%
Falling Threshold  : 20%
Trap/Log State     : Disabled
Mode                : Fuzzy

DGS-1510-28XMP/ME:admin#
```



**NOTE:** Safeguard engine current status has two modes: exhausted and normal mode.



## Chapter 63 Secure Shell (SSH) Command List

---

```
config ssh algorithm [3DES | AES128 | AES192 | AES256 | arcfour | blowfish | cast128 | twofish128 | twofish192
| twofish256 | MD5| SHA1 | RSA | DSA] [enable | disable]
```

---

```
show ssh algorithm
```

---

```
config ssh authmode [password | publickey | hostbased] [enable | disable]
```

---

```
show ssh authmode
```

---

```
config ssh user <username 15> authmode [hostbased [hostname <domain_name 32> | hostname_IP
<domain_name 32> <ipaddr>] | password | publickey]
```

---

```
show ssh user authmode
```

---

```
config ssh server {maxsession <int 1-8> | contimeout <sec 120-600> | authfail <int 2-20> | rekey [10min | 30min
| 60min | never] | port <tcp_port_number 1-65535>}
```

---

```
enable ssh
```

---

```
disable ssh
```

---

```
show ssh server
```

---

### 63-1 config ssh algorithm

#### Description

This command is used to configure SSH service algorithm.

#### Format

```
config ssh algorithm [3DES | AES128 | AES192 | AES256 | arcfour | blowfish | cast128 | twofish128 |
twofish192 | twofish256 | MD5| SHA1 | RSA | DSA] [enable | disable]
```

#### Parameters

---

**3DES** - Specifies the three-key triple-DES (encrypt-decrypt-encrypt), where the first 8 bytes of the key are used for the first encryption, the next 8 bytes for the decryption, and the following 8 bytes for the final encryption.

---

**AES (128,192,256)** - Specifies as Advanced Encryption Standard.

---

**arcfour** - Specifies as RC4. RC4 (also known as ARC4 or ARCFOUR meaning Alleged RC4) is the most widely-used software stream cipher.

---

**blowfish** - Specifies as blowfish. Blowfish is a keyed, symmetric block cipher.

---

**cast128** - Specifies as CAST-128. CAST-128 is a 12- or 16-round Feistel network with a 64-bit block size and a key size of between 40 to 128 bits.

---

**twofish (128,192,256)** - Specifies as twofish. Twofish has a 128-bit block size, a key size ranging from 128 to 256 bits.

---

**MD5** - Specifies as Message-Digest Algorithm 5.

---

**SHA1** - Specifies as Secure Hash Algorithm.

---

**RSA** - Specifies as RSA. RSA encryption algorithm is a non-symmetric encryption algorithm.

---

**DSS** - Specifies as Digital Signature Standard.

---

**enable** - Specifies to enabled the algorithm.

---

**disable** - Specifies to disables the algorithm.

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To enable SSH server public key algorithm:

```
DGS-1510-28XMP/ME:admin# config ssh algorithm DSA enable
Command: config ssh algorithm DSA enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 63-2 show ssh algorithm

### Description

This command is used to show the SSH service algorithm.

### Format

**show ssh algorithm**

### Parameters

None.

### Restrictions

None.

### Example

To show server algorithm:

```

DGS-1510-28XMP/ME:admin# show ssh algorithm
Command: show ssh algorithm

Encryption Algorithm
-----
3DES      : Enabled
AES128    : Enabled
AES192    : Enabled
AES256    : Enabled
Arcfour   : Enabled
Blowfish  : Enabled
Cast128   : Enabled
Twofish128 : Enabled
Twofish192 : Enabled
Twofish256 : Enabled

Data Integrity Algorithm
-----
MD5       : Enabled
SHA1      : Enabled

Public Key Algorithm
-----
RSA       : Enabled
DSA       : Enabled

DGS-1510-28XMP/ME:admin#

```

### 63-3 config ssh authmode

#### Description

This command is used to configure user authentication method for SSH.

#### Format

**config ssh authmode [password | publickey | hostbased] [enable | disable]**

#### Parameters

---

**password** - Specifies user authentication method as password.

---

**publickey** - Specifies user authentication method as public key.

---

**hostbased** - Specifies user authentication method as host-based..

---

**enable** - Specifies to enable user authentication method.

---

**disable** - Specifies to disable user authentication method.

---

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure user authentication method:

```
DGS-1510-28XMP/ME:admin# config ssh authmode publickey enable
Command: config ssh authmode publickey enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 63-4 show ssh authmode

### Description

This command is used to show the user authentication method.

### Format

**show ssh authmode**

### Parameters

None.

### Restrictions

None.

## Example

To show user authentication method:

```
DGS-1510-28XMP/ME:admin# show ssh authmode
Command: show ssh authmode

The SSH Authentication Method:
Password      : Enabled
Public Key    : Enabled
Host-based    : Enabled

DGS-1510-28XMP/ME:admin#
```

## 63-5 config ssh user

### Description

This command is used to update user information for SSH configuration.

### Format

**config ssh user <username 15> authmode [hostbased [hostname <domain\_name 32> | hostname\_IP <domain\_name 32> <ipaddr>] | password | publickey]**

## Parameters

---

**<username 15>** - Enter the user name used here. This name can be up to 15 characters long.

---

**automode** - Specifies user authentication method.

**hostbased** - Specifies as host-based method.

**hostname** - Specifies host domain name.

**<domain\_name 32>** - Enter the domain name here. This name can be up to 32 characters long.

**hostname\_IP** - Specifies host domain name and IP address.

**<domain\_name 32>** - Enter host name if configuring Host-based method.

**<ipaddr>** - Enter the host IP address.

**password** - Specifies user authentication method.

**publickey** - Specifies user authentication method.

---

## Restrictions

Only Administrators can issue this command.

## Example

To update user "test" authentication method:

```
DGS-1510-28XMP/ME:admin# config ssh user test authmode publickey
Command: config ssh user test authmode publickey
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```

## 63-6 show ssh user

### Description

This command is used to show the SSH user information.

### Format

**show ssh user authmode**

### Parameters

None.

### Restrictions

Only Administrators can issue this command.

### Example

To show user information about SSH configuration:

```
DGS-1510-28XMP/ME:admin# show ssh user authmode
Command: show ssh user authmode

Current Accounts
Username          AuthMode          HostName          HostIP
-----
test              Public Key
alpha             Host-based        alpha-local       172.18.61.180
beta              Host-based        beta-local        3000::105
Total Entries : 3

DGS-1510-28XMP/ME:admin#
```

## 63-7 config ssh server

### Description

This command is used to configure the SSH server general information.

### Format

```
config ssh server {maxsession <int 1-8> | contimeout <sec 120-600> | authfail <int 2-20> | rekey [10min | 30min | 60min | never] | port <tcp_port_number 1-65535>}
```

### Parameters

---

**maxsession** - (Optional) Specifies SSH server maximum session at the same time, maximum 8 sessions.

**<int 1-8>** - Enter the maximum session value here. This value must be between 1 and 8.

---

**contimeout** - (Optional) Specifies SSH server connection time-out, in the unit of second.

**<sec 120-600>** - Enter the connection time-out value here. This value must be between 120 and 600 seconds.

---

**authfail** - (Optional) Specifies user maximum fail attempts.

**<int 2-20>** - Enter the user maximum fail attempts value here. This value must be between 2 and 20.

---

**rekey** - (Optional) Specifies time to re-generate session key. There are 10 minutes, 30 minutes, 60 minutes and never for the selection, which the never means do NOT re-generate session key

**10min** - Specifies that the re-generate session key time will be 10 minutes.

**30min** - Specifies that the re-generate session key time will be 30 minutes.

**60min** - Specifies that the re-generate session key time will be 60 minutes.

**never** - Specifies that the re-generate session key time will be set to never.

---

**port** - (Optional) Specifies the TCP port used to communication between SSH client and server. The default value is 22.

**<tcp\_port\_number 1-65535>** - Enter the TCP port number here. This value must be between 1 and 65535.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To configure SSH server maximum session number is 3:

```
DGS-1510-28XMP/ME:admin# config ssh server maxsession 3
Command: config ssh server maxsession 3

Success.

DGS-1510-28XMP/ME:admin#
```

## 63-8 enable ssh

### Description

This command is used to enable SSH server services.

### Format

**enable ssh**

### Parameters

None.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To enable SSH server:

```
DGS-1510-28XMP/ME:admin# enable ssh
Command: enable ssh

Success.

DGS-1510-28XMP/ME:admin#
```

## 63-9 disable ssh

### Description

This command is used to disable SSH server services.

### Format

**disable ssh**

### Parameters

None.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To disable the SSH server services:

```
DGS-1510-28XMP/ME:admin# disable ssh
Command: disable ssh

Success.

DGS-1510-28XMP/ME:admin#
```

## 63-10 show ssh server

### Description

This command is used to show the SSH server general information.

### Format

**show ssh server**

### Parameters

None.

### Restrictions

None.

## Example

To show SSH server:

```
DGS-1510-28XMP/ME:admin# show ssh server
Command: show ssh server

The SSH Server Configuration
Maximum Session           : 8
Connection Timeout       : 120
Authentication Fail Attempts : 2
Rekey Timeout            : Never
TCP Port Number          : 22

DGS-1510-28XMP/ME:admin#
```



# Chapter 64 Secure Sockets Layer (SSL)

## Command List

---

**download ssl certificate** {<ipaddr> certfilename <path\_filename 64> keyfilename <path\_filename 64>}

---

**enable ssl** {ciphersuite {RSA\_with\_RC4\_128\_MD5 | RSA\_with\_3DES\_EDE\_CBC\_SHA | DHE\_DSS\_with\_3DES\_EDE\_CBC\_SHA | RSA\_EXPORT\_with\_RC4\_40\_MD5}}

---

**disable ssl** {ciphersuite {RSA\_with\_RC4\_128\_MD5 | RSA\_with\_3DES\_EDE\_CBC\_SHA | DHE\_DSS\_with\_3DES\_EDE\_CBC\_SHA | RSA\_EXPORT\_with\_RC4\_40\_MD5}}

---

**show ssl** {certificate}

---

**show ssl cachetimeout**

---

**config ssl cachetimeout** <value 60-86400>

---

### 64-1 download ssl certificate

#### Description

This command is used to download the certificate to the device according to the certificate level. The user can download the specified certificate to the device which must, according to desired key exchange algorithm. For RSA key exchange, the user must download RSA type certificate and for DHS\_DSS is using the DSA certificate for key exchange.

#### Format

**download ssl certificate** {<ipaddr> certfilename <path\_filename 64> keyfilename <path\_filename 64>}

#### Parameters

---

**<ipaddr>** - (Optional) Enter the TFTP server IP address used for this configuration here.

---

**certfilename** - (Optional) Specifies the desired certificate file name.

**<path\_filename 64>** - Specifies certificate file path respect to TFTP server root path, and input characters max to 64 octets.

---

**keyfilename** - (Optional) Specifies the private key file name which accompany with the certificate.

**<path\_filename 64>** - Enter the private key file path respect to TFTP server root path, and input characters max to 64 octets.

---

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

#### Example

To download certificate from TFTP server:

```
DGS-1510-28XMP/ME:admin# download ssl certificate 10.55.47.1 certfilename cert.der
keyfilename pkey.der
Command: download ssl certificate 10.55.47.1 certfilename cert.der keyfilename pkey.der

Success.

DGS-1510-28XMP/ME:admin#
```

## 64-2 enable ssl

### Description

This command is used to enable SSL status and its cipher suites. The **enable ssl** command will enable both SSLv3 and TLSv1. For each cipher suites, user must specify it by this command.



**NOTE:** Web will be disabled when SSL is enabled.

### Format

```
enable ssl {ciphersuite {RSA_with_RC4_128_MD5 | RSA_with_3DES_EDE_CBC_SHA |
DHE_DSS_with_3DES_EDE_CBC_SHA | RSA_EXPORT_with_RC4_40_MD5}}
```

### Parameters

- 
- ciphersuite** - (Optional) Specifies the cipher suite combination used for this configuration.
  - RSA\_with\_RC4\_128\_MD5** - (Optional) Specifies RSA key exchange with RC4 128 bits encryption and MD5 hash.
  - RSA\_with\_3DES\_EDE\_CBC\_SHA** - (Optional) Specifies RSA key exchange with 3DES\_EDE\_CBC encryption and SHA hash.
  - DHE\_DSS\_with\_3DES\_EDE\_CBC\_SHA** - (Optional) Specifies DH key exchange with 3DES\_EDE\_CBC encryption and SHA hash.
  - RSA\_EXPORT\_with\_RC4\_40\_MD5** - (Optional) Specifies RSA\_EXPORT key exchange with RC4 40 bits encryption and MD5 hash.
- 

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To enable the SSL ciphersuite for RSA\_with\_RC4\_128\_MD5:

```
DGS-1510-28XMP/ME:admin# enable ssl ciphersuite RSA_with_RC4_128_MD5
Command: enable ssl ciphersuite RSA_with_RC4_128_MD5

Success.

DGS-1510-28XMP/ME:admin#
```

To enable SSL:

```
DGS-1510-28XMP/ME:admin# enable ssl
Command: enable ssl

Success.

DGS-1510-28XMP/ME:admin#
```

## 64-3 disable ssl

### Description

This command is used to disable SSL feature and supported cipher suites. To disable the status of one specific cipher suite, user must specify it in this command.

### Format

```
disable ssl {ciphersuite {RSA_with_RC4_128_MD5 | RSA_with_3DES_EDE_CBC_SHA |
DHE_DSS_with_3DES_EDE_CBC_SHA | RSA_EXPORT_with_RC4_40_MD5}}
```

### Parameters

---

**ciphersuite** - (Optional) Specifies the cipher suite combination used for this configuration.

**RSA\_with\_RC4\_128\_MD5** - Specifies RSA key exchange with RC4 128 bits encryption and MD5 hash.

**RSA\_with\_3DES\_EDE\_CBC\_SHA** - Specifies RSA key exchange with 3DES\_EDE\_CBC encryption and SHA hash.

**DHE\_DSS\_with\_3DES\_EDE\_CBC\_SHA** - Specifies DH key exchange with 3DES\_EDE\_CBC encryption and SHA hash.

**RSA\_EXPORT\_with\_RC4\_40\_MD5** - Specifies RSA\_EXPORT key exchange with RC4 40 bits encryption and MD5 hash.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To disable SSL ciphersuite for RSA\_with\_RC4\_128\_MD5:

```
DGS-1510-28XMP/ME:admin# disable ssl ciphersuite RSA_with_RC4_128_MD5
Command: disable ssl ciphersuite RSA_with_RC4_128_MD5

Success.

DGS-1510-28XMP/ME:admin#
```

To disable SSL:

```
DGS-1510-28XMP/ME:admin# disable ssl
Command: disable ssl

Success.

DGS-1510-28XMP/ME:admin#
```

## 64-4 show ssl

### Description

This command is used to display the certificate status. User must download specified certificate type according to desired key exchange algorithm. The options may be no certificate, RSA type or DSA type certificate

### Format

**show ssl {certificate}**

### Parameters

---

**certificate** – (Optional) Specifies that the SSL certificate will be displayed.

---

### Restrictions

None.

### Example

To show SSL:

```
DGS-1510-28XMP/ME:admin# show ssl
Commands: show ssl

SSL Status                               Enabled

RSA_WITH_RC4_128_MD5                     0x0004  Enabled
RSA_WITH_3DES_EDE_CBC_SHA                0x000A  Enabled
DHE_DSS_WITH_3DES_EDE_CBC_SHA            0x0013  Enabled
RSA_EXPORT_WITH_RC4_40_MD5               0x0003  Enabled

DGS-1510-28XMP/ME:admin#
```

To show certificate:

```
DGS-1510-28XMP/ME:admin# show ssl certificate
Command: show ssl certificate

Loaded with RSA Certificate!

DGS-1510-28XMP/ME:admin#
```

## 64-5 show ssl cachetimeout

### Description

This command is used to show cache timeout value which is designed for dlktimer library to remove the session id after expired. In order to support the resume session feature, the SSL library keep the session id in web server, and invoking the dlktimer library to remove this session id by cache timeout value.

### Format

**show ssl cachetimeout**

### Parameters

None.

### Restrictions

None.

### Example

To show SSL cache timeout:

```
DGS-1510-28XMP/ME:admin# show ssl cachetimeout
Commands: show ssl cachetimeout

Cache timeout is 600 second(s)

DGS-1510-28XMP/ME:admin#
```

## 64-6 config ssl cachetimeout

### Description

This command is used to configure cache timeout value which is designed for dlktimer library to remove the session id after expired. In order to support the resume session feature, the SSL library keep the session id in web server, and invoking the dlktimer library to remove this session id by cache timeout value. The unit of argument's value is second and it's boundary is between 60 (1 minute) and 86400 (24 hours). Default value is 600 seconds.

### Format

**config ssl cachetimeout <value 60-86400>**

### Parameters

---

**<value 60-86400>** - Enter the SSL cache timeout value here. This value must be between 60 and 86400.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure the SSL cache timeout value to 60:

```
DGS-1510-28XMP/ME:admin# config ssl cachetimeout 60
Commands: config ssl cachetimeout 60

Success.

DGS-1510-28XMP/ME:admin#
```

# Chapter 65 *Show Technical Support Command List*

---

**show tech\_support**

---

**upload tech\_support\_toTFTP** {<ipaddr> <path\_filename 64>}

---

## 65-1 show tech\_support

### Description

This command is especially used by the technical support personnel to dump the device overall operation information.

- Basic System information
- System log
- Running configuration
- Layer 1 information
- Layer 2 information
- Layer 3 information
- Application
- OS status
- Controller's status

This command can be interrupted by Ctrl - C or ESC when it is executing.

### Format

**show tech\_support**

### Parameters

None.

### Restrictions

Only Administrators and Operators can issue this command.

### Example

To show the information of technique's support:

```

DGS-1510-28XMP/ME:admin# show tech_support
Command: show tech_support

#-----
#
#           DGS-1510-28XMP/ME Gigabit Ethernet Switch
#
#           Technical Support Information
#
#
#           Firmware: Build 1.00.018
#
#           Copyright(C) 2015  D-Link Corporation. All rights reserved.
#-----

*****      Basic System Information      *****

[SYS 2015-4-8 11:55:18]
Boot Time       : 8 Apr 2015  10:52:01
RTC Time        : 2015/04/08 11:55:18
Boot PROM Version : Build 1.00.001
Firmware Version : Build 1.00.018
Hardware Version  : A1
Serial number    : T3941C1000029
MAC Address      : 00-01-02-03-04-00
[ERROR_LOG 2015-4-8 11:55:18]

Error log is empty.
*****      System Log      *****

```

## 65-2 upload tech\_support\_toTFTP

### Description

This command is used to upload the information of technique's support to TFTP server.

- Basic System information
- System log
- Running configuration
- Layer 1 information
- Layer 2 information
- Layer 3 information
- Application
- OS status
- Controller's status

This command can be interrupted by Ctrl - C or ESC when it is executing.

### Format

```
upload tech_support_toTFTP {<ipaddr> <path_filename 64>}
```



## Parameters

---

**<ipaddr>** - (Optional) Enter the IP address of TFTP server.

**<path\_filename 64>** - Enter the file name to store the information of technique's support in TFTP server. The max size of the file name is 64.

---

## Restrictions

Only Administrators and Operators can issue this command.

## Example

To upload the information of technique's support:

```
DGS-1510-28XMP/ME:admin# upload tech_support_toTFTP 10.0.0.66 tech_report.txt
Command: upload tech_support_toTFTP 10.0.0.66 tech_report.txt

Connecting to server..... Done.
Upload techsupport file..... Done.

Success.

DGS-1510-28XMP/ME:admin#
```

## Chapter 66 Simple Mail Transfer Protocol (SMTP) Command List

---

**enable smtp**

---

**disable smtp**

---

**config smtp** {server <ipaddr> | server\_port <tcp\_port\_number 1-65535> | self\_mail\_addr <mail\_addr 64> | [add mail\_receiver <mail\_addr 64> | delete mail\_receiver <index 1-8>]}(1)

---

**show smtp**

---

**smtp send\_testmsg**

---

66-1 enable smtp

**Description**

This command is used to enable the SMTP status.

**Format****enable smtp****Parameters**

None.

**Restrictions**

Only Administrators can issue this command.

**Example**

To enable SMTP status:

```
DGS-1510-28XMP/ME:admin# enable smtp
Command: enable smtp

Success.

DGS-1510-28XMP/ME:admin#
```

66-2 disable smtp

**Description**

This command is used to disable SMTP status.

**Format****disable smtp**

**Parameters**

None.

**Restrictions**

Only Administrators can issue this command.

**Example**

To disable SMTP status:

```
DGS-1510-28XMP/ME:admin# disable smtp
Command: disable smtp

Success.

DGS-1510-28XMP/ME:admin#
```

**66-3 config smtp****Description**

This command is used to configure SMTP settings.

**Format**

**config smtp {server <ipaddr> | server\_port <tcp\_port\_number 1-65535> | self\_mail\_addr <mail\_addr 64> | [add mail\_receiver <mail\_addr 64> | delete mail\_receiver <index 1-8>]}(1)**

**Parameters**


---

<b>server</b>	- Specifies the SMTP server IP address.
<b>&lt;ipaddr&gt;</b>	- Enter the SMTP server IP address
<hr/>	
<b>server_port</b>	- Specifies the SMTP server port.
<b>&lt;tcp_port_number 1-65535&gt;</b>	- Enter the port number between 1 and 65535.
<hr/>	
<b>self_mail_addr</b>	- Specifies the sender's mail address.
<b>&lt;mail_addr 64&gt;</b>	- Enter the mail address with maximum of 64 characters.
<hr/>	
<b>add mail_receiver</b>	- Specifies to add mail receiver's address.
<b>&lt;mail_addr 64&gt;</b>	- Enter the mail address with maximum of 64 characters.
<hr/>	
<b>delete mail_receiver</b>	- Specifies to delete mail receiver's address.
<b>&lt;index 1-8&gt;</b>	- Enter the index number.

---

**Restrictions**

Only Administrators can issue this command.

**Example**

To configure a SMTP server IP address:

```
DGS-1510-28XMP/ME:admin# config smtp server 172.18.208.9
Command: config smtp server 172.18.208.9

Success.

DGS-1510-28XMP/ME:admin#
```

To configure an SMTP server port:

```
DGS-1510-28XMP/ME:admin# config smtp server_port 25
Command: config smtp server_port 25

Success.

DGS-1510-28XMP/ME:admin#
```

To configure a mail source address:

```
DGS-1510-28XMP/ME:admin# config smtp self_mail_addr mail@dlink.com
Command: config smtp self_mail_addr mail@dlink.com

Success.

DGS-1510-28XMP/ME:admin#
```

To add a mail destination address:

```
DGS-1510-28XMP/ME:admin# config smtp add mail_receiver receiver@dlink.com
Command: config smtp add mail_receiver receiver@dlink.com

Success.

DGS-1510-28XMP/ME:admin#
```

To delete a mail destination address:

```
DGS-1510-28XMP/ME:admin# config smtp delete mail_receiver 1
Command: config smtp delete mail_receiver 1

Success.

DGS-1510-28XMP/ME:admin#
```

## 66-4 show smtp

### Description

This command is display the current SMTP information.

### Format

**show smtp**

**Parameters**

None.

**Restrictions**

None.

**Example**

To display the current SMTP information:

```
DGS-1510-28XMP/ME:admin# show smtp
Command: show smtp

SMTP Status           : Disabled
SMTP Server Address   : 172.18.208.9
SMTP Server Port      : 25
Self Mail Address     : mail@dlink.com

Index   Mail Receiver Address
-----  -----
1       receiver@dlink.com
2
3
4
5
6
7
8

DGS-1510-28XMP/ME:admin#
```

**66-5 smtp send\_testmsg****Description**

This command is used to test whether the SMTP server can be reached.

**Format**

```
smtp send_testmsg
```

**Parameters**

None.

**Restrictions**

Only Administrators can issue this command.

## Example

To test whether the SMTP server can be reached:

```
DGS-1510-28XMP/ME:admin# smtp send_testmsg
Command: smtp send_testmsg

Subject:e-mail heading
Content:e-mail content

Sending mail, please wait...

Success.

DGS-1510-28XMP/ME:admin#
```

## Chapter 67 Simple Network Management Protocol (SNMP) Command List

<b>create snmp community</b> <community_string 32> view <view_name 32> [read_only   read_write]
<b>delete snmp community</b> <community_string 32>
<b>show snmp community</b> {<community_string 32>}
<b>create snmp user</b> <user_name 32> <groupname 32> {encrypted [by_password auth [md5 <auth_password 8-16>   sha <auth_password 8-20>] priv [none   des <priv_password 8-16>]   by_key auth [md5 <auth_key 32-32>   sha <auth_key 40-40>] priv [none   des <priv_key 32-32>]]}
<b>delete snmp user</b> <username 32>
<b>show snmp user</b>
<b>create snmp group</b> <groupname 32> [v1   v2c   v3 [noauth_nopriv   auth_nopriv   auth_priv]] {read_view <view_name 32>   write_view <view_name 32>   notify_view <view_name 32>}
<b>delete snmp group</b> <groupname 32>
<b>show snmp groups</b>
<b>create snmp view</b> <view_name 32> <oid> view_type [included   excluded]
<b>delete snmp view</b> <view_name 32> [all   <oid>]
<b>show snmp view</b> {<view_name 32>}
<b>create snmp host</b> <ipaddr>[v1   v2c   v3 [noauth_nopriv   auth_nopriv   auth_priv]] <auth_string32>
<b>delete snmp host</b> <ipaddr>
<b>show snmp host</b> {<ipaddr>}
<b>config snmp engineID</b> <snmp_engineID 10-64>
<b>show snmp engineID</b>
<b>enable snmp</b>
<b>disable snmp</b>
<b>config snmp system_name</b> {<sw_name>}
<b>config snmp system_location</b> {<sw_location>}
<b>config snmp system_contact</b> {<sw_contact>}
<b>enable snmp traps</b>
<b>disable snmp traps</b>
<b>enable snmp authenticate_traps</b>
<b>disable snmp authenticate_traps</b>
<b>enable snmp linkchange_traps</b>
<b>disable snmp linkchange_traps</b>
<b>config snmp linkchange_traps</b> ports [all   <portlist>] [enable   disable]
<b>config snmp coldstart_traps</b> [enable   disable]
<b>config snmp warmstart_traps</b> [enable   disable]
<b>show snmp traps</b> {linkchange_traps {ports <portlist>}}
<b>config rmon trap</b> {rising_alarm [enable   disable]   falling_alarm [enable   disable]}(1)
<b>show rmon</b>

## 67-1 create snmp community

### Description

This command is used to create an SNMP community string.

Use an SNMP community string to define the relationship between the SNMP manager and the agent. The community string acts like a password to permit access to the agent on the Switch. You can specify one or more of the following characteristics associated with the string:

An access list of IP addresses of the SNMP managers that are permitted to use the community string to gain access to the agent.

A MIB view, which defines the subset of all MIB objects accessible to the given community.

Read and write or read-only permission for the MIB objects accessible to the community.

### Format

```
create snmp community <community_string 32> view <view_name 32> [read_only | read_write]
```

### Parameters

---

**<community\_string>** - Enter an alphanumeric string of up to 32 characters used to authentication of users wanting access to the Switch's SNMP agent.

---

**view\_name** - Specifies to view a MIB name.

**<view\_name 32>** - Enter the MIB view name here. This name can be up to 32 characters long.

---

**read\_only** - Specifies to allow the user using the above community string to have read only access to the Switch's SNMP agent.

---

**read\_write** - Specifies to allow the user using the above community string to have read and write access to the Switch's SNMP agent. The default read only community string is public. The default read write community string is private.

---

### Restrictions

Only Administrators can issue this command.

### Example

To create a read-only level SNMP community "System" with a "CommunityView" view:

```
DGS-1510-28XMP/ME:admin# create snmp community System view CommunityView read_only
Command: create snmp community System view CommunityView read_only
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```

## 67-2 delete snmp community

### Description

This command is used to delete an SNMP community string.



**Format**

**delete snmp community <community\_string 32>**

**Parameters**

---

**<community\_string 32>** - Enter the community string value to be deleted. This value can be up to 32 characters long.

---

**Restrictions**

Only Administrators can issue this command.

**Example**

To delete a SNMP community "System":

```
DGS-1510-28XMP/ME:admin# delete snmp community System
Command: delete snmp community System

Success.

DGS-1510-28XMP/ME:admin#
```

**67-3 show snmp community****Description**

This command is used to display the community string configurations.

**Format**

**show snmp community {<community\_string 32>}**

**Parameters**

---

**<community\_string 32>** - (Optional) Enter the Community string.

---

If no parameter is specified, all community string information will be displayed.

---

**Restrictions**

None.

**Example**

To display SNMP community:

```
DGS-1510-28XMP/ME:admin# show snmp community
Command: show snmp community

SNMP Community Table
Community Name          View Name          Access Right
-----
private                 CommunityView      read_write
public                  CommunityView      read_only

Total Entries : 2

DGS-1510-28XMP/ME:admin#
```

## 67-4 create snmp user

### Description

This command is used to create a new user to an SNMP group originated by this command.

### Format

```
create snmp user <user_name 32> <groupname 32> {encrypted [by_password auth [md5 <auth_password 8-16> | sha <auth_password 8-20>] priv [none | des <priv_password 8-16>] | by_key auth [md5 <auth_key 32-32> | sha <auth_key 40-40>] priv [none | des <priv_key 32-32>]]}
```

### Parameters

---

**<user\_name 32>** - Enter the name of the user on the host that connects to the agent. The range is 1 to 32.

---

**<groupname 32>** - Enter the name of the group to which the user is associated. The range is 1 to 32.

---

**encrypted** - (Optional) Specifies whether the password appears in encrypted format.

**by\_password** - Specifies to indicate input password for authentication and privacy.

**auth** - Specifies an authentication level setting session. The options are md5 and sha.

**md5** - Specifies the HMAC-MD5-96 authentication level.

**<auth\_password 8-16>** - Enter the MD5 authentication password here. This value must be between 8 and 16 characters.

**sha** - Specifies the HMAC-SHA-96 authentication level.

**<auth\_password 8-20>** - Enter the SHA authentication password here. This value must be between 8 and 20 characters.

**priv** - Specifies a privacy key used by DES, it is hex string type.

**none** - Specifies that no encryption will be used for the privacy key.

**des** - Specifies that the DES encryption will be used for the privacy key.

**<priv\_password 8-16>** - Enter the DES password value here. This value must be between 8 and 16 characters long.

**by\_key** - Specifies to indicate input key for authentication and privacy.

**auth** - Specifies an authentication string used by MD5 or SHA1.

**md5** - Specifies an authentication key used by MD5, it is hex string type.

**<auth\_key 32-32>** - Enter the MD5 authentication key here. This value must be 32 characters long.

**sha** - Specifies an authentication key used by SHA1, it is hex string type.

**<auth\_key 40-40>** - Enter the SHA authentication key here. This value must be 32 characters long.

**priv** - Specifies a privacy key used by DES, it is hex string type.

**none** - Specifies that no encryption will be used for the privacy key.

---

---

**des** - Specifies that the DES encryption will be used for the privacy key.

**<priv\_key 32-32>** - Enter the DES privacy key here. This value must be 32 characters long.

---

### Restrictions

Only Administrators can issue this command.

### Example

To create a SNMP user "user123" with group "group123":

```
DGS-1510-28XMP/ME:admin# create snmp user user123 group123 encrypted by_password auth md5
12345678 priv des 12345678
Command: create snmp user user123 group123 encrypted by_password auth md5 12345678 priv des
12345678
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```

## 67-5 delete snmp user

### Description

This command is used to remove a user from an SNMP group and delete the associated group in SNMP group.

### Format

**delete snmp user <username 32>**

### Parameters

---

**<username 32>** - Enter the name of the user on the host that connects to the agent. The range is 1 to 32.

---

### Restrictions

Only Administrators can issue this command.

### Example

To delete a SNMP user "user123":

```
DGS-1510-28XMP/ME:admin# delete snmp user user123
Command: delete snmp user user123
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```

## 67-6 show snmp user

**Description**

This command is used to display information on each SNMP username in the group username table.

**Format**

**show snmp user**

**Parameters**

None.

**Restrictions**

None.

**Example**

To show SNMP user:

```
DGS-1510-28XMP/ME:admin# show snmp user
Command: show snmp user

Username                               Group Name                               VerAuthPriv
-----                               -
initial                                 initial                                 V3 NoneNone
user123                                 group123                               V3 MD5 DES

Total Entries : 2

DGS-1510-28XMP/ME:admin#
```

## 67-7 create snmp group

**Description**

This command is used to create a new SNMP group, or a table that maps SNMP users to SNMP views.

**Format**

**create snmp group <groupname 32> [v1 | v2c | v3 [noauth\_nopriv | auth\_nopriv | auth\_priv]] {read\_view <view\_name 32> | write\_view <view\_name 32> | notify\_view <view\_name 32>}**

**Parameters**

**<groupname 32>** - Enter the group name here. This name can be up to 32 characters long.

**v1** - Specifies the least secure of the possible security models.

**v2c** - Specifies the second least secure of the possible security models.

**v3** - Specifies the most secure of the possible.

**noauth\_nopriv** - Specifies to support neither packet authentication nor encrypting.

**auth\_nopriv** - Specifies to support packet authentication.

---

**auth\_priv** - Specifies to support packet authentication and encrypting.

---

**read\_view** - (Optional) Specifies that the view name would be read.

**<view\_name 32>** - Enter the read view name here. This name can be up to 32 characters long.

---

**write\_view** - (Optional) Specifies that the view name would be write.

**<view\_name 32>** - Enter the write view name here. This name can be up to 32 characters long.

---

**notify\_view** - (Optional) Specifies that the view name would be notify.

**<view\_name 32>** - Enter the notify view name here. This name can be up to 32 characters long.

---

## Restrictions

Only Administrators can issue this command.

## Example

To create SNMP group "group123":

```
DGS-1510-28XMP/ME:admin# create snmp group group123 v3 auth_priv read_view CommunityView  
write_view CommunityView notify_view CommunityView
```

```
Command: create snmp group group123 v3 auth_priv read_view CommunityView write_view  
CommunityView notify_view CommunityView
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```

## 67-8 delete snmp group

### Description

This command is used to remove a SNMP group.

### Format

**delete snmp group <groupname 32>**

### Parameters

---

**<groupname 32>** - Enter the name of the group will be deleted.

---

## Restrictions

Only Administrators can issue this command.

## Example

To delete SNMP group "group123":

```
DGS-1510-28XMP/ME:admin# delete snmp group group123
Command: delete snmp group group123

Success.

DGS-1510-28XMP/ME:admin#
```

## 67-9 show snmp groups

### Description

This command is used to display the names of groups on the Switch and the security model, level, the status of the different views.

### Format

**show snmp groups**

### Parameters

None.

### Restrictions

None.

### Example

To show SNMP groups:

```

DGS-1510-28XMP/ME:admin# show snmp groups
Command: show snmp groups

Vacm Access Table Settings

Group Name      : public
ReadView Name   : CommunityView
WriteView Name  :
Notify View Name : CommunityView
Security Model  : SNMPv1
Security Level  : NoAuthNoPriv

Group Name      : public
ReadView Name   : CommunityView
WriteView Name  :
Notify View Name : CommunityView
Security Model  : SNMPv2
Security Level  : NoAuthNoPriv

Group Name      : initial
ReadView Name   : restricted
WriteView Name  :
Notify View Name : restricted
Security Model  : SNMPv3
Security Level  : NoAuthNoPriv

Group Name      : WriteGroup
ReadView Name   : CommunityView
WriteView Name  : CommunityView
Notify View Name : CommunityView
Security Model  : SNMPv2
Security Level  : NoAuthNoPriv

Total Entries: 10

DGS-1510-28XMP/ME:admin#

```

## 67-10 create snmp view

### Description

This command is used to assign views to community strings to limit which MIB objects an SNMP manager can access.

### Format

**create snmp view <view\_name 32> <oid> view\_type [included | excluded]**

### Parameters

---

**<view\_name 32>** - Enter the view name here. The name can be up to 32 characters long.

---

**<oid>** - Enter Object-Identified tree, MIB tree.

---

---

**view\_type** - Specifies the access type of the MIB tree in this view.

**included** - Specifies to include for this view.

**excluded** - Specifies to exclude for this view.

---

### Restrictions

Only Administrators can issue this command.

### Example

To create SNMP view "view123":

```
DGS-1510-28XMP/ME:admin# create snmp view view123 1.3.6 view_type included
Command: create snmp view view123 1.3.6 view_type included
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```

## 67-11 delete snmp view

### Description

This command is used to remove a view record.

### Format

**delete snmp view <view\_name 32> [all | <oid>]**

### Parameters

---

**<view\_name 32>** - Enter the view name here. The name can be up to 32 characters long.

---

**all** - Specifies that all view records will be removed.

---

**<oid>** - Specifies Object-Identified tree, MIB tree.

---

### Restrictions

Only Administrators can issue this command.

### Example

To delete SNMP view "view123":

```
DGS-1510-28XMP/ME:admin# delete snmp view view123 all
Command: delete snmp view view123 all
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```



## 67-12 show snmp view

**Description**

This command is used to display the SNMP view record.

**Format**

**show snmp view {<view\_name 32>}**

**Parameters**


---

**<view\_name 32>** - (Optional) Enter the view name here. The name can be up to 32 characters long.

---

**Restrictions**

None.

**Example**

To show SNMP view:

```
DGS-1510-28XMP/ME:admin# show snmp view
Command: show snmp view

Vacm View Table Settings
View Name          Subtree          View Type
-----
view123            1.3.6            Included
restricted         1.3.6.1.2.1.1   Included
restricted         1.3.6.1.2.1.11  Included
restricted         1.3.6.1.6.3.10.2.1 Included
restricted         1.3.6.1.6.3.11.2.1 Included
restricted         1.3.6.1.6.3.15.1.1 Included
CommunityView     1                Included
CommunityView     1.3.6.1.6.3      Excluded
CommunityView     1.3.6.1.6.3.1   Included

Total Entries: 9

DGS-1510-28XMP/ME:admin#
```

## 67-13 create snmp host

**Description**

This command is used to create a recipient of an SNMP trap operation.

**Format**

**create snmp host <ipaddr> [v1 | v2c | v3 [noauth\_nopriv | auth\_nopriv | auth\_priv]] <auth\_string32>**

**Parameters**


---

**<ipaddr>** - Enter the IP address of the recipient for which the traps are targeted.

---

**v1** - Specifies the least secure of the possible security models.

---

**v2c** - Specifies the second least secure of the possible security models.

---

**v3** - Specifies the most secure of the possible.

**noauth\_nopriv** - Specifies that neither support packet authentication nor encrypting.

**auth\_nopriv** - Specifies to support packet authentication.

**auth\_priv** - Specifies to support packet authentication and encrypting.

---

**<auth\_string 32>** - Enter the authentication string. If the v1 or v2 is specified, the auth\_string presents the community string, and it must be one of the entries in community table. If the v3 is specified, the auth\_string presents the user name, and it must be one of the entries in the user table.

---

**Restrictions**

Only Administrators can issue this command.

**Example**

To create SNMP host "10.0.0.1" with community string "public":

```
DGS-1510-28XMP/ME:admin# create snmp host 10.0.0.1 v1 public
Command: create snmp host 10.0.0.1 v1 public

Success.

DGS-1510-28XMP/ME:admin#
```

**67-14 delete snmp host****Description**

This command is used to delete a recipient of an SNMP trap operation.

**Format**

**delete snmp host <ipaddr>**

**Parameters**


---

**<ipaddr>** - Enter the IP address of the recipient for which the traps are targeted.

---

**Restrictions**

Only Administrators can issue this command.

**Example**

To delete SNMP host "10.0.0.1":

```
DGS-1510-28XMP/ME:admin# delete snmp host 10.0.0.1
Command: delete snmp host 10.0.0.1

Success.

DGS-1510-28XMP/ME:admin#
```

## 67-15 show snmp host

### Description

This command is used to display the recipient for which the traps are targeted.

### Format

**show snmp host {<ipaddr>}**

### Parameters

---

**<ipaddr>** - (Optional) Enter the IP address used for the configuration here.

---

If no parameter is specified, all SNMP hosts will be displayed.

---

### Restrictions

None.

### Example

To show SNMP host:

```
DGS-1510-28XMP/ME:admin# show snmp host
Command: show snmp host

SNMP Host Table
Host IP Address  SNMP Version      Community Name / SNMPv3 User Name
-----
10.90.90.3      V3 noauthnopriv  initial
10.90.90.2      V2c               private
10.90.90.1      V1                public
10.90.90.4      V3 authnopriv    user123
10.90.90.5      V3 authpriv      user234

Total Entries : 5

DGS-1510-28XMP/ME:admin#
```

## 67-16 config snmp engineID

### Description

This command is used to configure an identifier for the SNMP engine on the Switch.

**Format**

**config snmp engineID <snmp\_engineID 10-64>**

**Parameters**

---

**<snmp\_engineID 10-64>** - Enter the SNMP engine ID here. It is octet string type. It accepts the hex number directly. This value must be between 10 and 64.

---

**Restrictions**

Only Administrators can issue this command.

**Example**

To configure SNMP engine ID to "1023457890":

```
DGS-1510-28XMP/ME:admin# config snmp engineID 1023457890
Command: config snmp engineID 1023457890

Success.

DGS-1510-28XMP/ME:admin#
```

**67-17 show snmp engineID****Description**

This command is used to display the identification of the SNMP engine on the Switch. The default value is suggested in RFC2271. The very first bit is 1, and the first four octets are set to the binary equivalent of the agent's SNMP management private enterprise number as assigned by IANA, D-Link is 171. The fifth octet is 03 to indicate the rest is the MAC address of this device. The 6th –11th octets is MAC address.

**Format**

**show snmp engineID**

**Parameters**

None.

**Restrictions**

None.

**Example**

To show SNMP engine ID:

```
DGS-1510-28XMP/ME:admin#show snmp engineID
Command: show snmp engineID

SNMP Engine ID : 800000ab03000102e30400

DGS-1510-28XMP/ME:admin#
```

## 67-18 enable snmp

### Description

This command is used to enable the SNMP function.

### Format

**enable snmp**

### Parameters

None.

### Restrictions

Only Administrators and Operators can issue this command.

### Example

To enable SNMP:

```
DGS-1510-28XMP/ME:admin# enable snmp
Command: enable snmp

Success.

DGS-1510-28XMP/ME:admin#
```

## 67-19 disable snmp

### Description

This command is used to disable the SNMP function.

### Format

**disable snmp**

### Parameters

None.

### Restrictions

Only Administrators and Operators can issue this command.

**Example**

To disable SNMP:

```
DGS-1510-28XMP/ME:admin# disable snmp
Command: disable snmp

Success.

DGS-1510-28XMP/ME:admin#
```

**67-20 config snmp system\_name****Description**

This command is used to configure the name for the Switch.

**Format**

**config snmp system\_name {<sw\_name>}**

**Parameters**

---

**<sw\_name>** - (Optional) Enter the system name with a maximum of 128 characters here.

---

**Restrictions**

Only Administrators and Operators can issue this command.

**Example**

To configure the Switch name for "DGS-1510 Switch":

```
DGS-1510-28XMP/ME:admin# config snmp system_name DGS-1510 Switch
Command: config snmp system_name DGS-1510 Switch

Success.

DGS-1510-28XMP/ME:admin#
```

**67-21 config snmp system\_location****Description**

This command is used to enter a description of the location of the Switch.

**Format**

**config snmp system\_location {<sw\_location>}**

## Parameters

---

**<sw\_location>** - (Optional) Enter the system location string with a maximum of 128 characters here.

---

## Restrictions

Only Administrators and Operators can issue this command.

## Example

To configure the Switch location for "HQ 5F":

```
DGS-1510-28XMP/ME:admin# config snmp system_location HQ 5F
Command: config snmp system_location HQ 5F

Success.

DGS-1510-28XMP/ME:admin#
```

## 67-22 config snmp system\_contact

### Description

This command is used to enter the name of a contact person who is responsible for the Switch.

### Format

**config snmp system\_contact {<sw\_contact>}**

## Parameters

---

**<sw\_contact>** - (Optional) Enter the system contact string with a maximum of 128 characters here.

---

## Restrictions

Only Administrators and Operators can issue this command.

## Example

To configure the Switch contact to "MIS Department II":

```
DGS-1510-28XMP/ME:admin# config snmp system_contact "MIS Department II"
Command: config snmp system_contact "MIS Department II"

Success.

DGS-1510-28XMP/ME:admin#
```

## 67-23 enable snmp traps

### Description

This command is used to enable SNMP trap support.

## Format

**enable snmp traps**

## Parameters

None.

## Restrictions

Only Administrators and Operators can issue this command.

## Example

To enable SNMP trap support:

```
DGS-1510-28XMP/ME:admin# enable snmp traps
Command: enable snmp traps

Success.

DGS-1510-28XMP/ME:admin#
```

## 67-24 disable snmp traps

## Description

This command is used to disable SNMP trap support on the Switch.

## Format

**disable snmp traps**

## Parameters

None.

## Restrictions

Only Administrators and Operators can issue this command.

## Example

To prevent SNMP traps from being sent from the Switch:

```
DGS-1510-28XMP/ME:admin# disable snmp traps
Command: disable snmp traps

Success.

DGS-1510-28XMP/ME:admin#
```



## 67-25 enable snmp authenticate\_traps

### Description

This command is used to enable SNMP authentication failure trap support.

### Format

**enable snmp authenticate\_traps**

### Parameters

None.

### Restrictions

Only Administrators and Operators can issue this command.

### Example

To enable SNMP authentication trap support:

```
DGS-1510-28XMP/ME:admin# enable snmp authenticate_traps
Command: enable snmp authenticate_traps

Success.

DGS-1510-28XMP/ME:admin#
```

## 67-26 disable snmp authenticate\_traps

### Description

This command is used to disable SNMP authentication failure trap support.

### Format

**disable snmp authenticate\_traps**

### Parameters

None.

### Restrictions

Only Administrators and Operators can issue this command.

### Example

To disable SNMP authentication trap support:

```
DGS-1510-28XMP/ME:admin# disable snmp authenticate_traps
Command: disable snmp authenticate_traps

Success.

DGS-1510-28XMP/ME:admin#
```

## 67-27 enable snmp linkchange\_traps

### Description

This command is used to configure the sending of linkchange traps.

### Format

**enable snmp linkchange\_traps**

### Parameters

None.

### Restrictions

Only Administrators and Operators can issue this command.

### Example

To enable the sending of linkchange traps:

```
DGS-1510-28XMP/ME:admin# enable snmp linkchange_traps
Command: enable snmp linkchange_traps

Success.

DGS-1510-28XMP/ME:admin#
```

## 67-28 disable snmp linkchange\_traps

### Description

This command is used to configure the sending of linkchange traps.

### Format

**disable snmp linkchange\_traps**

### Parameters

None.

### Restrictions

Only Administrators and Operators can issue this command.

## Example

To disable the sending of linkchange traps:

```
DGS-1510-28XMP/ME:admin# disable snmp linkchange_traps
Command: disable snmp linkchange_traps

Success.

DGS-1510-28XMP/ME:admin#
```

## 67-29 config snmp linkchange\_traps ports

### Description

This command is used to configure the sending of linkchange traps and per port control for sending of change trap.

### Format

**config snmp linkchange\_traps ports [all | <portlist>] [enable | disable]**

### Parameters

---

**all** - Specifies to configure all ports.

---

**<portlist>** - Enter a range of ports to be configured.

---

**enable** - Specifies to enable sending of the link change trap for this port.

---

**disable** - Specifies to disable sending of the link change trap for this port.

---

### Restrictions

Only Administrators can issue this command.

## Example

To configure the sending of linkchange traps:

```
DGS-1510-28XMP/ME:admin# config snmp linkchange_traps ports 1-4 enable
Command: config snmp linkchange_traps ports 1-4 enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 67-30 config snmp coldstart\_traps

### Description

This command is used to configure the trap for coldstart event.

**Format**

**config snmp coldstart\_traps [enable | disable]**

**Parameters**

---

**enable** - Specifies to enable the trap of the coldstart event. This is the default option.

**disable** - Specifies to disable the trap of the coldstart event.

---

**Restrictions**

Only Administrators can issue this command.

**Example**

To configure the trap for coldstart event:

```
DGS-1510-28XMP/ME:admin# config snmp coldstart_traps enable
Command: config snmp coldstart_traps enable

Success.

DGS-1510-28XMP/ME:admin#
```

**67-31 config snmp warmstart\_traps****Description**

This command is used to configure the trap state for warmstart event.

**Format**

**config snmp warmstart\_traps [enable | disable]**

**Parameters**

---

**enable** - Specifies to enable the trap of the warmstart event. This is the default option.

**disable** - Specifies to disable the trap of the warmstart event.

---

**Restrictions**

Only Administrators can issue this command.

**Example**

To configure the trap state for warmstart event:

```
DGS-1510-28XMP/ME:admin# config snmp warmstart_traps enable
Command: config snmp warmstart_traps enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 67-32 show snmp traps

### Description

This command is used to display the SNMP trap sending status.

### Format

**show snmp traps {linkchange\_traps {ports <portlist>}}**

### Parameters

---

**linkchange\_traps** - (Optional) Specifies that the SNMP trap sending status will be displayed.

**ports** - (Optional) Specifies the ports to be displayed.

**<portlist>** - Enter the list of ports used here.

---

### Restrictions

None.

### Example

To display SNMP trap sending status:

```
DGS-1510-28XMP/ME:admin# show snmp traps
Command: show snmp traps

SNMP Traps           : Enabled
Authenticate Trap    : Enabled
Linkchange Traps     : Enabled
Coldstart Traps     : Enabled
Warmstart Traps      : Enabled

DGS-1510-28XMP/ME:admin#
```

## 67-33 config rmon trap

### Description

This command is used to configure the trap state for RMON events.

### Format

**config rmon trap {rising\_alarm [enable | disable] | falling\_alarm [enable | disable]}(1)**

## Parameters

**rising\_alarm** - Specifies the trap state for rising alarm. The default state is enabled.

**enable** - Specifies that the rising alarm function will be enabled.

**disable** - Specifies that the rising alarm function will be disabled.

**falling\_alarm** - Specifies the trap state for falling alarm. The default state is enabled.

**enable** - Specifies that the falling alarm function will be enabled.

**disable** - Specifies that the falling alarm function will be disabled.

---

## Restrictions

Only Administrators can issue this command.

## Example

To configure the trap state for RMON events:

```
DGS-1510-28XMP/ME:admin# config rmon trap rising_alarm disable
Command: config rmon trap rising_alarm disable

Success.

DGS-1510-28XMP/ME:admin#
```

## 67-34 show rmon

### Description

This command is used to display the RMON related setting.

### Format

**show rmon**

### Parameters

None.

### Restrictions

Only Administrators can issue this command.

### Example

To display the RMON related setting:

```
DGS-1510-28XMP/ME:admin# show rmon
```

```
Command: show rmon
```

```
RMON Rising Alarm Trap      : Enabled
```

```
RMON Falling Alarm Trap     : Enabled
```

```
DGS-1510-28XMP/ME:admin#
```

## Chapter 68 Single IP Management Command List

---

**enable sim**

**disable sim**

**show sim** {[candidates {<candidate\_id 1-100>} | members {<member\_id 1-32>} | group {commander\_mac <macaddr>} | neighbor]}

**reconfig** {member\_id <value 1-32> | exit}

**config sim\_group** [add <candidate\_id 1-100> {<password>} | delete <member\_id 1-32>]

**config sim** [[[commander {group\_name <groupname 64>} | candidate] | dp\_interval <sec 30-90> | hold\_time <sec 100-255>]]

**download sim\_ms** [firmware\_from\_tftp | configuration\_from\_tftp] {<ipaddr> <path\_filename> {[members <mclist 1-32> | all]}}

**upload sim\_ms** [configuration\_to\_tftp | log\_to\_tftp] {<ipaddr> <path\_filename> {[members <mclist> | all]}}

**config sim trap** [enable | disable]

---

### 68-1 enable sim

#### Description

This command is used to configure the single IP management on the Switch as enabled.

#### Format

**enable sim**

#### Parameters

None.

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

#### Example

To enable SIM:

```
DGS-1510-28XMP/ME:admin# enable sim
Command: enable sim

Success.

DGS-1510-28XMP/ME:admin#
```



## 68-2 disable sim

**Description**

This command is used to disable single IP management on the Switch.

**Format**

**disable sim**

**Parameters**

None.

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To disable SIM:

```
DGS-1510-28XMP/ME:admin# disable sim
Command: disable sim

Success.

DGS-1510-28XMP/ME:admin#
```

## 68-3 show sim

**Description**

This command is used to display the current information of the specific sort of devices.

**Format**

**show sim** {[**candidates** {<candidate\_id 1-100>} | **members** {<member\_id 1-32>} | **group** {<commander\_mac <macaddr>} | **neighbor**}]

**Parameters**

- 
- candidates** - (Optional) Specifies the candidate devices.  
**<candidate\_id 1-100>** - (Optional) Enter the candidate device ID here. This value must be between 1 and 100.
- 
- members** - (Optional) Specifies the member devices.  
**<member\_id 1-32>** - (Optional) Enter the member device ID here. This value must be between 1 and 32.
- 
- group** - (Optional) Specifies other group devices.  
**commander\_mac** - (Optional) Specifies the commander MAC address used.  
**<macaddr>** - Enter the commander MAC address used here.
- 
- neighbor** - (Optional) Specifies other neighbor devices.
-

## Restrictions

None.

## Example

To show the self-information in detail:

```
DGS-1510-28XMP/ME:admin#show sim
Command: show sim

SIM Version       : VER-1.61
Firmware Version  : 1.00.018
Device Name       :
MAC Address       : 00-01-02-E3-04-00
Capabilities      : L2
Platform         : DGS-1510-28XMP/ME L2 Switch
SIM State         : Disabled
Role State        : Candidate
Discovery Interval : 30 sec
Hold Time         : 100 sec

DGS-1510-28XMP/ME:admin#
```

To show the candidate information in summary, if user specify candidate id, it would show information in detail:

```
DGS-1510-28LP/ME:admin#show sim candidates
Command: show sim candidates

ID  MAC Address           Platform /
   / Capability           Hold  Firmware  Device Name
   /                      Time   Version
---  -
1  00-01-02-03-E4-00    DGS-1510-52L/ME      94    1.00.010  default:03-E4-00
   / L2 Switch
2  00-01-02-03-D4-00    DGS-1510-28XS/ME     86    1.00.010  default:03-D4-00
   / L2 Switch
3  00-01-02-03-A4-00    DGS-1510-28X/ME     90    1.00.010  default:03-A4-00
   / L2 Switch
4  00-01-02-03-B4-00    DGS-1510-52X/ME     99    1.00.010  default:03-B4-00
   / L2 Switch

Total Entries: 4

DGS-1510-28LP/ME:admin#
```

To show the member information in summary, if user specify member id, it will show information in detail:

```
DGS-1510-28LP/ME:admin#show sim members
```

```
Command: show sim members
```

ID	MAC Address	Platform / Capability	Hold Time	Firmware Version	Device Name
1	00-01-02-03-A4-00	DGS-1510-28X/ME L2 Switch	93	1.00.010	
2	00-01-02-03-E4-00	DGS-1510-52L/ME L2 Switch	97	1.00.010	
3	00-01-02-03-D4-00	DGS-1510-28XS/ME L2 Switch	91	1.00.010	

```
Total Entries: 3
```

```
DGS-1510-28LP/ME:admin#
```

To show other groups information in summary, if user specify group name, it will show information in detail:

```
DGS-1510-28LP/ME:admin#show sim group
```

```
Command: show sim group
```

```
SIM Group Name : Group_2
```

ID	MAC Address	Platform / Capability	Hold Time	Firmware Version	Device Name
*1	00-01-02-03-A4-00	DGS-1510-28X/ME L2 Switch	82	1.00.010	

```
SIM Group Name : Group_1
```

ID	MAC Address	Platform / Capability	Hold Time	Firmware Version	Device Name
*1	00-01-02-03-B4-00	DGS-1510-52X/ME L2 Switch	91	1.00.010	

```
Total Entries: 2
```

```
DGS-1510-28LP/ME:admin#
```

To show neighbor table of SIM:

```
DGS-1510-28LP/ME:admin#show sim neighbor
Command: show sim neighbor

Neighbor Info Table

Port    MAC Address          Role
-----  -
19      00-01-02-03-B4-00  Commander
23      00-01-02-03-E4-00  Candidate

Total Entries: 4

DGS-1510-28LP/ME:admin#
```

## 68-4 reconfig

### Description

This command is used to re-telnet to member.

### Format

**reconfig {member\_id <value 1-32> | exit}**

### Parameters

---

**member\_id** - (Optional) Specifies the serial number of the member.

**<value 1-32>** - Enter the serial number of the member here.

---

**exit** - (Optional) Specifies to exit from the telnet session.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To re-telnet to member:

```
DGS-1510-28XMP/ME:admin# reconfig member_id 1
Command: reconfig member_id 1

DGS-1510-28XMP/ME:admin#
Login:
```

## 68-5 config sim\_group

### Description

This command is used to configure group information.

**Format**

```
config sim_group [add <candidate_id 1-100> {<password>} | delete <member_id 1-32>]
```

**Parameters**

**add** - Specifies to add a specific candidate to the group.

**<candidate\_id 1-100>** - Enter the candidate ID to be added to the group here. This value must be between 1 and 100.

**<password>** - (Optional) Enter the password of candidate if necessary.

**delete** - Specifies to delete a member from the group.

**<member\_id 1-32>** - Enter the member ID of the member to be removed from the group here. This value must be between 1 and 32.

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

**Example**

To add a member:

```
DGS-1510-28XMP/ME:admin# config sim_group add 2
Command: config sim_group add 2

Please wait for ACK !!!
SIM Configure Success !!!

Success.

DGS-1510-28XMP/ME:admin#
```

To delete a member:

```
DGS-1510-28XMP/ME:admin# config sim_group delete 1
Command: config sim_group delete 1

Please wait for ACK !!!
SIM Configure Success !!!

Success.

DGS-1510-28XMP/ME:admin#
```

**68-6 config sim****Description**

This command is used to configure the role state and the parameters of the discovery protocol on the Switch.

## Format

```
config sim [{[commander {group_name <groupname 64>} | candidate] | dp_interval <sec 30-90> | hold_time <sec 100-255>}]
```

## Parameters

**commander** - (Optional) Specifies to transfer the role to the commander.

**group\_name** - (Optional) Specifies that if the user is the commander, the user can update the name of group.

**<groupname 64>** - Enter the group name here. This name can be up to 64 characters long.

**candidate** - (Optional) Specifies to transfer the role to the candidate.

**dp\_interval** - (Optional) Specifies the time in seconds between discoveries.

**<sec 30-90>** - Enter the discovery time here in seconds. This value must be between 30 and 90 seconds.

**hold\_time** - (Optional) Specifies the time in seconds the device holds the discovery result.

**<sec 100-255>** - Enter the hold time here in seconds. This value must be between 100 and 255.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To transfer to commander:

```
DGS-1510-28XMP/ME:admin# config sim commander
Command: config sim commander

Success.

DGS-1510-28XMP/ME:admin#
```

To transfer to candidate:

```
DGS-1510-28XMP/ME:admin# config sim candidate
Command: config sim candidate

Success.

DGS-1510-28XMP/ME:admin#
```

To update name of group:

```
DGS-1510-28XMP/ME:admin# config sim commander group_name mygroup
Command: config sim commander group_name mygroup

Success.

DGS-1510-28XMP/ME:admin#
```

To change the time interval of discovery protocol:

```
DGS-1510-28XMP/ME:admin# config sim dp_interval 30
Command: config sim dp_interval 30

Success.

DGS-1510-28XMP/ME:admin#
```

To change the hold time of discovery protocol:

```
DGS-1510-28XMP/ME:admin# config sim hold_time 200
Command: config sim hold_time 200

Success.

DGS-1510-28XMP/ME:admin#
```

## 68-7 download sim\_ms

### Description

This command is used to download firmware or configuration to indicated device.

### Format

**download sim\_ms [firmware\_from\_tftp | configuration\_from\_tftp] {<ipaddr> <path\_filename> {[members <mslist 1-32> | all]}}**

### Parameters

---

**firmware\_from\_tftp** - Specifies that the firmware will be downloaded from the TFTP server.

---

**configuration\_from\_tftp** - Specifies that the configuration will be downloaded from the TFTP server.

---

**<ipaddr>** - (Optional) Specifies the IP address of the TFTP server.

**<path\_filename>** - Enter the file path of the firmware or configuration in the TFTP server.

**members** - (Optional) Specifies a range of members who can download this firmware or configuration.

**<mslist 1-32>** - Enter the member list used here. This value must be between 1 and 32.

**all** - (Optional) Specifies that all members will be used.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To download configuration:

```
DGS-1510-28XMP/ME:admin# download sim_ms configuration_from_tftp 10.55.47.1 D:\dwl600x.tfp
members 1
Commands: download sim_ms configuration_from_tftp 10.55.47.1 D:\dwl600x.tfp members 1

This device is updating configuration. Please wait several minutes ...

Download Status :

ID   MAC Address           Result
---  -
1    00-01-02-03-04-00    Success

DGS-1510-28XMP/ME:admin#
```

To download firmware:

```
DGS-1510-28XMP/ME:admin# download sim_ms firmware_from_tftp 10.55.47.1 D:\test.txt members 1
Commands: download sim_ms firmware_from_tftp 10.55.47.1 D:\test.txt members 1

This device is updating firmware. Please wait several minutes ...

Download Status :

ID   MAC Address           Result
---  -
1    00-01-02-03-04-00    Success

DGS-1510-28XMP/ME:admin#
```

## 68-8 upload sim\_ms

### Description

This command is used to upload configuration to TFTP server.

### Format

**upload sim\_ms [configuration\_to\_tftp | log\_to\_tftp] {<ipaddr> <path\_filename> [[members <mslist> | all]]}**

### Parameters

---

**configuration\_to\_tftp** - Specifies that the configuration will be uploaded to the TFTP server.

---

**log\_to\_tftp** - Specifies that the log file will be uploaded to the TFTP server.

---

**<ipaddr>** - (Optional) Specifies the IP address of the TFTP server.

**<path\_filename>** - Enter the file path to store the configuration in the TFTP server.

**members** - (Optional) Specifies a range of members who can up this configuration.

**<mslist>** - Enter the member list used here.

**all** - (Optional) Specifies that all members will be used.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.



## Example

To upload configuration:

```
DGS-1510-28XMP/ME:admin# upload sim_ms configuration_to_tftp 10.55.47.1 D:\configuration.txt
members 1
Command: upload sim_ms configuration_to_tftp 10.55.47.1 D:\configuration.txt members 1

This device is uploading configuration. Please wait several minutes ...

Upload Status :

ID   MAC Address           Result
---  -
1    00-1A-2D-00-12-12    Success

DGS-1510-28XMP/ME:admin#
```

## 68-9 config sim trap

### Description

This command is used to control sending of traps issued from the member switch.

### Format

**config sim trap [enable | disable]**

### Parameters

---

**enable** - Specifies to enable the trap state.

---

**disable** - Specifies to disable the trap state.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To enable sim trap:

```
DGS-1510-28XMP/ME:admin# config sim trap enable
Command: config sim trap enable

Success.

DGS-1510-28XMP/ME:admin#
```

## Chapter 69 Syslog and Trap Source-interface Command List

---

**config syslog source\_ipif** [<ipif\_name 12> {<ipaddr>} | none]

---

**show syslog source\_ipif**

---

**config trap source\_ipif** [<ipif\_name 12> {<ipaddr>} | none]

---

**show trap source\_ipif**

---

### 69-1 config syslog source\_ipif

#### Description

This command is used to configure syslog source IP interface.

#### Format

**config syslog source\_ipif** [<ipif\_name 12> {<ipaddr>} | none]

#### Parameters

---

**<ipif\_name 12>** - Enter the IP interface name here. This name can be up to 12 characters long. If only specify this parameter, the least IPv4 address and the smallest IPv6 address of ipif\_name will be used as source IP addresses.

**<ipaddr>** - (Optional) Enter the IP address used for the configuration here.

---

**none** - Specifies to clear the configured source IP interface.

---

#### Restrictions

Only Administrators and Operators can issue this command.

#### Example

Configure syslog source IP interface:

```
DGS-1510-28XMP/ME:admin# config syslog source_ipif ipif3 14.0.0.5
Command: config syslog source_ipif ipif3 14.0.0.5

Success

DGS-1510-28XMP/ME:admin#
```

To clear the configured source IP interface for syslog:

```
DGS-1510-28XMP/ME:admin# config syslog source_ipif none
Command: config syslog source_ipif none

Success

DGS-1510-28XMP/ME:admin#
```

## 69-2 show syslog source\_ipif

### Description

This command is used to display the syslog source IP interface.

### Format

**show syslog source\_ipif**

### Parameters

None.

### Restrictions

None.

### Example

Show syslog source IP interface:

```
DGS-1510-28XMP/ME:admin# show syslog source_ipif
Command: show syslog source_ipif

Syslog Source IP Interface Configuration:

IP Interface           : ipif3
IPv4 Address           : 14.0.0.5

DGS-1510-28XMP/ME:admin#
```

## 69-3 config trap source\_ipif

### Description

This command is used to configure trap source IP interface.

### Format

**config trap source\_ipif [<ipif\_name 12> {<ipaddr>} | none]**

### Parameters

---

**<ipif\_name 12>** - Enter the IP interface name here. This name can be up to 12 characters long. If only specify this parameter, the least IPv4 address and the smallest IPv6 address of ipif\_name will be used as source IP

---

addresses.

**<ipaddr>** - (Optional) Enter the IP address used for the configuration here.

**none** - Specifies to clear the configured source IP interface.

---

### Restrictions

Only Administrators and Operators can issue this command.

### Example

Configure trap source IP interface:

```
DGS-1510-28XMP/ME:admin# config trap source_ipif System
Command: config trap source_ipif System

Success

DGS-1510-28XMP/ME:admin#
```

To clear the configured trap source IP interface:

```
DGS-1510-28XMP/ME:admin# config trap source_ipif none
Command: config trap source_ipif none

Success

DGS-1510-28XMP/ME:admin#
```

## 69-4 show trap source\_ipif

### Description

This command is used to display the trap source IP interface.

### Format

**show trap source\_ipif**

### Parameters

None.

### Restrictions

None.

### Example

Show trap source IP interface:

```
DGS-1510-28XMP/ME:admin# show trap source_ipif
```

```
Command: show trap source_ipif
```

```
Trap Source IP Interface Configuration:
```

```
IP Interface           : System
```

```
IPv4 Address          : None
```

```
DGS-1510-28XMP/ME:admin#
```

## Chapter 70 System Log Command List

---

### clear log

**show log** {[index <value\_list> | severity {module <module\_list>} {emergency | alert | critical | error | warning | notice | informational | debug | <level\_list 0-7>} | module<module\_list>}]

### show log\_software\_module

### enable syslog

### disable syslog

### show syslog

**create syslog host** <index 1-4> ipaddress <ipaddr> {severity [emergency | alert | critical | error | warning | notice | informational | debug | <level 0-7>] | facility [local0 | local1 | local2 | local3 | local4 | local5 | local6 | local7] | udp\_port <udp\_port\_number> | state [enable | disable]}

**config syslog host** [<index> | all] {severity [emergency | alert | critical | error | warning | notice | informational | debug | <level 0-7>] | facility [local0 | local1 | local2 | local3 | local4 | local5 | local6 | local7] | udp\_port <udp\_port\_number> | ipaddress <ipaddr> | state [enable | disable]}

**delete syslog host** [<index 1-4> | all]

**show syslog host** [<index 1-4>]

**config log\_save\_timing** [time\_interval <min 1-65535> | on\_demand | log\_trigger]

**show log\_save\_timing**

**show attack\_log** {index <value\_list>}

**clear attack\_log**

---

### 70-1 clear log

#### Description

This command is used to clear the Switch's history log.

#### Format

**clear log**

#### Parameters

None.

#### Restrictions

Only Administrators and Operators can issue this command.

#### Example

To clear the Switch's history log:

```
DGS-1510-28XMP/ME:admin# clear log
Command: clear log

Success.

DGS-1510-28XMP/ME:admin#
```

## 70-2 show log

### Description

This command is used to display the Switch's history log.

### Format

**show log** {[**index** <value\_list> | **severity** {**module** <module\_list>} {**emergency** | **alert** | **critical** | **error** | **warning** | **notice** | **informational** | **debug** | <level\_list 0-7>} | **module**<module\_list>]}

### Parameters

**index** - (Optional) Specifies the show log command will display the history log between the log number of X and Y. For example, showing log index 1-5 will display the history log from 1 to 5.

<value\_list> - Enter the index value here.

**severity** - (Optional) Specifies the severity level used.

**module** - (Optional) Specifies the modules which are to be displayed. The module can be obtained by using the **show log software module** command. Use a comma to separate multiple modules.

<module\_list> - Enter the module list value here.

**emergency** - (Optional) Severity level 0

**alert** - (Optional) Severity level 1

**critical** - (Optional) Severity level 2

**error** - (Optional) Severity level 3

**warning** - (Optional) Severity level 4

**notice** - (Optional) Severity level 5

**informational** - (Optional) Severity level 6

**debug** - (Optional) Severity level 7

<level\_list 0-7> - Specifies a list of severity level which is to be displayed. If there is more than one severity level, please separate them by comma. The level number is from 0 to 7.

**module** - (Optional) Specifies the modules which are to be displayed. The module can be obtained by using the **show log software module** command. Use a comma to separate multiple modules.

<module\_list> - Enter the module list value here.

If no parameter is specified, all history log entries will be displayed.

### Restrictions

None.

### Example

To display the Switch's history log:

```
DGS-1510-28XMP/ME:admin# show log index 1-3
Command: show log index 1-3

Index Date          Time          Level   Log Text
-----
3      2000-01-01 00:00:40 CRIT(2) System started up
2      2000-01-01 00:00:40 CRIT(2) System cold start
1      2000-01-01 01:49:30 INFO(6) Anonymous: execute command "reset system".

DGS-1510-28XMP/ME:admin#
```

## 70-3 show log\_software\_module

### Description

This command is used to display the protocols or applications that support the enhanced log. The enhanced log adds the module name and module ID. Network administrators can display logs by module name or module ID.

### Format

**show log\_software\_module**

### Parameters

None.

### Restrictions

None.

### Example

To display the protocols or applications that support the enhanced log:

```
DGS-1510-28XMP/ME:admin# show log_software_module
Command: show log_software_module

ERPS          ERROR_LOG      MSTP

DGS-1510-28XMP/ME:admin#
```

## 70-4 enable syslog

### Description

This command is used to enable the sending of syslog messages.

### Format

**enable syslog**



### Parameters

None.

### Restrictions

Only Administrators and Operators can issue this command.

### Example

To enable the sending of syslog messages:

```
DGS-1510-28XMP/ME:admin# enable syslog
Command: enable syslog

Success.

DGS-1510-28XMP/ME:admin#
```

## 70-5 disable syslog

### Description

This command is used to disable the sending of syslog messages.

### Format

**disable syslog**

### Parameters

None.

### Restrictions

Only Administrators and Operators can issue this command.

### Example

To disable the sending of syslog messages:

```
DGS-1510-28XMP/ME:admin# disable syslog
Command: disable syslog

Success.

DGS-1510-28XMP/ME:admin#
```

## 70-6 show syslog

### Description

This command is used to display the syslog protocol global state.

**Format****show syslog****Parameters**

None.

**Restrictions**

None.

**Example**

To display the syslog protocol global state:

```
DGS-1510-28XMP/ME:admin# show syslog
Command: show syslog

Syslog Global State: Enabled

DGS-1510-28XMP/ME:admin#
```

**70-7 create syslog host****Description**

This command is used to create a new syslog host. The user can choose and report specific levels of messages to a specific host. When the user chooses a specific level for a specific host, messages which are at that severity level or higher will be reported to that host.

**Format**

**create syslog host** <index 1-4> **ipaddress** <ipaddr> {**severity** [emergency | alert | critical | error | warning | notice | informational | debug | <level 0-7>] | **facility** [local0 | local1 | local2 | local3 | local4 | local5 | local6 | local7] | **udp\_port** <udp\_port\_number> | **state** [enable | disable]}

**Parameters**


---

**<index 1-4>** - Enter the host index value here.

---

**ipaddress** - Specifies the IP address for the host.

**<ipaddr>** - Specifies the IP address for the host.

---

**severity** - (Optional) Specifies the severity level.

**emergency** - Severity level 0

**alert** - Severity level 1

**critical** - Severity level 2

**error** - Severity level 3

**warning** - Severity level 4

**notice** - Severity level 5

**informational** - Severity level 6

**debug** - Severity level 7

**<level 0-7>** - Enter the severity level value here. This value must be between 0 and 7.

---

**facility** - (Optional) Some of the operating system daemons and processes have been assigned Facility values.

---

Processes and daemons that have not been explicitly assigned a Facility may use any of the "local use" facilities or they may use the "user-level" Facility. Those Facilities that have been designated are shown below. This facility setting will be put in the syslog packet when it is sent to a specific syslog server.

**local0** - Specifies that the user-defined facility will be set to local 0.

**local1** - Specifies that the user-defined facility will be set to local 1.

**local2** - Specifies that the user-defined facility will be set to local 2.

**local3** - Specifies that the user-defined facility will be set to local 3.

**local4** - Specifies that the user-defined facility will be set to local 4.

**local5** - Specifies that the user-defined facility will be set to local 5.

**local6** - Specifies that the user-defined facility will be set to local 6.

**local7** - Specifies that the user-defined facility will be set to local 7.

**udp\_port** - (Optional) Specifies the UDP port number.

**<udp\_port\_number>** - Enter the UDP port number used here.

**state** - (Optional) Specifies the syslog protocol is used for the transmission of event notification messages across networks to a host. The option enables or disables the host to receive such messages.

**enable** - Specifies that the host to receive such messages will be enabled.

**disable** - Specifies that the host to receive such messages will be disabled.

## Restrictions

Only Administrators and Operators can issue this command.

## Example

Adds a new syslog host:

```
DGS-1510-28XMP/ME:admin# create syslog host 1 ipaddress 10.90.90.1 severity debug facility local0
Command: create syslog host 1 ipaddress 10.90.90.1 severity debug facility local0

Success.

DGS-1510-28XMP/ME:admin#
```

## 70-8 config syslog host

### Description

This command is used to configure the syslog host configurations. The user can choose and report a specific level of messages to a specific host. When the user chooses a specific level for a specific host, messages which are at that severity level or higher will be reported to the specified host.

### Format

```
config syslog host [<index> | all] {severity [emergency | alert | critical | error | warning | notice | informational | debug | <level 0-7>] | facility [local0 | local1 | local2 | local3 | local4 | local5 | local6 | local7] | udp_port <udp_port_number> | ipaddress <ipaddr> | state [enable | disable]}
```

### Parameters

**<index>** - Enter the host index value here.

**all** - Specifies that all the host indexes will be used.

**severity** - (Optional) Specifies the severity level.

**emergency** - Severity level 0

**alert** - Severity level 1

**critical** - Severity level 2

**error** - Severity level 3

**warning** - Severity level 4

**notice** - Severity level 5

**informational** - Severity level 6

**debug** - Severity level 7

**<level 0-7>** - Enter the severity level value here. This value must be between 0 and 7.

**facility** - (Optional) Some of the operating system daemons and processes have been assigned Facility values. Processes and daemons that have not been explicitly assigned a Facility may use any of the "local use" facilities or they may use the "user-level" Facility. Those Facilities that have been designated are shown below. This facility setting will be put in the syslog packet when it is sent to a specific syslog server.

**local0** - Specifies that the user-defined facility will be set to local 0.

**local1** - Specifies that the user-defined facility will be set to local 1.

**local2** - Specifies that the user-defined facility will be set to local 2.

**local3** - Specifies that the user-defined facility will be set to local 3.

**local4** - Specifies that the user-defined facility will be set to local 4.

**local5** - Specifies that the user-defined facility will be set to local 5.

**local6** - Specifies that the user-defined facility will be set to local 6.

**local7** - Specifies that the user-defined facility will be set to local 7.

**udp\_port** - (Optional) Specifies the UDP port number.

**<udp\_port\_number>** - Enter the UDP port number used here.

**ipaddress** - (Optional) Specifies IP address for the host.

**<ipaddr>** - Enter the IP address used for the configuration here.

**state** - (Optional) Specifies the syslog protocol is used for the transmission of event notification messages across networks to a host. The option enables or disables the host to receive such messages.

**enable** - Specifies that the host to receive such messages will be enabled.

**disable** - Specifies that the host to receive such messages will be disabled.

## Restrictions

Only Administrators and Operators can issue this command.

## Example

To configure the syslog host configuration:

```
DGS-1510-28XMP/ME:admin# config syslog host all severity debug facility local0
Command: config syslog host all severity debug facility local0
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```

## 70-9 delete syslog host

### Description

This command is used to delete the syslog host(s).

**Format**

**delete syslog host [<index 1-4> | all]**

**Parameters**

---

**<index>** - Enter the host index value here.

---

**all** - Specifies that all the host indexes will be used.

---

**Restrictions**

Only Administrators and Operators can issue this command.

**Example**

To delete the specific syslog host:

```
DGS-1510-28XMP/ME:admin# delete syslog host 4
Command: delete syslog host 4

Success.

DGS-1510-28XMP/ME:admin#
```

70-10 show syslog host

**Description**

This command is used to display the syslog host configurations.

**Format**

**show syslog host {<index 1-4>}**

**Parameters**

---

**<index>** - (Optional) Enter the host index value here.

---

If no parameter is specified, all hosts will be displayed.

---

**Restrictions**

None.

**Example**

To show the syslog host information:

```
DGS-1510-28XMP/ME:admin# show syslog host
Command: show syslog host

Syslog Global State: Disabled

Host 1
  IP Address      : 10.90.90.1
  Severity       : Debug(7)
  Facility       : Local0
  UDP Port       : 514
  Status        : Disabled

Total Entries : 1

DGS-1510-28XMP/ME:admin#
```

## 70-11 config log\_save\_timing

### Description

This command is used to set the method for saving the log.

### Format

**config log\_save\_timing [time\_interval <min 1-65535> | on\_demand | log\_trigger]**

### Parameters

---

**time\_interval** - Specifies the interval in minutes to save log to flash. (If no new log events occur in this period, do not save.)

**<min 1-65535>** - Enter the time interval value here. This value must be between 1 and 65535 minutes.

---

**on\_demand** - Specifies to save log to flash whenever the user enters the **save log** or **save all** command. This is the default setting.

---

**log\_trigger** - Specifies to save log to flash whenever a new log event arrives.

---

### Restrictions

Only Administrators and Operators can issue this command.

### Example

To configure the method for saving a log as on demand:

```
DGS-1510-28XMP/ME:admin# config log_save_timing on_demand
Command: config log_save_timing on_demand

Success.

DGS-1510-28XMP/ME:admin#
```

## 70-12 show log\_save\_timing

### Description

This command is used to show the method for saving the log.

### Format

**show log\_save\_timing**

### Parameters

None.

### Restrictions

None.

### Example

To show the timing method used for saving the log:

```
DGS-1510-28XMP/ME:admin# show log_save_timing
Command: show log_save_timing

Saving Log Method: On_demand

DGS-1510-28XMP/ME:admin#
```

## 70-13 show attack\_log

### Description

This command is used to display the attack log messages. The attack log message refers to log messages driven by modules such as DOS and the IP-MAC-port binding module. This type of log message may generate a large amount of messages and quickly cause the system to run out of system log storage. Therefore, for this type of log messages only the first log that is generated each minute can be stored in the system log, with the rest of them being stored in a separate table named attack log.

### Format

**show attack\_log {index <value\_list>}**

### Parameters

**index** - (Optional) Specifies the list of index numbers of the entries that need to be displayed. For example, show attack\_log index 1-5 will display the attack log messages from 1 to 5.

**<value\_list>** - Enter the index numbers of the entries that needs to be displayed here.

If no parameter is specified, all entries in the attack log will be displayed.

### Restrictions

None.

**Example**

To show dangerous messages on the master:

```
DGS-1510-28XMP/ME:admin# show attack_log index 1
Command: show attack_log index 1

Index      Date          Time          Level         Log Text
-----
1          2008-10-17  15:00:14  CRIT(2)      Possible spoofing attack from IP: , MAC:
                                         0A-00-00-5A-00-01, port: 3

DGS-1510-28XMP/ME:admin#
```

**70-14 clear attack\_log****Description**

This command is used to clear the attack log.

**Format**

**clear attack\_log**

**Parameters**

None.

**Restrictions**

Only Administrators and Operators can issue this command.

**Example**

To clear the master's attack log:

```
DGS-1510-28XMP/ME:admin# clear attack_log
Command: clear attack_log

Success.

DGS-1510-28XMP/ME:admin#
```



## Chapter 71 System Severity Command List

---

```
config system_severity [trap | log | all] [emergency | alert| critical | error | warning | notice | information | debug |  
<level 0-7>]
```

---

```
show system_severity
```

---

### 71-1 config system\_severity

#### Description

This command is used to configure the severity level control for the system.

When the user chooses a specific level to log or trap, messages at that severity level or more will be logged or trapped to SNMP managers.

#### Format

```
config system_severity [trap | log | all] [emergency | alert| critical | error | warning | notice | information |  
debug | <level 0-7>]
```

#### Parameters

---

**trap** - Specifies the severity level control for traps.

---

**log** - Specifies the severity level control for the log.

---

**all** - Specifies the severity level control for traps and the log.

---

**emergency** - Specifies the severity level to 0.

---

**alert** - Specifies the severity level to 1.

---

**critical** - Specifies the severity level to 2.

---

**error** - Specifies the severity level to 3.

---

**warning** - Specifies the severity level to 4.

---

**notice** - Specifies the severity level to 5.

---

**information** - Specifies the severity level to 6.

---

**debug** - Specifies the severity level to 7.

---

**<level 0-7>** - Enter the severity level here. This value must be between 0 and 7.

---

#### Restrictions

Only Administrators and Operators can issue this command.

#### Example

To configure severity level control as information level for trap:

```
DGS-1510-28XMP/ME:admin# config system_severity trap warning
Command: config system_severity trap warning

Success.

DGS-1510-28XMP/ME:admin#
```

## 71-2 show system\_severity

### Description

This command is used to display the severity level controls for the system.

### Format

**show system\_severity**

### Parameters

None.

### Restrictions

None.

### Example

To show severity level control for system:

```
DGS-1510-28XMP/ME:admin# show system_severity
Command: show system_severity

System Severity Trap : warning(4)
System Severity Log : information(6)

DGS-1510-28XMP/ME:admin#
```

## Chapter 72 Telnet Client Command List

---

**telnet** <ipaddr> {tcp\_port <value 1-65535>}

### 72-1 telnet

#### Description

This command is used to start the telnet client to connect to the specific telnet server. The parameters specified by the command will only be used for the establishment of this specific session. They will not affect the establishment of other sessions.

#### Format

**telnet** <ipaddr> {tcp\_port <value 1-65535>}

#### Parameters

---

**<ipaddr>** - Enter the IP address of the telnet server.

---

**tcp\_port** - (Optional) Specifies the Telnet server port number to be connected. If not specified, the default port is 23.

---

**<value 1-65535>** - Enter the TCP port number used here. This value must be between 1 and 65535.

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

#### Example

Telnet to a Switch by specifying the IP address:

```
DGS-1510-28XMP/ME:admin# telnet 10.90.90.90
Command: telnet 10.90.90.90

          DES-3200-28P Fast Ethernet Switch
          Command Line Interface

          Firmware: Build 4.05.003
          Copyright(C) 2014 D-Link Corporation. All rights reserved.
UserName:
```

## Chapter 73 TFTP/FTP Client Command List

---

**download** [firmware\_fromTFTP {<ipaddr> src\_file <path\_filename 64> {dest\_file <pathname 64>} {boot\_up}} | cfg\_fromTFTP {<ipaddr> src\_file <path\_filename 64> {dest\_file <pathname 64>}} | firmware\_fromFTP [<ipaddr> {tcp\_port <tcp\_port\_number1-65535>} src\_file <path\_filename 64> | ftp:<string user:password@ipaddr:tcpport/path\_filename>} {dest\_file <path\_filename 64> {boot\_up}} | cfg\_fromFTP [<ipaddr> {tcp\_port < tcp\_port\_number 1-65535>} src\_file <path\_filename 64> | ftp: <string user:password@ipaddr:tcpport/path\_filename>} {dest\_file <path\_filename 64>} ]

---

**upload** [cfg\_toTFTP {<ipaddr> dest\_file <path\_filename 64> {src\_file <pathname 64>} {[include | exclude | begin] <filter\_string 80> {<filter\_string 80> {<filter\_string 80>}} {[include | exclude | begin] <filter\_string 80> {<filter\_string 80> {<filter\_string 80>}} {[include | exclude | begin ] <filter\_string 80> {<filter\_string 80> {<filter\_string 80>}}}} | log\_toTFTP{ <ipaddr> dest\_file <path\_filename 64>} | attack\_log\_toTFTP{ <ipaddr> dest\_file <path\_filename 64>} | firmware\_toTFTP{ <ipaddr> dest\_file <path\_filename 64> {src\_file <path\_filename 64>} | cfg\_toFTP [<ipaddr> {tcp\_port < tcp\_port\_number 1-65535>} dest\_file <path\_filename 64> | ftp: <string user:password@ipaddr:tcpport/path\_filename>} {src\_file<path\_filename 64>} {[include | exclude | begin] <filter\_string 80> {<filter\_string 80> {<filter\_string 80>}} {[include | exclude | begin ] <filter\_string 80> {<filter\_string 80> {<filter\_string 80>}} {[include | exclude | begin ] <filter\_string 80> {<filter\_string 80> {<filter\_string 80>}}}} | log\_toFTP [<ipaddr> {tcp\_port < tcp\_port\_number 1-65535>} dest\_file <path\_filename 64> | ftp: <string user:password@ipaddr:tcpport/path\_filename>} | attack\_log\_toFTP [<ipaddr> {tcp\_port <tcp\_port\_number 1-65535>} dest\_file <path\_filename 64> | ftp: <string user:password@ipaddr:tcpport/path\_filename>} | firmware\_toFTP [<ipaddr> {tcp\_port <tcp\_port\_number 1-65535>} dest\_file <path\_filename 64> | ftp: <string user:password@ipaddr:tcpport/path\_filename>} {src\_file <pathname 64>}]

---

**config tftp** {server <ipaddr> | firmware\_file <path\_filename 64> | cfg\_file <path\_filename 64> | log\_file <path\_filename 64> | attack\_log\_file <path\_filename 64> | certificate\_file <path\_filename 64> | key\_file <path\_filename 64> | tech\_support\_file <path\_filename 64> | debug\_error\_log\_file <path\_filename 64> | sim\_firmware\_file <path\_filename 64> | sim\_cfg\_file <path\_filename 64> | sim\_log\_file <path\_filename 64>}]

---

### show tftp

---

#### 73-1 download

#### Description

This command is used to download the firmware image and configuration from TFTP/FTP server.

#### Format

**download** [firmware\_fromTFTP {<ipaddr> src\_file <path\_filename 64> {dest\_file <pathname 64>} {boot\_up}} | cfg\_fromTFTP {<ipaddr> src\_file <path\_filename 64> {dest\_file <pathname 64>}} | firmware\_fromFTP [<ipaddr> {tcp\_port <tcp\_port\_number1-65535>} src\_file <path\_filename 64> | ftp:<string user:password@ipaddr:tcpport/path\_filename>} {dest\_file <path\_filename 64> {boot\_up}} | cfg\_fromFTP [<ipaddr> {tcp\_port < tcp\_port\_number 1-65535>} src\_file <path\_filename 64> | ftp: <string user:password@ipaddr:tcpport/path\_filename>} {dest\_file <path\_filename 64>} ]

#### Parameters

---

**firmware\_fromTFTP** - Specifies to download firmware from a TFTP server.

**<ipaddr>** - (Optional) Enter the IP address of the TFTP server.

**src\_file** - (Optional) Specifies to identify the parameter "path\_filename".

**<path\_filename 64>** - Enter the source file path name here. This name can be up to 64 characters long.

**dest\_file** - (Optional) Specifies to identify the parameter "path\_filename".

**<pathname 64>** - Enter the destination file path name here.

**boot\_up** - (Optional) Specifies to assign the downloaded file as boot-up image.

---

---

**cfg\_fromTFTP** – Specifies to download a configuration file from a TFTP server.

**<ipaddr>** - (Optional) Enter the IP address of the TFTP server.

**src\_file** - (Optional) Specifies to identify the parameter “path\_filename”.

**<path\_filename 64>** - Enter the pathname specifies the pathname on the TFTP server. It can be a relative pathname or an absolute pathname. This name can be up to 64 characters long.

**dest\_file** - (Optional) Specifies to identify the parameter “path\_filename”.

**<pathname 64>**- Enter the pathname specifies an absolute pathname on the device file system. If pathname is not specified, it refers to the boot\_up configuration file.

---

**firmware\_fromFTP** - Specifies to download firmware from a FTP server.

**<ipaddr>** - (Optional) Enter the IP address of the FTP server.

**tcp\_port** - Specifies the TCP port.

**<tcp\_port number1-65535>** - Enter a value between 1 and 65535.

**src\_file** - Specifies the source file location.

**<path\_filename 64>** - Enter the pathname specifies the pathname on the FTP server. It can be a relative pathname or an absolute pathname. This name can be up to 64 characters long.

**ftp:** - Specifies the FTP site.

**<string user:password@ipaddr:tcpport/path\_filename>** - Enter the FTP directory.

**dest\_file** - Specifies to identify the parameter “path\_filename”.

**<path\_filename 64>** - Enter the pathname specifies an absolute pathname on the device file system. If pathname is not specified, it refers to the boot\_up configuration file.

**boot\_up** - (Optional) Specifies to assign the downloaded file as boot-up image.

---

**cfg\_fromFTP** - Specifies to download a configuration file from a FTP server.

**<ipaddr>** - Enter the IP address of the FTP server.

**tcp\_port** - (Optional) Specifies the TCP port.

**<tcp\_port number 1-65535>** - Enter a value between 1 and 65535.

**src\_file** - Specifies to identify the parameter “path\_filename”.

**<path\_filename 64>** - Enter the pathname specifies the pathname on the FTP server. It can be a relative pathname or an absolute pathname. This name can be up to 64 characters long.

**ftp:** - Specifies the FTP site.

**<string user:password@ipaddr:tcpport/path\_filename>** - Enter the FTP directory.

**dest\_file** - Specifies to identify the parameter “path\_filename”.

**<path\_filename 64>** - Enter the pathname specifies an absolute pathname on the device file system. If pathname is not specified, it refers to the boot\_up configuration file.

---

## Restrictions

Only Administrators can issue this command.

## Example

To download firmware from TFTP:

```
DGS-1510-28XMP/ME:admin# download firmware_fromTFTP 10.54.71.1 src_file px.had
Command: download firmware_fromTFTP 10.54.71.1 src_file px.had

Connecting to server..... Done.
Download firmware..... Done. Do not power off!
Please wait, programming flash..... Done.

DGS-1510-28XMP/ME:admin#
```

To download configuration from TFTP:

```
DGS-1510-28XMP/ME:admin# download cfg_fromTFTP 10.54.71.1 src_file cfg01.txt
Command: download cfg_fromTFTP 10.54.71.1 src_file cfg01.txt

Connecting to server..... Done.
Download configuration..... Done.

DGS-1510-28XMP/ME:admin#
```

## 73-2 upload

### Description

This command is used to upload firmware and configuration from device to TFTP/FTP server.

### Format

```
upload [cfg_toTFTP {<ipaddr> dest_file <path_filename 64> {src_file <pathname 64>} {[include | exclude |
begin] <filter_string 80> {<filter_string 80> {<filter_string 80>}} {[include | exclude | begin] <filter_string 80>
{<filter_string 80> {<filter_string 80>}} {[include | exclude | begin] <filter_string 80> {<filter_string 80>
{<filter_string 80>}}}}] | log_toTFTP{ <ipaddr> dest_file <path_filename 64> |
attack_log_toTFTP{ <ipaddr> dest_file <path_filename 64> | firmware_toTFTP{ <ipaddr> dest_file
<path_filename 64> {src_file <pathname 64>} | cfg_toFTP [<ipaddr> {tcp_port <tcp_port_number 1-
65535>} dest_file <path_filename 64> | ftp: <string user:password@ipaddr:tcpport/path_filename>]
{src_file<pathname 64>} {[include | exclude | begin] <filter_string 80> {<filter_string 80> {<filter_string
80>}} {[include | exclude | begin] <filter_string 80> {<filter_string 80> {<filter_string 80>}} {[include |
exclude | begin] <filter_string 80> {<filter_string 80> {<filter_string 80>}}}}] | log_toFTP [<ipaddr> {tcp_port
<tcp_port_number 1-65535>} dest_file <path_filename 64> | ftp: <string
user:password@ipaddr:tcpport/path_filename>] | attack_log_toFTP [<ipaddr> {tcp_port <tcp_port_number
1-65535>} dest_file <path_filename 64> | ftp: <string user:password@ipaddr:tcpport/path_filename>] |
firmware_toFTP [<ipaddr> {tcp_port <tcp_port_number 1-65535>} dest_file <path_filename 64> | ftp:
<string user:password@ipaddr:tcpport/path_filename>] {src_file <pathname 64>}]
```

### Parameters

- cfg\_toTFTP** - Specifies that the configuration file will be uploaded to the TFTP server.
- <ipaddr>** - Enter the IP address of the TFTP server.
- dest\_file** - Specifies to identify the parameter "path\_filename".
  - <path\_filename 64>** - Enter the pathname specifies the pathname on the TFTP server. It can be a relative pathname or an absolute pathname. This name can be up to 64 characters long.
- src\_file** - (Optional) Specifies to identify the parameter "path\_filename".
  - <pathname 64>** - Enter the pathname specifies an absolute pathname on the device file system.
- include** - (Optional) Specifies to include lines that contain the specified filter string.
- exclude** - (Optional) Specifies to exclude lines that contain the specified filter string.
- begin** - (Optional) Specifies the first line that contains the specified filter string will be the first line of the output.
  - <filter\_string 80>** - Enter a filter string that is enclosed by the symbol ". Thus, the filter string itself cannot contain the " character. The filter string is case sensitive. This value can be up to 80 characters long.
  - <filter\_string 80>** - (Optional) Enter a filter string that is enclosed by the symbol ". Thus, the filter string itself cannot contain the " character. The filter string is case sensitive. This value can be up to 80 characters long.
  - <filter\_string 80>** - (Optional) Enter a filter string that is enclosed by the symbol ". Thus, the filter string itself cannot contain the " character. The filter string is case sensitive. This value can be up to 80 characters long.
- include** - (Optional) Specifies to include lines that contain the specified filter string.

---

**exclude** - (Optional) Specifies to exclude lines that contain the specified filter string.

**begin** - (Optional) Specifies the first line that contains the specified filter string will be the first line of the output.

**<filter\_string 80>** - Enter a filter string that is enclosed by the symbol ". Thus, the filter string itself cannot contain the " character. The filter string is case sensitive. This value can be up to 80 characters long.

**<filter\_string 80>** - (Optional) Enter a filter string that is enclosed by the symbol ". Thus, the filter string itself cannot contain the " character. The filter string is case sensitive. This value can be up to 80 characters long.

**<filter\_string 80>** - (Optional) Enter a filter string that is enclosed by the symbol ". Thus, the filter string itself cannot contain the " character. The filter string is case sensitive. This value can be up to 80 characters long.

**include** - (Optional) Specifies to include lines that contain the specified filter string.

**exclude** - (Optional) Specifies to exclude lines that contain the specified filter string.

**begin** - (Optional) Specifies the first line that contains the specified filter string will be the first line of the output.

**<filter\_string 80>** - Enter a filter string that is enclosed by the symbol ". Thus, the filter string itself cannot contain the " character. The filter string is case sensitive. This value can be up to 80 characters long.

**<filter\_string 80>** - (Optional) Enter a filter string that is enclosed by the symbol ". Thus, the filter string itself cannot contain the " character. The filter string is case sensitive. This value can be up to 80 characters long.

**<filter\_string 80>** - (Optional) Enter a filter string that is enclosed by the symbol ". Thus, the filter string itself cannot contain the " character. The filter string is case sensitive. This value can be up to 80 characters long.

---

**log\_toTFTP** - Specifies to upload a log file from device to TFTP server.

**<ipaddr>** - Enter the IP address of the TFTP server.

**dest\_file** - Specifies to identify the parameter "path\_filename".

**<path\_filename 64>** - Enter the pathname specifies the pathname on the TFTP server. It can be a relative pathname or an absolute pathname. This name can be up to 64 characters long.

---

**attack\_log\_toTFTP** - Specifies that the attack log will be uploaded to the TFTP server.

**<ipaddr>** - Enter the IP address of the TFTP server.

**dest\_file** - Specifies to identify the parameter "path\_filename".

**<path\_filename 64>** - Enter the path name on the TFTP server to hold the attack log. This name can be up to 64 characters long.

---

**firmware\_toTFTP** - Specifies that the firmware file will be uploaded to the TFTP server.

**<ipaddr>** - Enter the IP address of the TFTP server.

**dest\_file** - Specifies to identify the parameter "path\_filename".

**<path\_filename 64>** - Enter the pathname specifies the pathname on the TFTP server. It can be a relative pathname or an absolute pathname. This name can be up to 64 characters long.

**src\_file** - (Optional) Specifies to identify the parameter "path\_filename".

**<pathname 64>** - Enter the pathname specifies an absolute pathname on the device file system. If pathname is not specified, it refers to the boot\_up image. This name can be up to 64 characters long.

---

**cfg\_toFTP** - Specifies that the configuration file will be uploaded to the FTP server.

**<ipaddr>** - Enter the IP address of the FTP server.

**tcp\_port** - Specifies the TCP port.

**<tcp\_port\_number1-65535>** - Enter a value between 1 and 65535.

**dest\_file** - Specifies to identify the parameter "path\_filename".

**<path\_filename 64>** - Enter the pathname specifies the pathname on the FTP server. It can be a relative pathname or an absolute pathname. This name can be up to 64 characters long.

**ftp:** - Specifies the FTP site.

**<string user:password@ipaddr:tcpport/path\_filename>** - Enter the FTP directory.

**src\_file** - (Optional) Specifies to identify the parameter "path\_filename".

**<pathname 64>** - Enter the pathname specifies an absolute pathname on the device file system. If pathname is not specified, it refers to the boot\_up CFG file.

**include** - (Optional) Specifies to include lines that contain the specified filter string.

---

---

**exclude** - (Optional) Specifies to exclude lines that contain the specified filter string.

**begin** - (Optional) Specifies the first line that contains the specified filter string will be the first line of the output.

**<filter\_string 80>** - Enter a filter string that is enclosed by the symbol ". Thus, the filter string itself cannot contain the " character. The filter string is case sensitive. This value can be up to 80 characters long.

**<filter\_string 80>** - (Optional) Enter a filter string that is enclosed by the symbol ". Thus, the filter string itself cannot contain the " character. The filter string is case sensitive. This value can be up to 80 characters long.

**<filter\_string 80>** - (Optional) Enter a filter string that is enclosed by the symbol ". Thus, the filter string itself cannot contain the " character. The filter string is case sensitive. This value can be up to 80 characters long.

**include** - (Optional) Specifies to include lines that contain the specified filter string.

**exclude** - (Optional) Specifies to exclude lines that contain the specified filter string.

**begin** - (Optional) Specifies the first line that contains the specified filter string will be the first line of the output.

**<filter\_string 80>** - Enter a filter string that is enclosed by the symbol ". Thus, the filter string itself cannot contain the " character. The filter string is case sensitive. This value can be up to 80 characters long.

**<filter\_string 80>** - (Optional) Enter a filter string that is enclosed by the symbol ". Thus, the filter string itself cannot contain the " character. The filter string is case sensitive. This value can be up to 80 characters long.

**<filter\_string 80>** - (Optional) Enter a filter string that is enclosed by the symbol ". Thus, the filter string itself cannot contain the " character. The filter string is case sensitive. This value can be up to 80 characters long.

**include** - (Optional) Specifies to include lines that contain the specified filter string.

**exclude** - (Optional) Specifies to exclude lines that contain the specified filter string.

**begin** - (Optional) Specifies the first line that contains the specified filter string will be the first line of the output.

**<filter\_string 80>** - Enter a filter string that is enclosed by the symbol ". Thus, the filter string itself cannot contain the " character. The filter string is case sensitive. This value can be up to 80 characters long.

**<filter\_string 80>** - (Optional) Enter a filter string that is enclosed by the symbol ". Thus, the filter string itself cannot contain the " character. The filter string is case sensitive. This value can be up to 80 characters long.

**<filter\_string 80>** - (Optional) Enter a filter string that is enclosed by the symbol ". Thus, the filter string itself cannot contain the " character. The filter string is case sensitive. This value can be up to 80 characters long.

---

**log\_toFTP** - Specifies to upload a log file from device to FTP server.

**<ipaddr>** - Enter the IP address of the FTP server.

**tcp\_port** - Specifies the TCP port.

**<tcp\_port\_number1-65535>** - Enter a value between 1 and 65535.

**dest\_file** - Specifies to identify the parameter "path\_filename".

**<path\_filename 64>** - Enter the pathname specifies the pathname on the FTP server. It can be a relative pathname or an absolute pathname. This name can be up to 64 characters long.

**ftp:** - Specifies the FTP site.

**<string user:password@ipaddr:tcpport/path\_filename>** - Enter the FTP directory.

---

**attack\_log\_toFTP** – Specifies that the attack log will be uploaded to the FTP server.

**<ipaddr>** - Enter the IP address of the FTP server.

**tcp\_port** - Specifies the TCP port.

**<tcp\_port\_number1-65535>** - Enter a value between 1 and 65535.

**dest\_file** - Specifies to identify the parameter "path\_filename".

**<path\_filename 64>** - Enter the path name on the FTP server to hold the attack log. This name can be up to 64 characters long.

**ftp:** - Specifies the FTP site.

**<string user:password@ipaddr:tcpport/path\_filename>** - Enter the FTP directory.

---

**firmware\_toFTP** – Specifies that the firmware file will be uploaded to the FTP server.

**<ipaddr>** - Enter the IP address of the FTP server.

**tcp\_port** - Specifies the TCP port.

---



**<tcp\_port\_number1-65535>** - Enter a value between 1 and 65535.

**dest\_file** - Specifies to identify the parameter "path\_filename".

**<path\_filename 64>** - Enter the pathname specifies the pathname on the FTP server. It can be a relative pathname or an absolute pathname. This name can be up to 64 characters long.

**ftp:** - Specifies the FTP site.

**<string user:password@ipaddr:tcpport/path\_filename>** - Enter the FTP directory.

**src\_file** - (Optional) Specifies to identify the parameter "path\_filename".

**<pathname 64>** - Enter the pathname specifies an absolute pathname on the device file system. If pathname is not specified, it refers to the boot\_up image. This name can be up to 64 characters long.

## Restrictions

Only Administrators and Operators can issue this command.

## Example

To upload firmware from a file system device to a TFTP server:

```
DGS-1510-28XMP/ME:admin# upload firmware_toTFTP 10.90.90.10 dest_file d:\firmware.had
Command: upload firmware_toTFTP 10.90.90.10 dest_file d:\firmware.had

Connecting to server..... Done.
Upload firmware..... Done.
Success.

DGS-1510-28XMP/ME:admin#
```

To display a scenario where the uploading of the firmware to the TFTP server failed, because of an incorrect or missing filename from the source. This error can also be found if the directory, on the source, does not exit.

```
DGS-1510-28XMP/ME:admin# upload firmware_toTFTP 10.90.90.10 dest_file D:/firmware.had
src_file 4.00.020.had
Command: upload firmware_toTFTP 10.90.90.10 dest_file D:/firmware.had src_file 4.00.020.had

No such file or directory.

Fail!

DGS-1510-28XMP/ME:admin#
```

To upload configuration from TFTP:

```
DGS-1510-28XMP/ME:admin# upload cfg_toTFTP 10.90.90.10 dest_file d:\config.cfg
Command: upload cfg_toTFTP 10.90.90.10 dest_file d:\config.cfg

Connecting to server..... Done.
Upload configuration..... Done.
Success.

DGS-1510-28XMP/ME:admin#
```

To display a scenario where the uploading of the config file to the TFTP server failed, because of an incorrect or missing filename from the source. This error can also be found if the directory, on the source, does not exist.

```
DGS-1510-28XMP/ME:admin# upload cfg_toTFTP 10.90.90.10 dest_file d:\config.cfg src_file
missing.cfg
Command: upload cfg_toTFTP 10.90.90.10 dest_file d:\config.cfg src_file missing.cfg

No such file or directory.

Fail!

DGS-1510-28XMP/ME:admin#
```

To upload the attack log:

```
DGS-1510-28XMP/ME:admin# upload attack_log_toTFTP 10.90.90.10 dest_file d:\attack.txt
Command: upload attack_log_toTFTP 10.90.90.10 dest_file d:\attack.txt

Success.

DGS-1510-28XMP/ME:admin#
```

## 73-3 config tftp

### Description

This command is used to pre-configure TFTP server and file pathname on the TFTP server.

### Format

```
config tftp {server <ipaddr> | firmware_file <path_filename 64> | cfg_file <path_filename 64> | log_file
<path_filename 64> | attack_log_file <path_filename 64> | certificate_file <path_filename 64> | key_file
<path_filename 64> | tech_support_file <path_filename 64> | debug_error_log_file <path_filename 64> |
sim_firmware_file <path_filename 64> | sim_cfg_file <path_filename 64> | sim_log_file <path_filename 64>}
```

### Parameters

**server** - (Optional) Specifies the IP address of the TFTP server.

**<ipaddr>** - Enter the IP address of the TFTP server.

**firmware\_file** - (Optional) Specifies the pathname supports “download/upload firmware\_fromTFTP” function.

**<path\_filename 64>** - Enter the pathname supports “download/upload firmware\_fromTFTP” function.

**cfg\_file** - (Optional) Specifies the pathname supports “download/upload cfg\_fromTFTP” function.

**<path\_filename 64>** - Enter the pathname supports “download/upload cfg\_fromTFTP” function.

**log\_file** - (Optional) Specifies the pathname supports “upload log\_toTFTP” function.

**<path\_filename 64>** - Enter the pathname supports “upload log\_toTFTP” function.

**attack\_log\_file** - (Optional) Specifies the pathname supports “upload attack\_log\_toTFTP” function.

**<path\_filename 64>** - Enter the pathname supports “upload attack\_log\_toTFTP” function.

**certificate\_file** - (Optional) Specifies the pathname supports “download ssl certificate” function.

**<path\_filename 64>** - Enter the pathname supports “download ssl certificate” function.

**key\_file** - (Optional) Specifies the pathname supports “download ssl certificate” function.

**<path\_filename 64>** - Enter the pathname supports “download ssl certificate” function.

**tech\_support\_file** - (Optional) Specifies specifying the pathname supports “upload tech\_support\_toTFTP” function.

**<path\_filename 64>** - Enter specifying the pathname supports “upload tech\_support\_toTFTP” function.

**debug\_error\_log\_file** - (Optional) Specifies the pathname supports “debug error\_log” function.

**<path\_filename 64>** - Enter the pathname supports “debug error\_log” function.

**sim\_firmware\_file** - (Optional) Specifies the pathname supports “download/upload sim\_ms firmware\_fromTFTP” function.

**<path\_filename 64>** - Enter the pathname supports “download/upload sim\_ms firmware\_fromTFTP” function.

**sim\_cfg\_file** - (Optional) Specifies the pathname supports “download/upload sim\_ms configuration\_fromTFTP” function.

**<path\_filename 64>** - Enter the pathname supports “download/upload sim\_ms configuration\_fromTFTP” function.

**sim\_log\_file** - (Optional) Specifies the pathname supports “upload sim\_ms log\_toTFTP” function.

**<path\_filename 64>** - Enter the pathname supports “upload sim\_ms log\_toTFTP” function.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure TFTP server:

```
DGS-1510-28XMP/ME:admin# config tftp server 10.90.90.10
Command: config tftp server 10.90.90.10

Success.

DGS-1510-28XMP/ME:admin#
```

To configure TFTP server and specify the pre defined firmware file, log file:

```
DGS-1510-28XMP/ME:admin# config tftp server 10.90.90.1 firmware_file DES3200.had cfg_file
log_tmp
Command: config tftp server 10.90.90.1 firmware_file DES3200.had cfg_file log_tmp

Success.

DGS-1510-28XMP/ME:admin#
```

## 73-4 show tftp

### Description

This command is used to show the TFTP server and the file path pre-configured by administrator.

### Format

**show tftp**

**Parameters**

None.

**Restrictions**

None.

**Example**

To show TFTP settings, if pre-configure server IPv4 address, firmware\_file and cfg\_file only:

```
DGS-1510-28XMP/ME:admin# show tftp
```

```
Command: show tftp
```

```
TFTP Server Settings
```

```
IPv4 Address : 10.90.90.1
```

File Type	Path_filename
-----	-----
firmware_file	DES3200.had
cfg_file	log_tmp
log_file	
attack_log_file	
certificate_file	
key_file	
tech_support_file	
debug_error_log_file	
sim_firmware_file	
sim_cfg_file	
sim_log_file	

```
DGS-1510-28XMP/ME:admin#
```

## Chapter 74 Time and SNTP Command List

---

```
config sntp {primary <ipaddr> | secondary <ipaddr> | poll-interval <int 30-99999>}
```

---

```
show sntp
```

---

```
enable sntp
```

---

```
disable sntp
```

---

```
config time <date ddmthyyy> <time hh:mm:ss>
```

---

```
config time_zone {operator [+ | -] | hour <gmt_hour 0-13> | min <minute 0-59>}
```

---

```
config dst [disable | repeating {s_week <start_week 1-4,last> | s_day <start_weekday sun-sat> | s_mth
<start_mth 1-12> | s_time <start_time hh:mm> | e_week <end_week 1-4,last> | e_day <end_weekday sun-
sat> | e_mth <end_mth 1-12> | e_time <end_time hh:mm> | offset [30 | 60 | 90 | 120]} | annual {s_date
<start_date 1-31> | s_mth <start_mth 1-12> | s_time <start_time hh:mm> | e_date <end_date 1-31> | e_mth
<end_mth 1-12> | e_time <end_time hh:mm> | offset [30 | 60 | 90 | 120]}]
```

---

```
show time
```

---

### 74-1 config sntp

#### Description

This command is used to change SNTP configurations.

#### Format

```
config sntp {primary <ipaddr> | secondary <ipaddr> | poll-interval <int 30-99999>}
```

#### Parameters

---

**primary** - (Optional) Specifies the SNTP primary server IP address.

**<ipaddr>** - Enter the IP address used for this configuration here.

---

**secondary** - (Optional) Specifies the SNTP secondary server IP address.

**<ipaddr>** - Enter the IP address used for this configuration here.

---

**poll-interval** - (Optional) Specifies the polling interval range seconds.

**<int 30-99999>** - Enter the polling interval range here. This value must be between 30 and 99999 seconds.

---

#### Restrictions

Only Administrators and Operators can issue this command.

#### Example

To configure SNTP:

```
DGS-1510-28XMP/ME:admin# config sntp primary 10.1.1.1 secondary 10.1.1.2 poll-interval 30
Command: config sntp primary 10.1.1.1 secondary 10.1.1.2 poll-interval 30

Success.

DGS-1510-28XMP/ME:admin#
```

## 74-2 show sntp

### Description

This command is used to display SNTP current time source and configuration.

### Format

**show sntp**

### Parameters

None.

### Restrictions

None.

### Example

To show SNTP:

```
DGS-1510-28XMP/ME:admin#show sntp
Command: show sntp

Current Time Source   : System Clock
SNTP                  : Disabled
SNTP Primary Server  : 0.0.0.0
SNTP Secondary Server : 0.0.0.0
SNTP Poll Interval   : 720 sec

DGS-1510-28XMP/ME:admin#
```

## 74-3 enable sntp

### Description

This command is used to turn on SNTP support.

### Format

**enable sntp**

### Parameters

None.

## Restrictions

Only Administrators and Operators can issue this command.

## Example

To enable SNTP:

```
DGS-1510-28XMP/ME:admin# enable sntp
Command: enable sntp

Success.

DGS-1510-28XMP/ME:admin#
```

## 74-4 disable sntp

### Description

This command is used to turn off SNTP support.

### Format

**disable sntp**

### Parameters

None.

## Restrictions

Only Administrators and Operators can issue this command.

## Example

To disable SNTP:

```
DGS-1510-28XMP/ME:admin# disable sntp
Command: disable sntp

Success.

DGS-1510-28XMP/ME:admin#
```

## 74-5 config time

### Description

This command is used to configure time and date settings of the device.

### Format

**config time <date ddmthyyy> <time hh:mm:ss>**

## Parameters

---

**<date ddmthyyy>** - Specifies the system clock date. An example would look like this: '30jun2010'.

---

**<time hh:mm:ss>** - Specifies the system clock time. An example would look like this: '12:00:00'.

---

## Restrictions

Only Administrators and Operators can issue this command.

## Example

To configure time:

```
DGS-1510-28XMP/ME:admin# config time 30jun2003 16:30:30
Command: config time 30jun2003 16:30:30

Success.

DGS-1510-28XMP/ME:admin#
```

## 74-6 config time\_zone

### Description

This command is used to configure time zone of the device.

### Format

**config time\_zone {operator [+ | -] | hour <gmt\_hour 0-13> | min <minute 0-59>}**

## Parameters

---

**operator** - (Optional) Specifies the operator of time zone.

**[+ | -]** - Specifies that time should be added or subtracted to or from the GMT.

---

**hour** - (Optional) Specifies the hour of time zone.

**<gmt\_hour 0-13>** - Enter the hour value of the time zone here. This value must be between 0 and 13.

---

**min** - (Optional) Specifies the minute of time zone.

**<minute 0-59>** - Enter the minute value of the time zone here. This value must be between 0 and 59.

---

## Restrictions

Only Administrators and Operators can issue this command.

## Example

To configure time\_zone:



```
DGS-1510-28XMP/ME:admin# config time_zone operator + hour 2 min 30
Command: config time_zone operator + hour 2 min 30

Success.

DGS-1510-28XMP/ME:admin#
```

## 74-7 config dst

### Description

This command is used to configure Daylight Saving Time of the device.

### Format

```
config dst [disable | repeating {s_week <start_week 1-4,last> | s_day <start_weekday sun-sat> | s_mth
<start_mth 1-12> | s_time <start_time hh:mm> | e_week <end_week 1-4,last> | e_day <end_weekday sun-
sat> | e_mth <end_mth 1-12> | e_time <end_time hh:mm> | offset [30 | 60 | 90 | 120]} | annual {s_date
<start_date 1-31> | s_mth <start_mth 1-12> | s_time <start_time hh:mm> | e_date <end_date 1-31> | e_mth
<end_mth 1-12> | e_time <end_time hh:mm> | offset [30 | 60 | 90 | 120]}]
```

### Parameters

---

**disable** - Specifies to disable the Daylight Saving Time of the Switch.

**repeating** - Specifies to set the Daylight Saving Time to repeating mode.

**s\_week** - (Optional) Specifies to configure the start number of Daylight Saving Time.

**<start\_week 1-4, last>** - Enter the starting week number of Daylight Saving Time here. This value must be between 1 and 4.

**s\_day** - (Optional) Specifies to configure the start day number of Daylight Saving Time.

**<start\_weekday sun-sat>** - Enter the starting day value of Daylight Saving Time here. This value must either be sun, mon, tue, wed, thu, fri or sat.

**s\_mth, e\_mt** - (Optional) Specifies to configure the start month number of Daylight Saving Time.

**<start\_mth 1-12>** - Enter the starting month number of Daylight Saving Time here. This value must be between 1 and 12.

**s\_time** - (Optional) Specifies to configure the start time of Daylight Saving Time.

**<start\_time hh:mm>** - Enter the starting time of Daylight Saving Time here. This value must be in the hh:mm format.

**e\_week** - (Optional) Specifies to configure the end week number of Daylight Saving Time.

**<end\_week 1-4, last>** - Enter the ending week number of Daylight Saving Time here. This value must be between 1 and 4.

**e\_day** - (Optional) Specifies to configure the end day number of Daylight Saving Time.

**<end\_weekday sun-sat>** - Enter the ending day value of Daylight Saving Time here. This value must either be sun, mon, tue, wed, thu, fri or sat.

**e\_mth** - (Optional) Specifies to configure the end month number of Daylight Saving Time.

**<end\_mth 1-12>** - Enter the ending month number of Daylight Saving Time here. This value must be between 1 and 12.

**e\_time** - (Optional) Specifies to configure the end time of Daylight Saving Time.

**<end\_time hh:mm>** - Enter the starting time of Daylight Saving Time here. This value must be in the hh:mm format.

**offset** - (Optional) Specifies the number of minutes to add or to subtract during summertime. The ranges of offset are 30, 60, 90,120. The default value is 60.

**30** - Specifies that the offset range will 30 minutes.

**60** - Specifies that the offset range will 60 minutes.

---

**90** - Specifies that the offset range will 90 minutes.

**120** - Specifies that the offset range will 120 minutes.

**annual** - Specifies to set the Daylight Saving Time to annual mode.

**s\_date** - (Optional) Specifies to configure the start date of Daylight Saving Time.

**<start\_date 1-31>** - Enter the starting date of Daylight Saving Time here. This range must be between 1 and 31.

**s\_mth** - (Optional) Specifies to configure the start month number of Daylight Saving Time.

**<start\_mth 1-12>** - Enter the starting month number of Daylight Saving Time here. This value must be between 1 and 12.

**s\_time** - (Optional) Specifies to configure the start time of Daylight Saving Time.

**<start\_time hh:mm>** - Enter the starting time of Daylight Saving Time here. This value must be in the hh:mm format.

**e\_date** - (Optional) Specifies to configure the end date of Daylight Saving Time.

**<end\_date 1-31>** - Enter the ending date of Daylight Saving Time here. This range must be between 1 and 31.

**e\_mth** - (Optional) Specifies to configure the end month number of Daylight Saving Time.

**<end\_mth 1-12>** - Enter the ending month number of Daylight Saving Time here. This value must be between 1 and 12.

**e\_time** - (Optional) Specifies to configure the end time of Daylight Saving Time.

**<end\_time hh:mm>** - Enter the ending time of Daylight Saving Time here. This value must be in the hh:mm format.

**offset** - (Optional) Specifies the number of minutes to add or to subtract during summertime. The ranges of offset are 30, 60, 90,120; default value is 60.

**30** - Specifies that the offset range will 30 minutes.

**60** - Specifies that the offset range will 60 minutes.

**90** - Specifies that the offset range will 90 minutes.

**120** - Specifies that the offset range will 120 minutes.

## Restrictions

Only Administrators and Operators can issue this command.

## Example

To configure time:

```
DGS-1510-28XMP/ME:admin# config dst repeating s_week 2 s_day tue s_mth 4 s_time 15:00 e_week
 2 e_day wed e_mth 10 e_time 15:30 offset 30
Command: config dst repeating s_week 2 s_day tue s_mth 4 s_time 15:00 e_week 2 e
_day wed e_mth 10 e_time 15:30 offset 30

Success.

DGS-1510-28XMP/ME:admin#
```

## 74-8 show time

### Description

This command is used to display time states.

## Format

**show time**

## Parameters

None.

## Restrictions

None.

## Example

To show time:

```
DGS-1510-28XMP/ME:admin# show time
Command: show time

Current Time Source : System Clock
Boot Time          : 9 May 2011 06:20:55
Current Time       : 9 May 2011 07:46:10
Time Zone          : GMT +00:00
Daylight Saving Time : Disabled
Offset In Minutes  : 60
Repeating          From : Apr 1st Sun 00:00
                  To   : Oct last Sun 00:00
Annual            From : 29 Apr 00:00
                  To   : 12 Oct 00:00

DGS-1510-28XMP/ME:admin#
```

## Chapter 75 Trace Route Command List

---

```
traceroute <ipaddr> {ttl <value 1-60>} {port <value 30000-64900>} {timeout <sec 1-65535>} {probe <value 1-9>}
```

---

```
traceroute6 <ipv6addr> {ttl <value 1-60> | port <value 30000-64900> | timeout <sec 1-65535> | probe <value 1-9>}
```

---

### 75-1 traceroute

#### Description

This command is used to trace the routed path between the Switch and a destination end station.

#### Format

```
traceroute <ipaddr> {ttl <value 1-60> | port <value 30000-64900> | timeout <sec 1-65535> | probe <value 1-9>}
```

#### Parameters

---

**<ipaddr>** - Enter the IP address of the destination end station.

**ttl** - (Optional) Specifies the time to live value of the trace route request. This is the maximum number of routers that a trace route packet can pass. The **traceroute** command will cross while seeking the network path between two devices. The range for the TTL is 1 to 60 hops.

**<value 1-60>** - Enter the time to live value here. This value must be between 1 and 60.

**port** - (Optional) Specifies the port number. The value range is from 30000 to 64900.

**<value 30000-64900>** - Enter the port number here. This value must be between 30000 and 64900.

**timeout** - (Optional) Specifies the timeout period while waiting for a response from the remote device. A value of 1 to 65535 seconds can be specified. The default is 5 seconds.

**<sec 1-65535>** - Enter the timeout period value here. This value must be between 1 and 65535 seconds.

**probe** - (Optional) Specifies the number of probing. The range is from 1 to 9. If unspecified, the default value is 1.

**<value 1-9>** - Enter the probing number value here. This value must be between 1 and 9.

---

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

#### Example

Trace the routed path between the Switch and 10.48.74.121:

```
DGS-1510-28XMP/ME:admin# traceroute 10.48.74.121 probe 3
Command: traceroute 10.48.74.121 probe 3

 1  <10 ms.      10.12.73.254
 2  <10 ms.      10.19.68.1
 3  <10 ms.      10.48.74.121

Trace complete.
DGS-1510-28XMP/ME:admin#
```

## 75-2 traceroute6

**Description**

This command is used to trace the IPv6 routed path between the Switch and a destination end station.

**Format**

**traceroute6** <ipv6addr> {ttl <value 1-60> | port <value 30000-64900> | timeout <sec 1-65535> | probe <value 1-9>}

**Parameters**


---

<b>&lt;ipv6addr&gt;</b>	- Enter the IPv6 address of the destination end station.
<b>ttl</b>	- (Optional) Specifies the time to live value of the trace route request. This is the maximum number of routers that a trace route packet can pass. The <b>traceroute6</b> command will cross while seeking the network path between two devices. The range for the TTL is 1 to 60 hops.
<b>&lt;value 1-60&gt;</b>	- Enter the time to live value here. This value must be between 1 and 60.
<b>port</b>	- (Optional) Specifies the port number. The value range is from 30000 to 64900.
<b>&lt;value 30000-64900&gt;</b>	- Enter the port number here. This value must be between 30000 and 64900.
<b>timeout</b>	- (Optional) Specifies the timeout period while waiting for a response from the remote device. A value of 1 to 65535 seconds can be specified. The default is 5 seconds.
<b>&lt;sec 1-65535&gt;</b>	- Enter the timeout period value here. This value must be between 1 and 65535 seconds.
<b>probe</b>	- (Optional) Specifies the number of probing. The range is from 1 to 9. If unspecified, the default value is 1.
<b>&lt;value 1-9&gt;</b>	- Enter the probing number value here. This value must be between 1 and 9.

---

**Restrictions**

Only Administrators, Operators and Power-Users can issue this command.

**Example**

Trace the IPv6 routed path between the Switch and 3000::1:

```
DGS-1510-28XMP/ME:admin# traceroute6 3000::1 probe 3
Command: traceroute6 3000::1 probe 3

 1  <10 ms.      1345:142::11
 2  <10 ms.      2011:14::100
 3  <10 ms.      3000::1

Trace complete.
DGS-1510-28XMP/ME:admin#
```

Trace the IPv6 routed path between the Switch and 1210:100::11 with port 40000:

```
DGS-1510-28XMP/ME:admin# traceroute6 1210:100::11 port 40000
```

```
Command: traceroute6 1210:100::11 port 40000
```

```
1 <10 ms.    3100::25
2 <10 ms.    4130::100
3 <10 ms.    1210:100::11
```

```
Trace complete.
```

```
DGS-1510-28XMP/ME:admin#
```

## Chapter 76 Traffic Control Command List

---

```
config traffic control [<portlist> | all] {broadcast [enable | disable] | multicast [enable | disable] | unicast [enable |
  disable] | action [drop | shutdown] | threshold <value 0-255000> | countdown [<min 0> | <min 3-30> | disable]
  | time_interval <sec 5-600>}
```

---

```
config traffic trap [none | storm_occurred | storm_cleared | both]
```

---

```
show traffic control {<portlist>}
```

---

```
config traffic control log state [enable | disable]
```

---

```
config traffic control auto_recover_time [<min 0> | <min 1-65535>]
```

---

### 76-1 config traffic control

#### Description

This command is used to configure broadcast/ multicast/ unicast packet storm control. Shutdown mode is provided to monitor the traffic rate in addition to the storm control drop mode. If traffic rate is too high, this port will be shut down.

#### Format

```
config traffic control [<portlist> | all] {broadcast [enable | disable] | multicast [enable | disable] | unicast
[enable | disable] | action [drop | shutdown] | threshold <value 0-255000> | countdown [<min 0> | <min 3-
30> | disable] | time_interval <sec 5-600>}
```

#### Parameters

---

**<portlist>** - Enter a range of ports to be configured.

---

**all** - Specifies that all the ports will be used for this configuration.

---

**broadcast** - (Optional) Specifies to enable or disable broadcast storm control.

**enable** - Specifies that broadcast storm control will be enabled.

**disable** - Specifies that broadcast storm control will be disabled.

---

**multicast** - (Optional) Specifies to enable or disable multicast storm control.

**enable** - Specifies that multicast storm control will be enabled.

**disable** - Specifies that multicast storm control will be disabled.

---

**unicast** - (Optional) Specifies to enable or disable unknown packet storm control. ( Supported for drop mode only)

**enable** - Specifies that unicast storm control will be enabled.

**disable** - Specifies that unicast storm control will be disabled.

---

**action** - (Optional) Specifies for storm control action, shutdown or drop mode. Shutdown mode is a function of software, drop mode is implemented by the chip. If shutdown mode is specified, it is necessary to configure values for the countdown and time\_interval parameters.

**drop** - Specifies that the action applied will be drop mode.

**shutdown** - Specifies that the action applied will be shutdown mode.

---

**threshold** - (Optional) Specifies the upper threshold, at which point the specified storm control is triggered.

**<value 0-255000>** - Enter the upper threshold value here. This is the number of broadcast/multicast packets per second received by the Switch that will trigger the storm traffic control measure. The threshold is expressed as PPS (packets per second) and must be an unsigned integer. This value must be between 0 and 255000.

---

**countdown** - (Optional) Specifies timer for shutdown mode. If a port enters the shutdown Rx state and this timer runs out, port will be shutdown forever. The parameter is not applicable if “drop” (mode) is specified for the “action” parameter.

**<min 0>** - Enter 0 to disable the forever state, which means that the port will not enter the shutdown forever state.

**<min 3-30>** - Enter the countdown timer value here. This value must be between 3 and 30.

**disable** - Specifies that the countdown timer will be disabled.

**time\_interval** - (Optional) Specifies the sampling interval of received packet counts. The possible value will be m-n seconds. The parameter is not applicable if “drop” (mode) is specified for the “action” parameter.

**<sec 5-600>** - Enter the time interval value here. This value must be between 5 and 600.

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure the parameters so that the traffic control status is enabled on ports 1-12:

```
DGS-1510-28XMP/ME:admin# config traffic control 1-12 broadcast enable action shutdown
threshold 1 countdown 5 time_interval 10
Command: config traffic control 1-12 broadcast enable action shutdown threshold
1 countdown 5 time_interval 10

Success.

DGS-1510-28XMP/ME:admin#
```

## 76-2 config traffic trap

### Description

This command is used to configure trap modes.

**Occurred Mode:** This trap is sent when a packet storm is detected by the packet storm mechanism.

**Cleared Mode:** This trap is sent when the packet storm is cleared by the packet storm mechanism.

### Format

**config traffic trap [none | storm\_occurred | storm\_cleared | both]**

### Parameters

**none** - Specifies that no trap state is specified for storm control.

**storm\_occurred** - Specifies that occurred mode is enabled and cleared mode is disabled.

**storm\_cleared** - Specifies that occurred mode is disabled and cleared mode is enabled.

**both** - Specifies that both occurred and cleared modes are enabled.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.



## Example

To enable both the occurred mode and cleared mode traffic control traps:

```
DGS-1510-28XMP/ME:admin# config traffic trap both
Command: config traffic trap both

Success.

DGS-1510-28XMP/ME:admin#
```

## 76-3 show traffic control

### Description

This command is used to display the current traffic control settings.

### Format

**show traffic control {<portlist>}**

### Parameters

---

**<portlist>** - (Optional) Specifies the range of ports to be shown.

---

If no parameter is specified, the system will display the packet storm control configuration for all ports.

---

### Restrictions

None.

### Example

To display the traffic control parameters for ports 1 to 10:

```
DGS-1510-28XMP/ME:admin# show traffic control 1-10
```

```
Command: show traffic control 1-10
```

```
Traffic Control Trap           : [Both]
```

```
Traffic Control Log           : Enabled
```

```
Traffic Control Auto Recover Time: 0 Minutes
```

Port	Thres hold	Broadcast Storm	Multicast Storm	Unicast Storm	Action	Count down	Time Interval	Shutdown Forever
1	1	Enabled	Disabled	Disabled	shutdown	5	10	
2	1	Enabled	Disabled	Disabled	shutdown	5	10	
3	1	Enabled	Disabled	Disabled	shutdown	5	10	
4	1	Enabled	Disabled	Disabled	shutdown	5	10	
5	1	Enabled	Disabled	Disabled	shutdown	5	10	
6	1	Enabled	Disabled	Disabled	shutdown	5	10	
7	1	Enabled	Disabled	Disabled	shutdown	5	10	
8	1	Enabled	Disabled	Disabled	shutdown	5	10	
9	1	Enabled	Disabled	Disabled	shutdown	5	10	
10	1	Enabled	Disabled	Disabled	shutdown	5	10	

```
DGS-1510-28XMP/ME:admin#
```

## 76-4 config traffic control log state

### Description

This command is used to configure the traffic control log state. When the log state is enabled, traffic control states are logged when a storm occurs and when a storm is cleared. If the log state is disabled, traffic control events are not logged.



**NOTE:** The log state is only applicable for shutdown mode. Since shutdown mode only support broadcast and multicast storm control, doesn't support unicast storm control. The log only generate for broadcast and multicast storm control.

### Format

```
config traffic control log state [enable | disable]
```

### Parameters

---

**enable** - Specifies that both occurred and cleared are logged.

---

**disable** - Specifies that neither occurred nor cleared is logged.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure the traffic log state on the Switch:

```
DGS-1510-28XMP/ME:admin# config traffic control log state enable
Command: config traffic control log state enable

Success.

DGS-1510-28XMP/ME:admin#
```

## 76-5 config traffic control auto\_recover\_time

### Description

This command is used to configure the traffic auto recover time that allowed for a port to recover from shutdown forever status.

### Format

**config traffic control auto\_recover\_time [<min 0> | <min 1-65535>]**

### Parameters

**auto\_recover\_time** - Specifies the time allowed for auto-recovery from shutting down a port. The default value is 0, so no auto recovery is possible; the port remains in shutdown forever mode. This requires manual entry of the **config ports [ <portlist> | all ] state enable** command to return the port to a forwarding state. The default value is 0, which means disable auto recover mode, shutdown forever.

**<min 0>** - Enter 0 to disable the auto recovery time.

**<min 1-65535>** - Enter the auto recovery time value here. This value must be between 1 and 65535.

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To configure the auto recover time to 5 minutes:

```
DGS-1510-28XMP/ME:admin# config traffic control auto_recover_time 5
Command: config traffic control auto_recover_time 5

Success.

DGS-1510-28XMP/ME:admin#
```

# Chapter 77 Traffic Segmentation Command List

---

**config traffic\_segmentation** [<portlist> | all] forward\_list [null | all | <portlist>]

---

**show traffic\_segmentation** {<portlist>}

---

## 77-1 config traffic\_segmentation

### Description

This command is used to configure the traffic segmentation.

### Format

**config traffic\_segmentation** [<portlist> | all] forward\_list [null | all | <portlist>]

### Parameters

---

**<portlist>** - Enter a range of ports to be configured.

---

**all** - Specifies that all the ports will be used for this configuration.

---

**forward\_list** - Specifies a range of port forwarding domain.

**null** - Specifies a range of port forwarding domain is null.

**all** - Specifies all ports to be configured.

**<portlist>** - Enter a range of ports to be configured.

---

### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

### Example

To configure traffic segmentation:

```
DGS-1510-28XMP/ME:admin# config traffic_segmentation 1-10 forward_list 11-15
```

```
Command: config traffic_segmentation 1-10 forward_list 11-15
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```

## 77-2 show traffic\_segmentation

### Description

This command is used to display current traffic segmentation table.

**Format**

```
show traffic_segmentation {<portlist>}
```

**Parameters**

---

<portlist> - (Optional) Enter a range of ports to be displayed.

---

If no parameter is specified, the system will display all current traffic segmentation tables.

---

**Restrictions**

None.

**Example**

To display traffic segmentation table:

```
DGS-1510-28XMP/ME:admin# show traffic_segmentation 1-10
Command: show traffic_segmentation 1-10
```

```
Traffic Segmentation Table
```

```
Port  Forward Portlist
```

```
-----
1      11-15
2      11-15
3      11-15
4      11-15
5      11-15
6      11-15
7      11-15
8      11-15
9      11-15
10     11-15
```

```
DGS-1510-28XMP/ME:admin#
```

## Chapter 78 Trusted Host Command List

---

```
create trusted_host [<ipaddr> | network <network_address>] {snmp | telnet | ssh | http | https | ping}
delete trusted_host [ipaddr <ipaddr> | network <network_address> | all]
config trusted_host [<ipaddr> | network <network_address>] [add | delete] {snmp | telnet | ssh | http | https | ping
| all}
show trusted_host
```

---

### 78-1 create trusted\_host

#### Description

This command is used to create the trusted host. The switch allows you to specify up to ten IP addresses that are allowed to manage the Switch via in-band SNMP or TELNET based management software. These IP addresses must be members of the Management VLAN. If no IP addresses are specified, then there is nothing to prevent any IP address from accessing the Switch, provided the user knows the Username and Password.

When the access interface is not specified, the trusted host will be created for all interfaces.

#### Format

```
create trusted_host [<ipaddr> | network <network_address>] {snmp | telnet | ssh | http | https | ping}
```

#### Parameters

---

**<ipaddr>** - Enter the IP address of the trusted host.

**network** - Specifies the network address of the trusted network. The form of network address is xxx.xxx.xxx.xxx/y.

**<network\_address>** - Enter the network address used here.

---

**snmp** - (Optional) Specifies trusted host for SNMP.

---

**telnet** - (Optional) Specifies trusted host for TELNET.

---

**ssh** - (Optional) Specifies trusted host for SSH.

---

**http** - (Optional) Specifies trusted host for HTTP.

---

**https** - (Optional) Specifies trusted host for HTTPS.

---

**ping** - (Optional) Specifies trusted host for PING.

---

#### Restrictions

Only Administrators and Operators can issue this command.

#### Example

To create the trusted host:

```
DGS-1510-28XMP/ME:admin# create trusted_host 10.48.74.121
Command: create trusted_host 10.48.74.121

Success.

DGS-1510-28XMP/ME:admin#
```

## 78-2 delete trusted\_host

### Description

This command is used to delete a trusted host entry made using the **create trusted\_host** command above.

### Format

**delete trusted\_host [ipaddr <ipaddr> | network <network\_address> | all]**

### Parameters

---

**ipaddr** - Specifies the IP address of the trusted host.

**<ipaddr>** - Enter the IP address used for this configuration here.

---

**network** - Specifies the network address of the trusted network.

**<network\_address>** - Enter the network address used for this configuration here.

---

**all** - Specifies that all trusted hosts will be deleted.

---

### Restrictions

Only Administrators and Operators can issue this command.

### Example

To delete the trusted host:

```
DGS-1510-28XMP/ME:admin# delete trusted_host ipaddr 10.48.74.121
Command: delete trusted_host ipaddr 10.48.74.121

Success.

DGS-1510-28XMP/ME:admin#
```

## 78-3 config trusted\_host

### Description

This command is used to configure the access interfaces for the trusted host.

### Format

**config trusted\_host [<ipaddr> | network <network\_address>] [add | delete] {snmp | telnet | ssh | http | https | ping | all}**

## Parameters

**<ipaddr>** - Enter the IP address of the trusted host.

**network** - Specifies the network address of the trusted network. The form of network address is xxx.xxx.xxx.xxx/y.

**<network\_address>** - Enter the network address used here.

**add** - Specifies to add interfaces for that trusted host.

**delete** - Specifies to delete interfaces for that trusted host.

**snmp** - (Optional) Specifies trusted host for SNMP.

**telnet** - (Optional) Specifies trusted host for TELENT.

**ssh** - (Optional) Specifies trusted host for SSH.

**http** - (Optional) Specifies trusted host for HTTP.

**https** - (Optional) Specifies trusted host for HTTPS.

**ping** - (Optional) Specifies trusted host for PING.

**all** - (Optional) Specifies trusted host for all application.

## Restrictions

Only Administrators and Operators can issue this command.

## Example

To configure the trusted host:

```
DGS-1510-28XMP/ME:admin# config trusted_host 10.48.74.121 add ssh telnet
Command: config trusted_host 10.48.74.121 add ssh telnet

Success.

DGS-1510-28XMP/ME:admin#
```

## 78-4 show trusted\_host

### Description

This command is used to display a list of trusted hosts entered on the Switch using the **create trusted\_host** command above.

### Format

**show trusted\_host**

### Parameters

None.

### Restrictions

None.



## Example

To display trusted host:

```
DGS-1510-28XMP/ME:admin# show trusted_host
Command: show trusted_host

Management Stations

IP Address                               Access Interface
-----
10.48.74.121                             SNMP Telnet SSH HTTP HTTPS Ping

Total Entries: 1

DGS-1510-28XMP/ME:admin#
```

## Chapter 79 Unicast Routing Command List

---

**create iproute** [default] <ipaddr> {<metric 1-65535>}

---

**delete iproute** [default]

---

**show iproute** {<network\_address>} {static}

### 79-1 create iproute

#### Description

This command is used to create an IP static route.

#### Format

**create iproute** [default] <ipaddr> {<metric 1-65535>}

#### Parameters

---

**default** - Specifies to create an IP default route (0.0.0.0/0).

---

<ipaddr> - Enter the IP address for the next hop router.

---

<metric 1-65535> - (Optional) Enter the metric value here. This value must be between 1 and 65535. The default setting is 1.

#### Restrictions

Only Administrators, Operators and Power-Users can issue this command.

#### Example

To add an IP default route:

```
DGS-1510-28XMP/ME:admin# create iproute default 10.1.1.254
Command: create iproute default 10.1.1.254
```

```
Success.
```

```
DGS-1510-28XMP/ME:admin#
```

### 79-2 delete iproute

#### Description

This command is used to delete an IP route entry from the Switch's IP routing table.

#### Format

**delete iproute** [default]

## Parameters

---

**default** - Specifies to delete an IP default route (0.0.0.0/0).

---

## Restrictions

Only Administrators, Operators and Power-Users can issue this command.

## Example

To delete an IP default route:

```
DGS-1510-28XMP/ME:admin# delete iproute default 10.1.1.254
Command: delete iproute default 10.1.1.254

Success.

DGS-1510-28XMP/ME:admin#
```

## 79-3 show iproute

### Description

This command is used to display the Switch's current IP routing table.

### Format

**show iproute {<network\_address>} {static}**

## Parameters

---

**<network\_address>** - (Optional) Enter the destination network address of the route to be displayed.

---

**static** - (Optional) Specifies to display only static routes. One static route may be active or inactive.

---

## Restrictions

None.

## Example

To display the contents of the IP routing table:

```
DGS-1510-28XMP/ME:admin# show iproute
```

```
Command: show iproute
```

```
Routing Table
```

IP Address/Netmask	Gateway	Interface	Cost	Protocol
-----	-----	-----	-----	-----
10.1.1.0/24	0.0.0.0	System	1	Local
192.168.1.0/24	0.0.0.0	ipl	1	Local

```
Total Entries : 2
```

```
DGS-1510-28XMP/ME:admin#
```

## Chapter 80 VLAN Trunking Command List

---

**enable vlan\_trunk**

---

**disable vlan\_trunk**

---

**config vlan\_trunk** ports [<portlist> | all] | state [enable | disable]

---

**show vlan\_trunk**

---

---

### 80-1 enable vlan\_trunk

#### Description

This command is used to enable the VLAN trunk function. When the VLAN trunk function is enabled, the VLAN trunk ports shall be able to forward all tagged frames with any VID.

#### Format

**enable vlan\_trunk**

#### Parameters

None.

#### Restrictions

Only Administrators can issue this command.

#### Example

To enable the VLAN Trunk:

```
DGS-1510-28XMP/ME:admin# enable vlan_trunk
Command: enable vlan_trunk

Success.

DGS-1510-28XMP/ME:admin#
```

### 80-2 disable vlan\_trunk

#### Description

This command is used to disable the VLAN trunk function.

#### Format

**disable vlan\_trunk**

#### Parameters

None.

## Restrictions

Only Administrators can issue this command.

## Example

To disable the VLAN Trunk:

```
DGS-1510-28XMP/ME:admin# disable vlan_trunk
Command: disable vlan_trunk

Success.

DGS-1510-28XMP/ME:admin#
```

## 80-3 config vlan\_trunk

### Description

This command is used to configure a port as a VLAN trunk port. By default, none of the port is a VLAN trunk port.

If the user enables the global VLAN trunk function and configure the VLAN trunk ports, then the trunk port will be member port of all VLANs. That is, if a VLAN is already configured by the user, but the trunk port is not member port of that VLAN, this trunk port will automatically become tagged member port of that VLAN. If a VLAN is not created yet, the VLAN will be automatically created, and the trunk port will become tagged member of this VLAN.

When the user disables the VLAN trunk globally, all VLANs automatically created by VLAN Trunk enabled shall be destroyed, and all the automatically added port membership will be removed.

A VLAN trunk port and a non-VLAN trunk port cannot be grouped as an aggregated link. To change the VLAN trunk setting for an aggregated link, the user must apply the command to the master port. However, this setting will disappear as the aggregated link is destroyed, and the VLAN trunk setting of the individual port will follow the original setting of the port.

If the command is applied to link aggregation member port excluding the master, the command will be rejected.

The ports with different VLAN configurations are not allowed to form an aggregated link. However, if they are specified as VLAN trunk port, they are allowed to form an aggregated link.

For a VLAN trunk port, the VLANs on which the packets can be by passed will not be advertised by GVRP on this port. However, since the traffic on these VLANs are forwarded, this VLAN trunk port should participate the MSTP instances corresponding to these VLAN.

### Format

```
config vlan_trunk ports [<portlist> | all] | state [enable | disable]
```

### Parameters

---

**<portlist>** - Enter a list of ports used for the configuration here.

---

**all** - Specifies that all the ports will be used for this configuration.

---

**state** - Specifies that the port is a VLAN trunk port or not.

**enable** - Specifies that the port is a VLAN trunk port.

**disable** - Specifies that the port is not a VLAN trunk port.

---

## Restrictions

Only Administrators can issue this command.

## Example

To configure VLAN trunk ports:

```
DGS-1510-28XMP/ME:admin# config vlan_trunk ports 1-5 state enable
Command: config vlan_trunk ports 1-5 state enable

Success.

DGS-1510-28XMP/ME:admin#
```

Port 6 is LA-1 member port; port 7 is LA-2 master port:

```
DGS-1510-28XMP/ME:admin# config vlan_trunk ports 6-7 state enable
Command: config vlan_trunk ports 6-7 state enable

Success.

DGS-1510-28XMP/ME:admin# config vlan_trunk ports 7 state disable
Command: config vlan_trunk ports 7 state disable

Success.

DGS-1510-28XMP/ME:admin# config vlan_trunk ports 6-7 state disable
Command: config vlan_trunk ports 6-7 state disable

Success.

DGS-1510-28XMP/ME:admin#
```

Port 6 is LA-1 member port; port 7 is LA-1 master port:

```
DGS-1510-28XMP/ME:admin# config vlan_trunk ports 6-7 state enable
Command: config vlan_trunk ports 6-7 state enable

Success.

DGS-1510-28XMP/ME:admin#
```

Port 6, 7 have different VLAN configurations before enabling VLAN trunk.

Port 6 is LA-1 member port; port 7 is LA-1 master port.

```
DGS-1510-28XMP/ME:admin# config vlan_trunk ports 7 state disable
Command: config vlan_trunk ports 7 state disable

Success.

DGS-1510-28XMP/ME:admin#
```

Port 6, 7 have the same VLAN configuration before enabling VLAN trunk.

Port 6 is LA-1 member port; port 7 is LA-1 master port.

```
DGS-1510-28XMP/ME:admin# config vlan_trunk ports 7 state disable
Command: config vlan_trunk ports 7 state disable

Success.

DGS-1510-28XMP/ME:admin# config vlan_trunk ports 6-7 state disable
Command: config vlan_trunk ports 6-7 state disable

Success.

DGS-1510-28XMP/ME:admin#
```

## 80-4 show vlan\_trunk

### Description

This command is used to show the VLAN trunk configuration.

### Format

**show vlan\_trunk**

### Parameters

None.

### Restrictions

None.

### Example

To show the VLAN Trunk information:

```
DGS-1510-28XMP/ME:admin# show vlan_trunk
Command: show vlan_trunk

VLAN Trunk Global Setting
-----
VLAN Trunk Status   : Disabled
VLAN Trunk Member Ports : 1-5

DGS-1510-28XMP/ME:admin#
```

The following example displays the VLAN information which will also display VLAN trunk setting:



```
DGS-1510-28XMP/ME:admin# show vlan
Command: show vlan

VLAN Trunk State      : Enabled
VLAN Trunk Member Ports : 1-5

VID      : 1          VLAN Name      : default
VLAN Type : Static    Advertisement : Enabled
Member Ports : 1-28
Static Ports  : 1-28
Current Tagged Ports :
Current Untagged Ports: 1-28
Static Tagged Ports  :
Static Untagged Ports : 1-28
Forbidden Ports      :

Total Static VLAN Entries: 1
Total GVRP VLAN Entries: 0

DGS-1510-28XMP/ME:admin#
```

## Chapter 81 Password Recovery Command List

---

**enable password\_recovery**

---

**disable password\_recovery**

---

**show password\_recovery**

---

---

81-1 enable password\_recovery

### Description

This command is used to enable the password recovery mode.

### Format

**enable password\_recovery**

### Parameters

None.

### Restrictions

Only Administrators can issue this command.

### Example

To enable the password recovery mode:

```
DGS-1510-28XMP/ME:admin# enable password_recovery
Command: enable password_recovery

Success.

DGS-1510-28XMP/ME:admin#
```

81-2 disable password\_recovery

### Description

This command is used to disable the password recovery mode.

### Format

**disable password\_recovery**

### Parameters

None.

## Restrictions

Only Administrators can issue this command.

## Example

To disable the password recovery mode:

```
DGS-1510-28XMP/ME:admin# disable password_recovery
Command: disable password_recovery

Success.

DGS-1510-28XMP/ME:admin#
```

## 81-3 show password\_recovery

### Description

This command is used to display the password recovery state.

### Format

**show password\_recovery**

### Parameters

None.

### Restrictions

Only Administrators can issue this command.

## Example

To display the password recovery state:

```
DGS-1510-28XMP/ME:admin# show password_recovery
Command: show password_recovery

Running Configuration   : Enabled
NV-RAM Configuration   : Enabled

DGS-1510-28XMP/ME:admin#
```

## Appendix A Password Recovery Procedure

This chapter describes the procedure for resetting passwords on D-Link switches. Authenticating any user who tries to access networks is necessary and important. The basic authentication method used to accept qualified users is through a local login, utilizing a Username and Password. Sometimes, passwords get forgotten or destroyed, so network administrators need to reset these passwords. This chapter explains how the Password Recovery feature can help network administrators reach this goal.

The following steps explain how to use the Password Recovery feature on D-Link devices to easily recover passwords.

### Complete these steps to reset the password:

1. For security reasons, the Password Recovery feature requires the user to physically access the device. Therefore this feature is only applicable when there is a direct connection to the console port of the device. It is necessary for the user needs to attach a terminal or PC with terminal emulation to the console port of the Switch.
2. Power on the Switch. After the 'Starting runtime image' message, the Switch will allow 2 seconds for the user to press the hotkey [^] (Shift + 6) to enter the "Password Recovery Mode." Once the Switch enters the "Password Recovery Mode," all ports on the Switch will be disabled and all port LEDs will be lit.

```

Boot Procedure                                     V1.00.001
-----
Power On Self Test ..... 100 %

MAC Address   : 00-01-02-E3-04-00
H/W Version   : A1

Please Wait, Loading V1.00.018 Runtime Image ..... 100 %
UART init ..... 100 %
Starting runtime image

```

```

Password Recovery Mode
>

```

3. In the "Password Recovery Mode" only the following commands can be used.

Command	Parameters
<b>reset config</b> <b>{force_agree}</b>	The <b>reset config</b> command resets the whole configuration back to the default values. If <b>force_agree</b> is specified, the configuration will reset to default without the user's agreement.
<b>reboot</b>	The <b>reboot</b> command exits the Reset Password Recovery Mode and restarts the Switch. A confirmation message will be displayed to allow the user to save the current settings.
<b>reset account</b>	The <b>reset account</b> command deletes all the previously created accounts.
<b>reset password</b> <b>{&lt;username&gt;}</b>	The <b>reset password</b> command resets the password of the specified user. If a username is not specified, the passwords of all users will be reset.
<b>show account</b>	The <b>show account</b> command displays all previously created accounts.

## Appendix B System Log Entries

The following table lists all possible entries and their corresponding meanings that will appear in the System Log of this Switch.

Category	Event Description	Log Information	Severity
<b>system</b>	System started up	System started up	Critical
	System warm start	System warm start	Critical
	System cold start	System cold start	Critical
	Configuration saved to flash	Configuration saved to flash by console (Username: <username>, IP: <ipaddr> )	Informational
	System log saved to flash	System log saved to flash by console (Username: <username>, IP: <ipaddr> )	Informational
	Configuration and log saved to flash	Configuration and log saved to flash by console (Username: <username>, IP: <ipaddr> )	Informational
	Redundant Power failed	Redundant Power failed	Critical
	Redundant Power is working	Redundant Power is working	Critical
	Side Fan failed	Right Side Fan 1 failed Right Side Fan 2 failed	Critical
	Side Fan recovered	Right Side Fan 1 recovered Right Side Fan 2 recovered	Critical
	Temperature sensor enters alarm state	Temperature sensor <sensorID> enters alarm state (current temperature: <temperature>)	Warning
	Temperature recovers to normal	Temperature sensor <sensorID> recovers to normal state (current temperature: <temperature>)	Informational
<b>up/down-load</b>	Firmware upgraded successfully	Firmware upgraded by console successfully (Username: <username>, IP: <ipaddr> )	Informational
	Firmware upgrade was unsuccessful	Firmware upgrade by console was unsuccessful! (Username: <username>, IP: <ipaddr> )	Warning
	Configuration successfully downloaded	Configuration successfully downloaded by console (Username: <username>, IP: <ipaddr> )	Informational
	Configuration download was unsuccessful	Configuration download by console was unsuccessful! (Username: <username>, IP: <ipaddr> )	Warning
	Configuration successfully uploaded	Configuration successfully uploaded by console (Username: <username>, IP: <ipaddr> )	Informational
	Configuration upload was unsuccessful	Configuration upload by console was unsuccessful! (Username: <username>, IP: <ipaddr> )	Warning
	Log message successfully uploaded	Log message successfully uploaded by console (Username: <username>, IP: <ipaddr> )	Informational
	Log message upload was unsuccessful	Log message upload by console was unsuccessful! (Username: <username>, IP: <ipaddr> )	Warning
	Firmware successfully uploaded	Firmware successfully uploaded by console (Username: <username>, IP: <ipaddr> )	Informational
	Firmware upload was	Firmware upload by console was unsuccessful!	Warning

	unsuccessful	(Username: <username>, IP: <ipaddr> )	
<b>Interface</b>	Port link up	Port <portNum> link up, <link state>	Informational
	Port link down	Port <portNum> link down	Informational
<b>Console</b>	Successful login through Console	Successful login through Console (Username: <username>)	Informational
	Login failed through Console	Login failed through Console (Username: <username>)	Warning
	Logout through Console	Logout through Console (Username: <username>)	Informational
	Console session timed out	Console session timed out (Username: <username>)	Informational
<b>Web</b>	Successful login through Web	Successful login through Web (Username: <username>, IP: <ipaddr> )	Informational
	Login failed through Web	Login failed through Web (Username: <username>, IP: <ipaddr> )	Warning
	Logout through Web	Logout through Web (Username: <username>, IP: <ipaddr>, )	Informational
	Web session timed out	Web session timed out (Username: <username>, IP: <ipaddr>, )	Informational
	Successful login through Web(SSL)	Successful login through Web(SSL) (Username: <username>, IP: <ipaddr>, )	Informational
	Login failed through Web(SSL)	Login failed through Web(SSL) (Username: <username>, IP: <ipaddr>, )	Warning
	Logout through Web(SSL)	Logout through Web(SSL) (Username: <username>, IP: <ipaddr>, )	Informational
	Web(SSL) session timed out	Web(SSL) session timed out (Username: <username>, IP: <ipaddr>, )	Informational
<b>Telnet</b>	Successful login through Telnet	Successful login through Telnet (Username: <username>, IP: <ipaddr>, )	Informational
	Login failed through Telnet	Login failed through Telnet (Username: <username>, IP: <ipaddr>, )	Warning
	Logout through Telnet	Logout through Telnet (Username: <username>, IP: <ipaddr>, )	Informational
	Telnet session timed out	Telnet session timed out (Username: <username>, IP: <ipaddr>, )	Informational
<b>SNMP</b>	SNMP request received with invalid community string	SNMP request received from <ipAddress> with invalid community string!	Informational
<b>STP</b>	Topology changed	Topology changed (Instance:<InstanceID>, Port:<portNum>,MAC:<macaddr>)	notice
	Enable spanning tree protocol	Spanning Tree Protocol is enabled	Informational
	Disable spanning tree protocol	Spanning Tree Protocol is disabled	Informational
	New root bridge	CIST New Root bridge selected ( MAC: <macaddr> Priority :<value>)	Informational
	New root bridge	CIST Region New Root bridge selected ( MAC: <macaddr> Priority :<value>)	Informational
	New root bridge	MSTI Region New Root bridge selected (Instance:<InstanceID>, MAC: <macaddr> Priority :<value>)	Informational
	New root bridge	New Root bridge selected ( MAC: <macaddr>)	Informational

		Priority :<value>)	
	New root port	New root port selected (Instance:<InstanceID>, Port:<portNum>)	notice
	Spanning Tree port status changed	Spanning Tree port status changed (Instance:<InstanceID>, Port:<portNum>) <old_status> - > <new_status>	notice
	Spanning Tree port role changed	Spanning Tree port role changed (Instance:<InstanceID>, Port:<portNum>) <old_role> -> <new_role>	Informational
	Spanning Tree instance created	Spanning Tree instance created (Instance:<InstanceID>)	Informational
	Spanning Tree instance deleted	Spanning Tree instance deleted (Instance:<InstanceID>)	Informational
	Spanning Tree Version changed	Spanning Tree version changed (new version:<new_version>)	Informational
	Spanning Tree MST configuration ID name and revision level changed	Spanning Tree MST configuration ID name and revision level changed (name:<name> ,revision level <revision_level>)	Informational
	Spanning Tree MST configuration ID VLAN mapping table added	Spanning Tree MST configuration ID VLAN mapping table changed (instance: <InstanceID> add vlan <startvlanid> [- <endvlanid>])	Informational
	Spanning Tree MST configuration ID VLAN mapping table deleted	Spanning Tree MST configuration ID VLAN mapping table changed (instance: <InstanceID> delete vlan <startvlanid> [- <endvlanid>])	Informational
<b>DoS</b>	<p>Spoofing attack</p> <ol style="list-style-type: none"> <li>1. The source ip is same as switch's interface ip but the source mac is different</li> <li>2. Source ip is the same as the switch's IP in ARP packet</li> <li>3. Self IP packet detected</li> </ol>	Possible spoofing attack from (IP: <ipaddr> MAC: <macaddr> Port: <portNum>)	Critical
	The DoS attack is blocked	<dos_name> is blocked from (IP: <ipaddr> Port: <portNum>)	Critical
<b>SSH</b>	Successful login through SSH	Successful login through SSH (Username: <username>, IP: <ipaddr> )	Informational
	Login failed through SSH	Login failed through SSH (Username: <username>, IP: <ipaddr>, )	Warning
	Logout through SSH	Logout through SSH (Username: <username>, IP: <ipaddr> )	Informational
	SSH session timed out	SSH session timed out (Username: <username>, IP: <ipaddr>)	Informational
	SSH server is enabled	SSH server is enabled	Informational
	SSH server is disabled	SSH server is disabled	Informational
<b>AAA</b>	Authentication Policy is enabled	Authentication Policy is enabled (Module: AAA)	Informational
	Authentication Policy is disabled	Authentication Policy is disabled (Module: AAA)	Informational
	Successful login through Console authenticated by AAA local method	Successful login through Console authenticated by AAA local method (Username: <username>)	Informational
	Login failed through Console authenticated by AAA local method	Login failed through Console authenticated by AAA local method (Username: <username>)	Warning

	Successful login through Web authenticated by AAA local method	Successful login through Web from <userIP> authenticated by AAA local method (Username: <username> )	Informational
	Login failed through Web authenticated by AAA local method	Login failed through Web from <userIP> authenticated by AAA local method (Username: <username> )	Warning
	Successful login through Web(SSL) authenticated by AAA local method	Successful login through Web(SSL) from <userIP> authenticated by AAA local method (Username: <username> )	Informational
	Login failed through Web(SSL) authenticated by AAA local method	Login failed through Web(SSL) from <userIP> authenticated by AAA local method (Username: <username>)	Warning
	Successful login through Telnet authenticated by AAA local method	Successful login through Telnet from <userIP> authenticated by AAA local method (Username: <username>, )	Informational
	Login failed through Telnet authenticated by AAA local method	Login failed through Telnet from <userIP> authenticated by AAA local method (Username: <username> )	Warning
	Successful login through SSH authenticated by AAA local method	Successful login through SSH from <userIP> authenticated by AAA local method (Username: <username> )	Informational
	Login failed through SSH authenticated by AAA local method	Login failed through SSH from <userIP> authenticated by AAA local method (Username: <username>)	Warning
	Successful login through Console authenticated by AAA none method	Successful login through Console authenticated by AAA none method (Username: <username>)	Informational
	Successful login through Web authenticated by AAA none method	Successful login through Web from <userIP> authenticated by AAA none method (Username: <username> )	Informational
	Successful login through Web(SSL) authenticated by AAA none method	Successful login through Web(SSL) from <userIP> authenticated by AAA none method (Username: <username> )	Informational
	Successful login through Telnet authenticated by AAA none method	Successful login through Telnet from <userIP> authenticated by AAA none method (Username: <username> )	Informational
	Successful login through SSH authenticated by AAA none method	Successful login through SSH from <userIP> authenticated by AAA none (Username: <username> )	Informational
	Successful login through Console authenticated by AAA server	Successful login through Console authenticated by AAA server <serverIP> (Username: <username>)	Informational
	Login failed through Console authenticated by AAA server	Login failed through Console authenticated by AAA server <serverIP> (Username: <username>)	Warning
	Login failed through Console due to AAA server timeout or improper configuration	Login failed through Console due to AAA server timeout or improper configuration (Username: <username>)	Warning
	Successful login through Web authenticated by AAA server	Successful login through Web from <userIP> authenticated by AAA server <serverIP> (Username: <username>)	Informational
	Login failed through Web authenticated by AAA server	Login failed through Web from <userIP> authenticated by AAA server <serverIP> (Username: <username> )	Warning
	Login failed through Web due to AAA server timeout or improper	Login failed through Web from <userIP> due to AAA server timeout or improper configuration (Username:	Warning



	configuration	<username> )	
	Successful login through Web(SSL) authenticated by AAA server	Successful login through Web(SSL) from <userIP> authenticated by AAA server <serverIP> (Username: <username> )	Informational
	Login failed through Web(SSL) authenticated by AAA server	Login failed through Web(SSL) from <userIP> authenticated by AAA server <serverIP> (Username: <username> )	Warning
	Login failed through Web(SSL) due to AAA server timeout or improper configuration	Login failed through Web(SSL) from <userIP> due to AAA server timeout or improper configuration (Username: <username> )	Warning
	Successful login through Telnet authenticated by AAA server	Successful login through Telnet from <userIP> authenticated by AAA server <serverIP> (Username: <username> )	Informational
	Login failed through Telnet authenticated by AAA server	Login failed through Telnet from <userIP> authenticated by AAA server <serverIP> (Username: <username> )	Warning
	Login failed through Telnet due to AAA server timeout or improper configuration	Login failed through Telnet from <userIP> due to AAA server timeout or improper configuration (Username: <username> )	Warning
	Successful login through SSH authenticated by AAA server	Successful login through SSH from <userIP> authenticated by AAA server <serverIP> (Username: <username> )	Informational
	Login failed through SSH authenticated by AAA server	Login failed through SSH from <userIP> authenticated by AAA server <serverIP> (Username: <username> )	Warning
	Login failed through SSH due to AAA server timeout or improper configuration	Login failed through SSH from <userIP> due to AAA server timeout or improper configuration (Username: <username> )	Warning
	Successful Enable Admin through Console authenticated by AAA local_enable method	Successful Enable Admin through Console authenticated by AAA local_enable method (Username: <username> )	Informational
	Enable Admin failed through Console authenticated by AAA local_enable method	Enable Admin failed through Console authenticated by AAA local_enable method (Username: <username> )	Warning
	Successful Enable Admin through Web authenticated by AAA local_enable method	Successful Enable Admin through Web from <userIP> authenticated by AAA local_enable method (Username: <username> )	Informational
	Enable Admin failed through Web authenticated by AAA local_enable method	Enable Admin failed through Web from <userIP> authenticated by AAA local_enable method (Username: <username> )	Warning
	Successful Enable Admin through Web(SSL) authenticated by AAA local_enable method	Successful Enable Admin through Web(SSL) from <userIP> authenticated by AAA local_enable method (Username: <username>, )	Informational
	Enable Admin failed through Web(SSL) authenticated by AAA local_enable method	Enable Admin failed through Web(SSL) from <userIP> authenticated by AAA local_enable method (Username: <username> )	Warning
	Successful Enable Admin through Telnet authenticated by AAA local_enable method	Successful Enable Admin through Telnet from <userIP> authenticated by AAA local_enable method (Username: <username> )	Informational
	Enable Admin failed through Telnet authenticated by AAA local_enable method	Enable Admin failed through Telnet from <userIP> authenticated by AAA local_enable method (Username: <username> )	Warning
	Successful Enable Admin through SSH authenticated by AAA local_enable method	Successful Enable Admin through SSH from <userIP> authenticated by AAA local (Username: <username> )	Informational

	Enable Admin failed through SSH authenticated by AAA local_enable method	Enable Admin failed through <Telnet or Web or SSH> from <userIP> authenticated by AAA local_enable method (Username: <username> )	Warning
	Successful Enable Admin through Console authenticated by AAA none method	Successful Enable Admin through Console authenticated by AAA none method (Username: <username>)	Informational
	Successful Enable Admin through Web authenticated by AAA none method	Successful Enable Admin through Web from <userIP> authenticated by AAA none method (Username: <username> )	Informational
	Successful Enable Admin through Web(SSL) authenticated by AAA none method	Successful Enable Admin through Web(SSL) from <userIP> authenticated by AAA none method (Username: <username>)	Informational
	Successful Enable Admin through Telnet authenticated by AAA none method	Successful Enable Admin through Telnet from <userIP> authenticated by AAA none method (Username: <username>)	Informational
	Successful Enable Admin through SSH authenticated by AAA none method	Successful Enable Admin through SSH from <userIP> authenticated by AAA none (Username: <username> )	Informational
	Successful Enable Admin through Console authenticated by AAA server	Successful Enable Admin through Console authenticated by AAA server <serverIP> (Username: <username>)	Informational
	Enable Admin failed through Console authenticated by AAA server	Enable Admin failed through Console authenticated by AAA server <serverIP> (Username: <username>)	Warning
	Enable Admin failed through Console due to AAA server timeout or improper configuration	Enable Admin failed through Console due to AAA server timeout or improper configuration (Username: <username>)	Warning
	Successful Enable Admin through Web authenticated by AAA server	Successful Enable Admin through Web from <userIP> authenticated by AAA server <serverIP> (Username: <username> )	Informational
	Enable Admin failed through Web authenticated by AAA server	Enable Admin failed through Web from <userIP> authenticated by AAA server <serverIP> (Username: <username> )	Warning
	Enable Admin failed through Web due to AAA server timeout or improper configuration	Enable Admin failed through Web from <userIP> due to AAA server timeout or improper configuration (Username: <username>)	Warning
	Successful Enable Admin through Web(SSL) authenticated by AAA server	Successful Enable Admin through Web(SSL) from <userIP> authenticated by AAA server <serverIP> (Username: <username> )	Informational
	Enable Admin failed through Web(SSL) authenticated by AAA server	Enable Admin failed through Web(SSL) from <userIP> authenticated by AAA server <serverIP> (Username: <username> )	Warning
	Enable Admin failed through Web(SSL) due to AAA server timeout or improper configuration	Enable Admin failed through Web(SSL) from <userIP> due to AAA server timeout or improper configuration (Username: <username>)	Warning
	Successful Enable Admin through Telnet authenticated by AAA server	Successful Enable Admin through Telnet from <userIP> authenticated by AAA server <serverIP> (Username: <username>)	Informational
	Enable Admin failed through Telnet authenticated by AAA server	Enable Admin failed through Telnet from <userIP> authenticated by AAA server <serverIP> (Username: <username> )	Warning
	Enable Admin failed through Telnet due to AAA server timeout or improper configuration	Enable Admin failed through Telnet from <userIP> due to AAA server timeout or improper configuration (Username: <username>)	Warning

	Successful Enable Admin through SSH authenticated by AAA server	Successful Enable Admin through SSH from <userIP> authenticated by AAA server <serverIP> (Username: <username> )	Informational
	Enable Admin failed through SSH authenticated by AAA server	Enable Admin failed through SSH from <userIP> authenticated by AAA server <serverIP> (Username: <username> )	Warning
	Enable Admin failed through SSH due to AAA server timeout or improper configuration	Enable Admin failed through SSH from <userIP> due to AAA server timeout or improper configuration (Username: <username> )	Warning
	AAA server timed out	AAA server <serverIP> (Protocol: <protocol>) connection failed	Warning
	AAA server ACK error	AAA server <serverIP> (Protocol: <protocol>) response is wrong	Warning
	AAA does not support this functionality	AAA doesn't support this functionality	Informational
<b>Port security</b>	port security is exceeded to its maximum learning size and will not learn any new address	Port security violation (MAC address:<macaddr> on port:<portNum>)	Warning
<b>IMPB</b>	Unauthenticated IP address encountered and discarded by ip IP-MAC port binding	Unauthenticated IP-MAC address and discarded by IMPB (IP: <ipaddr>, MAC: <macaddr>, Port <portNum>)	Warning
	Dynamic IMPB entry is conflict with static ARP	Dynamic IMPB entry conflicts with static ARP(IP: <ipaddr>, MAC: <macaddr>, Port <portNum>)	Warning
	Dynamic IMPB entry is conflict with static FDB	Dynamic IMPB entry conflicts with static FDB(IP: <ipaddr>, MAC: <macaddr>, Port <portNum>)	Warning
	Dynamic IMPB entry conflicts with static IMPB	Dynamic IMPB entry conflicts with static IMPB(IP: <ipaddr>, MAC: <macaddr>, Port <portNum>)	Warning
	Creating IMPB entry failed due to no ACL rule available	Creating IMPB entry failed due to no ACL rule being available(IP:<ipaddr>, MAC: <macaddr>, Port <portNum>)	Warning
<b>IP and Password Changed</b>	IP Address change activity	Management IP address was changed by (Username: <username>,IP:<ipaddr>)	Informational
	Password change activity	Password was changed by (Username: <username>,IP:<ipaddr> )	Informational
<b>Safeguard Engine</b>	Safeguard Engine is in normal mode	Safeguard Engine enters NORMAL mode	Informational
	Safeguard Engine is in filtering packet mode	Safeguard Engine enters EXHAUSTED mode	Warning
<b>Packet Storm</b>	Broadcast storm occurrence	Port <portNum> Broadcast storm is occurring	Warning
	Broadcast storm cleared	Port <portNum> Broadcast storm has cleared	Informational
	Multicast storm occurrence	Port <portNum> Multicast storm is occurring	Warning
	Multicast storm cleared	Port <portNum> Multicast storm has cleared	Informational
	Port shut down due to a packet storm	Port <portNum> is currently shut down due to a packet storm	Warning
<b>Loop Back Detection</b>	Port loop occurred	Port <portNum> LBD loop occurred. Port blocked.	Critical
	Port loop detection restarted after interval time	Port <portNum> LBD port recovered. Loop detection restarted.	Informational

	Port with VID loop occurred	Port <portNum> VID <vlanID> LBD loop occurred. Packet discard begun.	Critical
	Port with VID Loop detection restarted after interval time	Port <portNum> VID <vlanID> LBD recovered. Loop detection restarted.	Informational
<b>802.1x</b>	VID assigned from radius server after radius client authenticated by radius server successfully .This VID will assign to the port and this port will be the vlan untag port member.	Radius server <ipaddr> assigned vid :<vlanID> to port <portNum> (account :<username> )	Informational
	Ingress bandwidth assigned from radius server after radius client authenticated by radius server successfully .This Ingress bandwidth will assign to the port.	Radius server <ipaddr> assigned ingress bandwidth:<ingressBandwidth> to port <portNum> (account : <username>)	Informational
	Egress bandwidth assigned from radius server after radius client authenticated by radius server successfully .This egress bandwidth will assign to the port.	Radius server <ipaddr> assigned egress bandwidth:<egressBandwidth> to port <portNum> (account: <username>)	Informational
	802.1p default priority assigned from radius server after radius client authenticated by radius server successfully. This 802.1p default priority will assign to the port.	Radius server <ipaddr> assigned 802.1p default priority:<priority> to port <portNum> (account : <username>)	Informational
	802.1x Authentication failure	802.1x Authentication failure from (Username: <username>, Port: <portNum>, MAC: <macaddr> )	Warning
	802.1x Authentication success	802.1x Authentication success [for <reason> ] from (Username: <username>, Port: <portNum>, MAC: <macaddr>)	Informational
<b>CFM</b>	Cross-connect is detected	CFM cross-connect. VLAN:<vlanid>, Local(MD Level:<mdlevel>, Port <portNum>, Direction:<mepdirection>) Remote(MEPID:<mepid>, MAC:<macaddr>)	Critical
	Error CFM CCM packet is detected	CFM error ccm. MD Level:<mdlevel>, VLAN:<vlanid>, Local(Port <portNum>, Direction:<mepdirection>) Remote(MEPID:<mepid>, MAC:<macaddr>)	Warning
	Cannot receive remote MEP's CCM packet	CFM remote down. MD Level:<mdlevel>, VLAN:<vlanid>, Local(Port <portNum>, Direction:<mepdirection>)	Warning
	Remote MEP's MAC reports an error status	CFM remote MAC error. MD Level:<mdlevel>, VLAN:<vlanid>, Local(Port <portNum>, Direction:<mepdirection>)	Warning
	Remote MEP detects CFM defects	CFM remote detects a defect. MD Level:<mdlevel>, VLAN:<vlanid>, Local(Port <portNum>, Direction:<mepdirection>)	Informational
<b>ARP</b>	Gratuitous ARP detected duplicate IP.	Conflict IP was detected with this device ! (IP: <ipaddr>, MAC: <macaddr>, Port <portNum>, Interface: <ipif_name>).	Warning
<b>DHCP</b>	Detect untrusted DHCP server IP address	Detected untrusted DHCP server(IP: <ipaddr>, Port: <portNum>)	Informational
<b>COMMAND LOGGING</b>	Command Logging	<username>: execute command "<string>"	Informational

<b>MBAC</b>	A host passes the authentication	MAC-based Access Control host login successful (MAC: <macaddr>, port: <portNum>, VID: <vid>)	Informational
	A host fails to pass the authentication	MAC-based Access Control unauthenticated host(MAC: <macaddr>, Port <portNum>, VID: <vid>)	Critical
	A host is aged out	MAC-based Access Control host aged out (MAC: <macaddr>, port: <portNum>, VID: <vid>)	Informational
	The authorized user number on a port reaches the maximum user limit	Port <portNum> enters MAC-based Access Control stop learning state	Warning
	The authorized user number on a port is below the maximum user limit in a time interval (interval is project depended)	Port <portNum> recovers from MAC-based Access Control stop learning state	Warning
	The authorized user number on whole device reaches the maximum user limit	MAC-based Access Control enters stop learning state	Warning
	The authorized user number on whole device is below the maximum user limit in a time interval (interval is project depended)	MAC-based Access Control recovers from stop learning state	Warning
<b>BPDU Protection</b>	BPDU attack happened	Port <port> enter BPDU under protection state (mode: drop )	Informational
	BPDU attack happened	Port <port> enter BPDU under protection state (mode: block)	Informational
	BPDU attack happened	Port <port> enter BPDU under protection state (mode: shutdown)	Informational
	BPDU attack automatically recover	Port <port> recover from BPDU under protection state automatically	Informational
	BPDU attack manually recover	Port <port> recover from BPDU under protection state manually	Informational
	System re-start reason: system fatal error	System re-start reason: system fatal error	Emergent
	System re-start reason: CPU exception	System re-start reason: CPU exception	Emergent
<b>Diagnostic</b>	Diagnostic: Burn in start	Diagnostic: Burn in start at %S	Informational
	Diagnostic: Burn in end	Diagnostic: Burn in end at %S	Informational
	Diagnostic: Burn in result	Diagnostic: Burn in result is %S	Informational
<b>DULD</b>	A unidirectional link has been detected on this port	Port: <portNum> is unidirectional	Informational
<b>ERPS</b>	Signal failure detected	Signal failure detected on node (MAC: <macaddr>)	Notice
	Signal failure cleared	Signal failure cleared on node (MAC: <macaddr>)	Notice
	RPL owner conflict.	RPL owner conflicted on the ring (MAC: <macaddr>)	Warning
<b>LLDP-MED</b>	LLDP-MED Topology change detected	LLDP-MED topology change detected (on port <portNum>. chassis id: <chassisType>, <chassisID>, port id: <portType>, <portID>, device class: <deviceClass>)	Notice
	Conflict LLDP-MED device type	Conflict LLDP-MED device type detected ( on port <portNum >, chassis id: < chassisType>, <chassisID>,	Notice

	detected	port id: < portType>, <portID>, device class: <deviceClass>)	
	Incompatible LLDP-MED TLV set detected	Incompatible LLDP-MED TLV set detected ( on port < portNum >, chassis id: < chassisType>, <chassisID>, port id: < portType>, <portID>, device class: <deviceClass>)	Notice

## Appendix C Trap Log Entries

This table lists the trap logs found on the Switch.

Trap Name	Variable Bind	Format	MIB Name
coldStart	None	V1/V2	SNMPv2-MIB
warmStart	None	V1/V2	SNMPv2-MIB
linkDown	ifIndex	V1/V2	IF-MIB
linkUp	ifIndex	V1/V2	IF-MIB
authenticationFailure	None	V1/V2	SNMPv2-MIB
newRoot	None	V1/V2	BRIDGE-MIB
topologyChange	None	V1/V2	BRIDGE-MIB
risingAlarm	alarmIndex, alarmVariable alarmSampleType, alarmValue, alarmRisingThreshold	V1/V2	RMON-MIB
fallingAlarm	alarmIndex, alarmVariable, alarmSampleType, alarmValue, alarmFallingThreshold	V1/V2	RMON-MIB
lldpRemTablesChange	lldpStatsRemTablesInserts lldpStatsRemTablesDeletes lldpStatsRemTablesDrops lldpStatsRemTablesAgeouts	V1/V2	LLDP-MIB
lldpXMedTopologyChangeDetected	lldpRemChassisIdSubtype lldpRemChassisId lldpXMedRemDeviceClass	V1/V2	LLDP-EXT-MED.MIB
swPowerStatusChg	swPowerUnitIndex, swPowerID, swPowerStatus	V2	Equipment.MIB
swPowerFailure	swPowerUnitIndex, swPowerID, swPowerStatus	V2	Equipment.MIB
swPowerRecover	swPowerUnitIndex, swPowerID, swPowerStatus	V2	Equipment.MIB

swFanFailure	swFanUnitIndex swFanID	V2	Equipment.MIB
swFanRecover	swFanUnitIndex swFanID	V2	Equipment.MIB
swHighTemperature	swTemperatureUnitIndex swTemperatureCurrent	V2	Equipment.MIB
swHighTemperatureRecover	swTemperatureUnitIndex swTemperatureCurrent	V2	Equipment.MIB
swLowTemperature	swTemperatureUnitIndex swTemperatureCurrent	V2	Equipment.MIB
swLowTemperatureRecover	swTemperatureUnitIndex swTemperatureCurrent	V2	Equipment.MIB
swPktStormOccurred	swPktStormCtrlPortIndex	V2	PktStormCtrl.mib
swPktStormCleared	swPktStormCtrlPortIndex	V2	PktStormCtrl.mib
swPktStormDisablePort	swPktStormCtrlPortIndex	V2	PktStormCtrl.mib
swSafeGuardChgToExhausted	swSafeGuardCurrentStatus	V2	SafeGuard.mib
swSafeGuardChgToNormal	swSafeGuardCurrentStatus	V2	SafeGuard.mib
swIpMacBindingRecoverLearningTrap	swIpMacBindingPortIndex	V2	IPMacBind.mib
SwMacBasedAuthLoggedSuccess	swMacBasedAuthInfoMacIndex swMacBasedAuthInfoPortIndex swMacBasedAuthVID	V2	mba.mib
swMacBasedAuthLoggedFail	swMacBasedAuthInfoMacIndex swMacBasedAuthInfoPortIndex swMacBasedAuthVID	V2	mba.mib
SwMacBasedAuthAgesOut	swMacBasedAuthInfoMacIndex swMacBasedAuthInfoPortIndex swMacBasedAuthVID	V2	mba.mib
swFilterDetectedTrap	swFilterDetectedIP swFilterDetectedport	V2	Filter.MIB
swPortLoopOccurred	swLoopDetectPortIndex	V2	LBD.mib
swPortLoopRestart	swLoopDetectPortIndex	V2	LBD.mib



swVlanLoopOccurred	swLoopDetectPortIndex	V2	LBD.mib
swVlanLoopRestart	swLoopDetectPortIndex swVlanLoopDetectVID	V2	LBD.mib
swDdmAlarmTrap	swDdmPort swDdmThresholdType swDdmThresholdExceedType	V2	DDM.MIB
swDdmWarningTrap	swDdmPort swDdmThresholdType swDdmThresholdExceedType	V2	DDM.MIB
swBpduProtectionUnderAttackingTrap	swBpduProtectionPortIndex swBpduProtectionPortMode	V2	BPDUProtection.MIB
swBpduProtectionRecoveryTrap	swBpduProtectionPortIndex swBpduProtectionRecoveryMethod	V2	BPDUProtection.MIB
swL2macNotification	swL2macNotifyInfo	V2	L2MGMT-MIB
swL2PortSecurityViolationTrap	swPortSecPortIndex swL2PortSecurityViolationMac	V2	L2MGMT-MIB
swERPSSFDetectedTrap	swERPSSFNodId	V2	ERPS.mib
swERPSSFClearedTrap	swERPSSFNodId	V2	ERPS.mib
swERPSPLOwnerConflictTrap	swERPSSFNodId	V2	ERPS.mib
agentCfgOperCompleteTrap	unitID agentCfgOperate agentLoginUserName	V2	Genmgmt.mib
agentFirmwareUpgrade	swMultiImageVersion	V2	Genmgmt.mib
agentGratuitousARPTrap	agentGratuitousARPIpAddr agentGratuitousARPMacAddr agentGratuitousARPPortNumber agentGratuitousARPInterfaceName	V2	Genmgmt.MIB
swSingleIPMSLinkDown	1: swSingleIPMSID 2: swSingleIPMSMacAddr 3: ifIndex	V2	SingleIP.mib
swSingleIPMSLinkUp	1: swSingleIPMSID 2: swSingleIPMSMacAddr 3: ifIndex	V2	SingleIP.mib
swSingleIPMSAuthFail	1: swSingleIPMSID 2: swSingleIPMSMacAddr	V2	SingleIP.mib
swSingleIPMSnewRoot	1: swSingleIPMSID	V2	SingleIP.mib

	2: swSinglePMSMacAddr		
swSingleIPMSTopologyChange	1: swSinglePMSID 2: swSinglePMSMacAddr	V2	SingleP.mib

## Appendix D RADIUS Attributes Assignment

The RADIUS Attributes Assignment on the DGS-1510/ME series is used in the following modules: 802.1X (Port-based and Host-based), and MAC-based Access Control.

The description that follows explains the following RADIUS Attributes Assignment types:

- Ingress/Egress Bandwidth
- 802.1p Default Priority
- VLAN
- ACL

To assign **Ingress/Egress bandwidth by RADIUS Server**, the proper parameters should be configured on the RADIUS Server. The tables below show the parameters for bandwidth.

The parameters of the Vendor-Specific attributes are:

Vendor-Specific Attribute	Description	Value	Usage
Vendor-ID	Defines the vendor.	171 (DLINK)	Required
Vendor-Type	Defines the attribute.	2 (for ingress bandwidth) 3 (for egress bandwidth)	Required
Attribute-Specific Field	Used to assign the bandwidth of a port.	Unit (Kbits)	Required

If the user has configured the bandwidth attribute of the RADIUS server (for example, ingress bandwidth 1000Kbps) and the 802.1X authentication is successful, the device will assign the bandwidth (according to the RADIUS server) to the port. However, if the user does not configure the bandwidth attribute and authenticates successfully, the device will not assign any bandwidth to the port. If the bandwidth attribute is configured on the RADIUS server with a value of "0" or more, than the effective bandwidth (100Mbps on an Ethernet port or 1Gbps on a Gigabit port) of the port will be set to *no\_limited*.

To assign **802.1p default priority by RADIUS Server**, the proper parameters should be configured on the RADIUS Server. The tables below show the parameters for 802.1p default priority.

The parameters of the Vendor-Specific attributes are:

Vendor-Specific Attribute	Description	Value	Usage
Vendor-ID	Defines the vendor.	171 (DLINK)	Required
Vendor-Type	Defines the attribute.	4	Required
Attribute-Specific Field	Used to assign the 802.1p default priority of the port.	0-7	Required

If the user has configured the 802.1p priority attribute of the RADIUS server (for example, priority 7) and the 802.1X, or MAC-based authentication is successful, the device will assign the 802.1p default priority (according to the RADIUS server) to the port. However, if the user does not configure the priority attribute and authenticates successfully, the device will not assign a priority to this port. If the priority attribute is configured on the RADIUS server is a value out of range (>7), it will not be set to the device.

To assign **VLAN by RADIUS Server**, the proper parameters should be configured on the RADIUS Server. To use VLAN assignment, RFC3580 defines the following tunnel attributes in RADIUS packets.

The table below shows the parameters for a VLAN:

RADIUS Tunnel Attribute	Description	Value	Usage
Tunnel-Type	This attribute indicates the tunneling protocol(s) to be used (in the case of a tunnel initiator) or the tunneling protocol in use (in the case of a tunnel terminator).	13 (VLAN)	Required
Tunnel-Medium-Type	This attribute indicates the transport medium being used.	6 (802)	Required
Tunnel-Private-Group-ID	This attribute indicates group ID for a particular tunneled session.	A string (VID)	Required

If the user has configured the VLAN attribute of the RADIUS server (for example, VID 3) and the 802.1X, or MAC-based Access Control authentication is successful, the port will be added to VLAN 3. However, if the user does not configure the VLAN attribute and authenticates successfully, the port will be kept in its original VLAN. If the VLAN attribute configured on the RADIUS server does not exist, the port will not be assigned to the requested VLAN.

To assign **ACL by RADIUS Server**, the proper parameters should be configured on the RADIUS Server. The table below shows the parameters for an ACL. The RADIUS ACL assignment is only used in MAC-based Access Control.

The parameters of the Vendor-Specific Attribute are:

RADIUS Tunnel Attribute	Description	Value	Usage
Vendor-ID	Defines the vendor.	171 (DLINK)	Required
Vendor-Type	Defines the attribute.	12 (for ACL profile) 13 (for ACL rule)	Required
Attribute-Specific Field	Used to assign the ACL profile or rule.	ACL Command For example: ACL profile: <b>create access_profile profile_id 1 profile_name profile1 ethernet vlan 0xFFF;</b> ACL rule: <b>config access_profile profile_id 1 add access_id auto_assign ethernet vlan_id 1 port all deny;</b>	Required

If the user has configured the ACL attribute of the RADIUS server (for example, ACL profile: **create access\_profile profile\_id 1 profile\_name profile1 ethernet vlan 0xFFF;** ACL rule: **config access\_profile profile\_id 1 add access\_id auto\_assign ethernet vlan\_id 1 port all deny;**), and the MAC-based Access Control authentication is successful, the device will assign the ACL profiles and rules according to the RADIUS server. For more information about the ACL module, please refer to Chapter 6 Access Control List (ACL) Command List.

## Appendix E IETF RADIUS Attributes Support

Remote Authentication Dial-In User Service (RADIUS) attributes carry specific authentication, authorization, information and configuration details for the request and reply. This appendix lists the RADIUS attributes currently supported by the switch.

RADIUS attributes are supported by the IETF standard and Vendor-Specific Attribute (VSA). VSA allows the vendor to create an additionally owned RADIUS attribute. For more information about D-Link VSA, refer to **Appendix E RADIUS Attributes Assignment**.

IETF standard RADIUS attributes are defined in the RFC 2865 Remote Authentication Dial-In User Service (RADIUS), RFC 2866 RADIUS Accounting, RFC 2868 RADIUS Attributes for Tunnel Protocol Support, and RFC 2869 RADIUS Extensions.

The following table lists the IETF RADIUS attributes supported by the D-Link switch.

### 1. RADIUS Authentication Attributes

Number	IETF Attribute
1	User-Name
2	User-Password
3	CHAP-Password
4	NAS-IP-Address
5	NAS-Port
6	Service-Type
7	Framed-Protocol
8	Framed-IP-Address
12	Framed-MTU
18	Reply-Message
24	State
26	Vendor-Specific
27	Session-Timeout
29	Termination-Action
30	Called-Station-ID
31	Calling-Station-ID
32	NAS-Identifier
60	CHAP-Challenge
61	NAS-Port-Type
64	Tunnel-Type
65	Tunnel-Medium-Type
77	Connect-Info
79	EAP-Message
80	Message-Authenticator
81	Tunnel-Private-Group-ID

85	Acct-Interim-Interval
87	NAS-Port-ID
95	NAS-IPv6-Address

## 2. RADIUS Accounting Attributes

Number	IETF Attribute
1	User-Name
4	NAS-IP-Address
5	NAS-Port
6	Service-Type
8	Framed-IP-Address
31	Calling-Station-ID
32	NAS-Identifier
40	Acct-Status-Type
41	Acct-Delay-Time
42	Acct-Input-Octets
43	Acct-Output-Octets
44	Acct-Session-ID
45	Acct-Authentic
46	Acct-Session-Time
47	Acct-Input-Packets
48	Acct-Output-Packets
49	Acct-Terminate-Cause
52	Acct-Input-Gigawords
53	Acct-Output-Gigawords
61	NAS-Port-Type
95	NAS-IPv6-Address