



**Firmware Version:** V4.7.3.2  
**Published:** Oct 30, 2020

---

**Content:**

Revision History and System Requirement:.....2

New Features: .....2

Problems Fixed: .....2

Known Issues: .....2

## Revision History and System Requirement:

FW Version	Date	Model	HW	MD5 CHECKSUM
V4.7.3.2	30-Oct-2020	DWL-X8630AP	A1	0172ae12ff9a8f2af16baa3dc86ff593

## New Features:

Firmware Version	New Features
V4.7.3.2	N/A
V4.7.3.1	Initial Release

## Problems Fixed:

Firmware Version	Problems Fixed
V4.7.3.2	<ol style="list-style-type: none"> <li>Fix - Beacon Interval doesn't change to 200 when number of VAPs is up to 9. (DI20200811000002/HQ20200812000005)</li> <li>Fix the issue of Managed Mode WPA2/WPA3 Personal doesn't work with iOS and many Windows Clients. (DI20200813000001/ HQ20200813000009)</li> <li>Fix - Controller GUI - Radio Operational Status is always DOWN. (DI20200812000004/ HQ20200813000005)</li> <li>DWL-X8630AP WebUI status shows wrong info (80+80/160) when channel bandwidth is 160. (DI20200807000002/ HQ20200807000002)</li> <li>DWL-X8630AP doesn't report any detected neighbor client to its DWC-2000. (DI20200804000002/HQ20200804000006)</li> <li>Doesn't mark CH144 as Radar Detection Enabled. (DI20200730000002/HQ20200730000011)</li> <li>The wireless interfaces won't be up w/ MAC Authentication (DI20200731000002/HQ20200731000006)</li> <li>Fix Managed Mode - MAC authentication Local/Radius fails. (VBG20020168/ VBG20020167)</li> <li>Fix VBG20020142 - RADIUS accounting attribute doesn't have traffic measurement value</li> <li>Fix VBG20040359 issue of "Wireless Multicast Forwarding" rule is incorrect.</li> <li>Fix VBG20020172 - Standalone - Client QoS doesn't work</li> </ol>

	12. Fix SNMP v1/v2 IPv6 trap issue.
V4.7.3.1	<ol style="list-style-type: none"> <li>1. DBG20030305 After 5G Mode change to following conditions in GUI, the SSID can't displayed.</li> <li>2. DBG20030264 Auto channel selection at startup does not work.</li> <li>3. DBG20030342 CLI command-set management static-ip/static-mask is not working and force restart.</li> <li>4. DBG20030340 CLI command-set management dhcp-status is not working and force restart.</li> <li>5. DBG20030313 The channel list is incorrect in most countries.</li> <li>6. VBG20020179 Wireless Multicast Forwarding doesn't work</li> <li>7. DBG20030483 DUT cannot get ipv6 stateful address from DWC-1000/C1.</li> <li>8. DBG20030493 5G setting to WPA3 personal only, AX200 can't link.</li> <li>9. VBG20020181 - WDS doesn't work</li> <li>10. DBG20050469 WPA3 low throughput issue</li> </ol>

## Known Issues:

Firmware Version	Issues
V4.7.3.2	<ol style="list-style-type: none"> <li>1. VBG20020182 - Dynamic VLAN issue</li> </ol>
V4.7.3.1	<ol style="list-style-type: none"> <li>1. VBG20020168 - Managed Mode - MAC Authentication Local fails</li> <li>2. VBG20020167 - Managed Mode - MAC Authentication Radius fails</li> <li>3. VBG20020142 - RADIUS accounting attribute doesn't have traffic measurement value</li> <li>4. VBG20020172 - Standalone - Client QoS doesn't work</li> <li>5. VBG20020182 - Dynamic VLAN issue</li> <li>6. VBG20040359 - Wireless Multicast Forwarding rule is incorrect</li> <li>7. SNMP v1/v2 IPv6 trap issue.</li> </ol>

## CLI Commands

Command	Action
get managed-ap	Get information about switches that can discover and manage the AP.

get management	View the following information about the management interface on the AP: <ul style="list-style-type: none"> <li>• VLAN ID</li> <li>• Interface name</li> <li>• Static IP address (if DHCP is not used)</li> <li>• Static subnet mask</li> <li>• IP address</li> <li>• Subnet mask</li> <li>• MAC address</li> <li>• DHCP status</li> </ul>
get management dhcp-status	View the connection type.
set management dhcp-status on	Use DHCP as the connection type.
set management dhcp-status off	Use Static IP as the connection type.
get management static-ip	View the static IP address.
get management static-mask	View the subnet address.
get management vlan-id	View management VLAN ID.
set management vlan-id 1~4094	Set management VLAN ID.
reboot	Reboot the system.
factory-reset	Return to factory default setting.
get system led	View system LED status. Status 1: Turned on. Status 0: Turn off.
set system led on	Turn on system LED.
set system led off	Turn off all system LED.
save-running	After setting command, need to type the command <i>save-running</i> to and then <i>reboot</i> to make the setting effective.