D-Link **Quick Installation Guide**

This product can be set up using Internet Explorer 6.x or above



DCS-5300G Wireless Internet Camera with Pan and Tilt

Before You Begin

You must have at least the following:

- Windows 98/Me/2000/XP
- A CD-ROM drive
- An available Ethernet connection

Check Your Package Contents

These are the items included with your purchase:

If any of the below items are missing, please contact your reseller.



DCS-5300G Internet Camera with Remote Control



CD-ROM with Manual and Installation Wizard



A/V Cable



2 Antennas



CAT5 Ethernet Cable



Camera Stand



12V AC Power Adapter

Using a power supply with a different voltage rating will damage this product and void the warranty.

System Requirements

- Internet Explorer 6.x or above
- CPU: 1.7GHz or above
- Memory Size: 128MB (256MB recommended)
- VGA card resolution: 800x600 or above

Note: If using multiple cameras for viewing/recording, the minimum requirements are a 2.4GHz or above CPU with 512MB memory and a 32MB video card.



Hardware Installation

Connect the Ethernet Cable

Connect an Ethernet cable to the Ethernet connector located on the Internet Camera's back panel and attach it to the network.



If you connect this camera directly to a PC, you will need a cross-over Ethernet cable. If you plug the camera into a hub or router, you Il be able to use the cable included with your camera.



Attach the External Power Supply

Attach the external power supply to the DC power input connector located on the Internet Camera's back panel (labeled DC 12V) and connect it to an AC power outlet.





Power source is confirmed when the LED Power Indicator on the Internet Camera is illuminated.

Both the red and green LEDs will flash alternately and only the red LED will remain lit. The green LED will not come on until you have configured your camera.



Hardware Installation (continued)

Attach the A/V cable to the A/V out connector if you wish to connect the **DCS-5300G** to your TV.



Attach the red RCA connector to the "video" connector on your TV.




Attach the black RCA cable to the "audio" connector on your TV set.






Installing the Installation Wizard

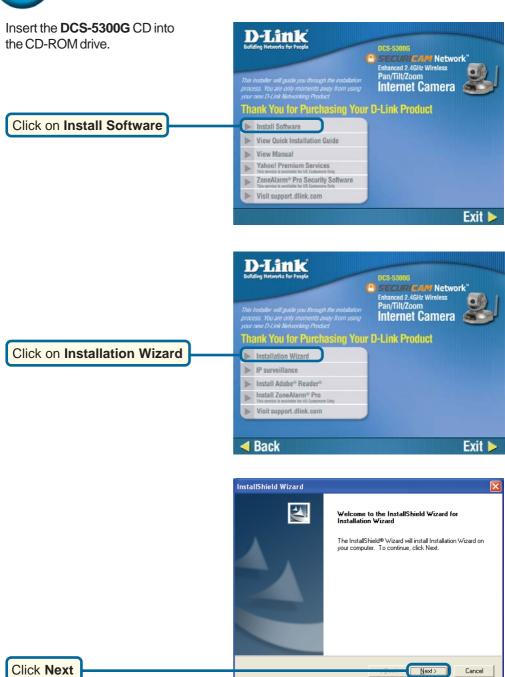





Installing the Installation Wizard (continued)

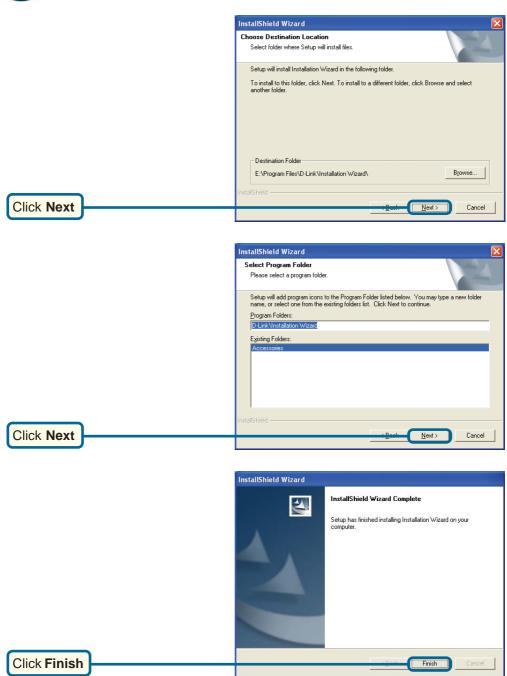

Configuring Your Camera with the Installation Wizard

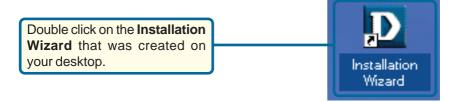


The software will search for cameras.

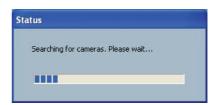


The Installation Wizard will appear and show the MAC address of the DCS-5300G and an IP Address (which may or may not be correct depending on what you have your DCS-5300G connected to). If you have a DHCP* server on your network, there will be a valid IP Address displayed here, indicated by a "Yes" under the assigned column.

*A DHCP server is a device that supplies IP Addresses to its clients that are on the same network.

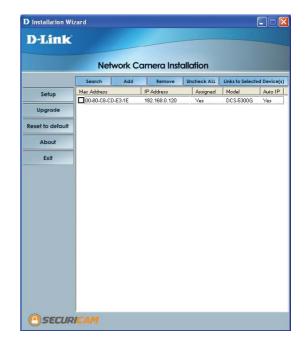




If the **Installation Wizard** does not detect any devices, you will need to find a tool small enough to fit into the reset hole and softly press down a switch for 2 cycles (the red and green LEDs will blink continuously and stop twice). Let go when the red LED starts to flash the second time.

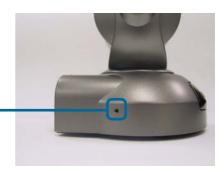


Click **Search** to refresh the list of cameras if needed.




Once the camera appears, select the camera by placing a **Checkmark** in the box.

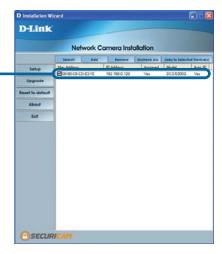





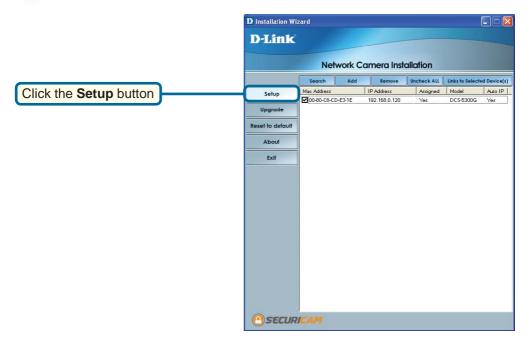

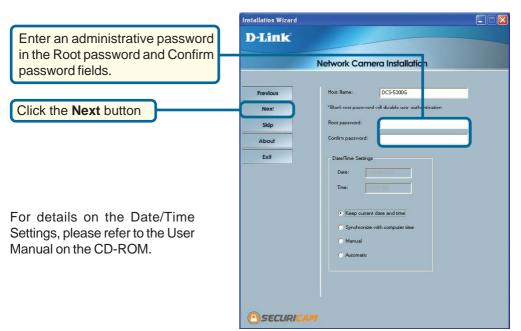





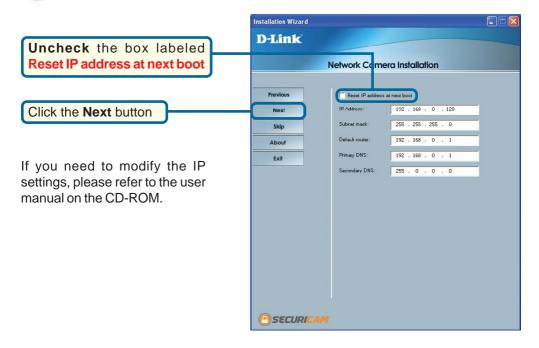

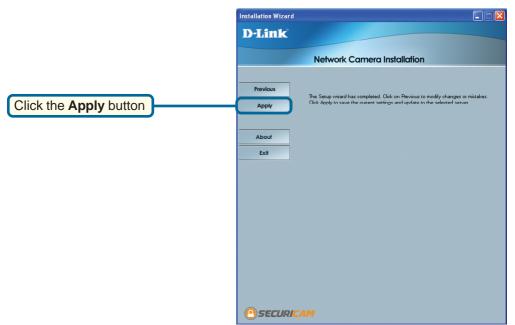



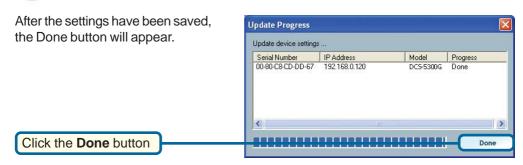

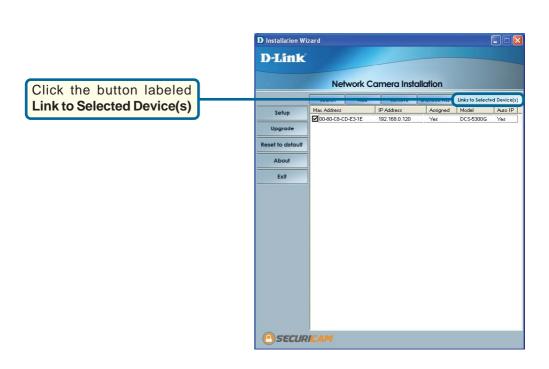



Viewing Your Internet Camera

After you click the button labeled Link to Device(s), the Installation Wizard will automatically open your web browser to the IP address of the DCS-5300G, in this example it is: http://192.168.0.120. Your DCS-5300G may have a different IP Address.



The installation and configuration of the DCS-5300G Internet Camera is now complete.

Technical Support

You can find software updates and user documentation on the D-Link website.

D-Link provides free technical support for customers within the United States and within Canada for the duration of the warranty period on this product.

U.S. and Canadian customers can contact D-Link Technical Support through our website, or by phone.

Tech Support for customers within the United States:

D-Link Technical Support over the Telephone:

(877) 453-5465

24 hours a day, seven days a week.

D-Link Technical Support over the Internet:

http://support.dlink.com email:support@dlink.com

Tech Support for customers within Canada:

D-Link Technical Support over the Telephone:

(800) 361-5265

Monday to Friday 7:30am to 12:00am EST

D-Link Technical Support over the Internet:

http://support.dlink.ca email:support@dlink.ca

