



## **DIR-620**

### **Wireless N300 Router with 3G/CDMA/LTE Support and USB Port**

## Contents

<b>Chapter 1. Introduction</b> .....	<b>5</b>
<b>Contents and Audience</b> .....	<b>5</b>
<b>Conventions</b> .....	<b>5</b>
<b>Document Structure</b> .....	<b>5</b>
<b>Chapter 2. Overview</b> .....	<b>6</b>
<b>General Information</b> .....	<b>6</b>
<b>Specifications*</b> .....	<b>7</b>
<b>Product Appearance</b> .....	<b>11</b>
Front Panel.....	11
Side Panel.....	13
Back Panel.....	14
<b>Delivery Package</b> .....	<b>15</b>
<b>Chapter 3. Installation and Connection</b> .....	<b>16</b>
<b>Before You Begin</b> .....	<b>16</b>
<b>Connecting to PC</b> .....	<b>18</b>
PC with Ethernet Adapter.....	18
Obtaining IP Address Automatically in OS Windows XP.....	18
Obtaining IP Address Automatically in OS Windows 7.....	21
PC with Wi-Fi Adapter.....	26
Configuring Wi-Fi Adapter in OS Windows XP.....	27
Configuring Wi-Fi Adapter in OS Windows 7.....	28
<b>Connecting to Web-based Interface</b> .....	<b>30</b>
<b>Web-based Interface Structure</b> .....	<b>32</b>
<b>Saving and Restoring Settings</b> .....	<b>36</b>
<b>Chapter 4. Configuring via Web-based Interface</b> .....	<b>38</b>
<b>Click'n'Connect</b> .....	<b>38</b>
Creating WAN Connection.....	41
PPPoE Connection.....	41
Static IP Connection.....	46
Dynamic IP Connection.....	50
PPTP + Static IP or L2TP + Static IP Connection.....	54
PPTP + Dynamic IP or L2TP + Dynamic IP Connection.....	62
3G Connection.....	69
LTE Connection.....	73
Checking Internet Availability.....	76
Configuring Wireless Connection.....	77
Configuring IPTV.....	80
<b>Wireless Network Settings Wizard</b> .....	<b>81</b>
<b>Virtual Server Settings Wizard</b> .....	<b>84</b>
<b>IPTV Settings Wizard</b> .....	<b>86</b>
<b>Status</b> .....	<b>87</b>
Network Statistics.....	87
DHCP.....	88
Routing Table.....	89
Clients.....	90
Active Sessions.....	91

<b>Net</b> .....	<b>92</b>
WAN.....	92
<i>Creating PPPoE WAN Connection</i> .....	93
<i>Creating Static IP WAN Connection</i> .....	97
<i>Creating Dynamic IP WAN Connection</i> .....	100
<i>Creating PPTP + Static IP or L2TP + Static IP WAN Connection</i> .....	103
<i>Creating PPTP + Dynamic IP or L2TP + Dynamic IP WAN Connection</i> .....	108
<i>Creating 3G WAN Connection</i> .....	113
<i>Creating LTE WAN Connection</i> .....	116
LAN.....	118
<b>Wi-Fi</b> .....	<b>121</b>
Basic Settings.....	121
Security Settings.....	123
MAC Filter.....	129
Station List.....	131
WPS.....	132
<i>Using WPS Function via Web-based Interface</i> .....	134
<i>Using WPS Function without Web-based Interface</i> .....	134
Additional Settings.....	136
WMM.....	138
<b>Advanced</b> .....	<b>140</b>
VLAN.....	141
UPnP.....	144
DDNS.....	146
DNS.....	147
Routing.....	148
Remote Access.....	150
Miscellaneous.....	151
TR-069 Client.....	153
<b>Firewall</b> .....	<b>155</b>
IP Filters.....	155
Virtual Servers.....	158
DMZ.....	161
MAC Filter.....	162
<b>3G Modem</b> .....	<b>164</b>
Information.....	164
PIN.....	166
<b>WiMAX</b> .....	<b>168</b>
Information.....	168
<b>USB Storage</b> .....	<b>170</b>
Information.....	170
Filebrowser.....	171
Print Server.....	172
Samba.....	173
FTP.....	174
DLNA.....	175
<b>Transmission</b> .....	<b>177</b>
Transmission Settings.....	177
Web-interface Page.....	179

<b>System</b> .....	<b>180</b>
Administrator Password.....	181
Configuration.....	182
System Log.....	184
Firmware Upgrade.....	186
<i>Local Update</i> .....	187
<i>Remote Update</i> .....	188
NTP Client.....	189
Ping.....	190
Traceroute.....	191
Telnet.....	192
Users.....	193
<b>Chapter 5. Operation Guidelines</b> .....	<b>195</b>
<b>Safety Instructions</b> .....	<b>195</b>
<b>Wireless Installation Considerations</b> .....	<b>196</b>
<b>Connecting to Cable or DSL Modem</b> .....	<b>197</b>
<b>Chapter 6. Abbreviations and Acronyms</b> .....	<b>198</b>


# CHAPTER 1. INTRODUCTION

## Contents and Audience

This manual describes the router DIR-620 and explains how to configure and operate it.

This manual is intended for users familiar with basic networking concepts, who create an in-home local area network, and system administrators, who install and configure networks in offices.

## Conventions

Example	Description
text	The body text of the manual.
<i>Before You Begin</i>	A reference to a chapter or section of this manual.
<i>“Quick Installation Guide”</i>	A reference to a document.
<b>Change</b>	A name of a menu, menu item, control (field, checkbox, drop-down list, button, etc.).
192.168.0.1	Data that you should enter in the specified field.
 <u>Information</u>	An important note.

## Document Structure

**Chapter 1** describes the purpose and structure of the document.

**Chapter 2** gives an overview of the router's hardware and software features, describes its appearance and the package contents.

**Chapter 3** explains how to install the router DIR-620 and configure a PC in order to access its web-based interface.

**Chapter 4** describes all pages of the web-based interface in detail.

**Chapter 5** includes safety instructions and tips for networking and connecting additional equipment.

**Chapter 6** introduces abbreviations and acronyms used in this manual.

## CHAPTER 2. OVERVIEW

### **General Information**

The DIR-620 device is a multifunction wireless router supporting LTE, WiMAX, 3G GSM and CDMA with a built-in switch. It provides a fast and simple way to create a wireless and wired network at home or in an office.

The router is equipped with a USB port for connecting a USB modem<sup>1</sup>, which can be used to establish connection to the Internet. In addition, to the USB port of the router you can connect a USB storage device, which will be used as a network drive, or a printer.

Also you are able to connect the multifunction wireless router DIR-620 to a cable or DSL modem or to a private Ethernet line and use a high-speed Internet connection to successfully fulfill a wide range of professional tasks. The built-in 4-port switch enables you to connect Ethernet-enabled computers, game consoles, and other devices to your network.

Using the DIR-620 device, you are able to quickly create a wireless network at home or in your office, which lets your relatives or employees connect to your wireless network virtually anywhere (within the operational range of your wireless network). The router can operate as a base station for connecting wireless devices of the standards 802.11b, 802.11g, and 802.11n (at the rate up to 300Mbps).

The router supports multiple functions for the wireless interface: several security standards (WEP, WPA/WPA2), MAC address filtering, WPS, WMM.

The multifunction wireless router DIR-620 includes a built-in firewall. The advanced security functions minimize threats of hacker attacks and prevent unwanted intrusions to your network.

You can configure the settings of the multifunction wireless router DIR-620 via the user-friendly web-based interface (the interface is available in several languages).

Now you can simply update the firmware: the router itself finds approved firmware on D-Link update server and notifies when ready to install it.

---

<sup>1</sup> Not included in the delivery package. D-Link does not guarantee compatibility with all USB modems. For the list of supported USB modems, see the *Specifications\** section, page 7.

## Specifications\*

Hardware	
<b>Interfaces</b>	<ul style="list-style-type: none"> <li>· 10/100BASE-TX WAN port</li> <li>· 4 10/100BASE-TX LAN ports</li> <li>· USB 2.0 port</li> </ul>
<b>LEDs</b>	<ul style="list-style-type: none"> <li>· POWER</li> <li>· WPS</li> <li>· INTERNET</li> <li>· WLAN</li> <li>· 4 LAN LEDs</li> <li>· USB</li> </ul>
<b>Buttons</b>	<ul style="list-style-type: none"> <li>· ON/OFF button to power on/power off</li> <li>· RESET button to restore factory default settings</li> <li>· WPS button to set up secure wireless connection</li> </ul>
<b>Antenna</b>	<ul style="list-style-type: none"> <li>· Two internal omnidirectional antennas (2dBi gain)</li> </ul>
<b>MIMO</b>	<ul style="list-style-type: none"> <li>· 2 x 2</li> </ul>
<b>Power connector</b>	<ul style="list-style-type: none"> <li>· Power input connector (DC)</li> </ul>

Software	
<b>WAN connection types</b>	<ul style="list-style-type: none"> <li>· LTE</li> <li>· 3G</li> <li>· PPPoE</li> <li>· Static IP / Dynamic IP</li> <li>· PPTP/L2TP + Static IP</li> <li>· PPTP/L2TP + Dynamic IP</li> </ul>
<b>Network functions</b>	<ul style="list-style-type: none"> <li>· DHCP server/relay</li> <li>· DNS relay</li> <li>· Dynamic DNS</li> <li>· Static IP routing</li> <li>· IGMP Proxy</li> <li>· RIP</li> <li>· Support of UPnP IGD</li> <li>· Support of VLAN</li> <li>· WAN ping respond</li> <li>· Support of SIP</li> <li>· Support of RTSP</li> </ul>
<b>Firewall functions</b>	<ul style="list-style-type: none"> <li>· Network Address Translation (NAT)</li> <li>· Stateful Packet Inspection (SPI)</li> <li>· IP filters</li> <li>· MAC filter</li> <li>· DMZ</li> <li>· Prevention of ARP and DDoS attacks</li> <li>· Virtual servers</li> </ul>
<b>VPN</b>	<ul style="list-style-type: none"> <li>· IPSec/PPTP/L2TP/PPPoE pass-through</li> </ul>

\* The device features are subject to change without notice. For the latest versions of the firmware and relevant documentation, visit [www.dlink.ru](http://www.dlink.ru).

Software	
<b>USB interface functions</b>	<ul style="list-style-type: none"> <li>· USB modem<sup>2</sup> Auto connection to available type of supported network (3G/2G) Enabling/disabling PIN code check, changing PIN code</li> <li>· USB storage File browser Print server Access to storage via accounts Built-in Samba server Built-in FTP server Built-in DLNA server Built-in Transmission torrent client; uploading/downloading files from/to USB storage</li> </ul>
<b>Management</b>	<ul style="list-style-type: none"> <li>· Local and remote access to settings through TELNET/WEB (HTTP)</li> <li>· Multilingual web-based interface for configuration and management</li> <li>· Firmware update via web-based interface</li> <li>· Automatic notification on new firmware version</li> <li>· Saving/restoring configuration to/from file</li> <li>· Support of remote logging</li> <li>· Automatic synchronization of system time with NTP server and manual time/date setup</li> <li>· Ping function</li> <li>· Traceroute utility</li> <li>· TR-069 client</li> </ul>

Wireless Module Parameters	
<b>Standards</b>	<ul style="list-style-type: none"> <li>· IEEE 802.11b/g/n</li> </ul>
<b>Frequency range</b>	<ul style="list-style-type: none"> <li>· 2400 ~ 2483.5MHz</li> </ul>
<b>Wireless connection security</b>	<ul style="list-style-type: none"> <li>· WEP</li> <li>· WPA/WPA2 (Personal/Enterprise)</li> <li>· MAC filter</li> <li>· WPS (PBC/PIN)</li> </ul>
<b>Advanced functions</b>	<ul style="list-style-type: none"> <li>· WMM (Wi-Fi QoS)</li> <li>· Advanced settings</li> </ul>
<b>Wireless connection rate</b>	<ul style="list-style-type: none"> <li>· IEEE 802.11b: 1, 2, 5.5, and 11Mbps</li> <li>· IEEE 802.11g: 6, 9, 12, 18, 24, 36, 48, and 54Mbps</li> <li>· IEEE 802.11n: from 6.5 to 300Mbps (from MCS0 to MCS15)</li> </ul>
<b>Transmitter output power</b>  <i>The maximum value of the transmitter output power depends upon the radio frequency regulations applied in your country</i>	<ul style="list-style-type: none"> <li>· 802.11b (typical at room temperature 25 °C) 17dBm (+/-1dB) at 1, 2, 5.5, 11Mbps</li> <li>· 802.11g (typical at room temperature 25 °C) 16dBm (+/-1dB) at 6, 9Mbps 15dBm (+/-1dB) at 12, 18, 24, 36Mbps 14dBm (+/-1dB) at 48, 54Mbps</li> <li>· 802.11n (typical at room temperature 25 °C) HT20 14dBm (+/-1dB) at MCS0/1/2/3/4/5/6/7/8/9/10/11/12/13/14/15 HT40 13dBm (+/-1dB) at MCS0/1/2/3/4/5/6/7/8/9/10/11/12/13/14/15</li> </ul>

<sup>2</sup> For GSM USB modems only.



Wireless Module Parameters	
<b>Receiver sensitivity</b>	<ul style="list-style-type: none"> <li>· 802.11b (typical at PER = 8% (1000-byte PDUs) at room temperature 25 °C) <ul style="list-style-type: none"> <li>-84dBm at 1Mbps</li> <li>-84dBm at 2Mbps</li> <li>-82dBm at 5.5Mbps</li> <li>-79dBm at 11Mbps</li> </ul> </li> <li>· 802.11g (typical at PER = 10% (1000-byte PDUs) at room temperature 25 °C) <ul style="list-style-type: none"> <li>-82dBm at 6Mbps</li> <li>-81dBm at 9Mbps</li> <li>-79dBm at 12Mbps</li> <li>-77dBm at 18Mbps</li> <li>-74dBm at 24Mbps</li> <li>-70dBm at 36Mbps</li> <li>-66dBm at 48Mbps</li> <li>-65dBm at 54Mbps</li> </ul> </li> <li>· 802.11n (typical at PER = 10% (1000-byte PDUs)) <ul style="list-style-type: none"> <li>HT20 <ul style="list-style-type: none"> <li>-82dBm at MCS0/8</li> <li>-79dBm at MCS1/9</li> <li>-77dBm at MCS2/10</li> <li>-74dBm at MCS3/11</li> <li>-70dBm at MCS4/12</li> <li>-66dBm at MCS5/13</li> <li>-65dBm at MCS6/14</li> <li>-64dBm at MCS7/15</li> </ul> </li> <li>HT40 <ul style="list-style-type: none"> <li>-79dBm at MCS0/8</li> <li>-76dBm at MCS1/9</li> <li>-74dBm at MCS2/10</li> <li>-71dBm at MCS3/11</li> <li>-67dBm at MCS4/12</li> <li>-63dBm at MCS5/13</li> <li>-62dBm at MCS6/14</li> <li>-61dBm at MCS7/15</li> </ul> </li> </ul> </li> </ul>
<b>Modulation schemes</b>	<ul style="list-style-type: none"> <li>· 802.11b: DQPSK, DBPSK, DSSS, CCK</li> <li>· 802.11g: BPSK, QPSK, 16QAM, 64QAM with OFDM</li> <li>· 802.11n: BPSK, QPSK, 16QAM, 64QAM with OFDM</li> </ul>

Physical Parameters	
<b>Dimensions</b>	· 160 x 103 x 56.5 mm (6.3 x 4.1 x 2.2 in)
<b>Weight</b>	· 188 g (0.4 lb)

Operating Environment	
<b>Power</b>	· Output: 12V DC, 1A
<b>Temperature</b>	<ul style="list-style-type: none"> <li>· Operating: from 0 to 40 °C</li> <li>· Storage: from -20 to 65 °C</li> </ul>
<b>Humidity</b>	<ul style="list-style-type: none"> <li>· Operating: from 10% to 90% (non-condensing)</li> <li>· Storage: from 5% to 95% (non-condensing)</li> </ul>

Supported USB modems <sup>3</sup>	
<b>GSM</b>	<ul style="list-style-type: none"> <li>· Alcatel X500</li> <li>· D-Link DWM-152C1</li> <li>· D-Link DWM-156A6</li> <li>· D-Link DWM-156A7</li> <li>· D-Link DWM-156C1</li> <li>· D-Link DWM-157B1</li> <li>· D-Link DWM-157B1 (Velcom)</li> <li>· D-Link DWM-158D1</li> <li>· Huawei E150</li> <li>· Huawei E1550</li> <li>· Huawei E156G</li> <li>· Huawei E160G</li> <li>· Huawei E169G</li> <li>· Huawei E171</li> <li>· Huawei E173 (Megafon)</li> <li>· Huawei E220</li> <li>· Huawei E352 (Megafon)</li> <li>· Huawei E367 (3G mode)</li> <li>· Huawei E392 (3G mode)</li> <li>· ZTE MF112</li> <li>· ZTE MF192</li> <li>· ZTE MF626</li> <li>· ZTE MF627</li> <li>· ZTE MF652</li> <li>· ZTE MF668</li> <li>· ZTE MF752</li> </ul>
<b>CDMA</b>	<ul style="list-style-type: none"> <li>· Airplus MCD-650</li> <li>· Airplus MCD-800</li> <li>· AnyDATA ADU-300A</li> <li>· AnyDATA ADU-500A</li> <li>· AnyDATA ADU-510A</li> <li>· Huawei EC306</li> <li>· ZTE AC5710</li> <li>· ZTE AC5730</li> </ul>
<b>LTE</b>	<ul style="list-style-type: none"> <li>· Huawei E367</li> <li>· Huawei E392</li> <li>· Megafon M150-1</li> <li>· Yota LU-150</li> <li>· Yota WLTUBA-107</li> </ul>
<b>WiMAX</b>	<ul style="list-style-type: none"> <li>· Samsung SWC-U200 (firmware version: <i>u200_rev1-2.7.40-CI14</i>)</li> </ul>

<sup>3</sup> The manufacturer does not guarantee proper operation of the router with every modification of the firmware of USB modems.

## Product Appearance

### Front Panel



Figure 1. Front panel view.

LED	Mode	Description
POWER	<i>Solid green</i>	The router is powered on.
	<i>No light</i>	The router is powered off.
WPS	<i>Blinking green</i>	Attempting to add a wireless device via the WPS function.
	<i>No light</i>	The WPS function is not in use.
INTERNET	<i>Solid green</i>	The Internet connection is on.
	<i>Blinking green</i>	The WAN interface is active (upstream or downstream traffic).
	<i>No light</i>	The cable is not connected.

LED	Mode	Description
WLAN	<i>Solid green</i>	The router's WLAN is on.
	<i>Blinking green</i>	The WLAN interface is active (upstream or downstream traffic).
	<i>No light</i>	The router's WLAN is off.
LAN 1-4	<i>Solid green</i>	A device (computer) is connected to the relevant port, the connection is on.
	<i>Blinking green</i>	The LAN port is active (upstream or downstream traffic).
	<i>No light</i>	The cable is not connected to the relevant port.
USB	<i>Solid green</i>	A USB device is connected to the router's USB port.
	<i>No light</i>	No USB device.

## Side Panel



Figure 2. Side panel view.

Name	Description
<b>WPS</b>	A button to quickly add wireless devices to the router's WLAN (the WPS function). To use the WPS function: push the button, hold it for 2 seconds, and release. The <b>WPS</b> LED starts blinking.
<b>USB</b>	A port for connecting a USB device (modem, storage, printer).

## Back Panel



Figure 3. Back panel view.

Port	Description
<b>LAN 1-4</b>	4 Ethernet ports to connect computers or network devices.
<b>INTERNET</b>	A port to connect to a cable or DSL modem or to a private Ethernet line (it is recommended to use the cable included in the delivery package).
<b>RESET</b>	A button to restore the factory default settings. To restore the factory defaults, push the button (with the device turned on), hold it for 10 seconds, and then release the button.
<b>12VDC IN</b>	Power connector.
<b>ON/OFF</b>	A button to turn the router on/off.

The device is also equipped with built-in Wi-Fi antennas.

## ***Delivery Package***

The following should be included:

- Router DIR-620
- Power adapter DC 12V/1A
- Ethernet cable (CAT 5E)
- “***Quick Installation Guide***” (brochure).

The “***User Manual***” and “***Quick Installation Guide***” documents are available on D-Link website (see [www.dlink.ru](http://www.dlink.ru)).



Using a power supply with a different voltage rating than the one included will cause damage and void the warranty for this product.

## CHAPTER 3. INSTALLATION AND CONNECTION

### ***Before You Begin***

Please, read this manual prior to installing the device. Make sure that you have all the necessary information and equipment.

#### **Operating System**

Configuration of the multifunction wireless router DIR-620 supporting LTE, WiMAX, 3G GSM and CDMA with a built-in switch (hereinafter referred to as “the router”) is performed via the built-in web-based interface. The web-based interface is available from any operating system that supports a web browser.

#### **Web Browser**

The following web browsers are recommended:

- Apple Safari 5 and later
- Google Chrome 5 and later
- Microsoft Internet Explorer 7 and later
- Mozilla Firefox 5 and later
- Opera 10 and later.

For successful operation, JavaScript should be enabled on the web browser. Make sure that JavaScript has not been disabled by other software (such as virus protection or web user security packages) running on your computer.

#### **Wired or Wireless NIC (Ethernet or Wi-Fi Adapter)**

Any computer that uses the router should be equipped with an Ethernet or Wi-Fi adapter (NIC). If your computer is not equipped with such a device, install an Ethernet or Wi-Fi adapter prior to using the router.

#### **Wireless Connection**

Wireless workstations from your network should be equipped with a wireless 802.11b, g, or n NIC (Wi-Fi adapter). In addition, you should specify the values of SSID, channel number and security settings defined in the web-based interface of the router for all these wireless workstations.



## USB Modem

To connect to a LTE, WiMAX, 3G GSM or CDMA network, you should use a USB modem. Connect it to the USB port of the router, then access the web-based interface of the router, and you will be able to configure a connection to the Internet<sup>4</sup>.

Your USB modem should be equipped with an active identification card (SIM or R-UIM) of your operator.



Some operators require subscribers to activate their USB modems prior to using them. Please, refer to connection guidelines provided by your operator when concluding the agreement or placed on its website.

For LTE and CDMA USB modems, it is required to disable the PIN code check on the identification card prior to connecting the USB modem to the router.

---

<sup>4</sup> Contact your operator to get information on the service coverage and fees.

## Connecting to PC

### PC with Ethernet Adapter

1. Make sure that your PC is powered off.
2. Connect an Ethernet cable between any of LAN ports located on the back panel of the router and the Ethernet port of your PC.
3. To connect via a LTE, WiMAX, 3G GSM or CDMA network: connect your USB modem to the USB port<sup>5</sup> located on the left side panel of the router.

**!** If you need to connect or change a USB modem to another one when the router is powered on, power off the router, connect the modem to the USB port, and power on the router.

4. Connect the power cord to the power connector port on the back panel of the router, then plug the power adapter into an electrical outlet or power strip.
5. Turn on the router by pressing the **ON/OFF** button on its back panel.
6. Turn on your PC and wait until your operating system is completely loaded.

### Obtaining IP Address Automatically in OS Windows XP

1. Click the **Start** button and proceed to the **Control Panel > Network and Internet Connections > Network Connections** window.
2. In the **Network Connections** window, right-click the relevant **Local Area Connection** icon and select the **Properties** line in the menu displayed.

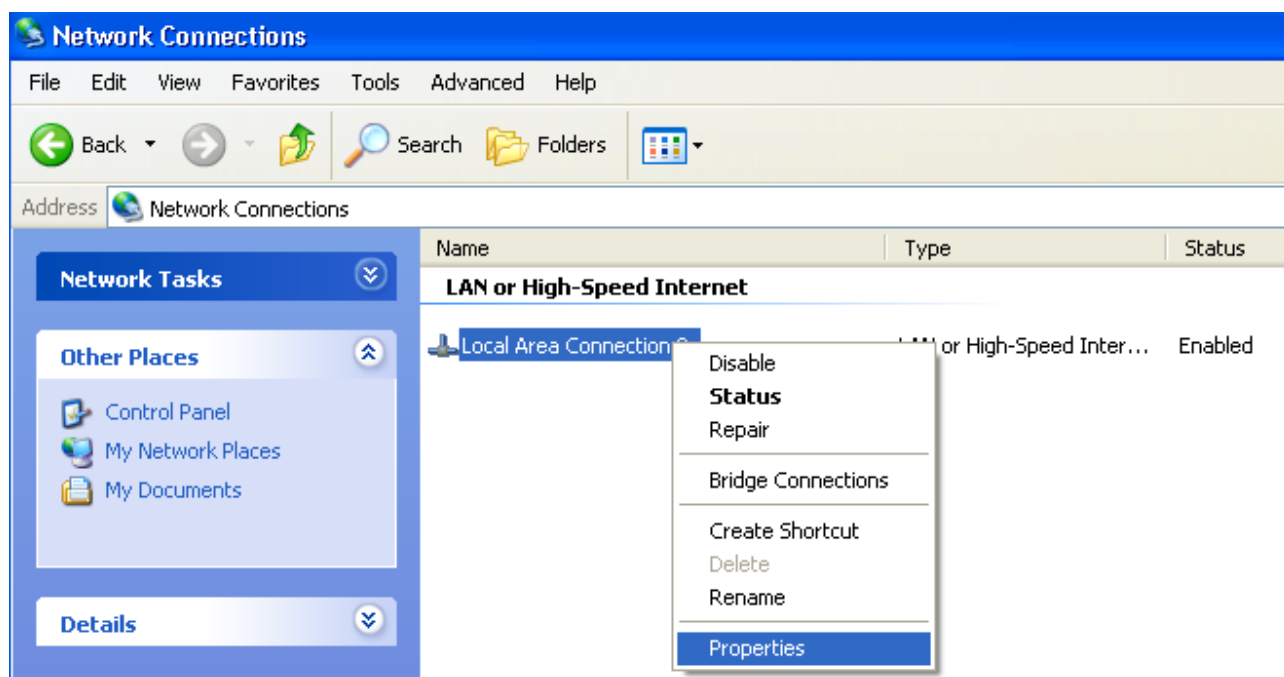


Figure 4. The **Network Connections** window.

<sup>5</sup> It is recommended to use a USB extension cable to connect a USB modem to the router.

3. In the **Local Area Connection Properties** window, on the **General** tab, select the **Internet Protocol (TCP/IP)** line. Click the **Properties** button.

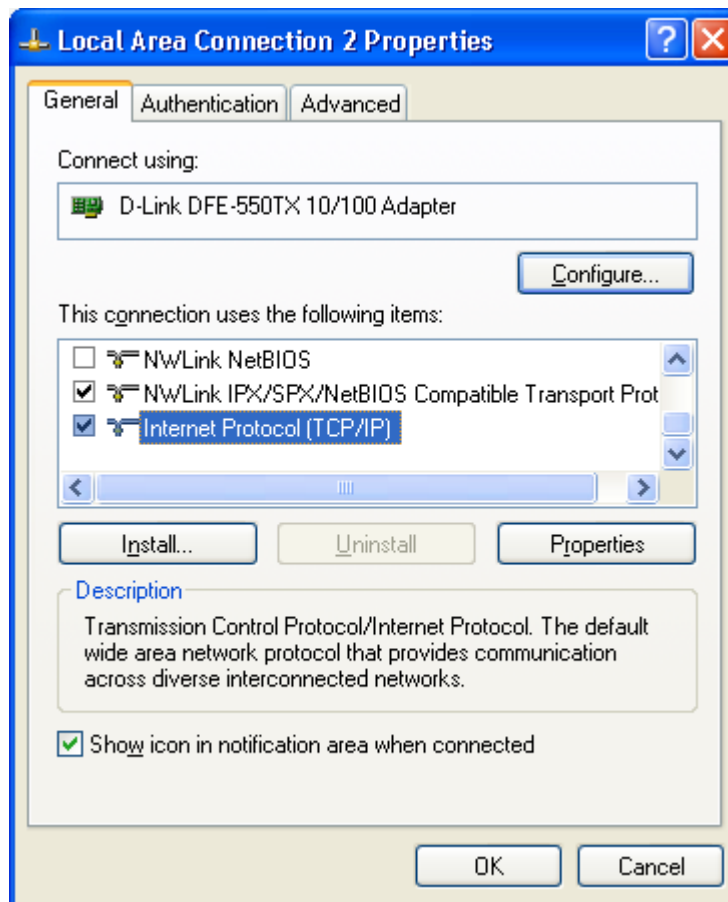


Figure 5. The **Local Area Connection Properties** window.

4. Select the **Obtain an IP address automatically** and **Obtain DNS server address automatically** radio buttons. Click the **OK** button.

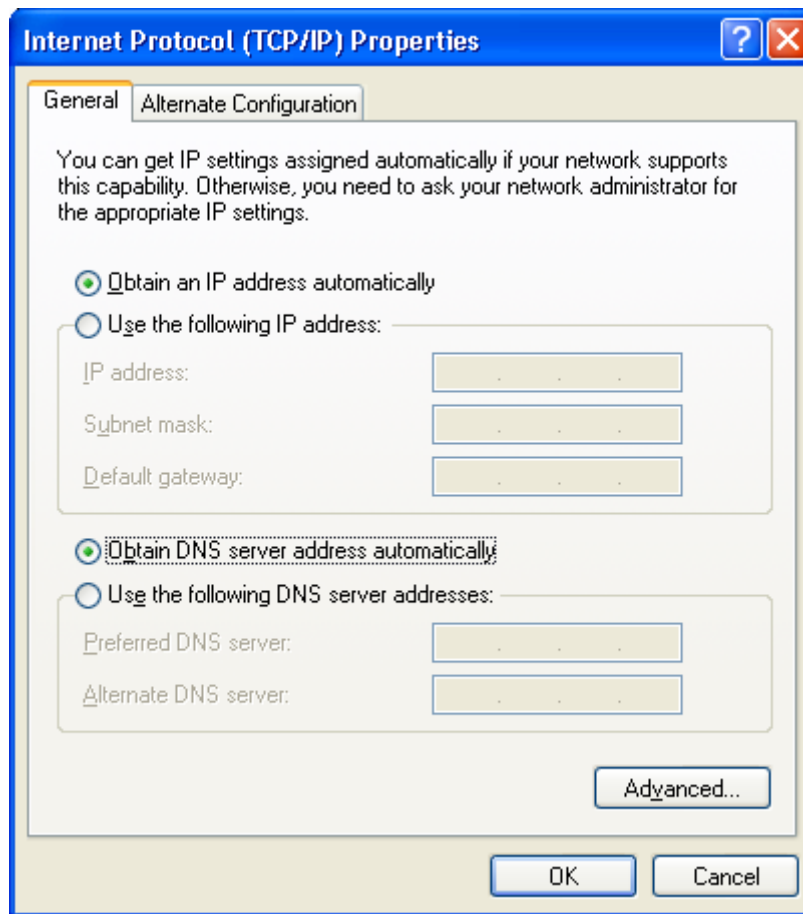


Figure 6. The **Internet Protocol (TCP/IP) Properties** window.

5. Click the **OK** button in the connection properties window.

Now your computer is configured to obtain an IP address automatically.

## Obtaining IP Address Automatically in OS Windows 7

1. Click the **Start** button and proceed to the **Control Panel** window.
2. Select the **Network and Sharing Center** section. (If the Control Panel has the category view (the **Category** value is selected from the **View by** drop-down list in the top right corner of the window), choose the **View network status and tasks** line under the **Network and Internet** section.)

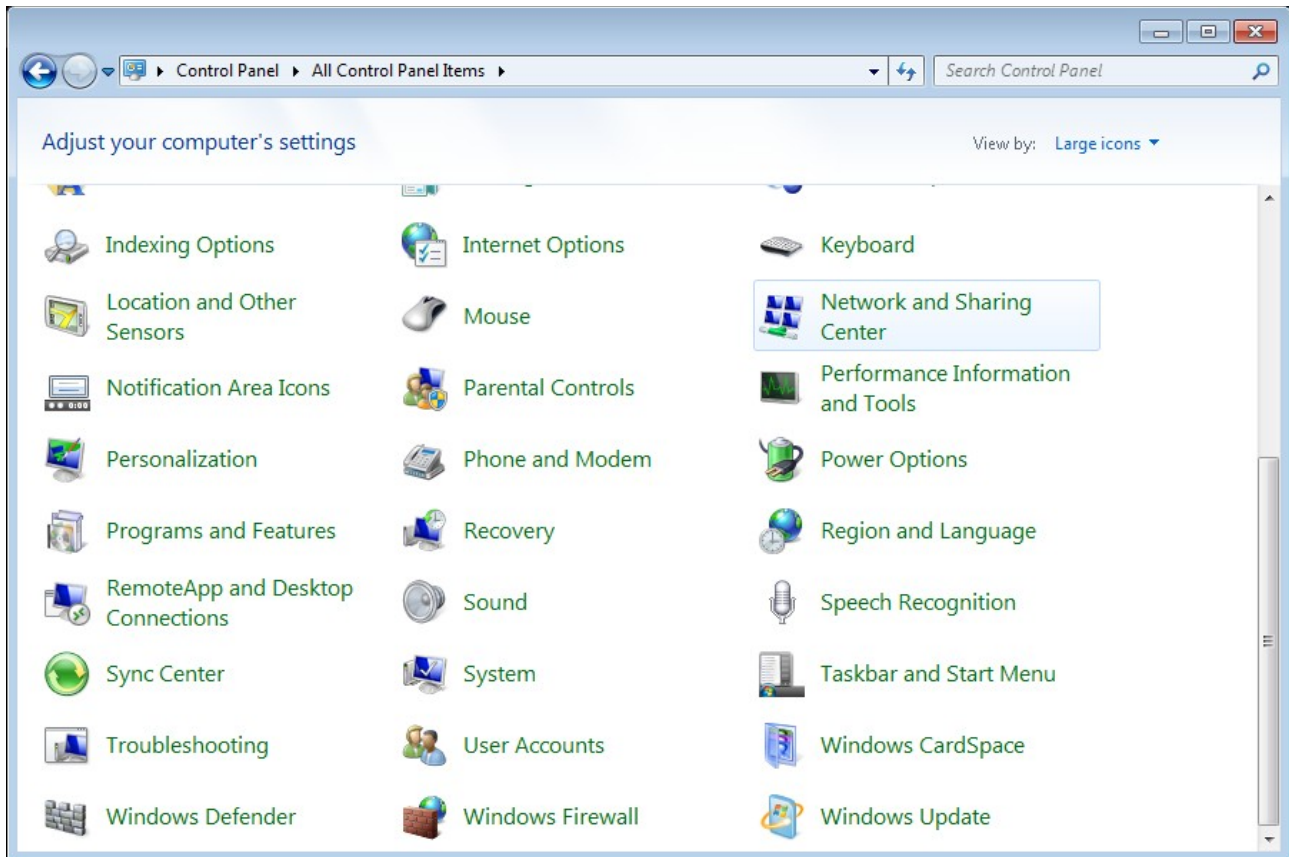


Figure 7. The **Control Panel** window.

3. In the menu located on the left part of the window, select the **Change adapter settings** line.

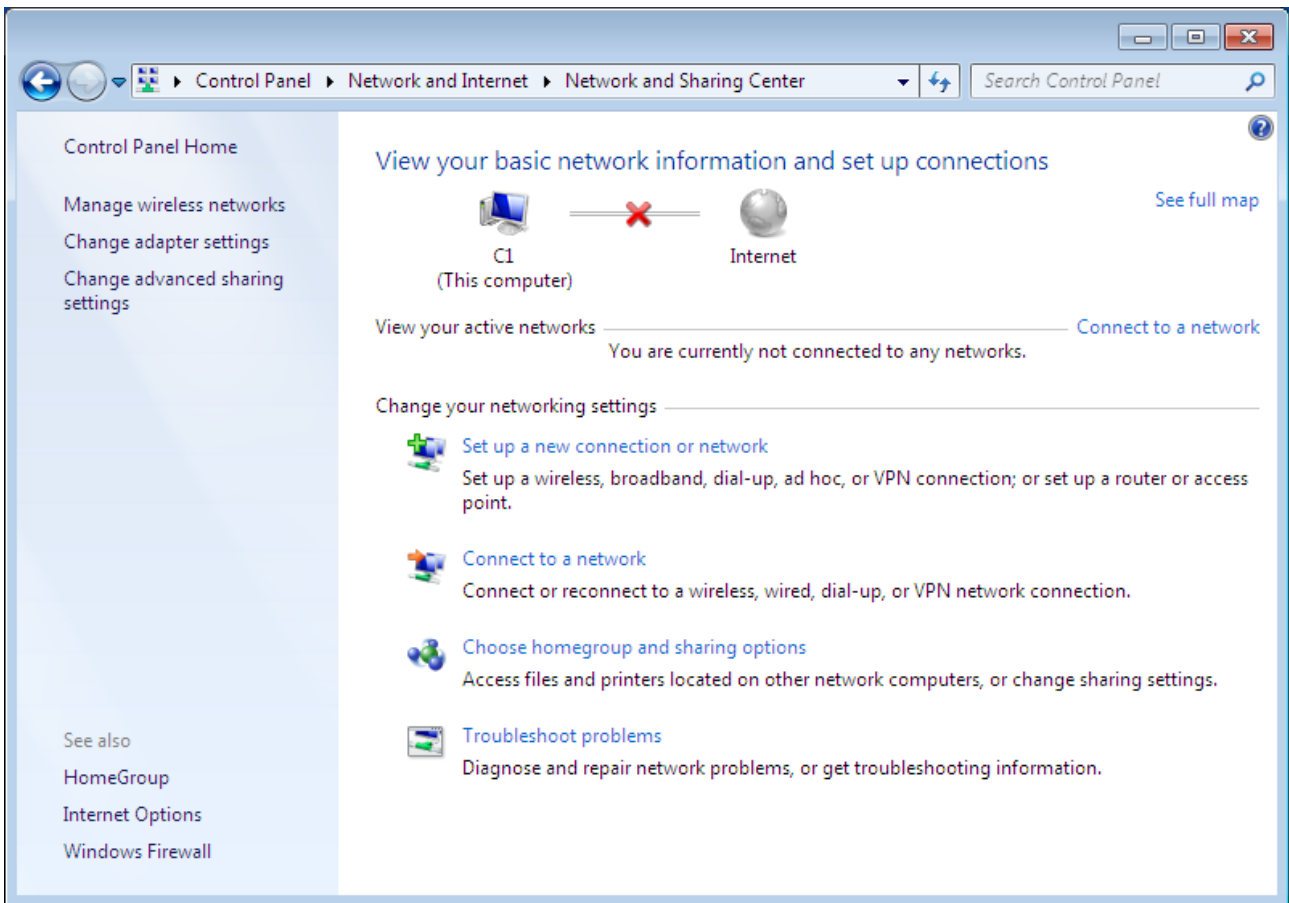


Figure 8. The **Network and Sharing Center** window.

4. In the opened window, right-click the relevant **Local Area Connection** icon and select the **Properties** line in the menu displayed.

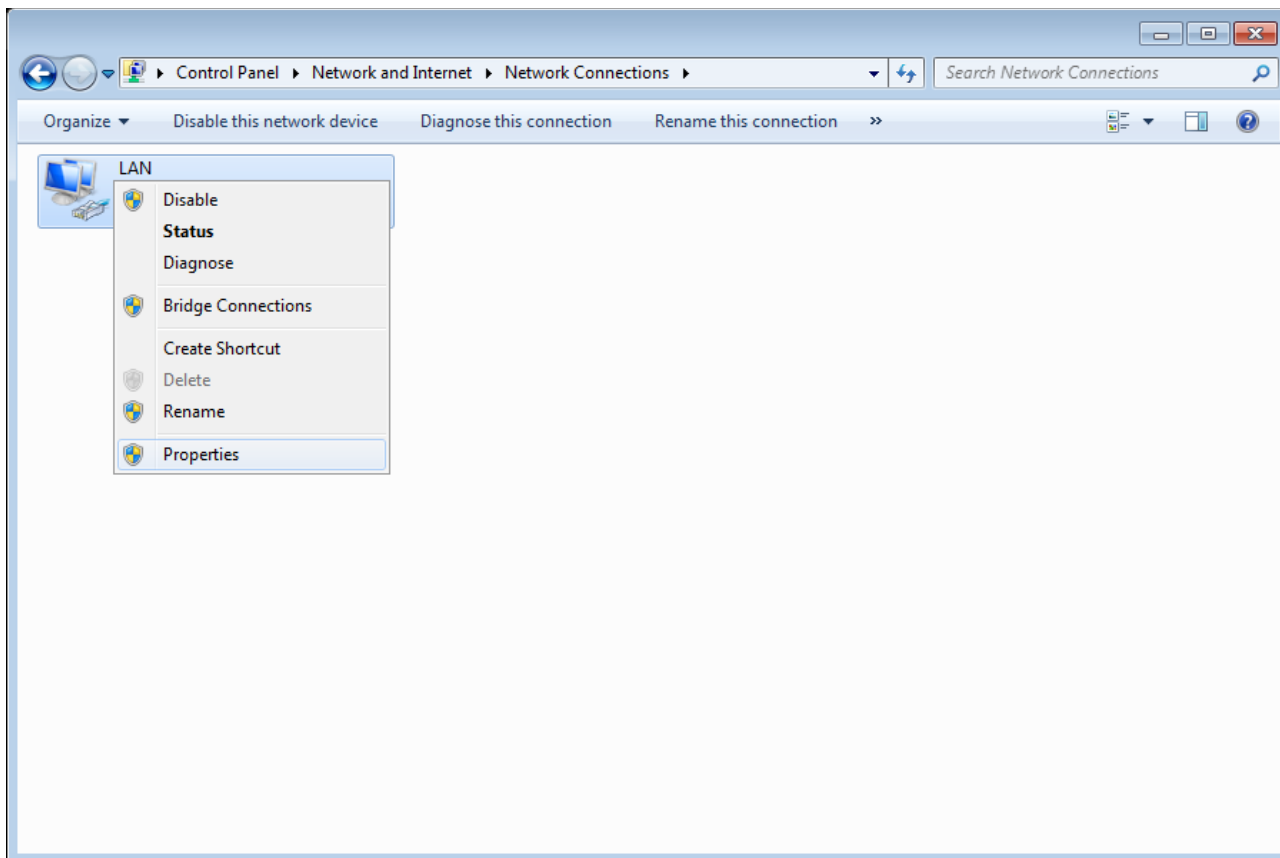


Figure 9. The **Network Connections** window.

5. In the **Local Area Connection Properties** window, on the **Networking** tab, select the **Internet Protocol Version 4 (TCP/IPv4)** line. Click the **Properties** button.

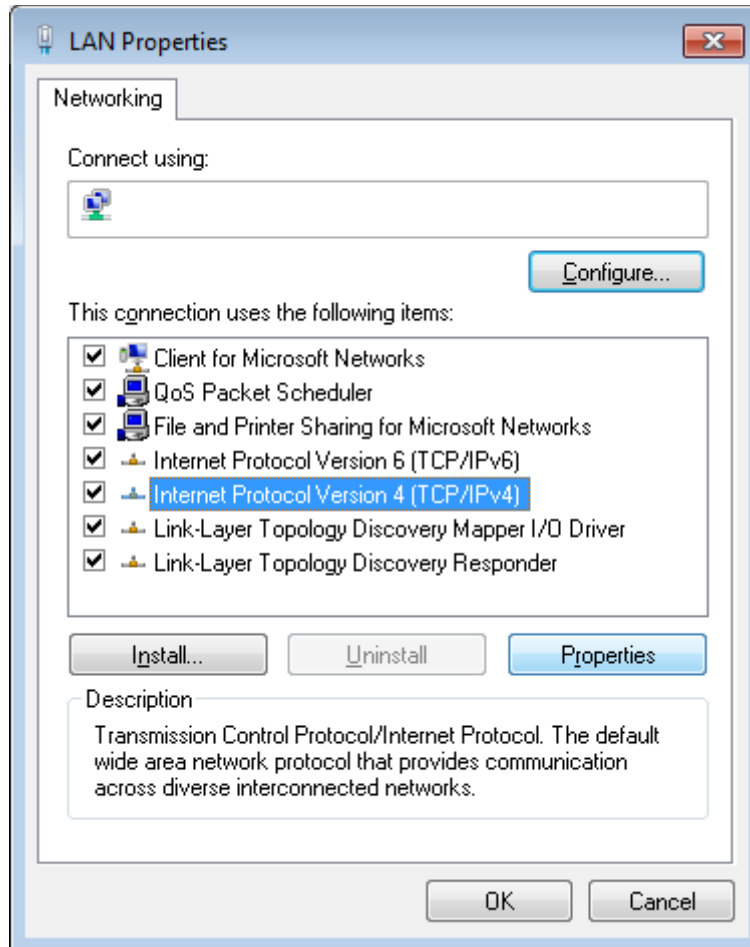


Figure 10. The **Local Area Connection Properties** window.



6. Select the **Obtain an IP address automatically** and **Obtain DNS server address automatically** radio buttons. Click the **OK** button.

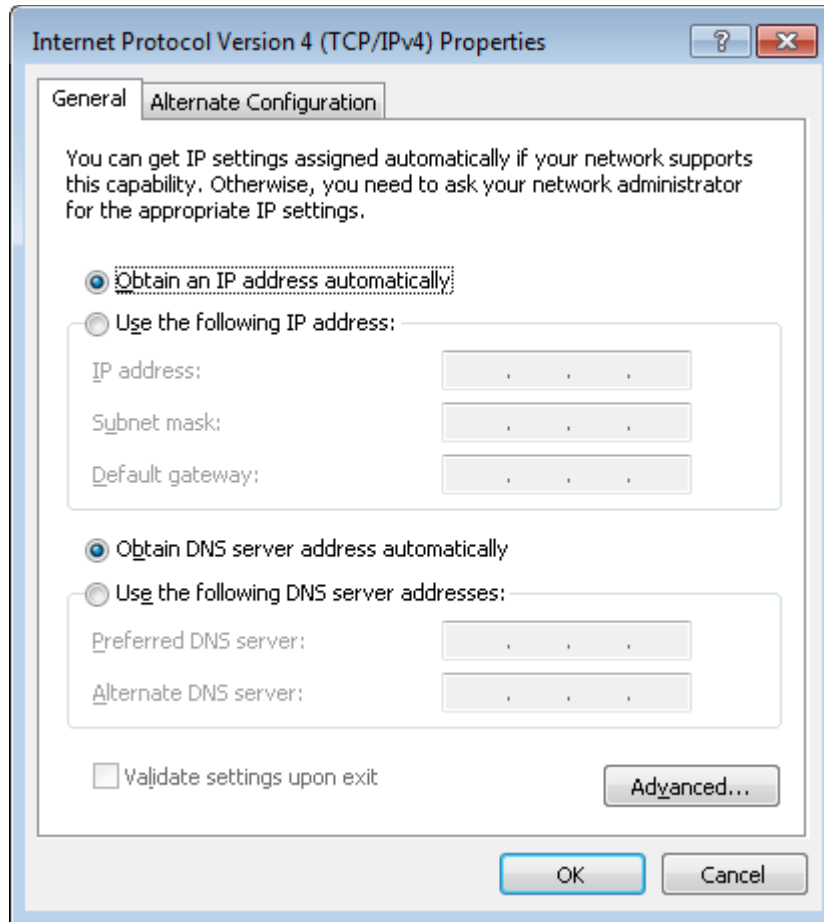


Figure 11. The **Internet Protocol Version 4 (TCP/IPv4) Properties** window.

7. Click the **OK** button in the connection properties window.

Now your computer is configured to obtain an IP address automatically.

## PC with Wi-Fi Adapter

1. To connect via a LTE, WiMAX, 3G GSM or CDMA network: connect your USB modem to the USB port<sup>6</sup> located on the left side panel of the router.

**!** If you need to connect or change a USB modem to another one when the router is powered on, power off the device, connect the modem to the USB port, and power on the router.

2. Connect the power cord to the power connector port on the back panel of the router, then plug the power adapter into an electrical outlet or power strip.
3. Turn on the router by pressing the **ON/OFF** button on its back panel.
4. Turn on your PC and wait until your operating system is completely loaded.
5. Turn on your Wi-Fi adapter. As a rule, modern notebooks with built-in wireless NICs are equipped with a button or switch that turns on/off the wireless adapter (refer to your PC documents). If your PC is equipped with a pluggable wireless NIC, install the software provided with your Wi-Fi adapter.

---

<sup>6</sup> It is recommended to use a USB extension cable to connect a USB modem to the router.

## Configuring Wi-Fi Adapter in OS Windows XP

1. Click the **Start** button and proceed to the **Control Panel > Network and Internet Connections > Network Connections** window.
2. Select the icon of the wireless network connection and make sure that your Wi-Fi adapter is on.

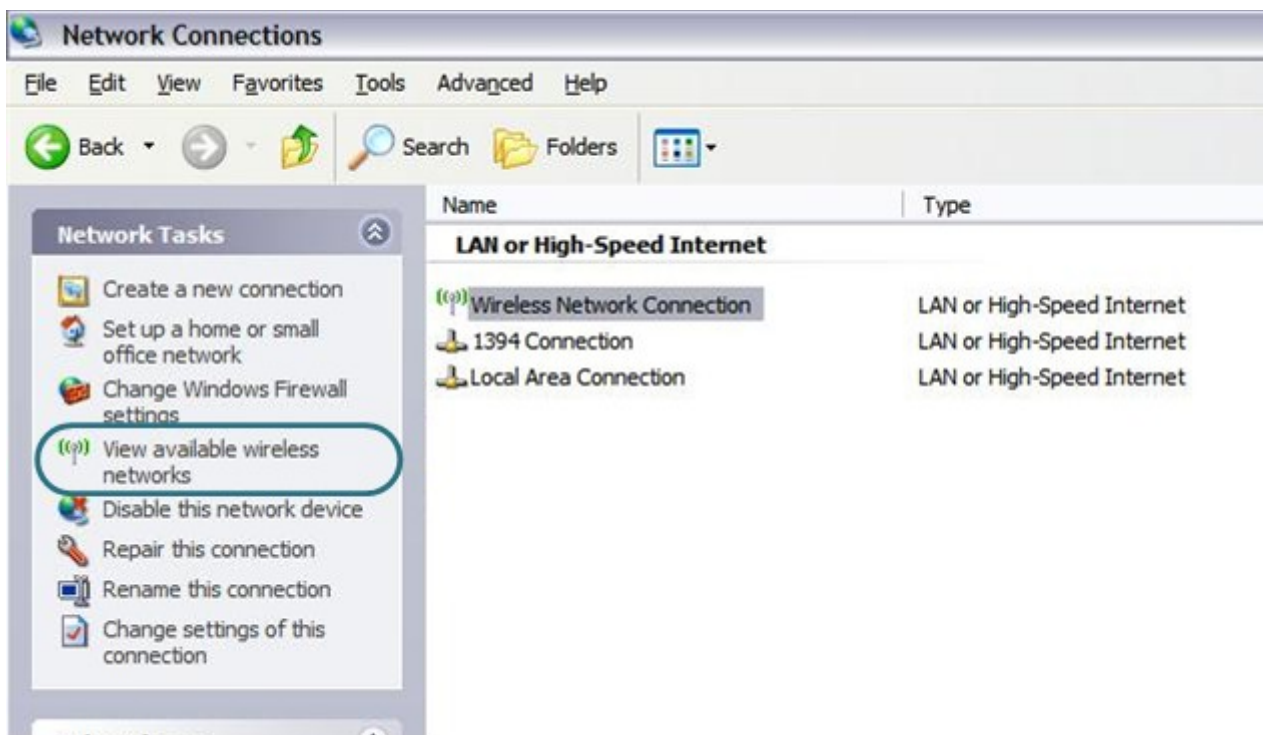


Figure 12. The **Network Connections** window.

3. Search for available wireless networks.
4. In the opened **Wireless Network Connection** window, select the wireless network **DIR-620** and click the **Connect** button.

After that the **Wireless Network Connection Status** window appears.

**!** If you perform initial configuration of the router via Wi-Fi connection, note that immediately after changing the wireless default settings of the router you will need to reconfigure the wireless connection using the newly specified settings.

## Configuring Wi-Fi Adapter in OS Windows 7

1. Click the **Start** button and proceed to the **Control Panel** window.
2. Select the **Network and Sharing Center** section. (If the Control Panel has the category view (the **Category** value is selected from the **View by** drop-down list in the top right corner of the window), choose the **View network status and tasks** line under the **Network and Internet** section.)

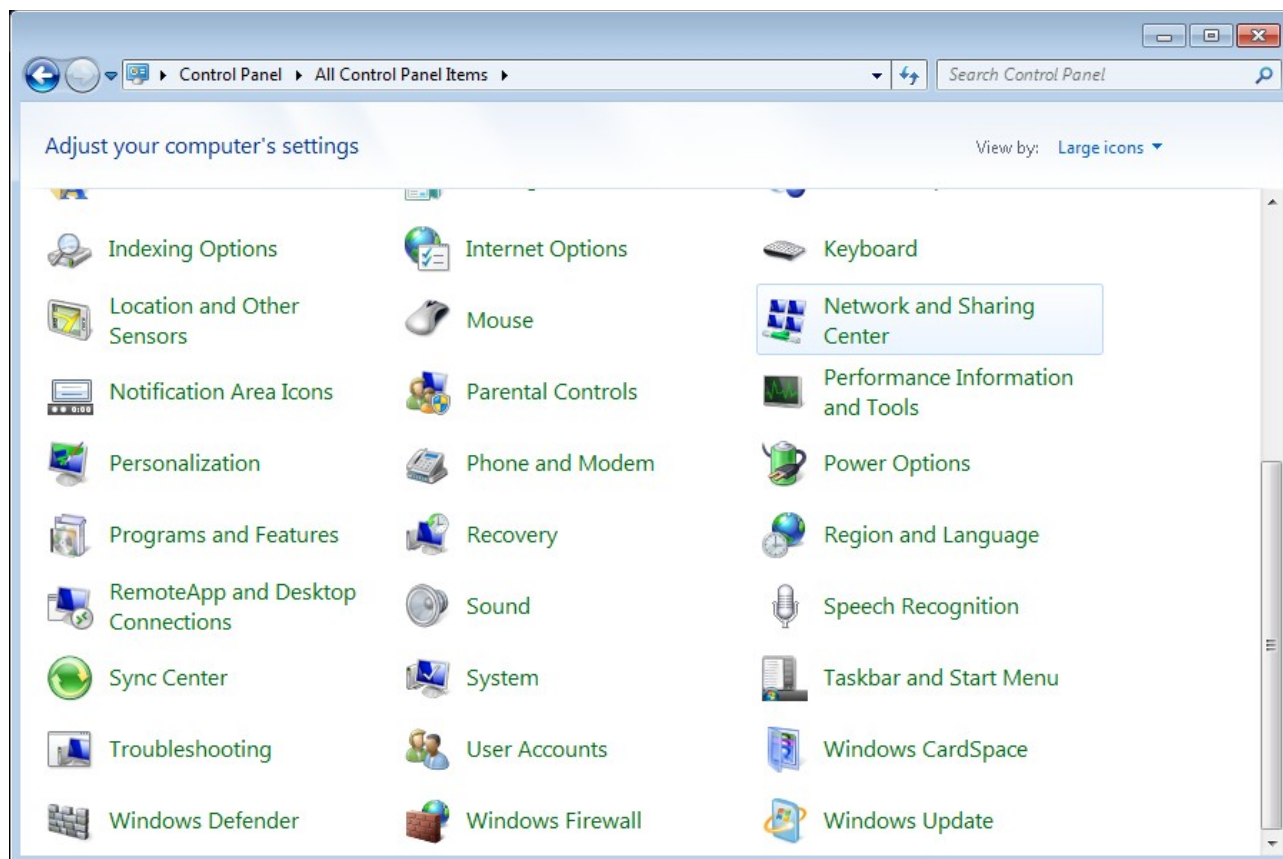


Figure 13. The **Control Panel** window.

3. In the menu located on the left part of the window, select the **Change adapter settings** line.
4. In the opened window, select the icon of the wireless network connection and make sure that your Wi-Fi adapter is on.
5. To open the list of available wireless networks, select the icon of the wireless network connection and click the **Connect To** button or left-click the network icon in the notification area located on the right side of the taskbar.




Figure 14. The notification area of the taskbar.

6. In the opened window, in the list of available wireless networks, select the wireless network **DIR-620** and click the **Connect** button.

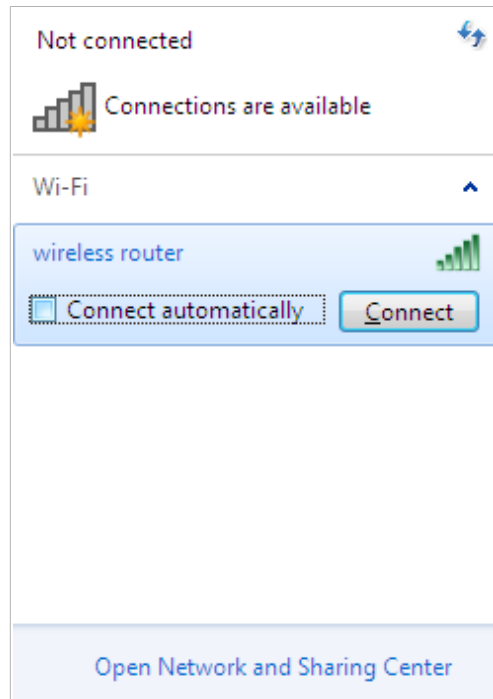


Figure 15. The list of available networks.

7. Wait for about 20-30 seconds. After the connection is established, the network icon will be displayed as the signal level scale.

**!** If you perform initial configuration of the router via Wi-Fi connection, note that immediately after changing the wireless default settings of the router you will need to reconfigure the wireless connection using the newly specified settings.

## Connecting to Web-based Interface

When you have configured your computer, you can access the web-based interface and configure needed parameters (create a WAN connection, change the parameters of the wireless network, specify the settings of the firewall, etc.).

1. Start a web browser (see the *Before You Begin* section, page 16).
2. In the address bar of the web browser, enter the IP address of the router (by default, the following IP address is specified: **192.168.0.1**). Press the **Enter** key.



Figure 16. Connecting to the web-based interface of the DIR-620 device.

3. On the opened page, enter the username and password for the administrator account in the **Login** and **Password** fields correspondingly (by default, the following username and password are specified: **admin**, **admin**). Then click the **Enter** link.

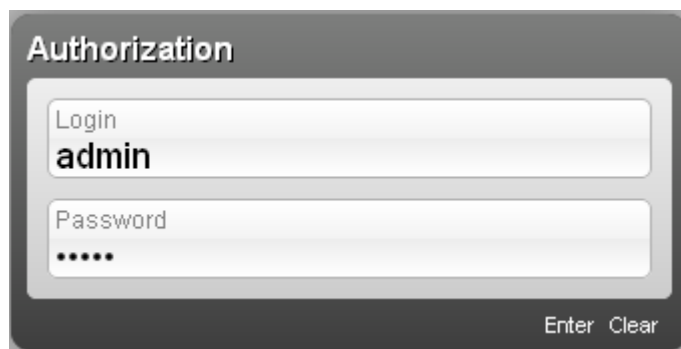


Figure 17. The login page.

**!** If the error “The page cannot be displayed” (or “Unable to display the page”/“Could not connect to remote server”) occurs upon connecting to the web-based interface of the router, make sure that you have properly connected the router to your computer.

Right after the first access to the web-based interface you are forwarded to the page for changing the administrator password specified by default.

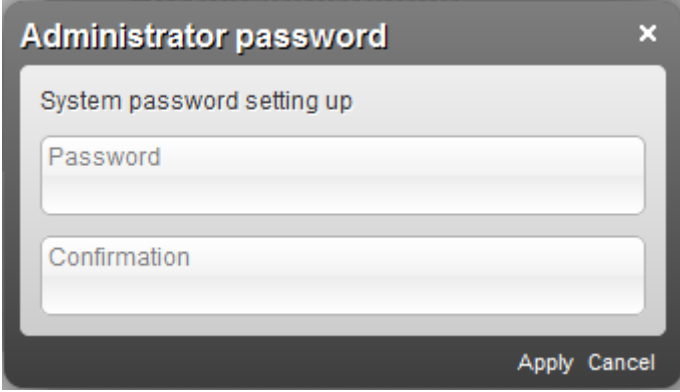


Figure 18. The page for changing the default administrator password.

Enter a new password in the **Password** and **Confirmation** fields (you may use digits, Latin letters (uppercase and/or lowercase), and characters available on the keyboard), then click the **Apply** link.



Remember or write down the new password for the administrator account. In case of losing the new password, you can access the settings of the router only after restoring the factory default settings via the hardware **RESET** button. This procedure wipes out all settings that you have configured for your router.

## Web-based Interface Structure

After successful registration the router's quick settings page opens.

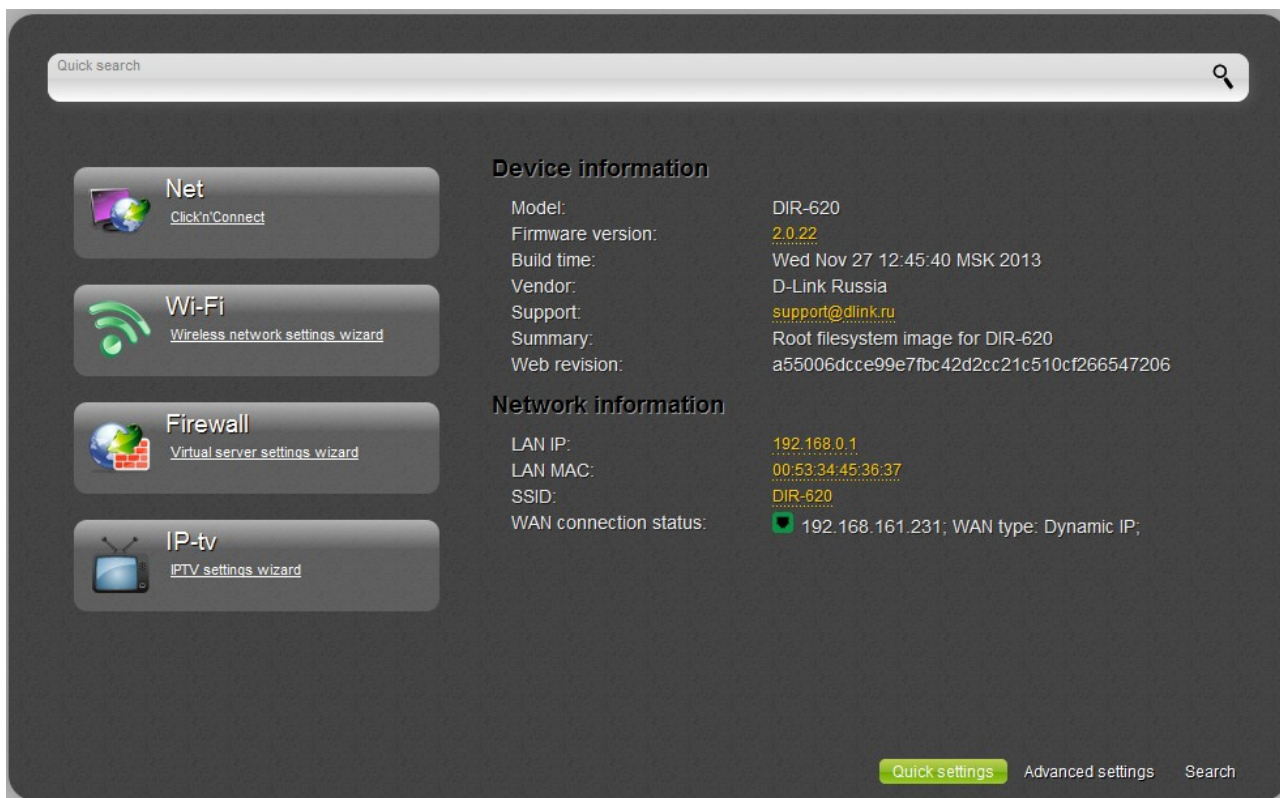


Figure 19. The quick settings page.

The web-based interface of the router is multilingual. Select a needed language from the menu displayed when the mouse pointer is over the **Language** caption. You can change the language of the web-based interface in any menu item.

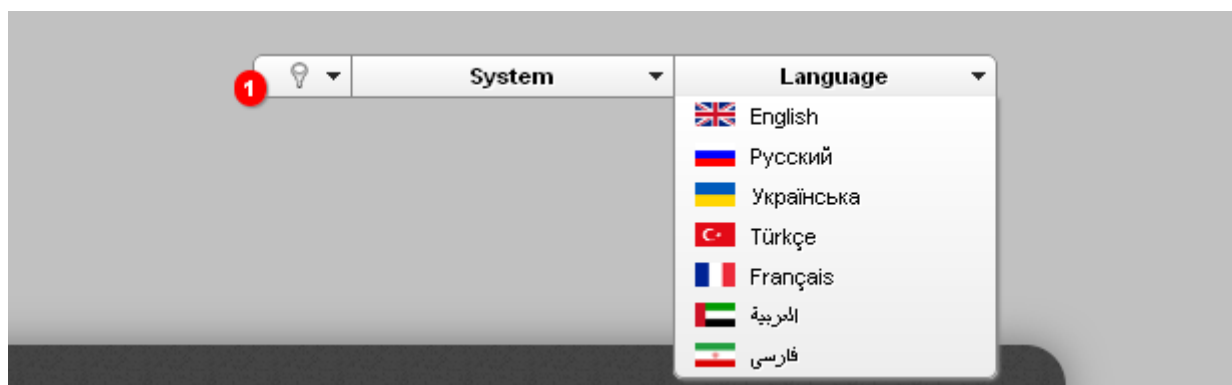



Figure 20. Changing the language of the web-based interface.

After selecting the language, the notification on unsaved changes will be displayed. Click the **Save** icon (  ) to save the current language of the web-based interface as the default language.

The quick settings page displays general information on the router and its software (the version and the date of the firmware, the IP address of the device, the name of the WLAN, etc.).



On the quick settings page you can run a needed Wizard, quickly get to some pages of the web-based interface, search for a specific page, or switch to the advanced settings section.

To upgrade the firmware of the router, left-click the current firmware version (the right column of the **Firmware version** line). After clicking the line, the **System / Firmware upgrade** page opens (for the detailed description of the page, see the *Firmware Upgrade* section, page 186).

To contact the technical support group (to send an e-mail), left-click the support e-mail address (the right column of the **Support** line). After clicking the line, the e-mail client window for sending a new letter to the specified address opens.

To edit the router's local interface parameters, left-click the IP or MAC address of the local interface (the right column of the **LAN IP** line or **LAN MAC** line correspondingly). After clicking the line, the page for editing the LAN interface opens (for the detailed description of the page, see the *LAN* section, page 118).

To configure the router's WLAN parameters, left-click the SSID of the WLAN (the right column of the **SSID** line). After clicking the line, the **Wi-Fi / Basic settings** page opens (for the detailed description of the page, see the *Basic Settings* section, page 121).

To configure connection to the Internet, click the **Click'n'Connect** link in the **Net** section (for the detailed description of the Wizard, see the *Click'n'Connect* section, page 38).

To configure the router's wireless network, click the **Wireless network settings wizard** link in the **Wi-Fi** section (for the detailed description of the Wizard, see the *Wireless Network Settings Wizard* section, page 81).

To configure access from the Internet to a web server located in your LAN, click the **Virtual server settings wizard** link in the **Firewall** section (for the detailed description of the Wizard, see the *Virtual Server Settings Wizard* section, page 84).

To configure the router to use an IPTV set-top box, click the **IPTV settings wizard** link in the **IP-tv** section (for the detailed description of the Wizard, see the *IPTV Settings Wizard* section, page 86).



To configure all parameters of the router independently without the Wizards, click the **Advanced settings** link in the bottom right corner of the page.



Figure 21. The advanced settings page.

The pages of the **Status** section display data on the current state of the router (for the description of the pages, see the **Status** section, page 87).

The pages of the **Net** section are designed for configuring basic parameters of the LAN interface of the router and creating a connection to the Internet (for the description of the pages, see the **Net** section, page 92).

The pages of the **Wi-Fi** section are designed for specifying all needed settings of the router's wireless network (for the description of the pages, see the **Wi-Fi** section, page 121). Also you can enable or disable the device's WLAN directly from the advanced settings page. To enable the WLAN, select the **On** position (  ) of the **Enable/Disable Wi-Fi** switch. To disable the WLAN, select the **Off** position (  ) of the **Enable/Disable Wi-Fi** switch.

The pages of the **Advanced** section are designed for configuring additional parameters of the router (for the description of the pages, see the **Advanced** section, page 140).

The pages of the **Firewall** section are designed for configuring the firewall of the router (for the description of the pages, see the **Firewall** section, page 155).

The pages of the **3G modem** section are designed to operate the connected 3G USB modem (for the description of the pages, see the **3G Modem** section, page 164).

The **WiMAX** section provides data on the connected WiMAX USB modem (for the description of the page, see the **WiMAX** section, page 168).

The pages of the **USB storage** section are designed to operate the connected USB storage (for the description of the pages, see the **USB Storage** section, page 170).

The pages of the **Transmission** section are designed for configuration of the built-in Transmission torrent client and management of downloading process (for the description of the pages, see the **Transmission** section, page 177).

The pages of the **System** section provide functions for managing the internal system of the router (for the description of the pages, see the **System** section, page 180).

Also you can find a specific page via search. To do this, enter the name of the page, wholly or partly, in the search bar in the top part of the web-based interface page, and then select a needed link in the search results.



Figure 22. The page displaying the search results.

## Saving and Restoring Settings

**!** Note that you should regularly save the changes of the router's settings to the non-volatile memory.

The router's web-based interface displays the notification on unsaved changes at the top of the page.

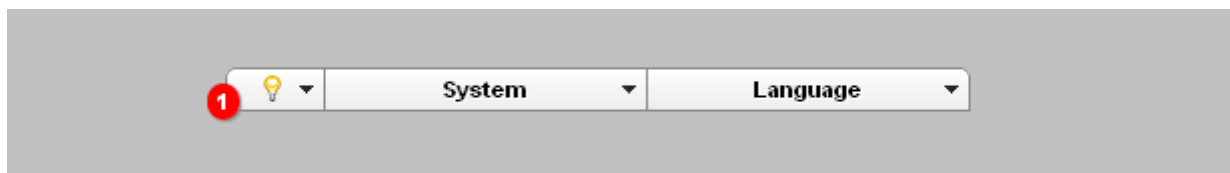


Figure 23. The notification on unsaved changes.

Place the mouse pointer on the **Notifications** icon (💡) to view the list of unsaved changes and click the relevant link.

You can save the router's settings via the top-page menu displayed when the mouse pointer is over the **System** caption.

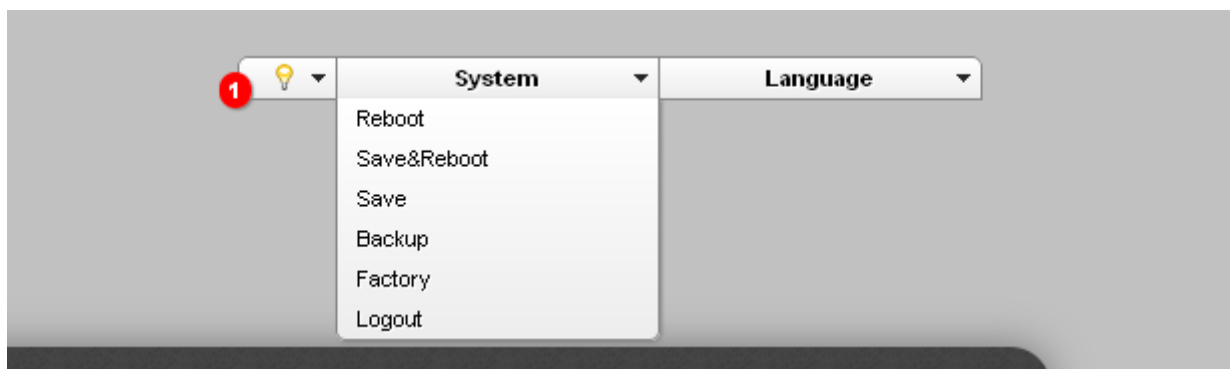


Figure 24. The top-page menu.

Click the **Reboot** line if you have already saved the router's settings.

Click the **Save&Reboot** line to save new settings and immediately reboot the router.

Click the **Save** line to save new settings to the non-volatile memory and continue configuring the device. Also you can save the device's parameters via the **Save** button on the **System / Configuration** page.

Click the **Backup** line and follow the dialog box appeared to save the configuration (all settings of the router) to your PC. Also you can save the router's configuration to your PC via the **Backup** button on the **System / Configuration** page.

Click the **Factory** line to restore the factory default settings. Also you can restore the factory defaults via the **Factory** button on the **System / Configuration** page.

Also you can restore the factory default settings via the hardware **RESET** button. The button is located on the back panel of the router.

To restore the factory default settings, insert a small paperclip into the hole of the button (with the router **powered on**), push, and hold for 10 seconds. Then remove the paperclip. All LEDs of the router should turn off and then turn on again.


Wait for about 30 seconds. Now you can access the web-based interface of the router using the default IP address, username and password.

When you have configured all needed settings, click the **Logout** line.

## CHAPTER 4. CONFIGURING VIA WEB-BASED INTERFACE

### *Click'n'Connect*

To configure connection to the Internet, click the **Click'n'Connect** link in the **Net** section.

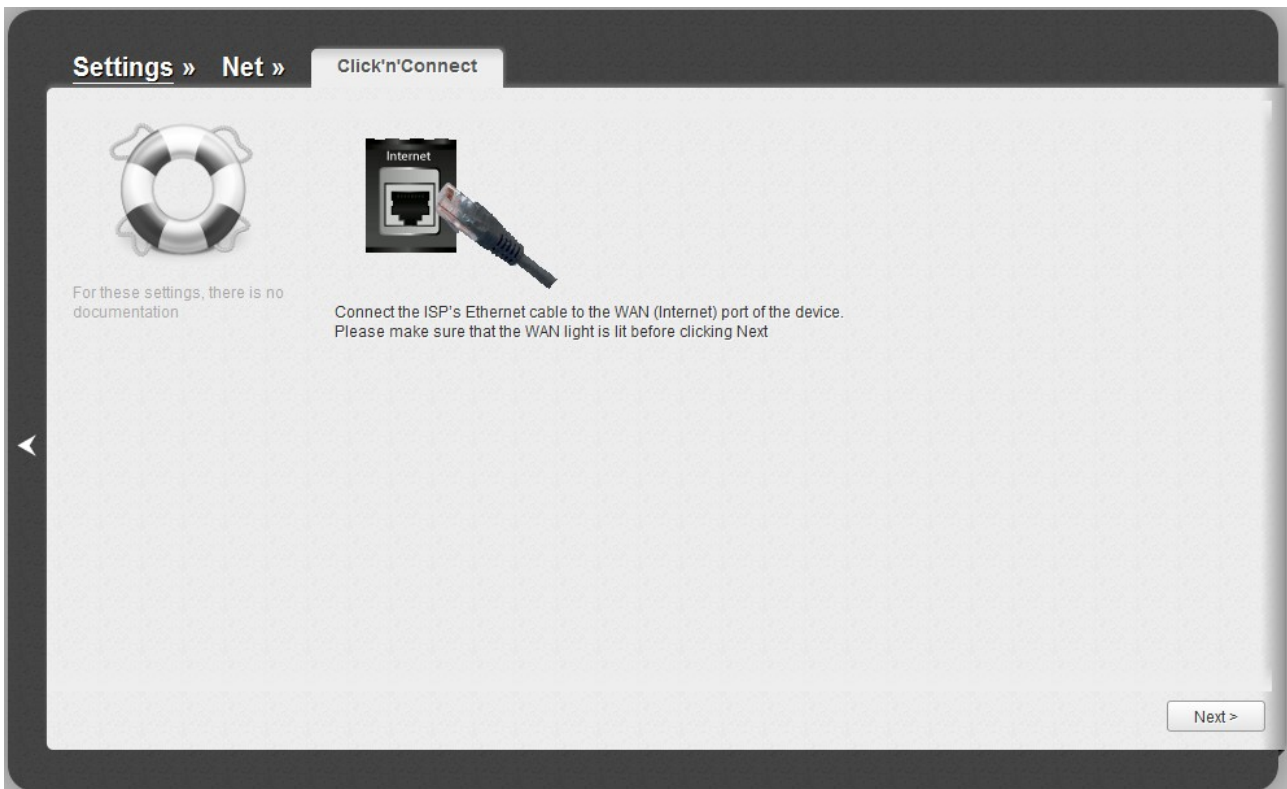

*Figure 25. Configuring connection to the Internet.*

Connect the Ethernet cable provided by your ISP to the WAN port of the router. Verify the relevant LED (the **INTERNET** LED should be on).

Click the **Next** button to continue.

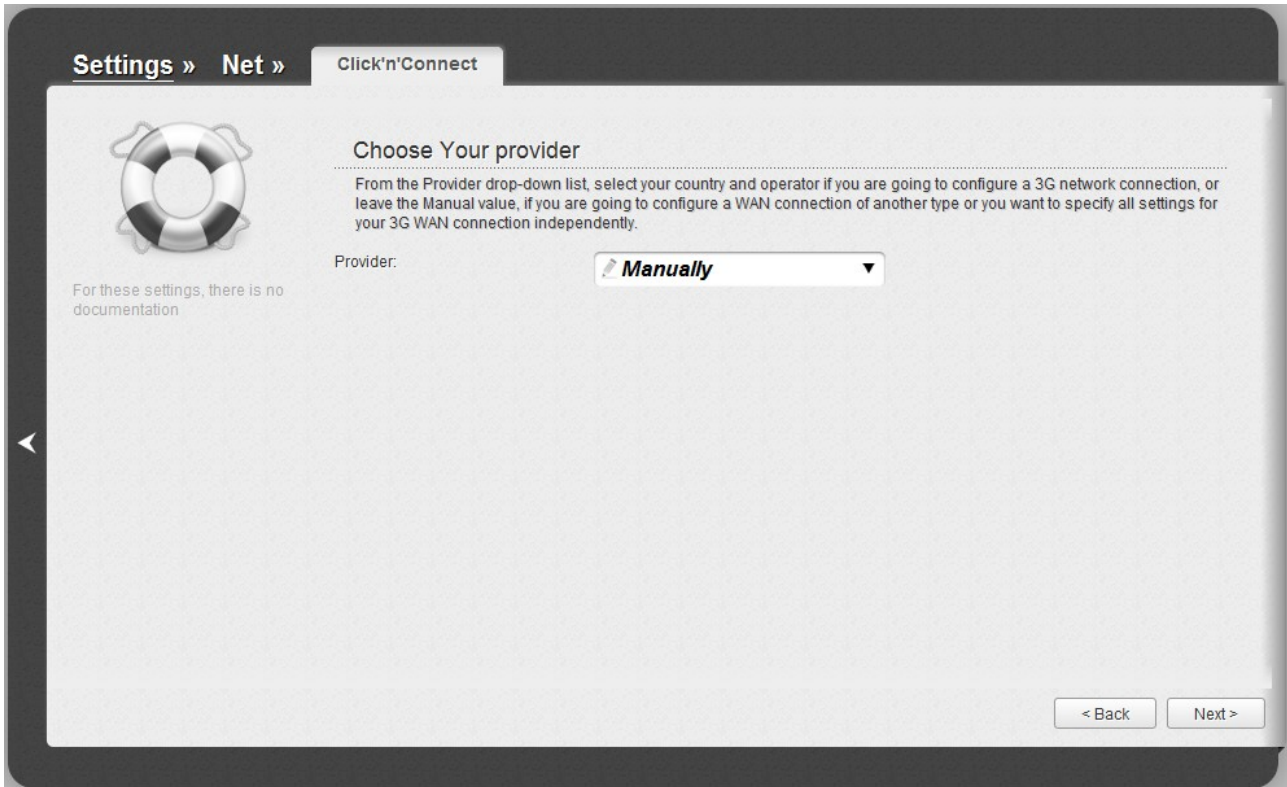


Figure 26. The page for selecting a 3G network operator.

On the opened page, from the **Provider** drop-down list, select your country and operator if you are going to configure a 3G network connection, or leave the **Manually** value, if you are going to configure a wired, WiMAX or LTE WAN connection or you want to specify all settings for your 3G WAN connection independently.

Click the **Next** button to continue.

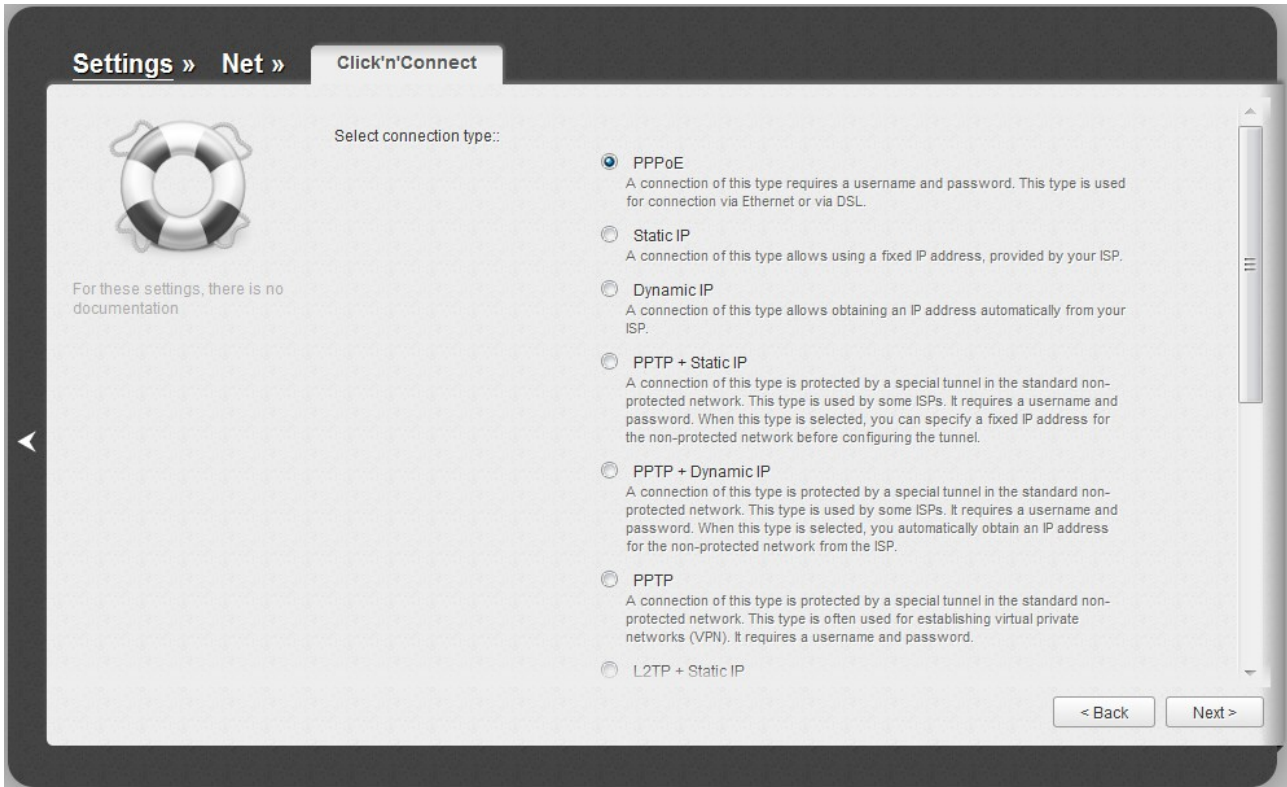



Figure 27. The page for selecting the connection type.

On the opened page, select the needed choice of the radio button and click the **Next** button.



## Creating WAN Connection

### PPPoE Connection

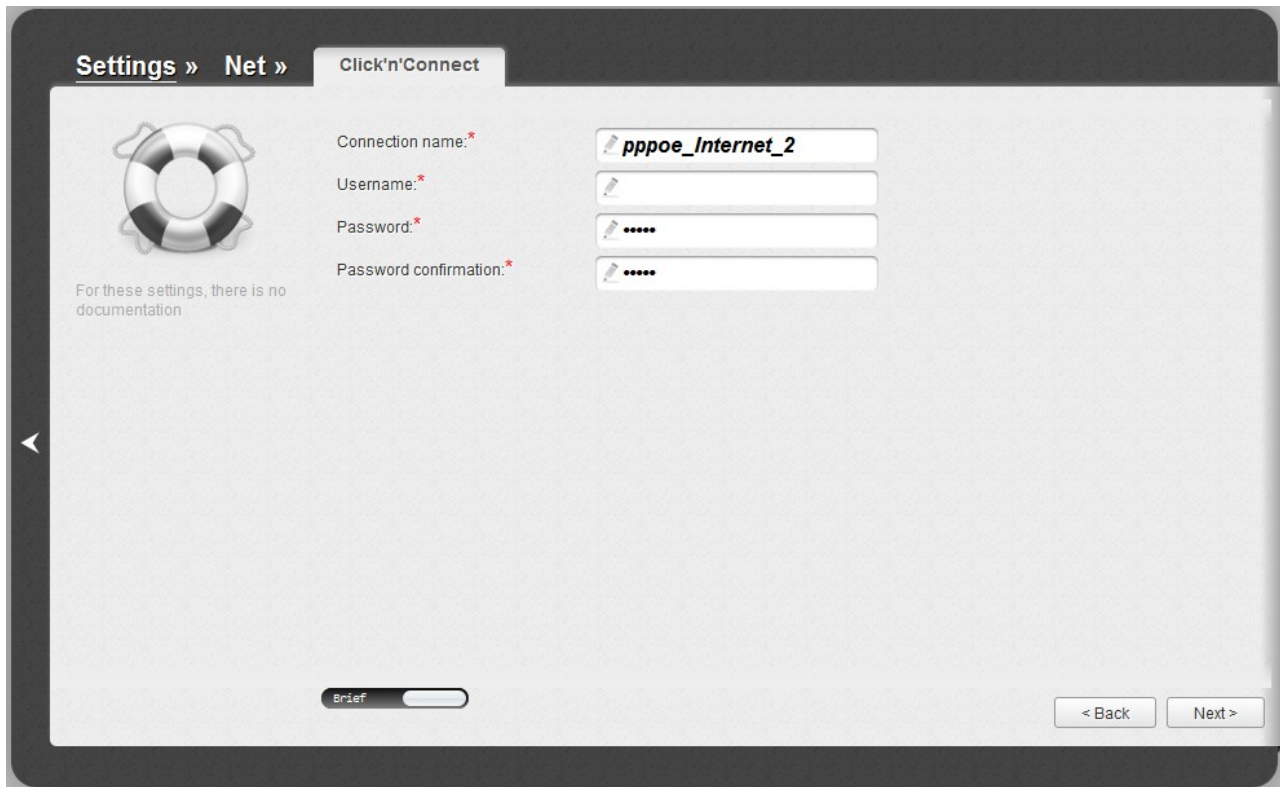

The screenshot displays the 'Click'n'Connect' configuration page for a PPPoE connection. The breadcrumb navigation shows 'Settings » Net » Click'n'Connect'. On the left, there is a lifebuoy icon and a note: 'For these settings, there is no documentation'. The main configuration area contains four fields: 'Connection name:' with the value 'pppoe\_Internet\_2', 'Username:', 'Password:', and 'Password confirmation:'. Each field has a small edit icon to its left. At the bottom left, there is a 'Brief' toggle switch. At the bottom right, there are '< Back' and 'Next >' buttons.

Figure 28. Configuring PPPoE WAN connection.

In the **Connection name** field, specify a name for the connection for easier identification.

In the **Username** field, enter your login, and in the **Password** and **Password confirmation** fields – the password provided by your ISP.

As a rule, the specified settings are enough to configure a connection of the selected type. If you need to specify additional settings, open the expert settings mode. To do this, use the switch in the bottom left corner of the page.

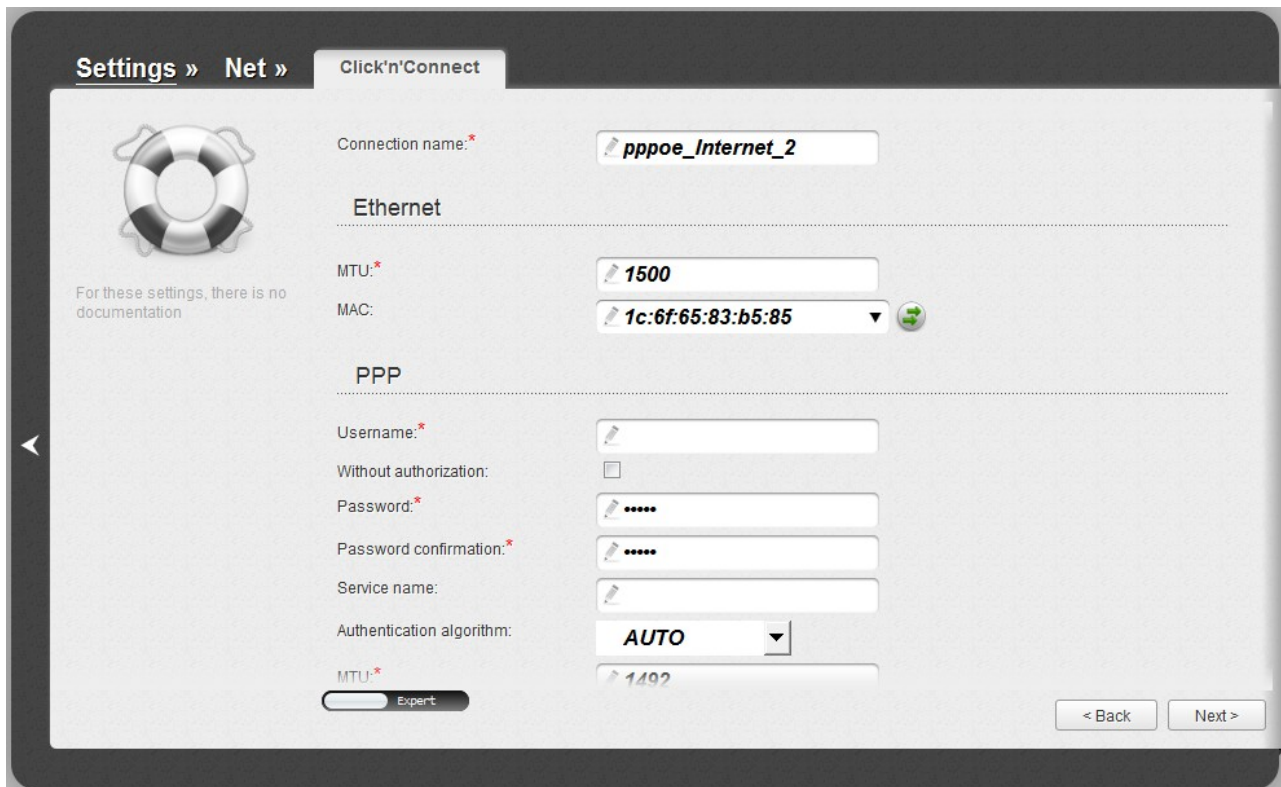



Figure 29. Configuring PPPoE WAN connection. The expert settings mode. The **Ethernet** section.

Parameter	Description
<b>Connection name</b>	A name for connection for easier identification.
<b>Ethernet</b>	
<b>MTU</b>	The maximum size of units transmitted by the interface.
<b>MAC</b>	<p>A MAC address assigned to the interface. This parameter is mandatory if your ISP uses MAC address binding. In the field, enter the MAC address registered by your ISP upon concluding the agreement.</p> <p>You can click the <b>Clone MAC Address</b> button () to set the MAC address of the network interface card (of the computer that is being used to configure the router at the moment) as the MAC address of the WAN interface.</p> <p>Also you can set the address of a device connected to the router's LAN at the moment. To do this, select the relevant value from the drop-down list (the field will be filled in automatically).</p>

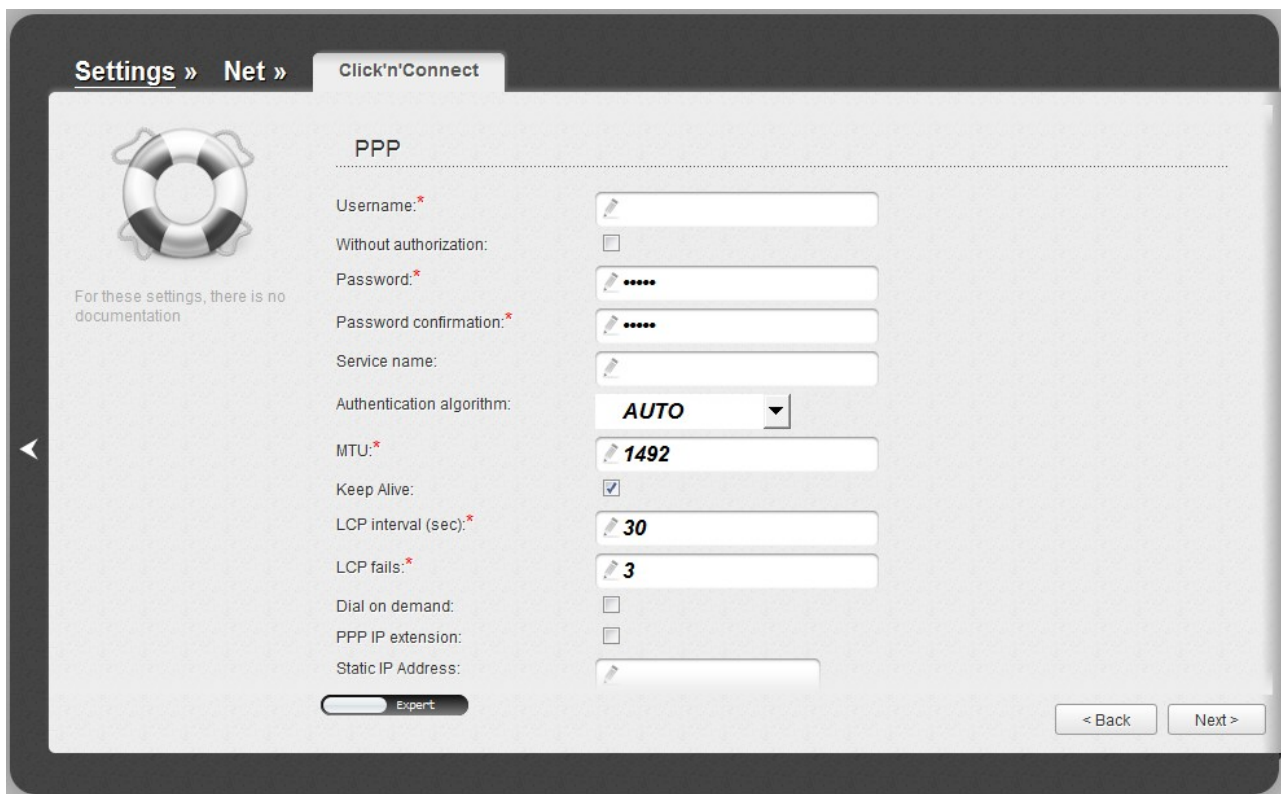


Figure 30. Configuring PPPoE WAN connection. The expert settings mode. The **PPP** section.

Parameter	Description
<b>PPP</b>	
<b>Username</b>	A username (login) to access the Internet.
<b>Without authorization</b>	Select the checkbox if you don't need to enter a username and password to access the Internet.
<b>Password</b>	A password to access the Internet.
<b>Password confirmation</b>	The confirmation of the entered password (to avoid mistypes).
<b>Service name</b>	The name of the PPPoE authentication server.
<b>Authentication algorithm</b>	Select a required authentication method from the drop-down list or leave the <b>AUTO</b> value.
<b>MTU</b>	The maximum size of units transmitted by the interface.
<b>Keep Alive</b>	Select the checkbox if you want the router to keep you connected to your ISP even when the connection has been inactive for a specified period of time. When the checkbox is selected, the <b>LCP interval</b> and <b>LCP fails</b> fields are available. Specify the required values.

Parameter	Description
<b>Dial on demand</b>	Select the checkbox if you want the router to establish connection to the Internet on demand. In the <b>Maximum idle time</b> field, specify a period of inactivity (in seconds) after which the connection should be terminated.
<b>PPP IP extension</b>	This option is used by some ISPs. Contact your ISP to clarify if this checkbox needs to be enabled.
<b>Static IP Address</b>	Fill in the field if you want to use a static IP address to access the Internet.
<b>PPP debug</b>	Select the checkbox if you want to log all data on PPP connection debugging.

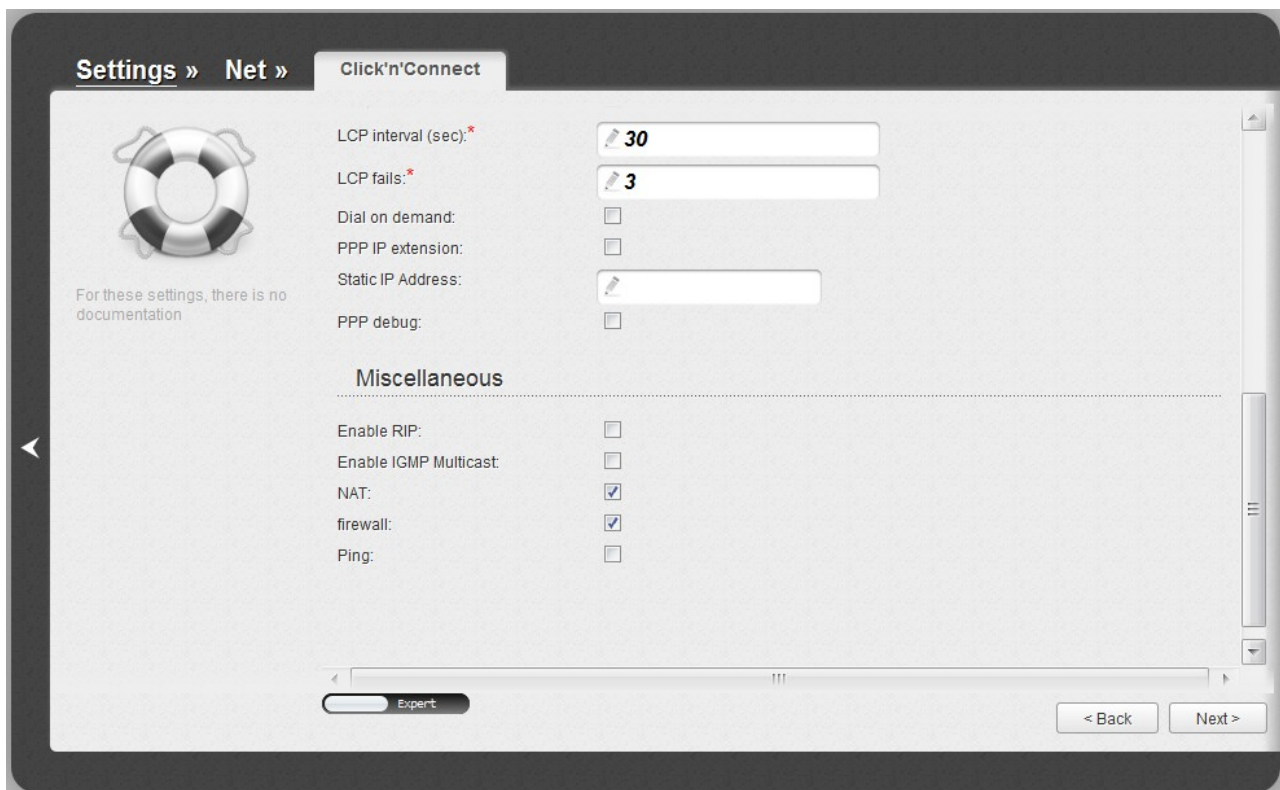


Figure 31. Configuring PPPoE WAN connection. The expert settings mode. The **Miscellaneous** section.


Parameter	Description
<b>Miscellaneous</b>	
<b>Enable RIP</b>	Select the checkbox to allow using RIP for this connection.
<b>Enable IGMP Multicast</b>	Select the checkbox to allow multicast traffic from the external network (e.g. video streaming) to be received.
<b>NAT</b>	Select the checkbox if you want one WAN IP address to be used for all computers of your LAN.
<b>Firewall</b>	Select the checkbox to enable protection against ARP and DDoS attacks.
<b>Ping</b>	Select the checkbox to allow the router to answer ping requests from the external network through this connection. For security reasons, it is recommended not to select this checkbox.

Click the **Next** button to continue.

After that the page displaying all specified settings opens. Click the **Apply** button to create the connection or the **Back** button to specify other settings.

After clicking the **Apply** button, the page for checking the Internet availability opens (see the **Checking Internet Availability** section, page 76).

## Static IP Connection

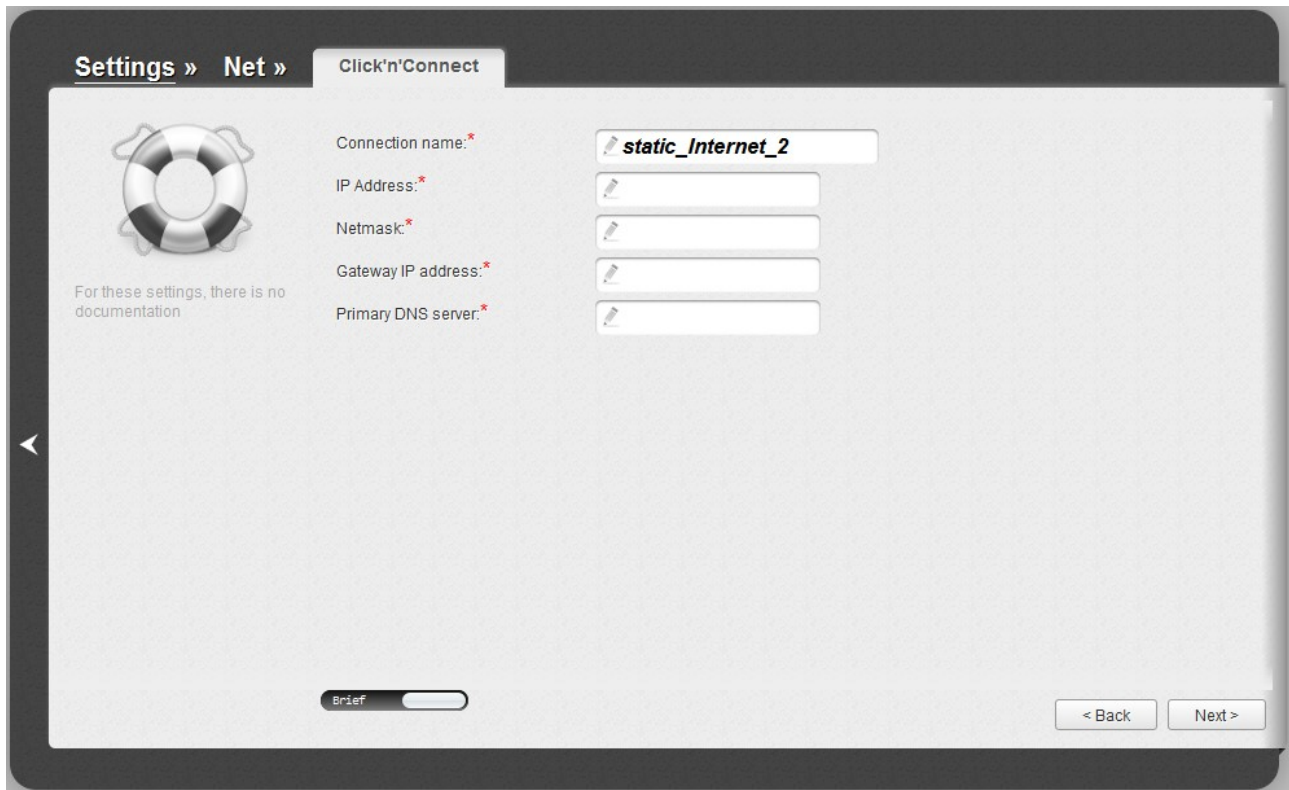

The screenshot shows the 'Settings » Net » Click'n'Connect' configuration page. On the left, there is a lifebuoy icon and a note: 'For these settings, there is no documentation'. The main area contains five input fields, each with a red asterisk indicating it is required: 'Connection name:' (filled with 'static\_Internet\_2'), 'IP Address:', 'Netmask:', 'Gateway IP address:', and 'Primary DNS server:'. Each field has a small edit icon to its left. At the bottom left, there is a 'Brief' toggle switch. At the bottom right, there are '< Back' and 'Next >' buttons.

Figure 32. Configuring Static IP WAN connection.

In the **Connection name** field, specify a name for the connection for easier identification.

Fill in the **IP Address** and **Netmask** fields.

In the **Gateway IP address** field, enter the IP address of the gateway used by this WAN connection.

In the **Primary DNS server** field, enter the address of the primary DNS server.

As a rule, the specified settings are enough to configure a connection of the selected type. If you need to specify additional settings, open the expert settings mode. To do this, use the switch in the bottom left corner of the page.

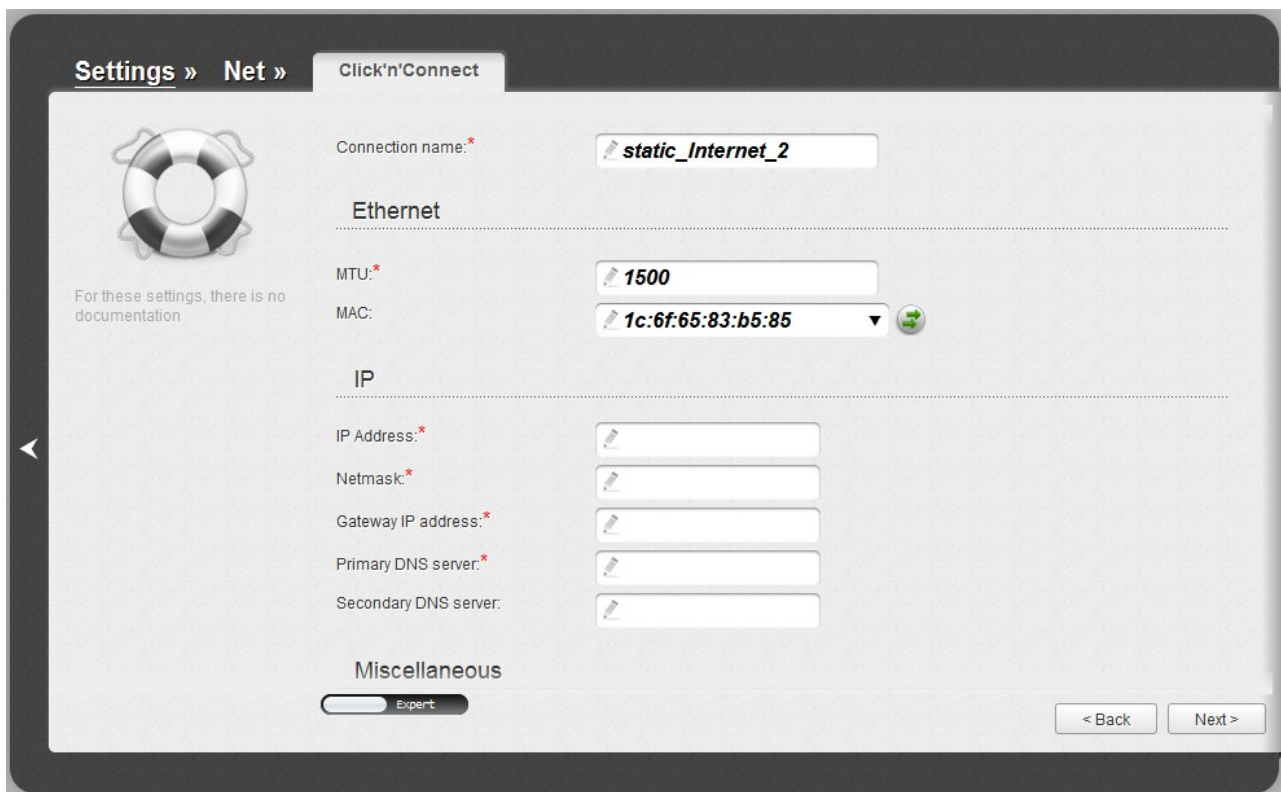



Figure 33. Configuring Static IP WAN connection. The expert settings mode. The **Ethernet** section.

Parameter	Description
<b>Connection name</b>	A name for connection for easier identification.
<b>Ethernet</b>	
<b>MTU</b>	The maximum size of units transmitted by the interface.
<b>MAC</b>	<p>A MAC address assigned to the interface. This parameter is mandatory if your ISP uses MAC address binding. In the field, enter the MAC address registered by your ISP upon concluding the agreement.</p> <p>You can click the <b>Clone MAC Address</b> button (  ) to set the MAC address of the network interface card (of the computer that is being used to configure the router at the moment) as the MAC address of the WAN interface.</p> <p>Also you can set the address of a device connected to the router's LAN at the moment. To do this, select the relevant value from the drop-down list (the field will be filled in automatically).</p>

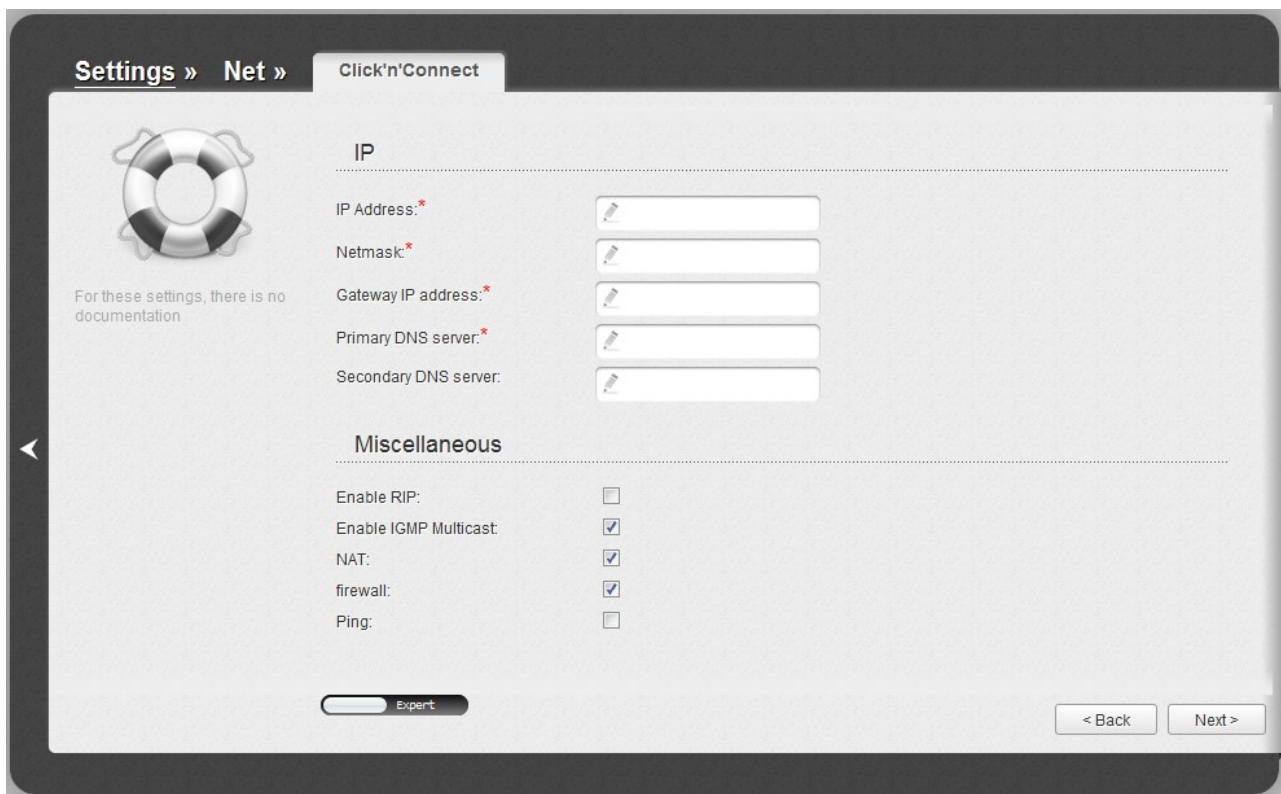


Figure 34. Configuring Static IP WAN connection. The expert settings mode. The **IP** and **Miscellaneous** sections.

Parameter	Description
<b>IP</b>	
<b>IP Address</b>	Enter an IP address for this WAN connection.
<b>Netmask</b>	Enter a subnet mask for this WAN connection.
<b>Gateway IP address</b>	Enter an IP address of the gateway used by this WAN connection.
<b>Primary DNS server/ Secondary DNS server</b>	Enter addresses of the primary and secondary DNS servers in the relevant fields.
<b>Miscellaneous</b>	
<b>Enable RIP</b>	Select the checkbox to allow using RIP for this connection.
<b>Enable IGMP Multicast</b>	Select the checkbox to allow multicast traffic from the external network (e.g. video streaming) to be received.
<b>NAT</b>	Select the checkbox if you want one WAN IP address to be used for all computers of your LAN.
<b>Firewall</b>	Select the checkbox to enable protection against ARP and DDoS attacks.



Parameter	Description
<b>Ping</b>	Select the checkbox to allow the router to answer ping requests from the external network through this connection. For security reasons, it is recommended not to select this checkbox.

Click the **Next** button to continue.

After that the page displaying all specified settings opens. Click the **Apply** button to create the connection or the **Back** button to specify other settings.

After clicking the **Apply** button, the page for checking the Internet availability opens (see the *Checking Internet Availability* section, page 76).

## Dynamic IP Connection

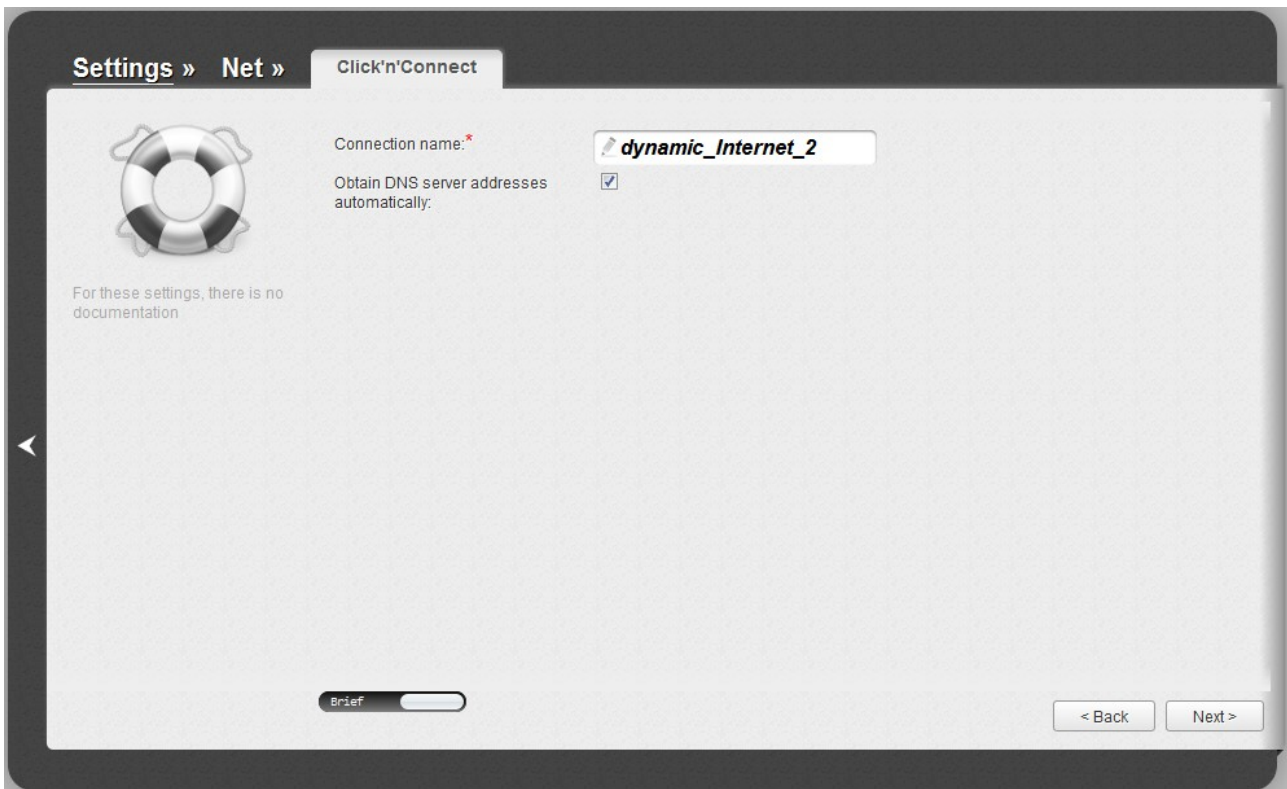


Figure 35. Configuring Dynamic IP WAN connection.

In the **Connection name** field, specify a name for the connection for easier identification.

If your ISP has provided the addresses of the DNS servers, deselect the **Obtain DNS server addresses automatically** checkbox and fill in the **Primary DNS server** field.

As a rule, the specified settings are enough to configure a connection of the selected type. If you need to specify additional settings, open the expert settings mode. To do this, use the switch in the bottom left corner of the page.

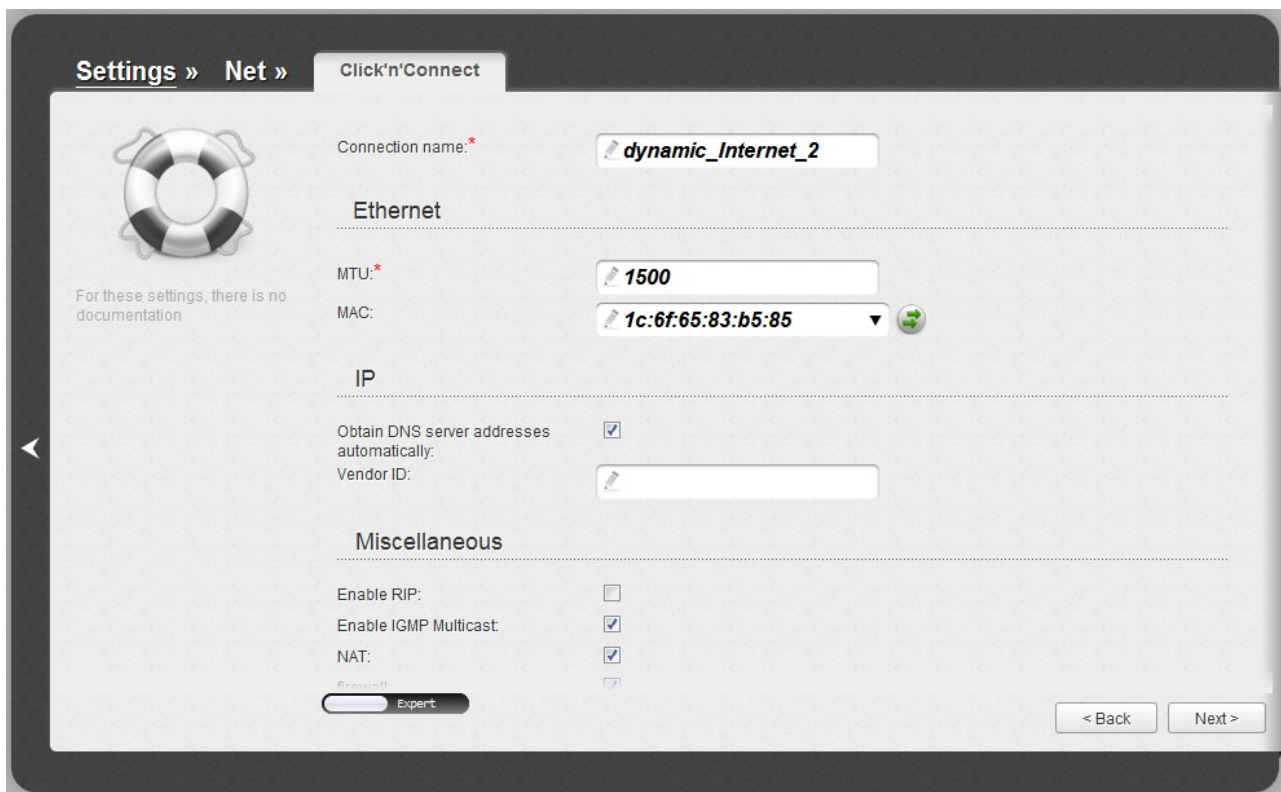



Figure 36. Configuring Dynamic IP WAN connection. The expert settings mode. The **Ethernet** section.

Parameter	Description
<b>Connection name</b>	A name for connection for easier identification.
<b>Ethernet</b>	
<b>MTU</b>	The maximum size of units transmitted by the interface.
<b>MAC</b>	<p>A MAC address assigned to the interface. This parameter is mandatory if your ISP uses MAC address binding. In the field, enter the MAC address registered by your ISP upon concluding the agreement.</p> <p>You can click the <b>Clone MAC Address</b> button () to set the MAC address of the network interface card (of the computer that is being used to configure the router at the moment) as the MAC address of the WAN interface.</p> <p>Also you can set the address of a device connected to the router's LAN at the moment. To do this, select the relevant value from the drop-down list (the field will be filled in automatically).</p>

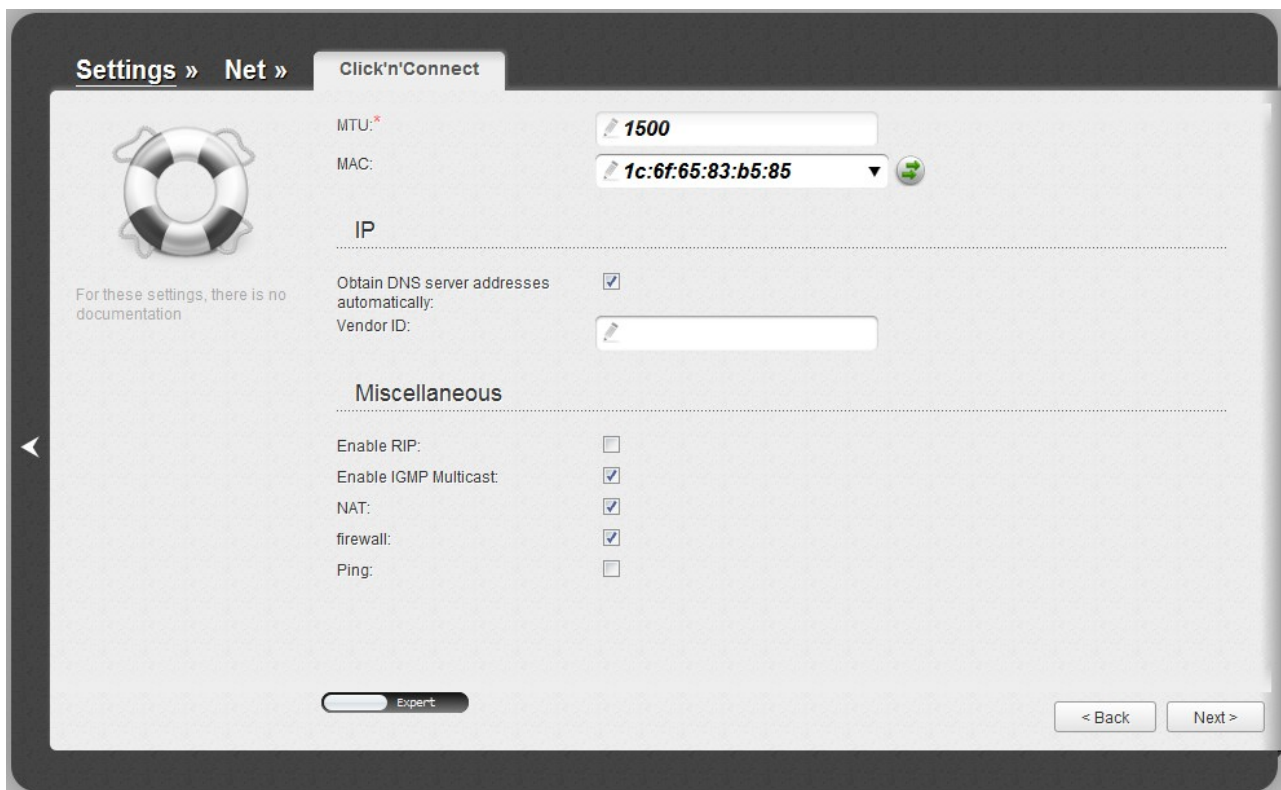


Figure 37. Configuring Dynamic IP WAN connection. The expert settings mode. The **IP** and **Miscellaneous** sections.

Parameter	Description
<b>IP</b>	
<b>Obtain DNS server addresses automatically</b>	Select the checkbox to configure automatic assignment of DNS server addresses. If the checkbox is selected, the <b>Primary DNS server</b> and <b>Secondary DNS server</b> fields are not displayed.
<b>Primary DNS server/ Secondary DNS server</b>	Enter addresses of the primary and secondary DNS servers in the relevant fields.
<b>Vendor ID</b>	The identifier of your ISP. <i>Optional.</i>
<b>Miscellaneous</b>	
<b>Enable RIP</b>	Select the checkbox to allow using RIP for this connection.
<b>Enable IGMP Multicast</b>	Select the checkbox to allow multicast traffic from the external network (e.g. video streaming) to be received.
<b>NAT</b>	Select the checkbox if you want one WAN IP address to be used for all computers of your LAN.
<b>Firewall</b>	Select the checkbox to enable protection against ARP and DDoS attacks.


Parameter	Description
<b>Ping</b>	Select the checkbox to allow the router to answer ping requests from the external network through this connection. For security reasons, it is recommended not to select this checkbox.

Click the **Next** button to continue.

After that the page displaying all specified settings opens. Click the **Apply** button to create the connection or the **Back** button to specify other settings.

After clicking the **Apply** button, the page for checking the Internet availability opens (see the *Checking Internet Availability* section, page 76).

## PPTP + Static IP or L2TP + Static IP Connection

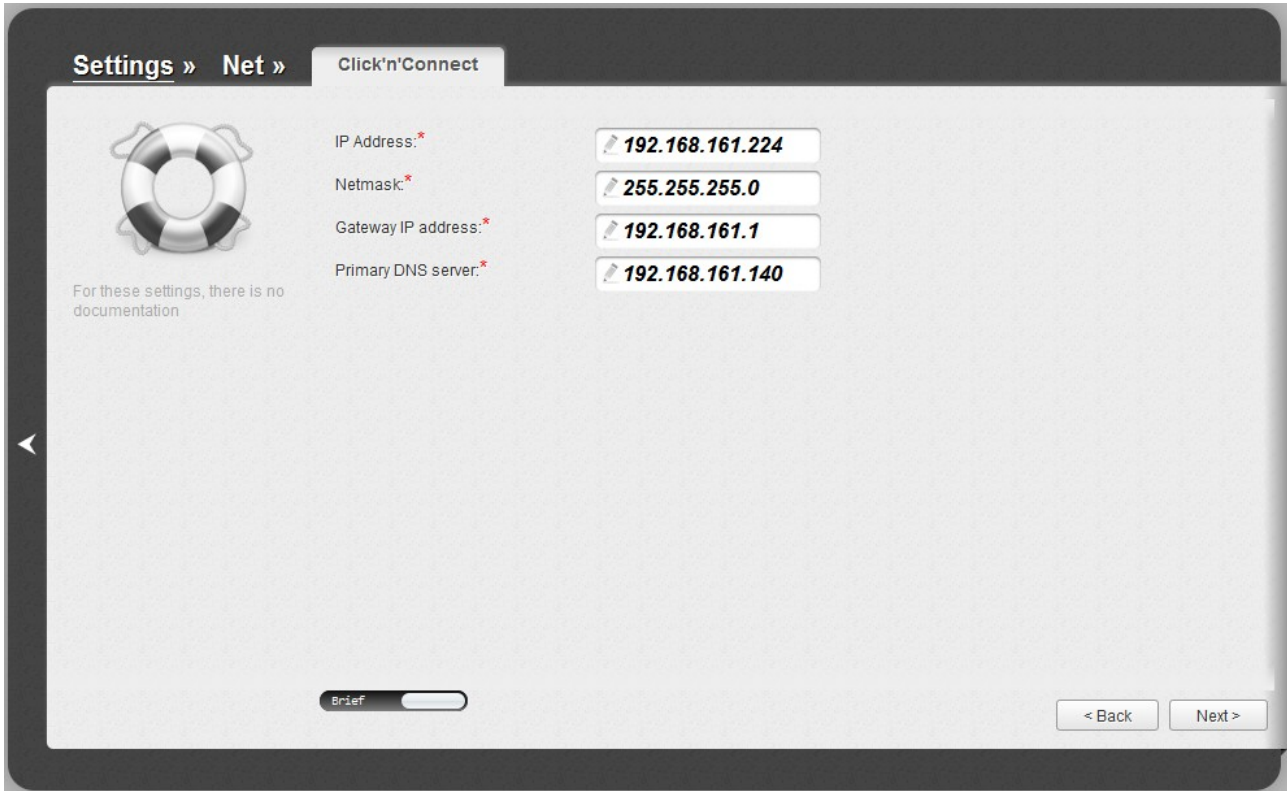

The screenshot displays the 'Click'n'Connect' configuration page for a WAN connection. On the left, there is a lifebuoy icon and a note: 'For these settings, there is no documentation'. The main area contains four configuration fields, each with a red asterisk indicating a required field:

- IP Address: 192.168.161.224
- Netmask: 255.255.255.0
- Gateway IP address: 192.168.161.1
- Primary DNS server: 192.168.161.140

At the bottom left, there is a 'Brief' toggle switch. At the bottom right, there are '< Back' and 'Next >' navigation buttons.

Figure 38. Configuring PPTP + Static IP WAN connection.

Fill in the **IP Address** and **Netmask** fields.

In the **Gateway IP address** field, enter the IP address of the gateway used by this WAN connection.

In the **Primary DNS server** field, enter the address of the primary DNS server.

As a rule, the specified settings are enough to configure a non-protected connection of the selected type. If you need to specify additional settings, open the expert settings mode. To do this, use the switch in the bottom left corner of the page.

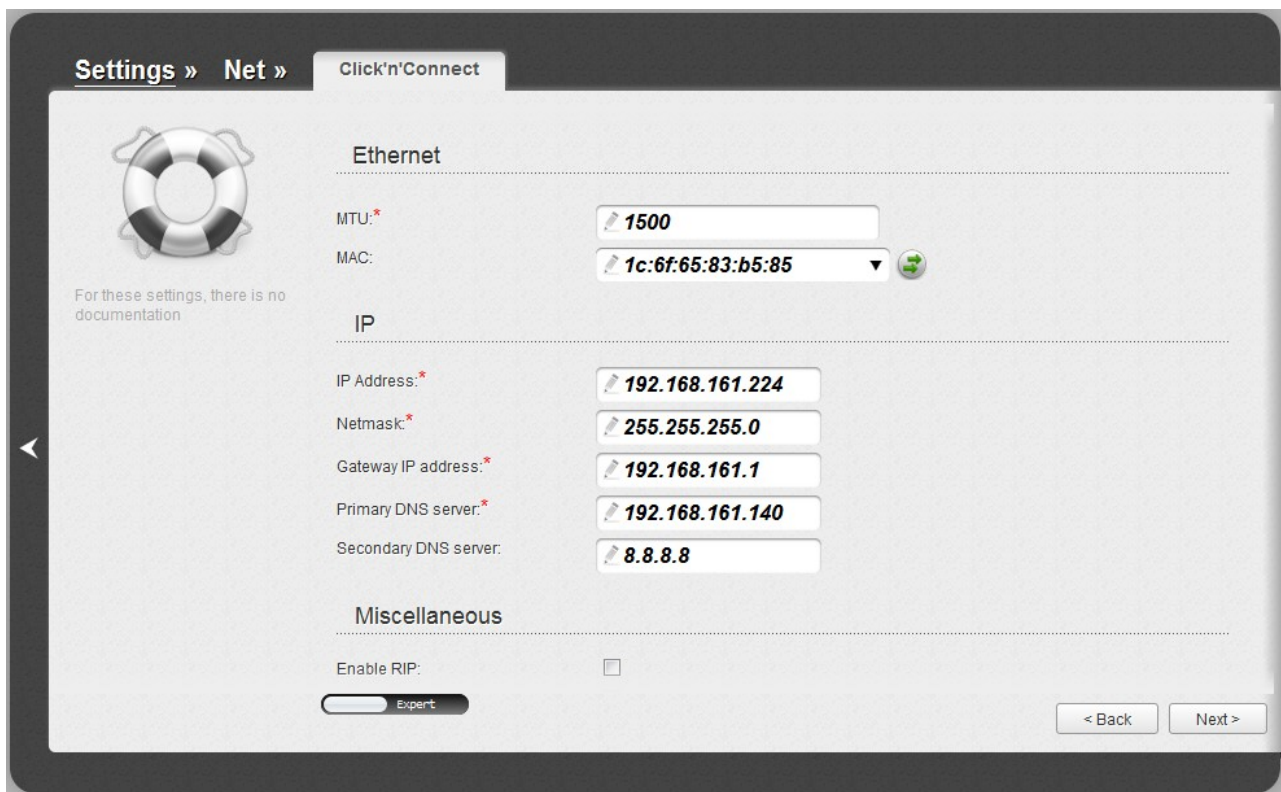



Figure 39. Configuring PPTP + Static IP WAN connection. The expert settings mode. The **Ethernet** section.

Parameter	Description
<b>Ethernet</b>	
<b>MTU</b>	The maximum size of units transmitted by the interface.
<b>MAC</b>	<p>A MAC address assigned to the interface. This parameter is mandatory if your ISP uses MAC address binding. In the field, enter the MAC address registered by your ISP upon concluding the agreement.</p> <p>You can click the <b>Clone MAC Address</b> button () to set the MAC address of the network interface card (of the computer that is being used to configure the router at the moment) as the MAC address of the WAN interface.</p> <p>Also you can set the address of a device connected to the router's LAN at the moment. To do this, select the relevant value from the drop-down list (the field will be filled in automatically).</p>

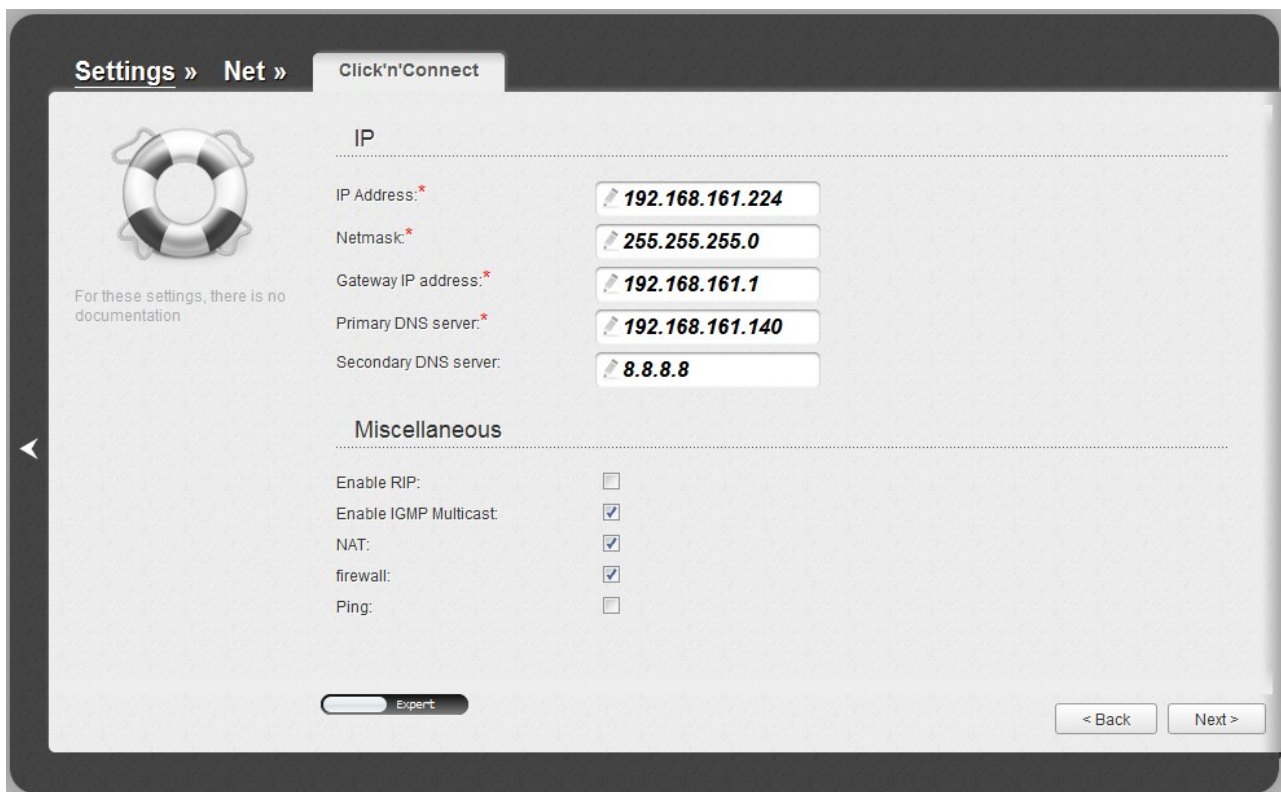


Figure 40. Configuring PPTP + Static IP WAN connection. The expert settings mode. The **IP** and **Miscellaneous** sections.

Parameter	Description
<b>IP</b>	
<b>IP Address</b>	Enter an IP address for this WAN connection.
<b>Netmask</b>	Enter a subnet mask for this WAN connection.
<b>Gateway IP address</b>	Enter an IP address of the gateway used by this WAN connection.
<b>Primary DNS server/ Secondary DNS server</b>	Enter addresses of the primary and secondary DNS servers in the relevant fields.
<b>Miscellaneous</b>	
<b>Enable RIP</b>	Select the checkbox to allow using RIP for this connection.
<b>Enable IGMP Multicast</b>	Select the checkbox to allow multicast traffic from the external network (e.g. video streaming) to be received.
<b>NAT</b>	Select the checkbox if you want one WAN IP address to be used for all computers of your LAN.
<b>Firewall</b>	Select the checkbox to enable protection against ARP and DDoS attacks.



Parameter	Description
<b>Ping</b>	Select the checkbox to allow the router to answer ping requests from the external network through this connection. For security reasons, it is recommended not to select this checkbox.

Click the **Next** button to continue.

If needed, enter the IP addresses of the ISP's local resources.

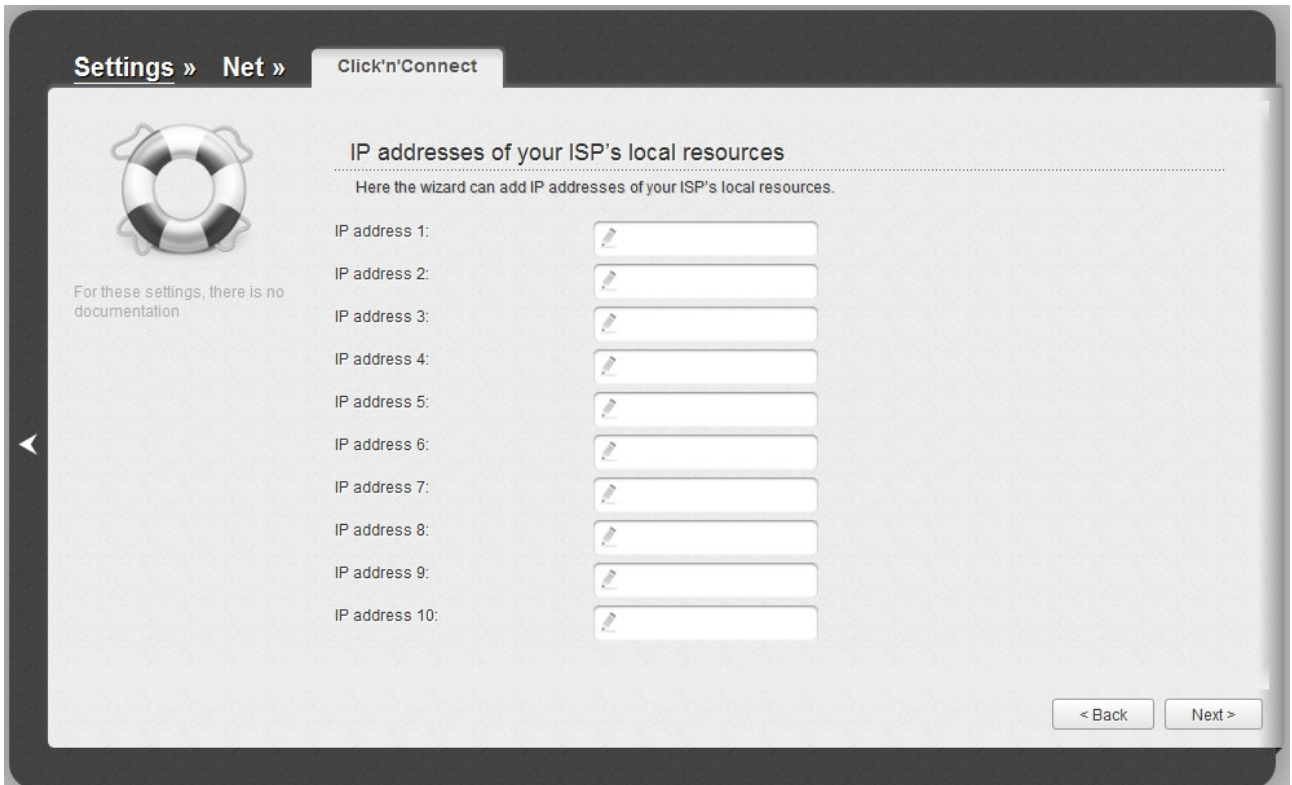


Figure 41. Configuring PPTP + Static IP WAN connection.

Click the **Next** button to continue.

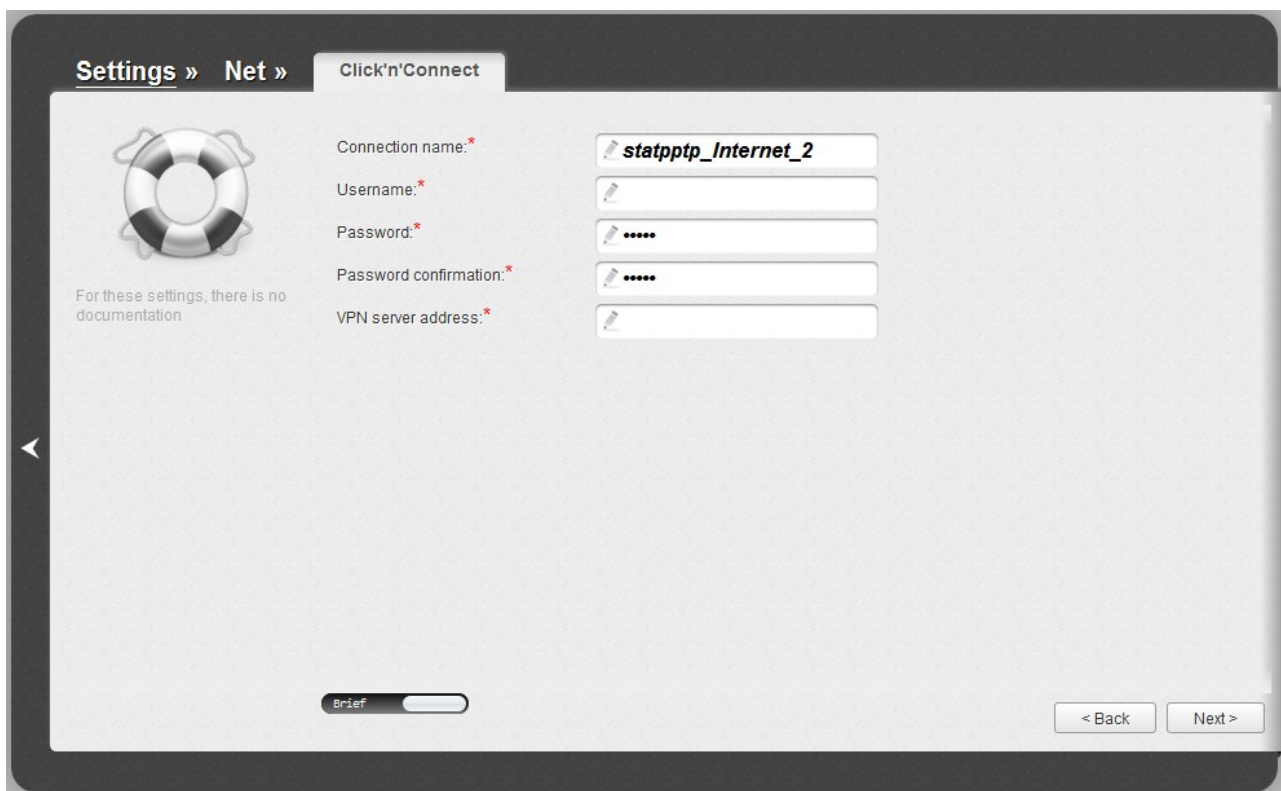


Figure 42. Configuring PPTP + Static IP WAN connection.

In the **Connection name** field, specify a name for the connection for easier identification.

In the **Username** field, enter your login, and in the **Password** and **Password confirmation** fields – the password provided by your ISP.

In the **VPN server address** field, enter the IP or URL address of the PPTP or L2TP authentication server.

As a rule, the specified settings are enough to configure a protected connection (the VPN tunnel). If you need to specify additional settings, open the expert settings mode. To do this, use the switch in the bottom left corner of the page.

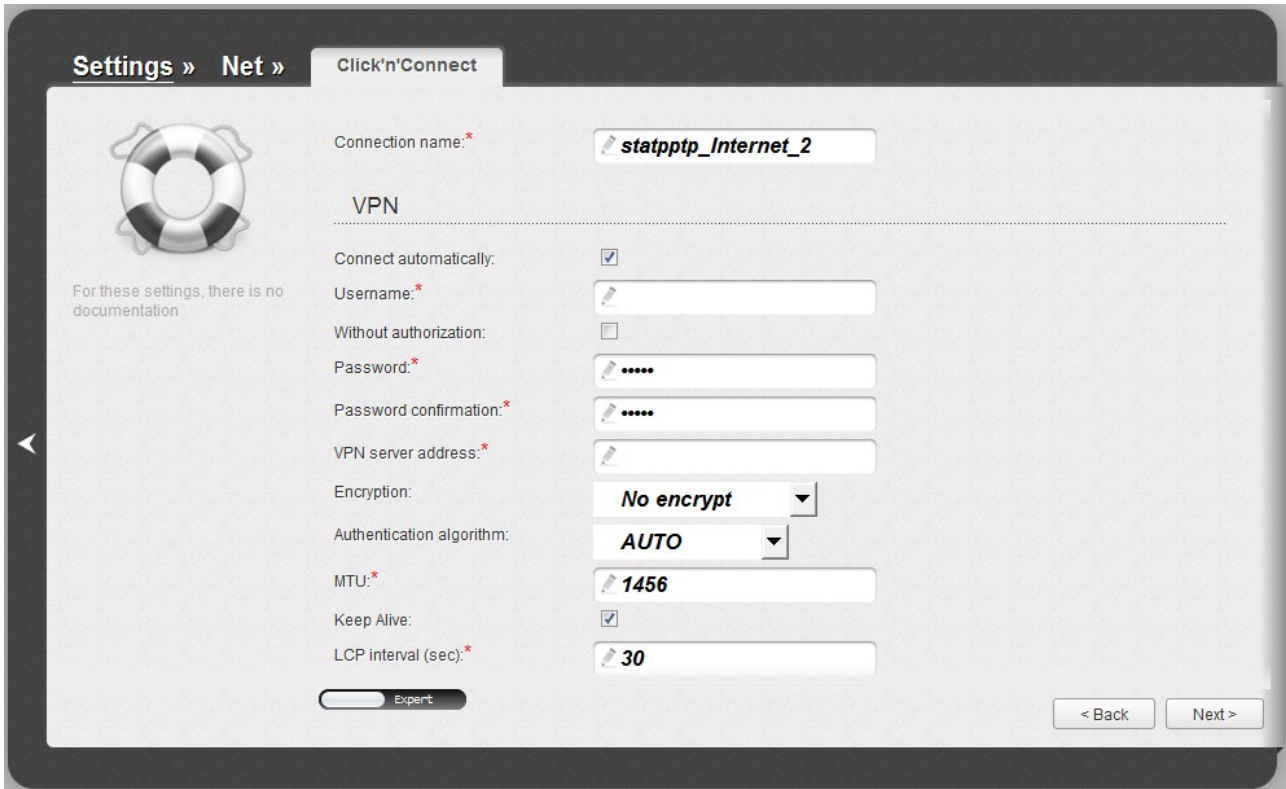


Figure 43. Configuring PPTP + Static IP WAN connection. The expert settings mode. The VPN section.

Parameter	Description
<b>Connection name</b>	A name for connection for easier identification.
<b>VPN</b>	
<b>Connect automatically</b>	Select the checkbox to enable auto-start of the connection upon the boot-up of the router.
<b>Username</b>	A username (login) to access the Internet.
<b>Without authorization</b>	Select the checkbox if you don't need to enter a username and password to access the Internet.
<b>Password</b>	A password to access the Internet.
<b>Password confirmation</b>	The confirmation of the entered password (to avoid mistypes).
<b>VPN server address</b>	The IP or URL address of the PPTP or L2TP authentication server.

Parameter	Description
<b>Encryption</b>	<p>Select a method of MPPE encryption.</p> <ul style="list-style-type: none"> <li>• <b>No encrypt:</b> MPPE encryption is not applied.</li> <li>• <b>MPPE 40/128 bit:</b> MPPE encryption with a 40-bit or 128-bit key is applied.</li> <li>• <b>MPPE 40 bit:</b> MPPE encryption with a 40-bit key is applied.</li> <li>• <b>MPPE 128 bit:</b> MPPE encryption with a 128-bit key is applied.</li> </ul> <p>MPPE encryption can be applied only if the <b>MS-CHAP</b>, <b>MS-CHAP-V2</b>, or <b>AUTO</b> value is selected from the <b>Authentication algorithm</b> drop-down list.</p>
<b>Authentication algorithm</b>	<p>Select a required authentication method from the drop-down list or leave the <b>AUTO</b> value.</p>
<b>MTU</b>	<p>The maximum size of units transmitted by the interface.</p>
<b>Keep Alive</b>	<p>Select the checkbox if you want the router to keep you connected to your ISP even when the connection has been inactive for a specified period of time. When the checkbox is selected, the <b>LCP interval</b> and <b>LCP fails</b> fields are available. Specify the required values.</p>
<b>Extra options</b>	<p>Advanced options of the pppd daemon which need to be specified for this connection. <i>Optional.</i></p>
<b>Dial on demand</b>	<p>Select the checkbox if you want the router to establish connection to the Internet on demand. In the <b>Maximum idle time</b> field, specify a period of inactivity (in seconds) after which the connection should be terminated.</p>
<b>Static IP Address</b>	<p>Fill in the field if you want to use a static IP address to access the Internet.</p>
<b>PPP debug</b>	<p>Select the checkbox if you want to log all data on PPP connection debugging.</p>
<b>IP received</b>	<p>The IP address assigned by the ISP.</p>

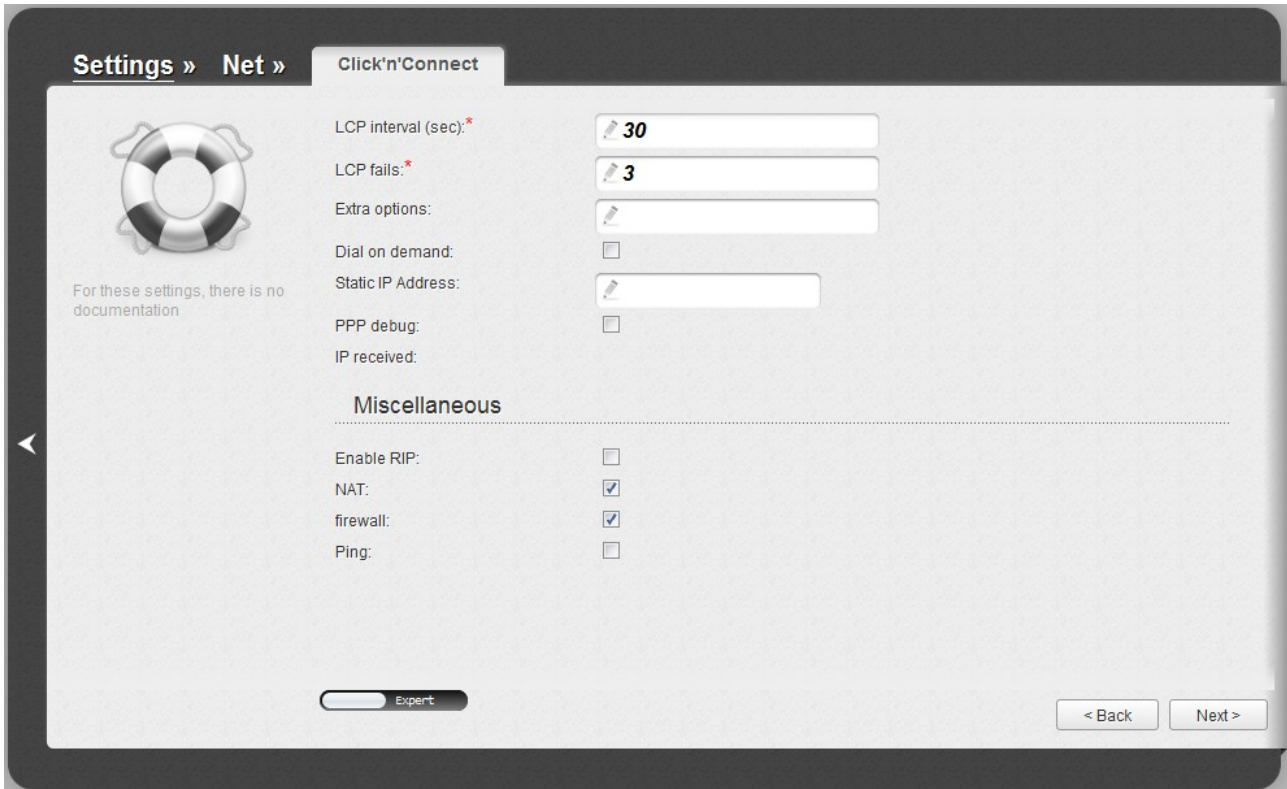


Figure 44. Configuring PPTP + Static IP WAN connection. The expert settings mode. The **Miscellaneous** section.

Parameter	Description
<b>Miscellaneous</b>	
<b>Enable RIP</b>	Select the checkbox to allow using RIP for this connection.
<b>NAT</b>	Select the checkbox if you want one WAN IP address to be used for all computers of your LAN.
<b>Firewall</b>	Select the checkbox to enable protection against ARP and DDoS attacks.
<b>Ping</b>	Select the checkbox to allow the router to answer ping requests from the external network through this connection. For security reasons, it is recommended not to select this checkbox.

Click the **Next** button to continue.

After that the page displaying all specified settings opens. Click the **Apply** button to create the connection or the **Back** button to specify other settings.

After clicking the **Apply** button, the page for checking the Internet availability opens (see the **Checking Internet Availability** section, page 76).

## PPTP + Dynamic IP or L2TP + Dynamic IP Connection

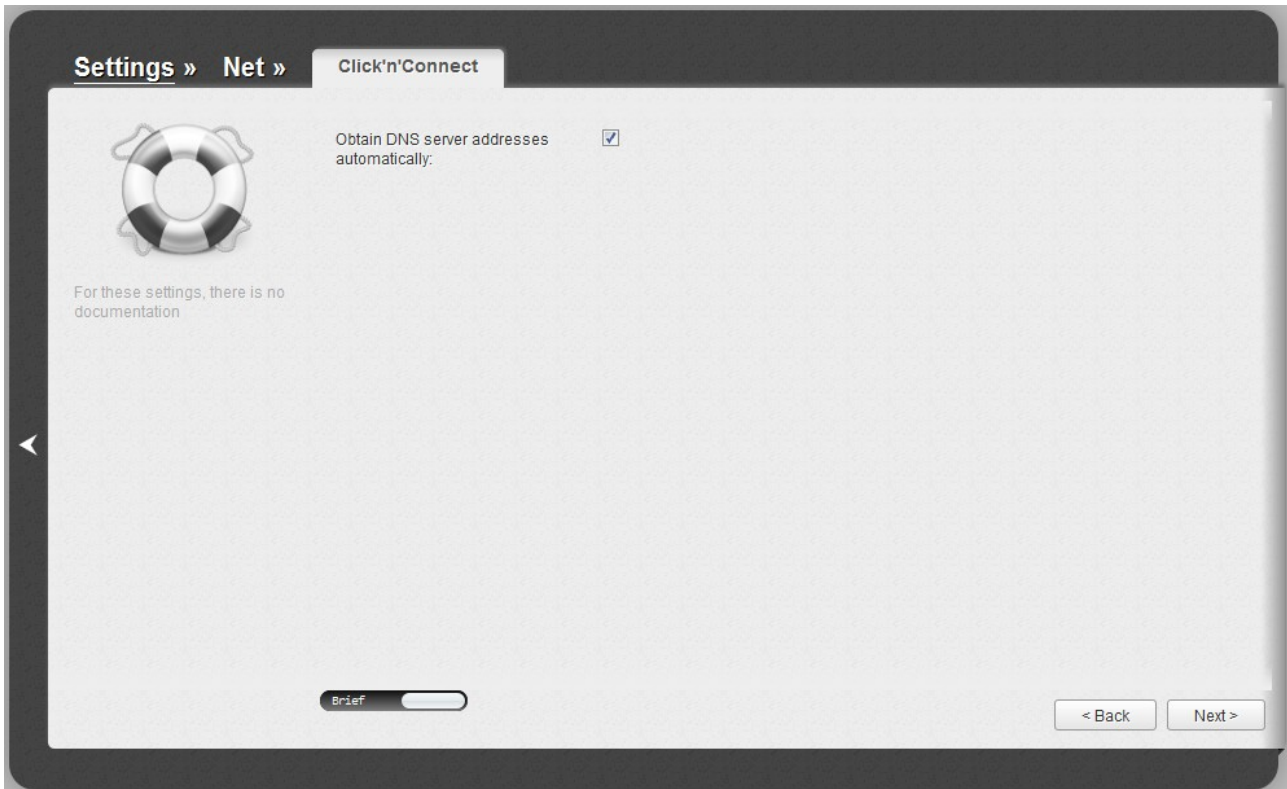


Figure 45. Configuring PPTP + Dynamic IP WAN connection.

If your ISP has provided the addresses of the DNS servers, deselect the **Obtain DNS server addresses automatically** checkbox and fill in the **Primary DNS server** field.

As a rule, the specified settings are enough to configure a non-protected connection of the selected type. If you need to specify additional settings, open the expert settings mode. To do this, use the switch in the bottom left corner of the page.

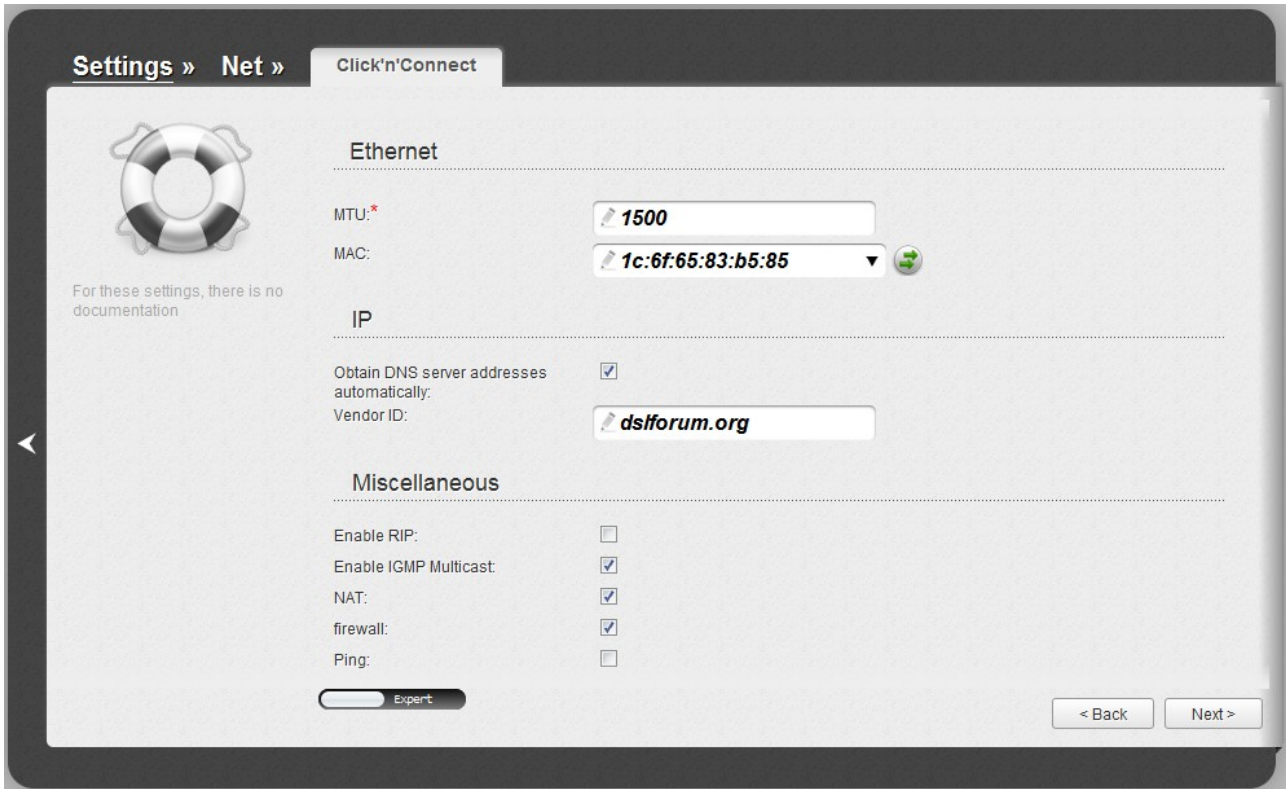



Figure 46. Configuring PPTP + Dynamic IP WAN connection. The expert settings mode. The **Ethernet** section.

Parameter	Description
<b>Ethernet</b>	
<b>MTU</b>	The maximum size of units transmitted by the interface.
<b>MAC</b>	<p>A MAC address assigned to the interface. This parameter is mandatory if your ISP uses MAC address binding. In the field, enter the MAC address registered by your ISP upon concluding the agreement.</p> <p>You can click the <b>Clone MAC Address</b> button () to set the MAC address of the network interface card (of the computer that is being used to configure the router at the moment) as the MAC address of the WAN interface.</p> <p>Also you can set the address of a device connected to the router's LAN at the moment. To do this, select the relevant value from the drop-down list (the field will be filled in automatically).</p>

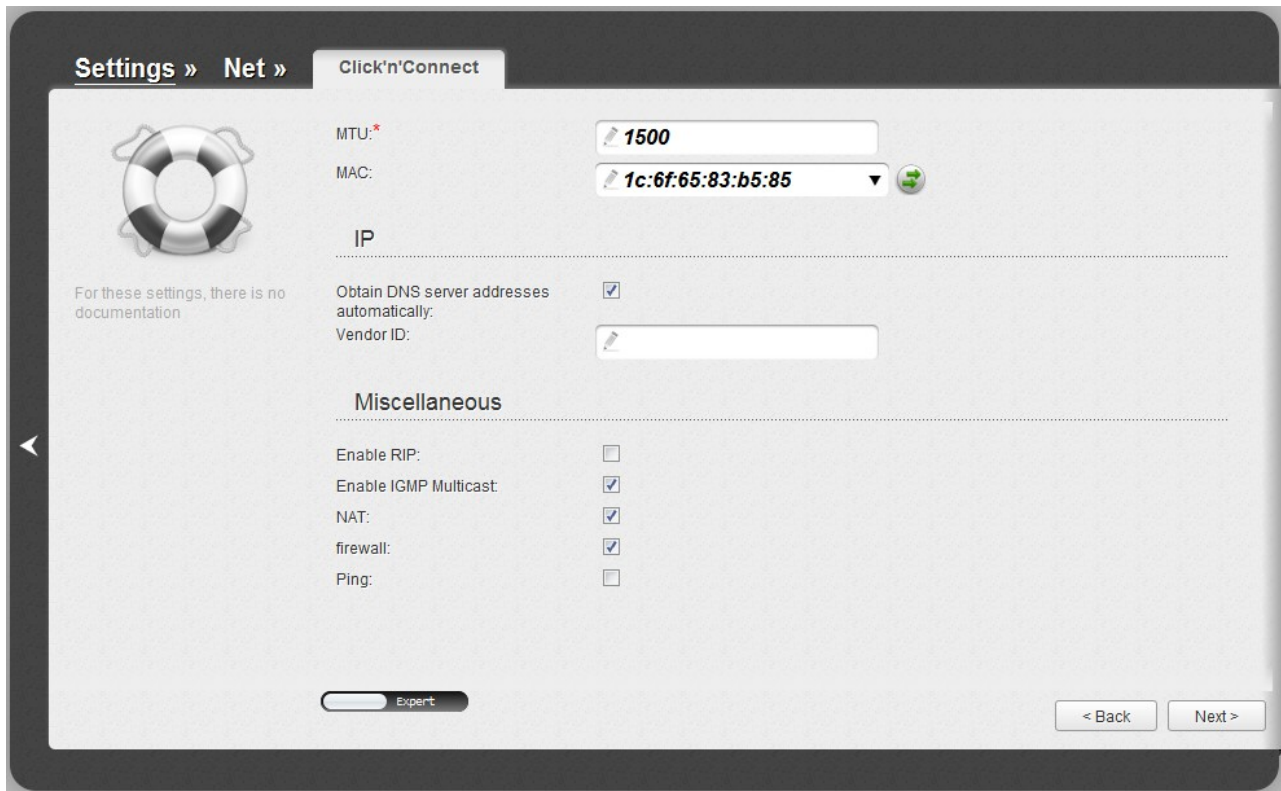


Figure 47. Configuring PPTP + Dynamic IP WAN connection. The expert settings mode. The **IP** and **Miscellaneous** sections.

Parameter	Description
<b>IP</b>	
<b>Obtain DNS server addresses automatically</b>	Select the checkbox to configure automatic assignment of DNS server addresses. If the checkbox is selected, the <b>Primary DNS server</b> and <b>Secondary DNS server</b> fields are not displayed.
<b>Primary DNS server/ Secondary DNS server</b>	Enter addresses of the primary and secondary DNS servers in the relevant fields.
<b>Vendor ID</b>	The identifier of your ISP. <i>Optional.</i>
<b>Miscellaneous</b>	
<b>Enable RIP</b>	Select the checkbox to allow using RIP for this connection.
<b>Enable IGMP Multicast</b>	Select the checkbox to allow multicast traffic from the external network (e.g. video streaming) to be received.
<b>NAT</b>	Select the checkbox if you want one WAN IP address to be used for all computers of your LAN.
<b>Firewall</b>	Select the checkbox to enable protection against ARP and DDoS attacks.



Parameter	Description
<b>Ping</b>	Select the checkbox to allow the router to answer ping requests from the external network through this connection. For security reasons, it is recommended not to select this checkbox.

Click the **Next** button to continue.

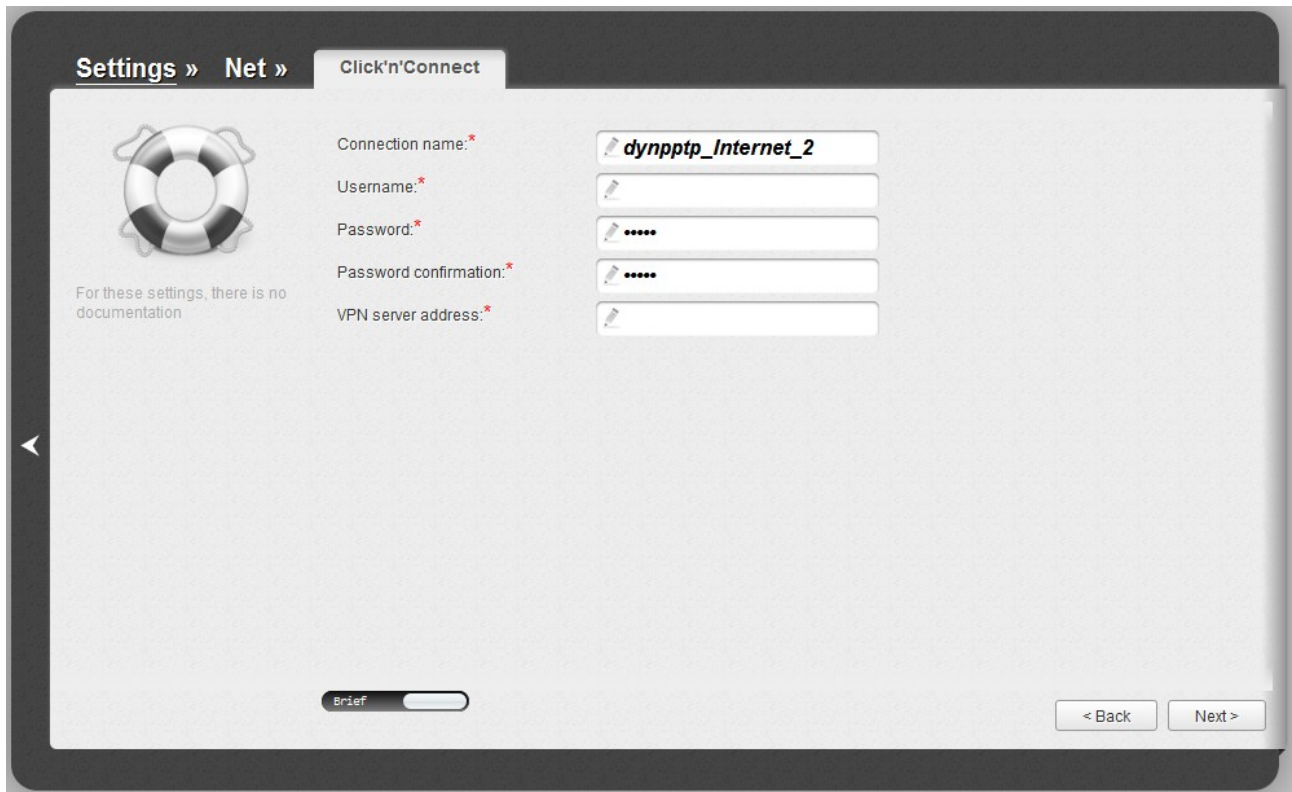


Figure 48. Configuring PPTP + Dynamic IP WAN connection.

In the **Connection name** field, specify a name for the connection for easier identification.

In the **Username** field, enter your login, and in the **Password** and **Password confirmation** fields – the password provided by your ISP.

In the **VPN server address** field, enter the IP or URL address of the PPTP or L2TP authentication server.

As a rule, the specified settings are enough to configure a protected connection (the VPN tunnel). If you need to specify additional settings, open the expert settings mode. To do this, use the switch in the bottom left corner of the page.

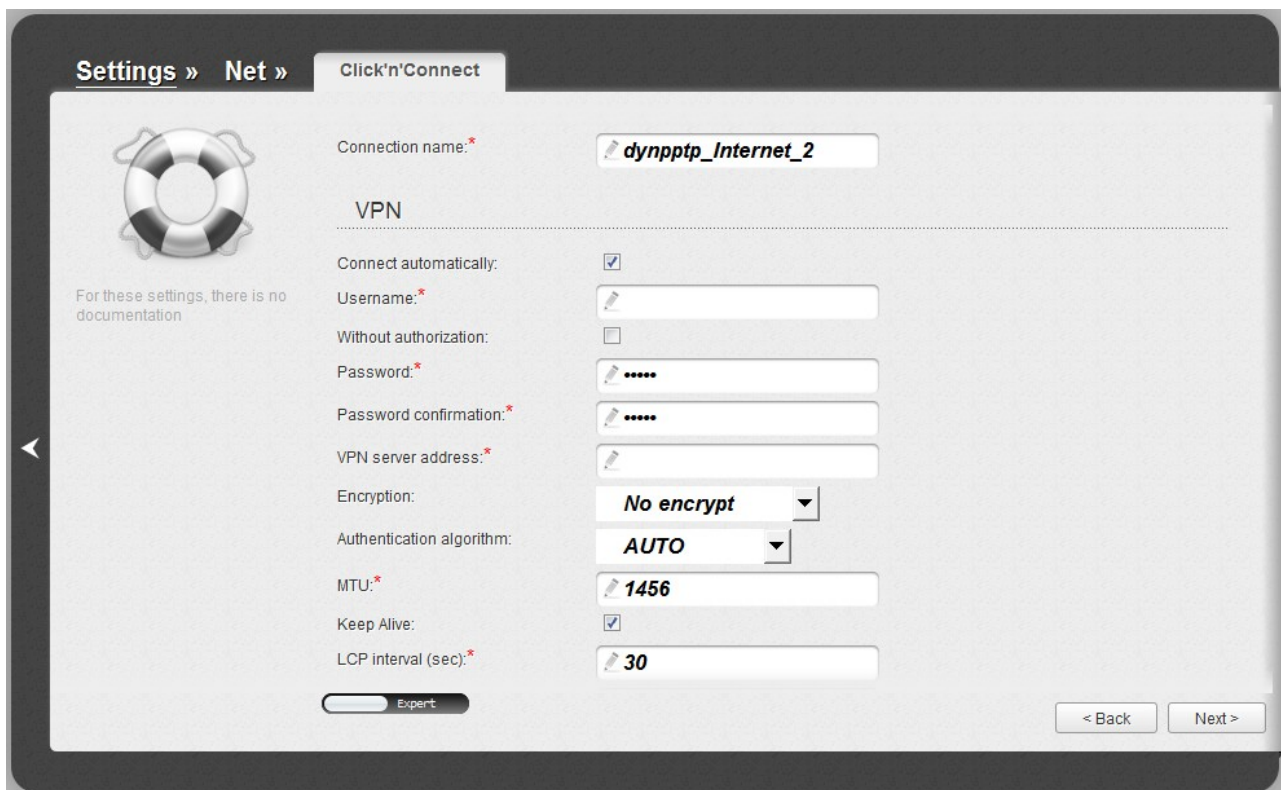


Figure 49. Configuring PPTP + Dynamic IP WAN connection. The expert settings mode. The **VPN** section.

Parameter	Description
<b>Connection name</b>	A name for connection for easier identification.
<b>VPN</b>	
<b>Connect automatically</b>	Select the checkbox to enable auto-start of the connection upon the boot-up of the router.
<b>Username</b>	A username (login) to access the Internet.
<b>Without authorization</b>	Select the checkbox if you don't need to enter a username and password to access the Internet.
<b>Password</b>	A password to access the Internet.
<b>Password confirmation</b>	The confirmation of the entered password (to avoid mistypes).
<b>VPN server address</b>	The IP or URL address of the PPTP or L2TP authentication server.

Parameter	Description
<b>Encryption</b>	<p>Select a method of MPPE encryption.</p> <ul style="list-style-type: none"> <li>• <b>No encrypt:</b> MPPE encryption is not applied.</li> <li>• <b>MPPE 40/128 bit:</b> MPPE encryption with a 40-bit or 128-bit key is applied.</li> <li>• <b>MPPE 40 bit:</b> MPPE encryption with a 40-bit key is applied.</li> <li>• <b>MPPE 128 bit:</b> MPPE encryption with a 128-bit key is applied.</li> </ul> <p>MPPE encryption can be applied only if the <b>MS-CHAP</b>, <b>MS-CHAP-V2</b>, or <b>AUTO</b> value is selected from the <b>Authentication algorithm</b> drop-down list.</p>
<b>Authentication algorithm</b>	<p>Select a required authentication method from the drop-down list or leave the <b>AUTO</b> value.</p>
<b>MTU</b>	<p>The maximum size of units transmitted by the interface.</p>
<b>Keep Alive</b>	<p>Select the checkbox if you want the router to keep you connected to your ISP even when the connection has been inactive for a specified period of time. When the checkbox is selected, the <b>LCP interval</b> and <b>LCP fails</b> fields are available. Specify the required values.</p>
<b>Extra options</b>	<p>Advanced options of the pppd daemon which need to be specified for this connection. <i>Optional.</i></p>
<b>Dial on demand</b>	<p>Select the checkbox if you want the router to establish connection to the Internet on demand. In the <b>Maximum idle time</b> field, specify a period of inactivity (in seconds) after which the connection should be terminated.</p>
<b>Static IP Address</b>	<p>Fill in the field if you want to use a static IP address to access the Internet.</p>
<b>PPP debug</b>	<p>Select the checkbox if you want to log all data on PPP connection debugging.</p>
<b>IP received</b>	<p>The IP address assigned by the ISP.</p>

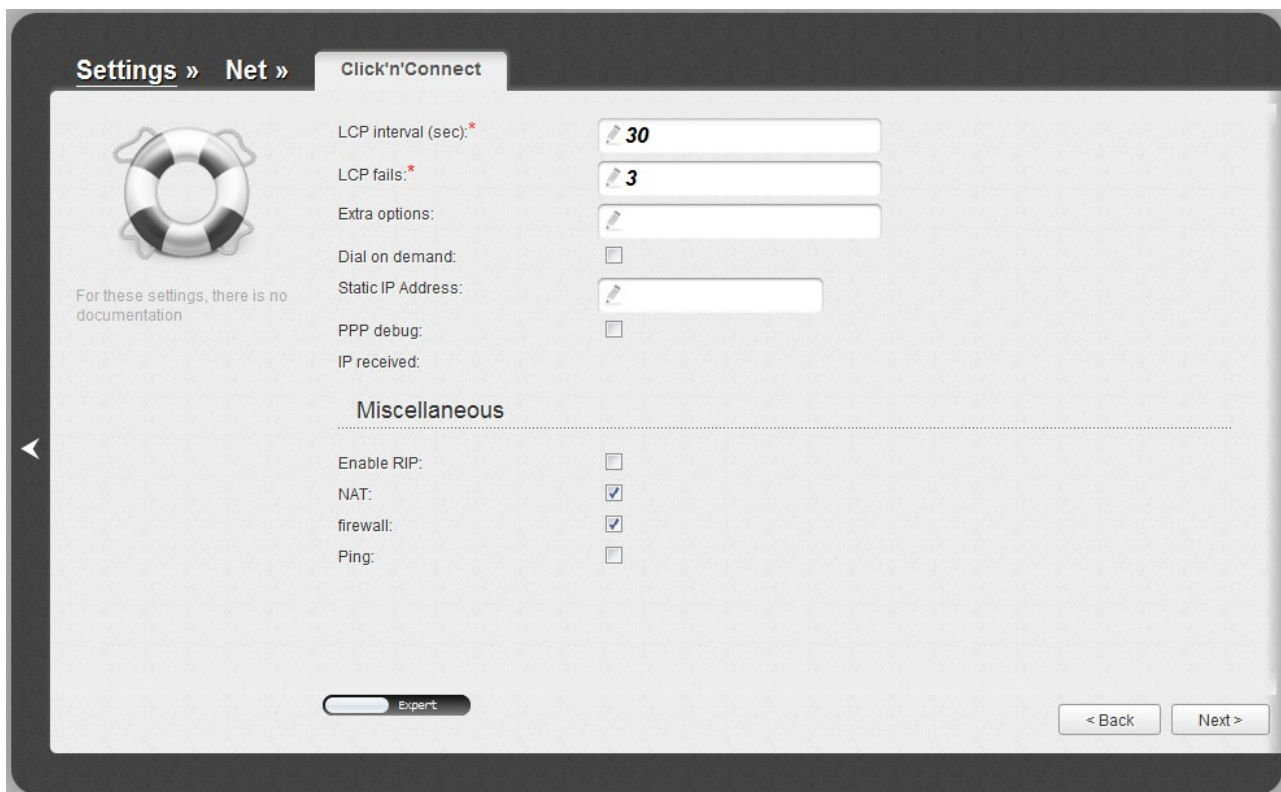


Figure 50. Configuring PPTP + Dynamic IP WAN connection. The expert settings mode. The **Miscellaneous** section.


Parameter	Description
<b>Miscellaneous</b>	
<b>Enable RIP</b>	Select the checkbox to allow using RIP for this connection.
<b>NAT</b>	Select the checkbox if you want one WAN IP address to be used for all computers of your LAN.
<b>Firewall</b>	Select the checkbox to enable protection against ARP and DDoS attacks.
<b>Ping</b>	Select the checkbox to allow the router to answer ping requests from the external network through this connection. For security reasons, it is recommended not to select this checkbox.

Click the **Next** button to continue.

After that the page displaying all specified settings opens. Click the **Apply** button to create the connection or the **Back** button to specify other settings.

After clicking the **Apply** button, the page for checking the Internet availability opens (see the **Checking Internet Availability** section, page 76).

## 3G Connection

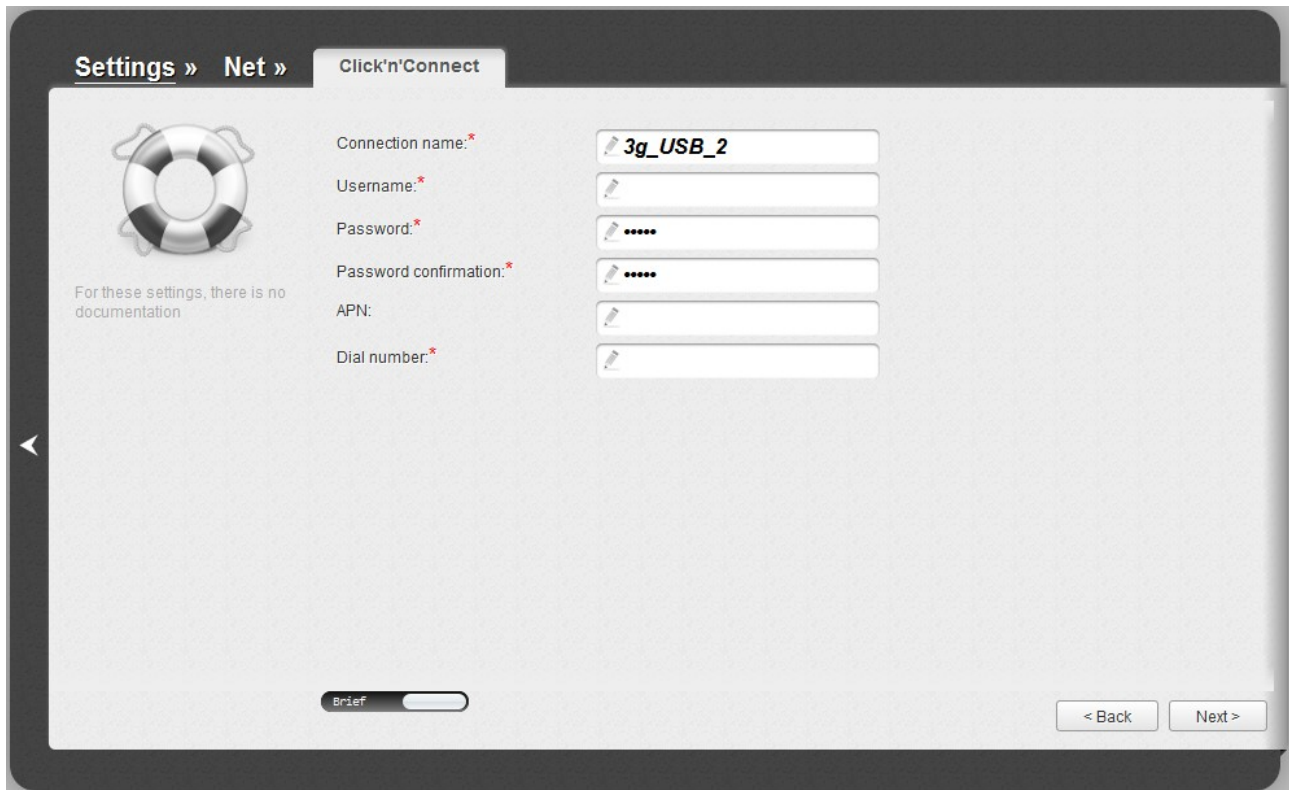

The screenshot shows the 'Click'n'Connect' configuration page for a 3G WAN connection. The breadcrumb navigation is 'Settings » Net » Click'n'Connect'. On the left, there is a lifebuoy icon and a note: 'For these settings, there is no documentation'. The main area contains several input fields: 'Connection name:\*' with the value '3g\_USB\_2', 'Username:\*', 'Password:\*' (masked with dots), 'Password confirmation:\*' (masked with dots), 'APN:', and 'Dial number:\*'. At the bottom left, there is a 'Brief' toggle switch. At the bottom right, there are '< Back' and 'Next >' buttons.

Figure 51. Configuring 3G WAN connection.

In the **Connection name** field, specify a name for the connection for easier identification.

In the **Username** field, enter your login, and in the **Password** and **Password confirmation** fields – the password provided by your 3G operator.

In the **APN** field (for GSM USB modems only), enter the access point name, and in the **Dial number** field, enter the number dialed to connect to the authorization server of the operator.

As a rule, the specified settings are enough to configure a connection of the selected type. If you need to specify additional settings, open the expert settings mode. To do this, use the switch in the bottom left corner of the page.

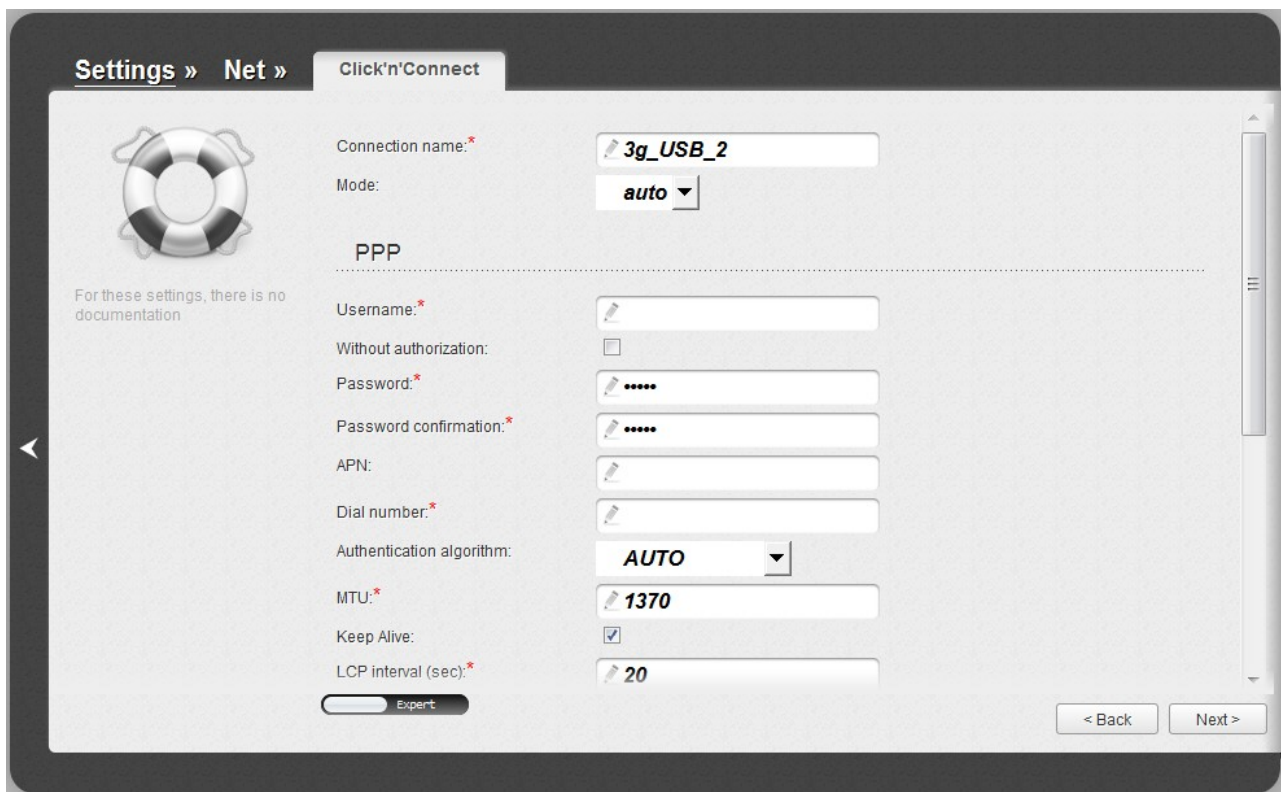


Figure 52. Configuring 3G WAN connection. The expert settings mode. The **PPP** section.

Parameter	Description
<b>Connection name</b>	A name for connection for easier identification.
<b>Mode</b>	The value of the field specifies the type of the network to which the router connects. Leave the <b>auto</b> value to let the router connect automatically to an available type of network, or select a needed value from the drop-down list. <i>For GSM USB modems only.</i>
<b>PPP</b>	
<b>Username</b>	A username (login) to connect to the network of the operator.
<b>Without authorization</b>	Select the checkbox if your operator does not require authorization.
<b>Password</b>	A password to connect to the network of the operator.
<b>Password confirmation</b>	The confirmation of the entered password (to avoid mistypes).
<b>APN</b>	An access point name. <i>For GSM USB modems only.</i>
<b>Dial number</b>	A number dialed to connect to the authorization server of the operator.
<b>Authentication algorithm</b>	Select a required authentication method from the drop-down list or leave the <b>AUTO</b> value.

Parameter	Description
<b>MTU</b>	The maximum size of units transmitted by the interface. <i>Optional.</i>
<b>Keep Alive</b>	Select the checkbox if you want the router to keep you connected to the network of your operator even when the connection has been inactive for a specified period of time. When the checkbox is selected, the <b>LCP interval</b> and <b>LCP fails</b> fields are available. Specify the required values.
<b>Extra options</b>	In the field, you can specify additional data for encryption or authentication. <i>Optional.</i>
<b>Dial on demand</b>	Select the checkbox if you want the router to establish connection to the Internet on demand. In the <b>Maximum idle time</b> field, specify a period of inactivity (in seconds) after which the connection should be terminated.
<b>PPP debug</b>	Select the checkbox if you want to log all data on PPP connection debugging.

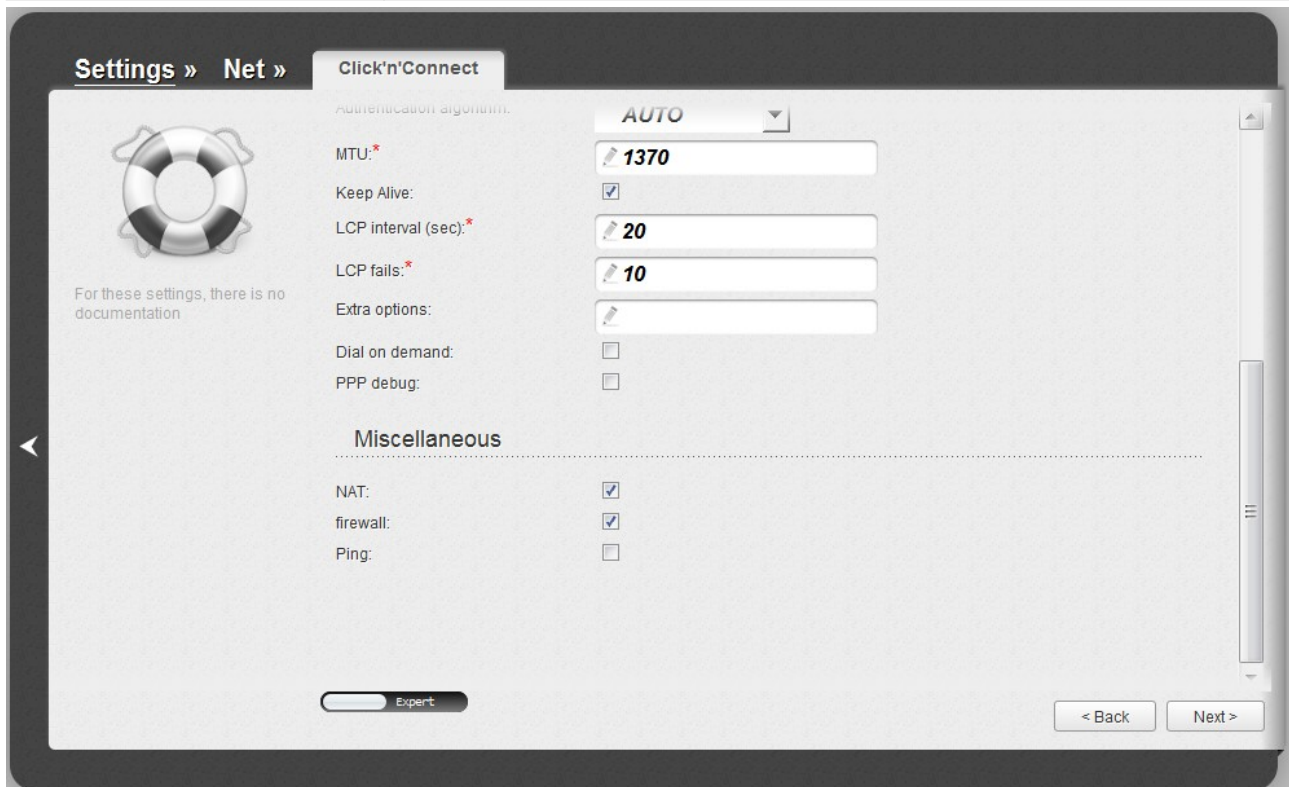


Figure 53. Configuring 3G WAN connection. The expert settings mode. The **Miscellaneous** section.

Parameter	Description
<b>Miscellaneous</b>	
<b>NAT</b>	Select the checkbox if you want one WAN IP address to be used for all computers of your LAN.
<b>Firewall</b>	Select the checkbox to enable protection against ARP and DDoS attacks.
<b>Ping</b>	Select the checkbox to allow the router to answer ping requests from the external network through this connection. For security reasons, it is recommended not to select this checkbox.

Click the **Next** button to continue.

After that the page displaying all specified settings opens. Click the **Apply** button to create the connection or the **Back** button to specify other settings.

After clicking the **Apply** button, the page for checking the Internet availability opens (see the *Checking Internet Availability* section, page 76).



## LTE Connection

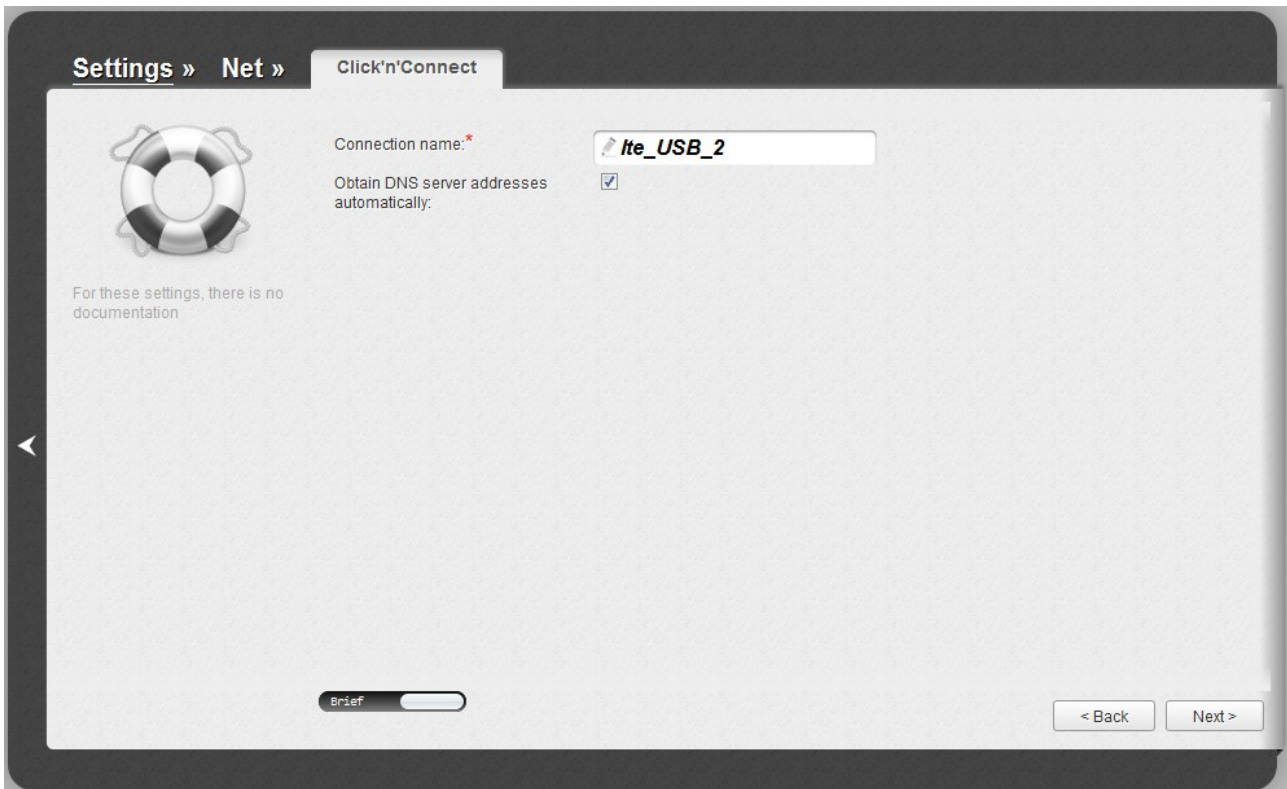


Figure 54. Configuring LTE WAN connection.

In the **Connection name** field, specify a name for the connection for easier identification.

If your ISP has provided the addresses of the DNS servers, deselect the **Obtain DNS server addresses automatically** checkbox and fill in the **Primary DNS server** field.

As a rule, the specified settings are enough to configure a connection of the selected type. If you need to specify additional settings, open the expert settings mode. To do this, use the switch in the bottom left corner of the page.

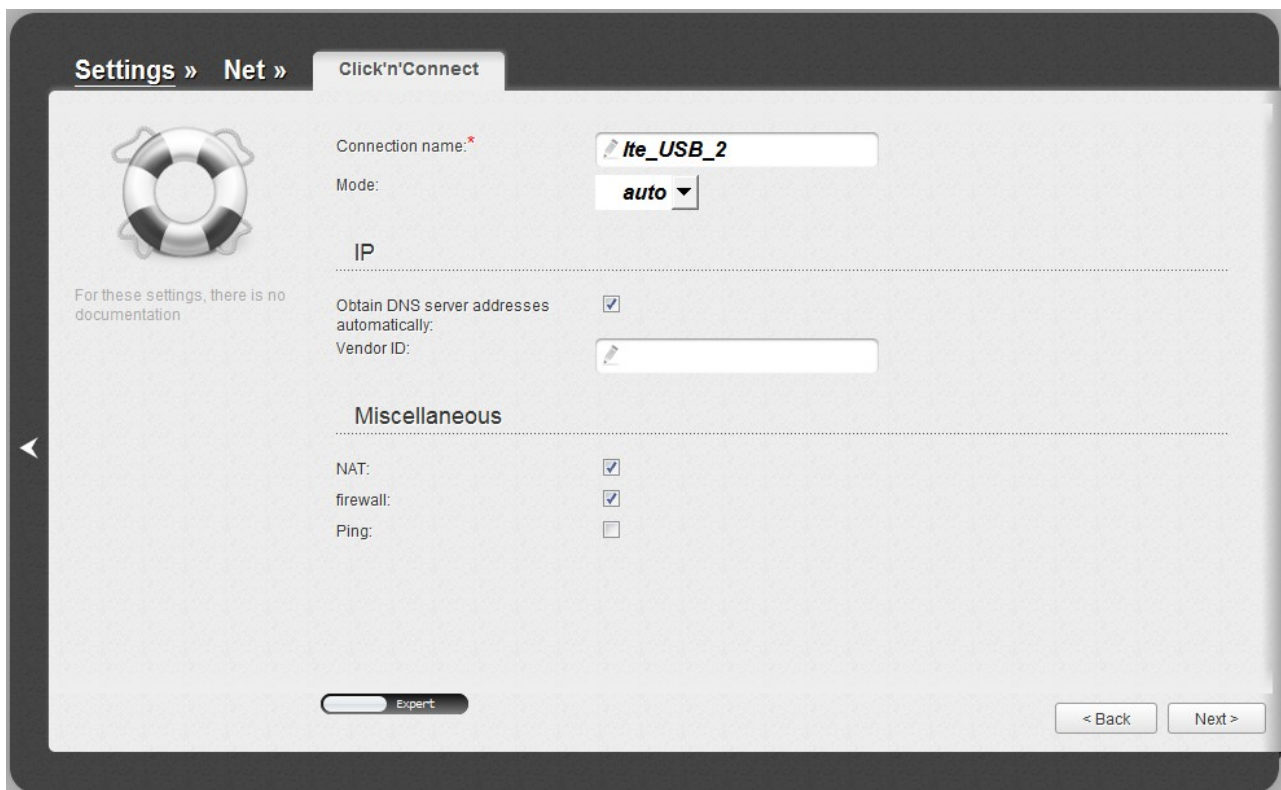


Figure 55. Configuring LTE WAN connection. The expert settings mode. The **IP** and **Miscellaneous** sections.

Parameter	Description
<b>Connection name</b>	A name for connection for easier identification.
<b>Mode</b>	The value of the field specifies the type of the network to which the router connects. Leave the <b>auto</b> value to let the router connect automatically to an available type of network, or select a needed value from the drop-down list.  <i>For Huawei E367 and Huawei E392 USB modems only.</i>
<b>IP</b>	
<b>Obtain DNS server addresses automatically</b>	Select the checkbox to configure automatic assignment of DNS server addresses. If the checkbox is selected, the <b>Primary DNS server</b> and <b>Secondary DNS server</b> fields are not displayed.
<b>Primary DNS server/ Secondary DNS server</b>	Enter addresses of the primary and secondary DNS servers in the relevant fields.
<b>Vendor ID</b>	The identifier of your ISP. <i>Optional.</i>
<b>Miscellaneous</b>	
<b>NAT</b>	Select the checkbox if you want one WAN IP address to be used for all computers of your LAN.

Parameter	Description
<b>Firewall</b>	Select the checkbox to enable protection against ARP and DDoS attacks.
<b>Ping</b>	Select the checkbox to allow the router to answer ping requests from the external network through this connection. For security reasons, it is recommended not to select this checkbox.

Click the **Next** button to continue.

After that the page displaying all specified settings opens. Click the **Apply** button to create the connection or the **Back** button to specify other settings.

After clicking the **Apply** button, the page for checking the Internet availability opens (see the *Checking Internet Availability* section, page 76).

## Checking Internet Availability

On the page, you can check the WAN connection you have created.

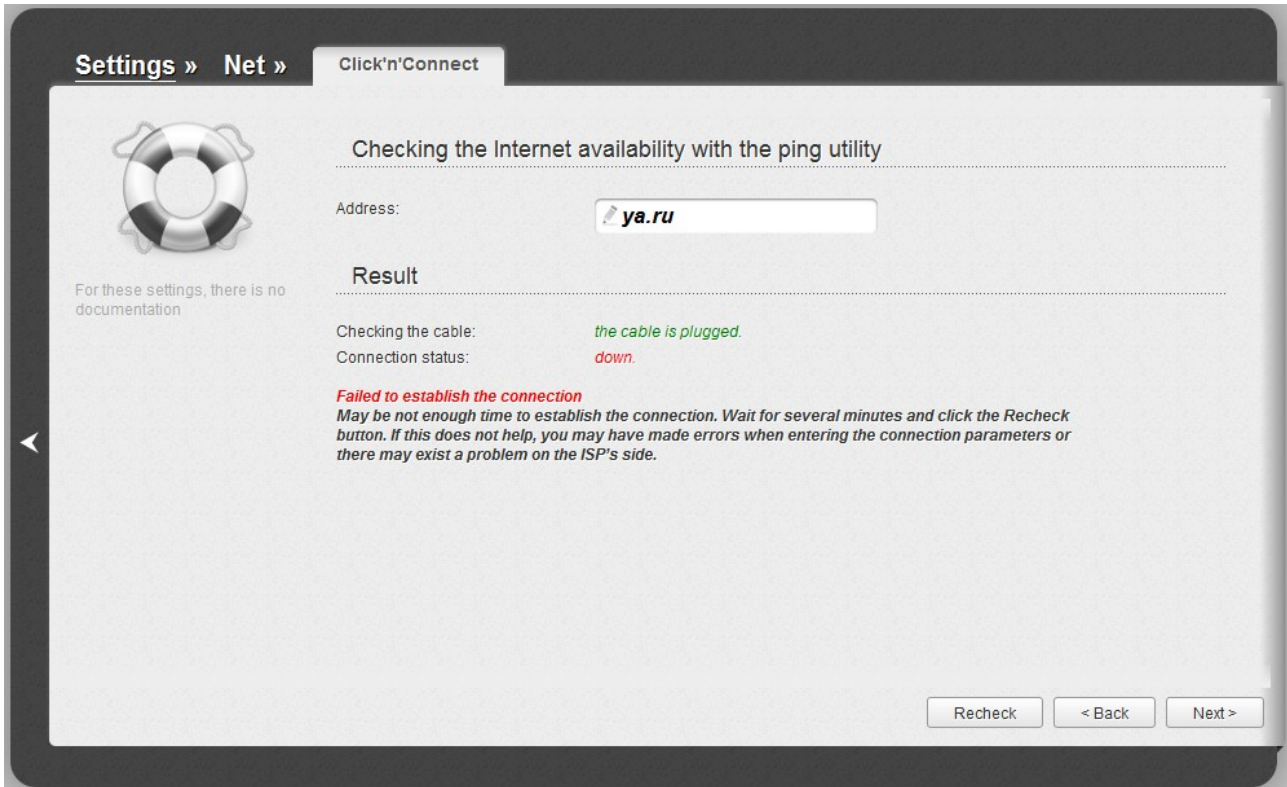


Figure 56. Checking the Internet availability.

In the **Result** section, the status of the WAN connection and possible causes of malfunctions are displayed. To recheck the status of the WAN connection, enter the IP address or name of a host in the **Address** field or leave the value specified by default (**ya.ru**). Then click the **Recheck** button.

Click the **Back** button to specify other settings.

Click the **Next** button to continue.

After clicking the **Next** button, the page for configuring wireless connection opens (see the *Configuring Wireless Connection* section, page 77).

## Configuring Wireless Connection

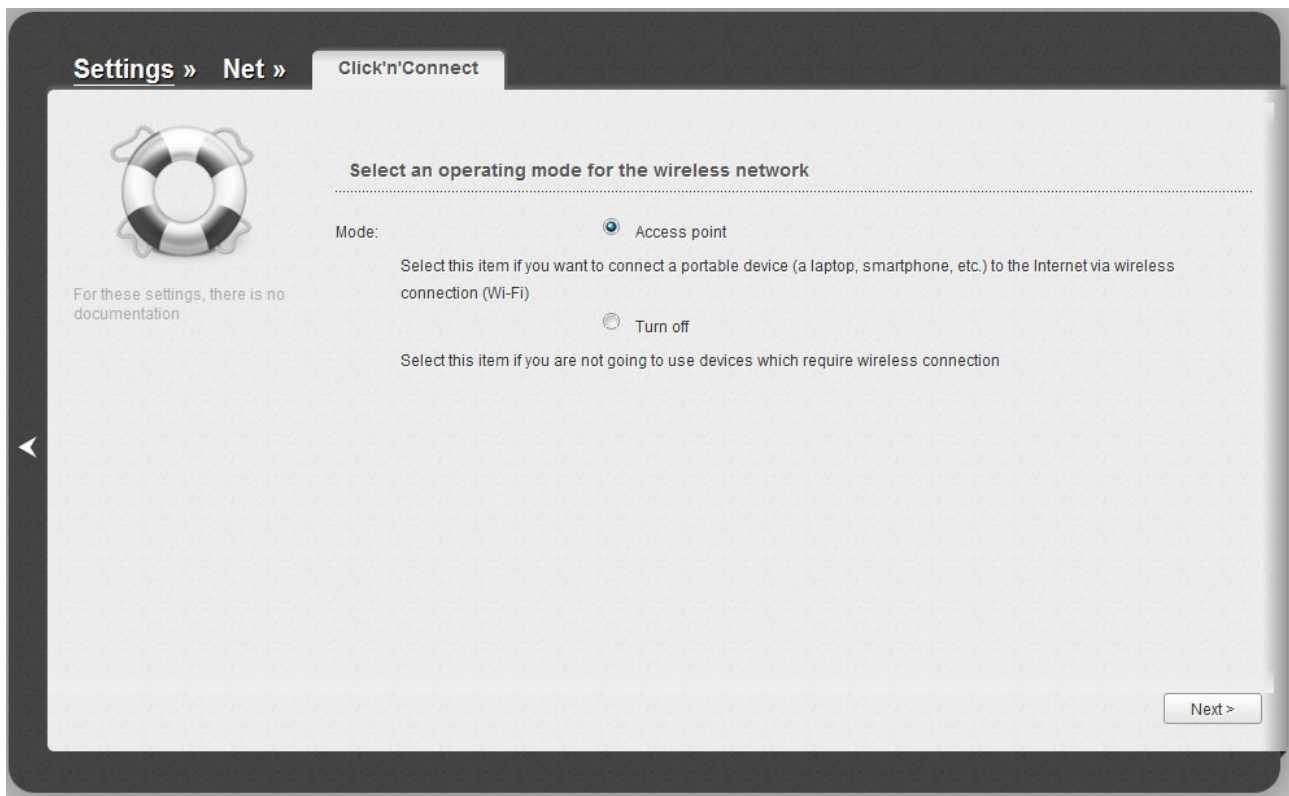


Figure 57. Selecting the operating mode for the wireless network.

If you are not going to use the wireless connection, select the **Turn off** choice of the **Mode** radio button. Click the **Next** button and then click the **Apply** button on the opened page. After clicking the button, the page for configuring the router to use an IPTV set-top box opens (see the *Configuring IPTV* section, page 80).

If you want to connect portable devices to the Internet via wireless connection, select the **Access point** choice of the **Mode** radio button. Click the **Next** button.

On the opened page, in the **SSID** field, specify a new name for the network (use digits and Latin characters).

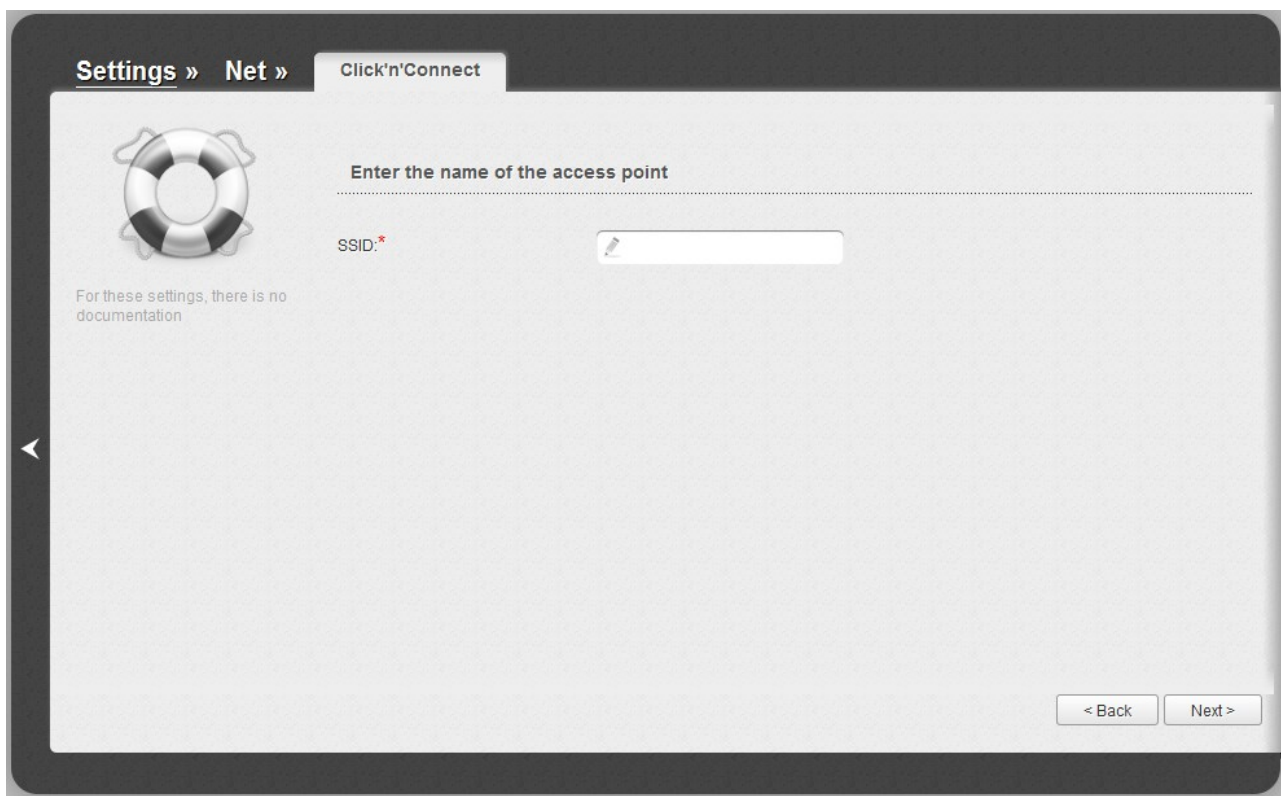


Figure 58. Changing the name of the wireless LAN.

Click the **Next** button to continue.

On the next page, you can modify security settings of the WLAN.

**!** The default security settings do not provide sufficient protection for the WLAN. Please, specify your own security settings for the WLAN.

Select the **Protected** value from the **Network Authentication** drop-down list and enter a key (a password that will be used to access your wireless network) in the **Network key** field. Use digits and Latin characters. After applying this setting, the **WPA-PSK/WPA2-PSK mixed** authentication type is specified for the router's WLAN.

When the **Open** value is selected, the **Network key** field is unavailable. After applying this setting, the **Open** authentication type with no encryption is specified for the router's WLAN.

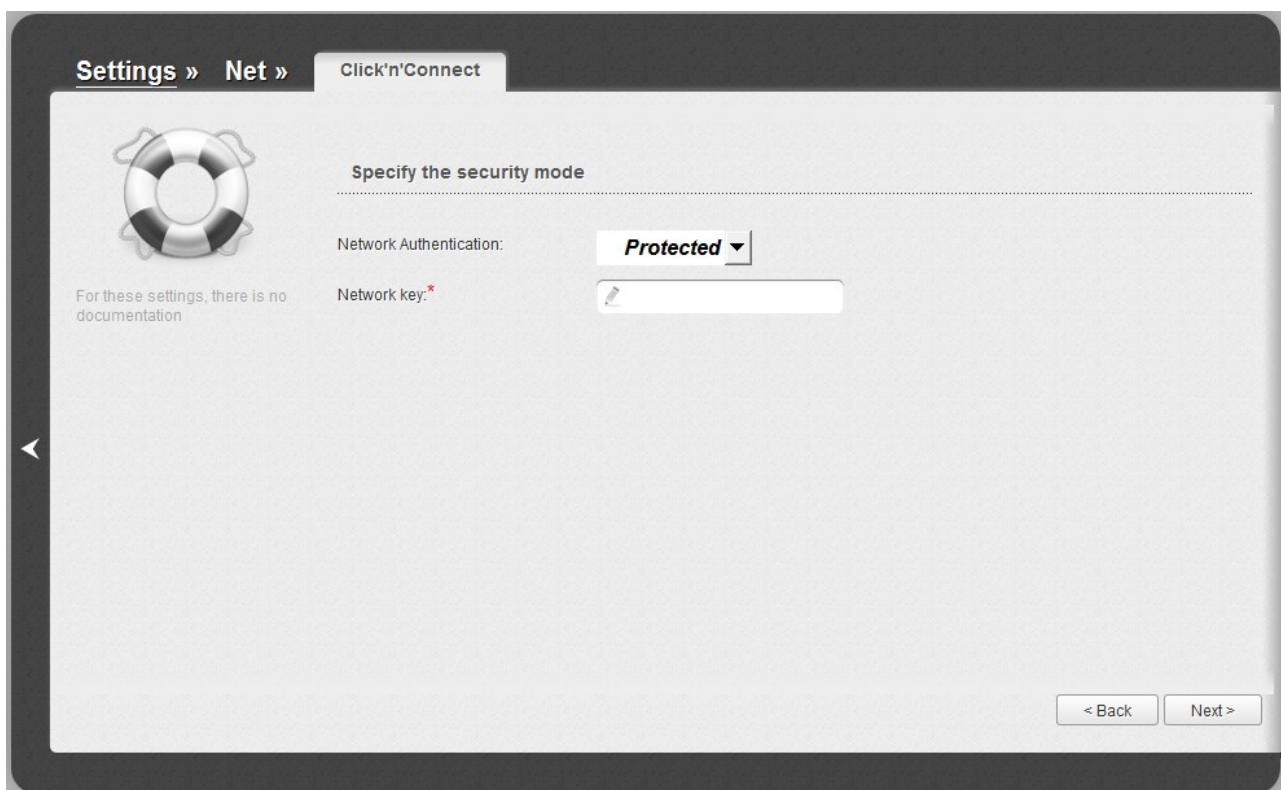


Figure 59. Selecting a security mode for the wireless network.

Click the **Next** button to continue.

On the next page, the specified settings are displayed. Make sure that they are correct and then click the **Apply** button. After clicking the button, the page for configuring the router to use an IPTV set-top box opens (see the *Configuring IPTV* section, page 80).

## Configuring IPTV

On the page, you can configure the router to use an IPTV set-top box.

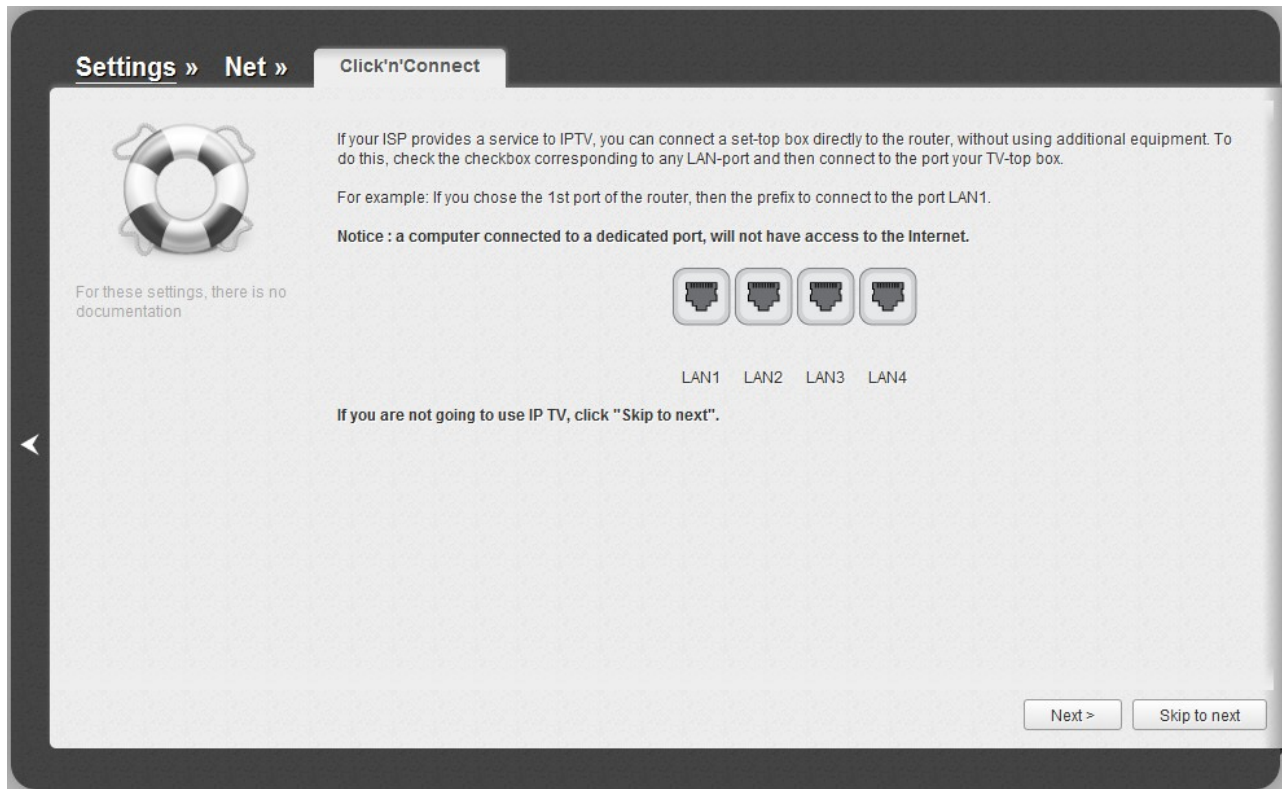


Figure 60. Selecting a LAN port to connect an IPTV set-top box.

On the opened page, select the LAN port of the router to which you will connect your IPTV set-top box.

If in the future you need to disconnect your IPTV set-top box from the specified LAN port and connect to it a computer, start the **IPTV settings wizard** (for the detailed description of the Wizard, see the ***IPTV Settings Wizard*** section, page 86).

If for accessing the Internet and IPTV services your ISP uses virtual local area networks with identifiers (VLAN ID), to configure access to the IPTV service, proceed to the **Advanced / VLAN** page, create a group of ports with the required value of the **VLAN ID** parameter, **Transparent** type, and the port to which the set-top box will be connected (see the ***VLAN*** section, page 141, for a detailed description of the elements from the page).

Click the **Next** button to continue.

Click the **Skip to next** button in order not to apply the IPTV settings.

Click the **Apply** button to save the specified settings.

After clicking the **Apply** button, the quick settings page opens.



## Wireless Network Settings Wizard

To specify all needed settings for your wireless network, click the **Wireless network settings wizard** in the **Wi-Fi** section.

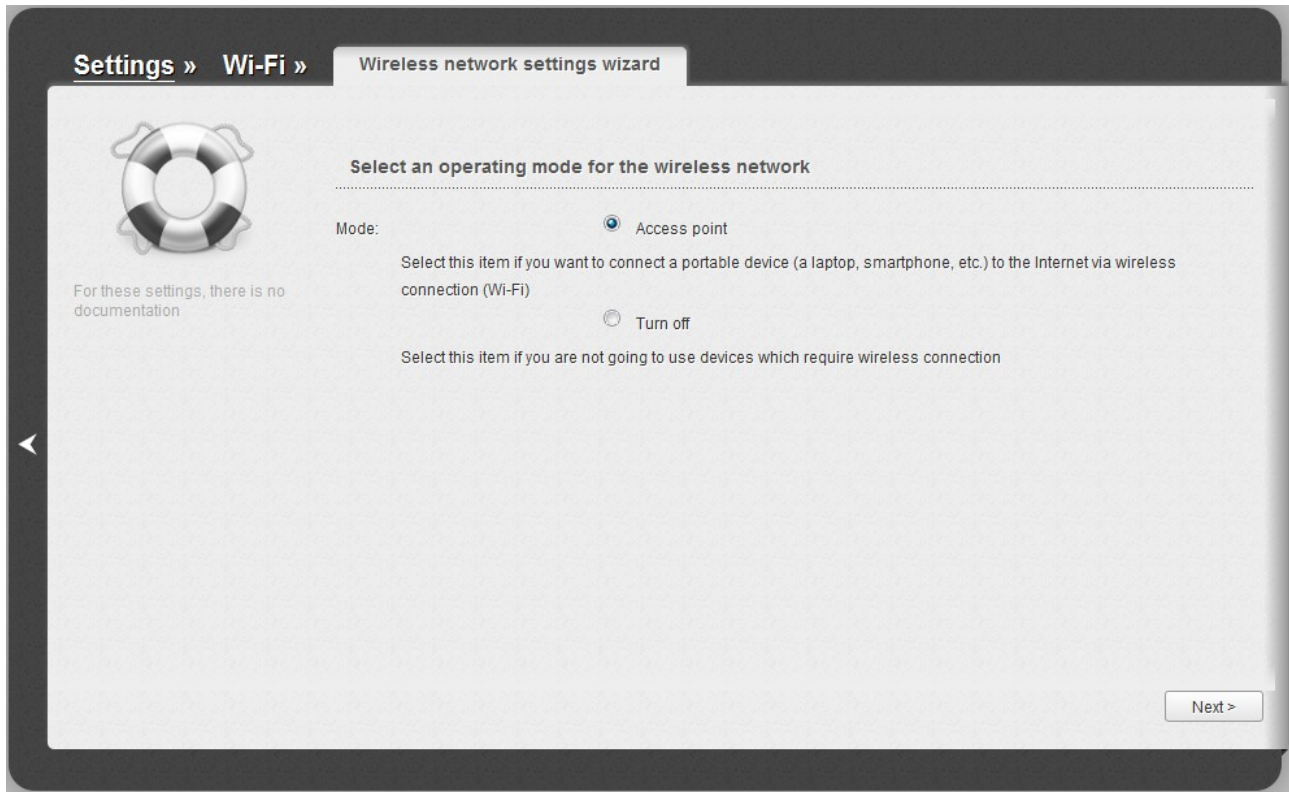


Figure 61. The page for selecting the operating mode for the wireless network.

If you are not going to use the wireless connection, select the **Turn off** choice of the **Mode** radio button. Click the **Next** button and then click the **Apply** button on the opened page. After clicking the button, the quick settings page opens.

If you want to connect portable devices to the Internet via wireless connection, select the **Access point** choice of the **Mode** radio button. Click the **Next** button.

On the opened page, in the **SSID** field, specify a new name for the network (use digits and Latin characters).

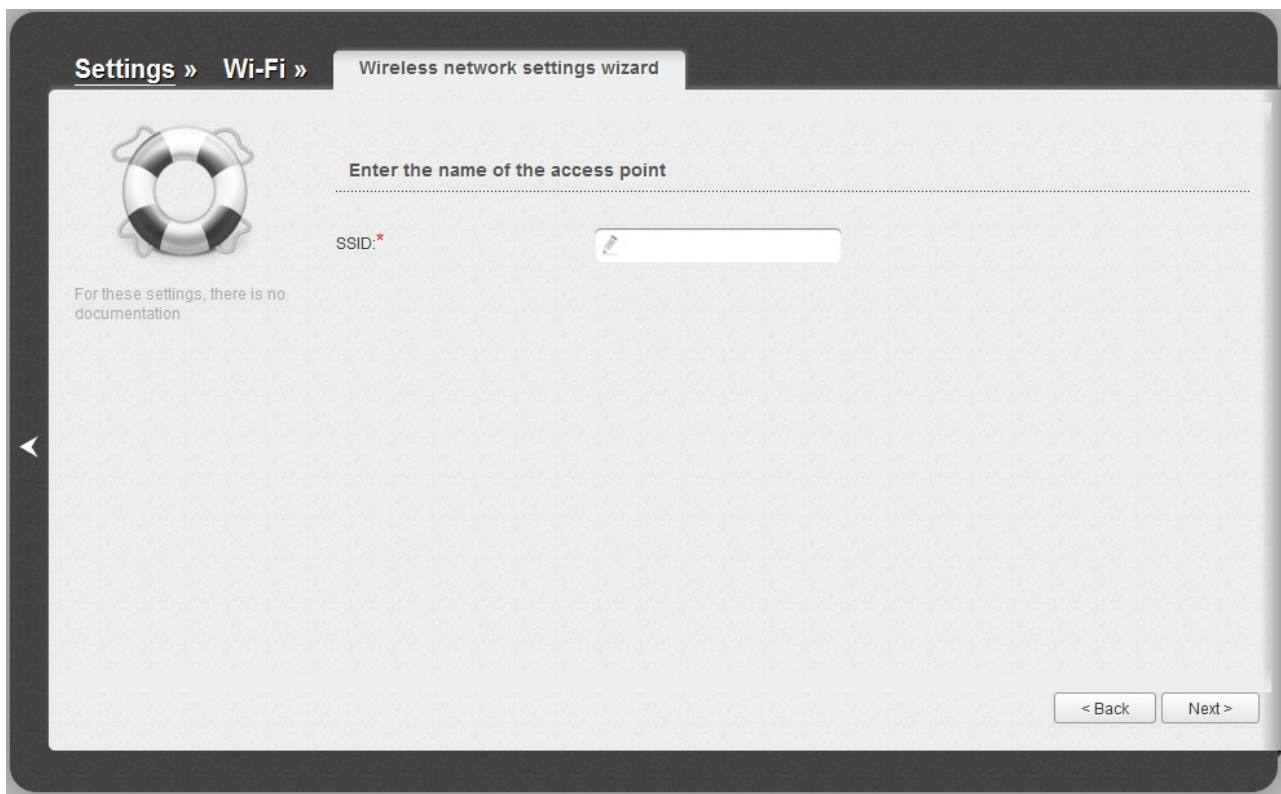


Figure 62. Page for changing the name of the wireless LAN.

Click the **Next** button to continue.

On the next page, you can modify security settings of the WLAN.

**!** The default security settings do not provide sufficient protection for the WLAN. Please, specify your own security settings for the WLAN.

Select the **Protected** value from the **Network Authentication** drop-down list and enter a key (a password that will be used to access your wireless network) in the **Network key** field. Use digits and Latin characters. After applying this setting, the **WPA-PSK/WPA2-PSK mixed** authentication type is specified for the router's WLAN.

When the **Open** value is selected, the **Network key** field is unavailable. After applying this setting, the **Open** authentication type with no encryption is specified for the router's WLAN.

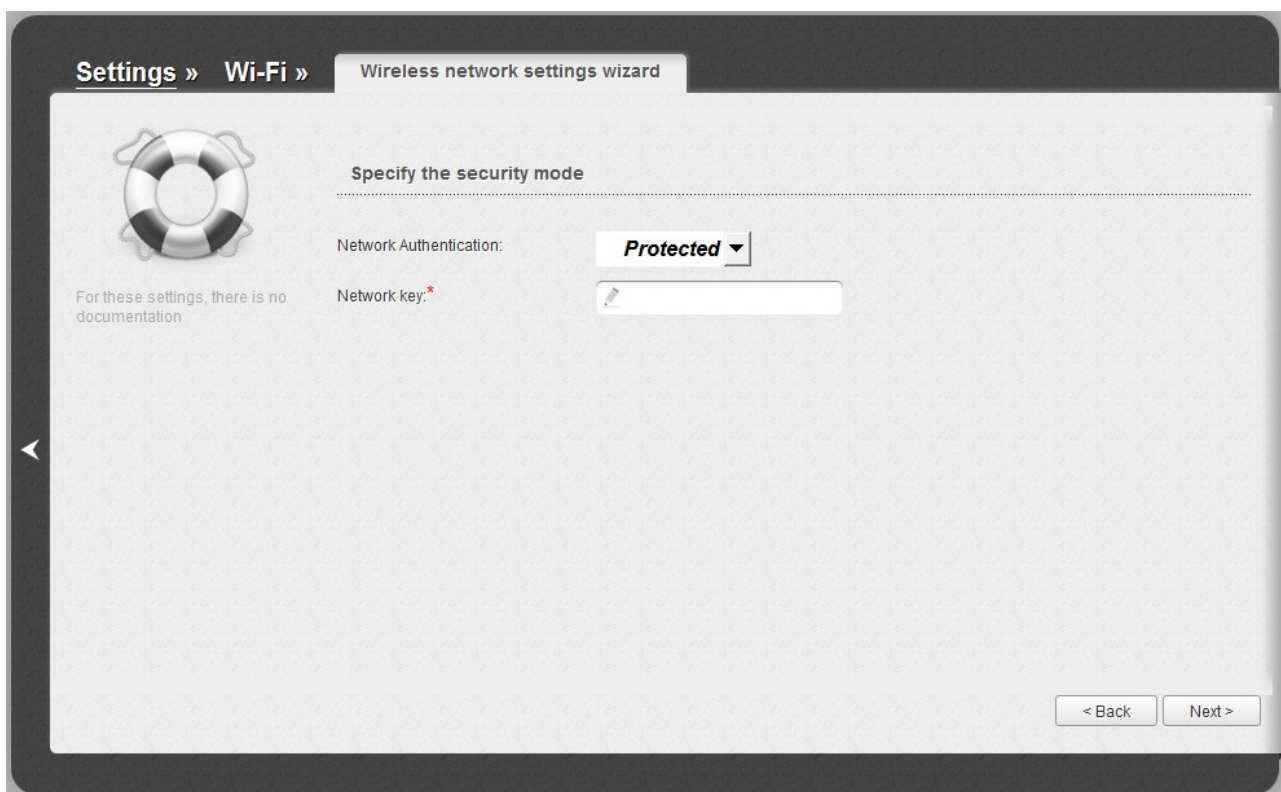


Figure 63. Page for selecting a security mode for the wireless network.

Click the **Next** button to continue.

On the next page, the specified settings are displayed. Make sure that they are correct and then click the **Apply** button. After clicking the button, the quick settings page opens.

## Virtual Server Settings Wizard


To create a virtual server for redirecting incoming Internet traffic to a specified IP address in the LAN, click the **Virtual server settings wizard** link in the **Firewall** section.

Figure 64. The page for adding a virtual server.

On the opened page, you can specify the following parameters:

Parameter	Description
<b>Template</b>	Select a virtual server template from the drop-down list, or select <b>Custom</b> to specify all parameters of the new virtual server manually.
<b>Name</b>	Enter a name for the virtual server for easier identification. You can specify any name.
<b>Interface</b>	Select a WAN connection to which this virtual server will be assigned.
<b>Protocol</b>	A protocol that will be used by the new virtual server. Select a value from the drop-down list.

Parameter	Description
<b>Public port (begin)/ Public port (end)</b>	A port of the router from which traffic is directed to the IP address specified in the <b>Private IP</b> field. Specify the start and the end value for the port range. If you need to specify one port, enter the needed value in the <b>Public port (begin)</b> field and leave the <b>Public port (end)</b> field blank.
<b>Private port (begin)/ Private port (end)</b>	A port of the IP address specified in the <b>Private IP</b> field to which traffic is directed from the <b>Public port</b> . Specify the start and the end value for the port range. If you need to specify one port, enter the needed value in the <b>Private port (begin)</b> field and leave the <b>Private port (end)</b> field blank.
<b>Private IP</b>	Enter the IP address of the server from the local area network. To choose a device connected to the router's LAN at the moment, select the relevant value from the drop-down list (the field will be filled in automatically).
<b>Remote IP</b>	Enter the IP address of the server from the external network.

When needed settings are configured, click the **Apply** button. After successful creation of the virtual server a notification appears. Click the **OK** button in the notification window, and then click the **Back** icon () on the left side of the page to get back to the quick settings page.

## IPTV Settings Wizard

To configure the router to use an IPTV set-top box, click the **IPTV settings wizard** link in the **IP-TV** section.

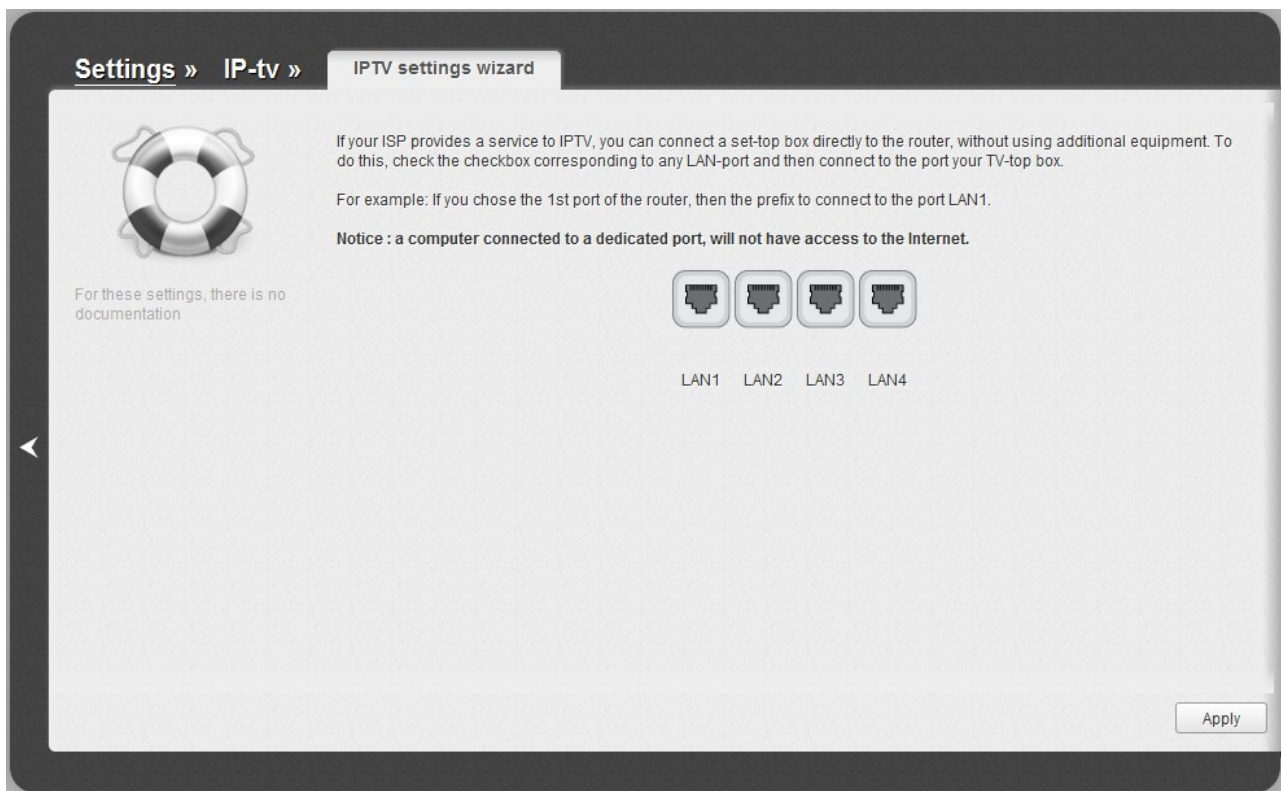


Figure 65. The page for selecting a LAN port to connect an IPTV set-top box.

On the opened page, select the LAN port of the router to which you will connect your IPTV set-top box and click the **Apply** button. After that you will get to the quick settings page.

If in the future you need to disconnect your IPTV set-top box from the specified LAN port and connect to it a computer, on the current page deselect the LAN port and click the **Apply** button.

If for accessing the Internet and IPTV services your ISP uses virtual local area networks with identifiers (VLAN ID), to configure access to the IPTV service, proceed to the **Advanced / VLAN** page, create a group of ports with the required value of the **VLAN ID** parameter, **Transparent** type, and the port to which the set-top box will be connected (see the *VLAN* section, page 141, for a detailed description of the elements from the page).


## Status

The pages of this section display data on the current state of the router:

- network statistics
- IP addresses leased by the DHCP server
- the routing table
- data on devices connected to the router's network and its web-based interface
- active sessions.

### Network Statistics

On the **Status / Network statistics** page, you can view statistics for all interfaces (connections) existing in the system. For each connection the following data are displayed: name and state (when the connection is on, its name is highlighted in green, when the connection is off, its name is highlighted in red), IP address and subnet mask, gateway (if the connection is established), MAC address, MTU value, and volume of data received and transmitted (with increase of the volume the units of measurement are changed automatically: byte, Kbyte, Mbyte, Gbyte).

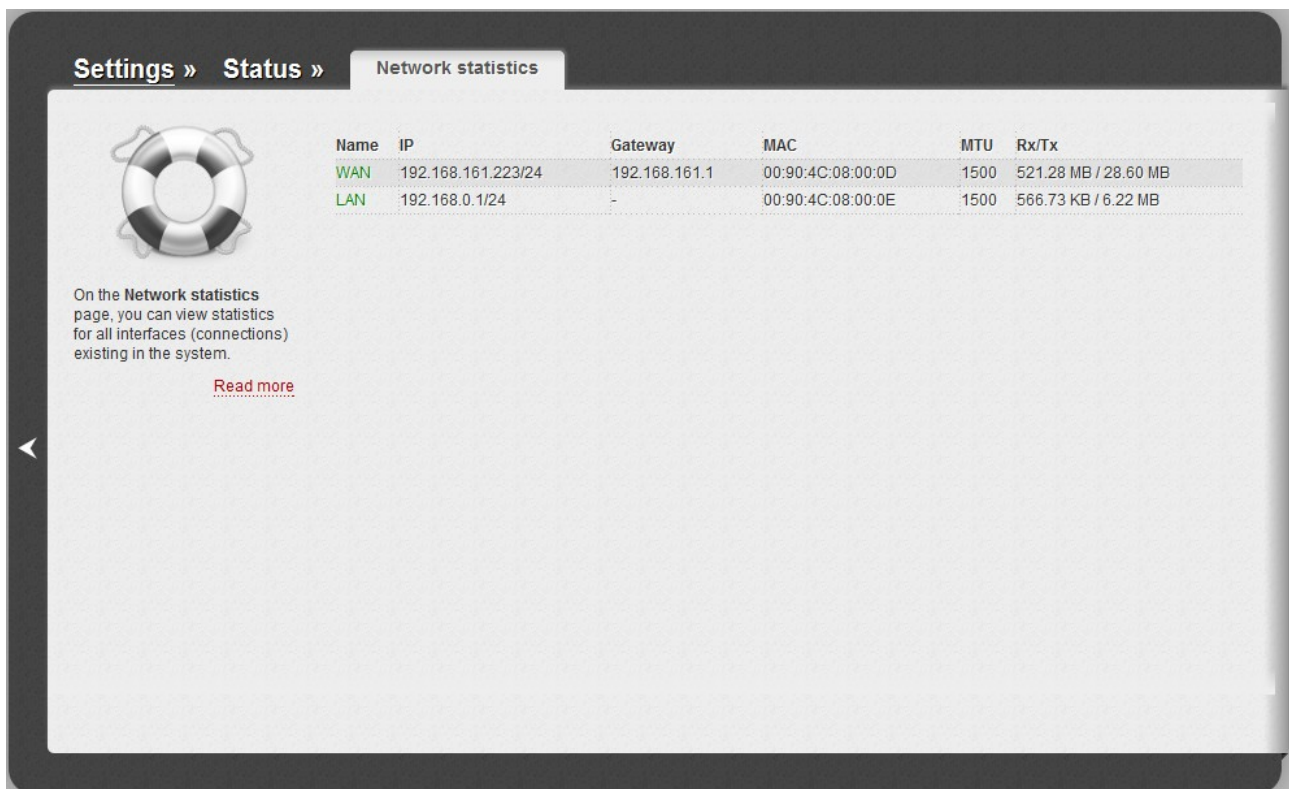

Name	IP	Gateway	MAC	MTU	Rx/Tx
WAN	192.168.161.223/24	192.168.161.1	00:90:4C:08:00:0D	1500	521.28 MB / 28.60 MB
LAN	192.168.0.1/24	-	00:90:4C:08:00:0E	1500	566.73 KB / 6.22 MB

Figure 66. The **Status / Network statistics** page.

## DHCP

The **Status / DHCP** page displays the information on computers that have been identified by hostnames and MAC addresses and have got IP addresses from the DHCP server of the device, as well as the IP address expiration periods (the lease time).


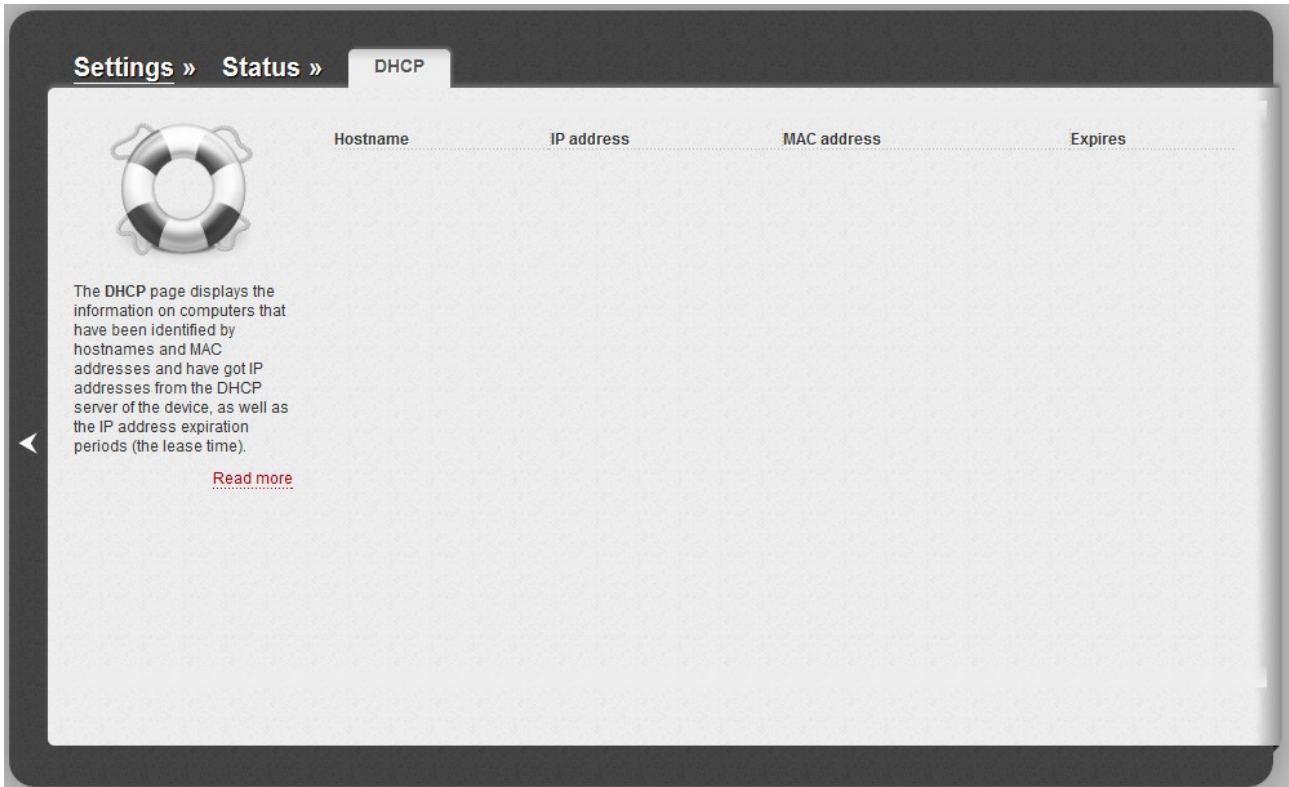


Figure 67. The **Status / DHCP** page.



## Routing Table

The **Status / Routing table** page displays the information on routes. The table contains destination IP addresses, gateways, subnet masks, and other data.

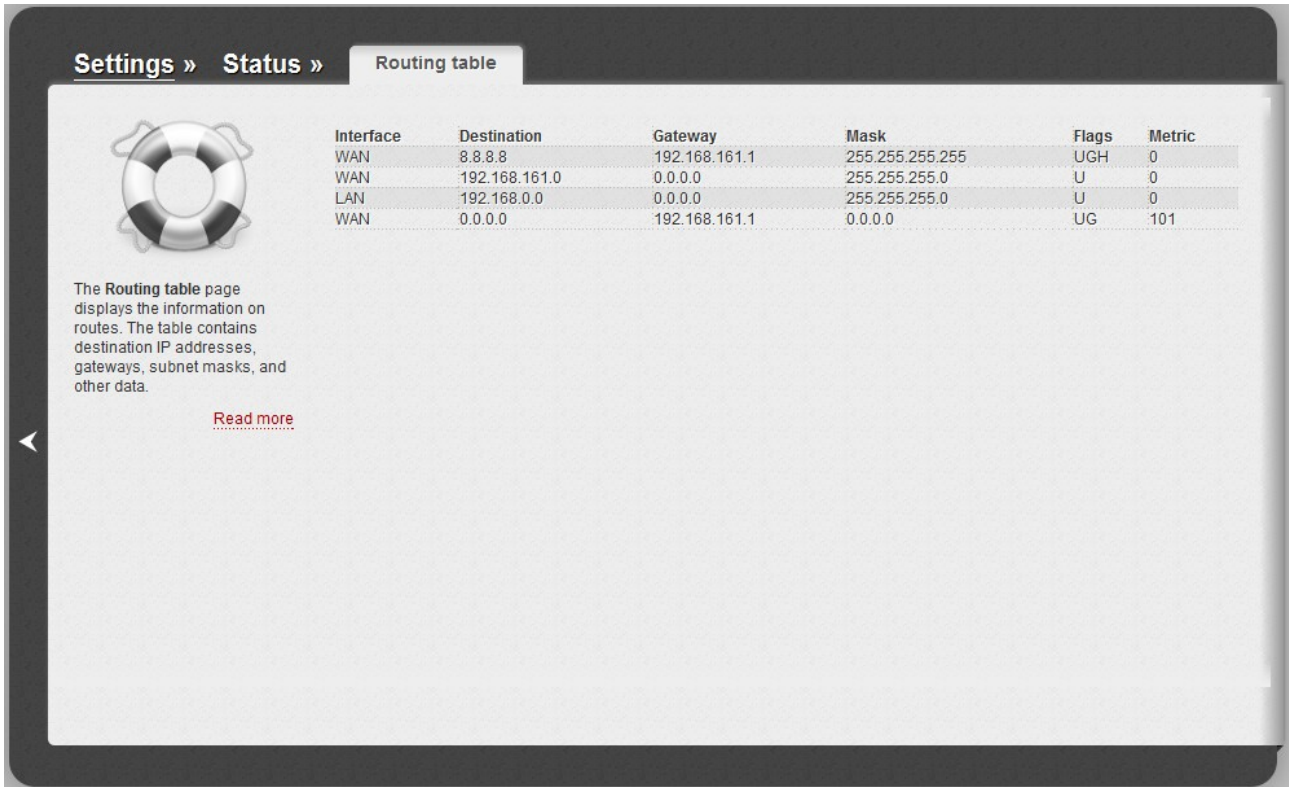

The screenshot shows the 'Routing table' page in a web interface. At the top, there is a breadcrumb trail: 'Settings » Status » Routing table'. Below the breadcrumb, there is a lifebuoy icon. To the right of the icon is a table with the following data:

Interface	Destination	Gateway	Mask	Flags	Metric
WAN	8.8.8.8	192.168.161.1	255.255.255.255	UGH	0
WAN	192.168.161.0	0.0.0.0	255.255.255.0	U	0
LAN	192.168.0.0	0.0.0.0	255.255.255.0	U	0
WAN	0.0.0.0	192.168.161.1	0.0.0.0	UG	101

Below the table, there is a text block that reads: 'The Routing table page displays the information on routes. The table contains destination IP addresses, gateways, subnet masks, and other data.' Below this text is a red 'Read more' link.

Figure 68. The **Status / Routing table** page.

## Clients

On the **Status / Clients** page, you can view the list of devices connected to the router and devices accessing its web-based interface.

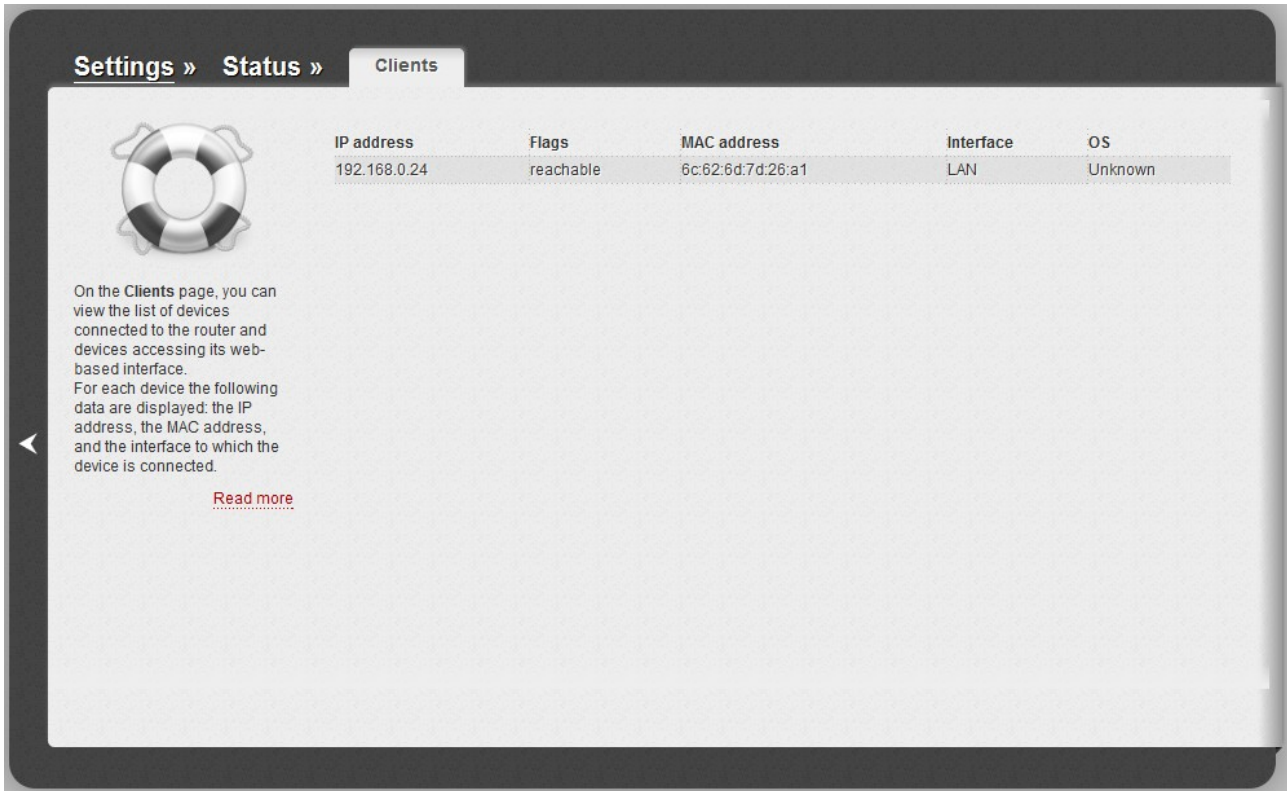


Figure 69. The **Status / Clients** page.

For each device the following data are displayed: the IP address, the MAC address, and the interface to which the device is connected.

## Active Sessions

On the **Status / Active sessions** page, you can view information on current sessions in the router's network. For each session the following data are displayed: a protocol for network packet transmission, a source IP address and port, a destination IP address and port.

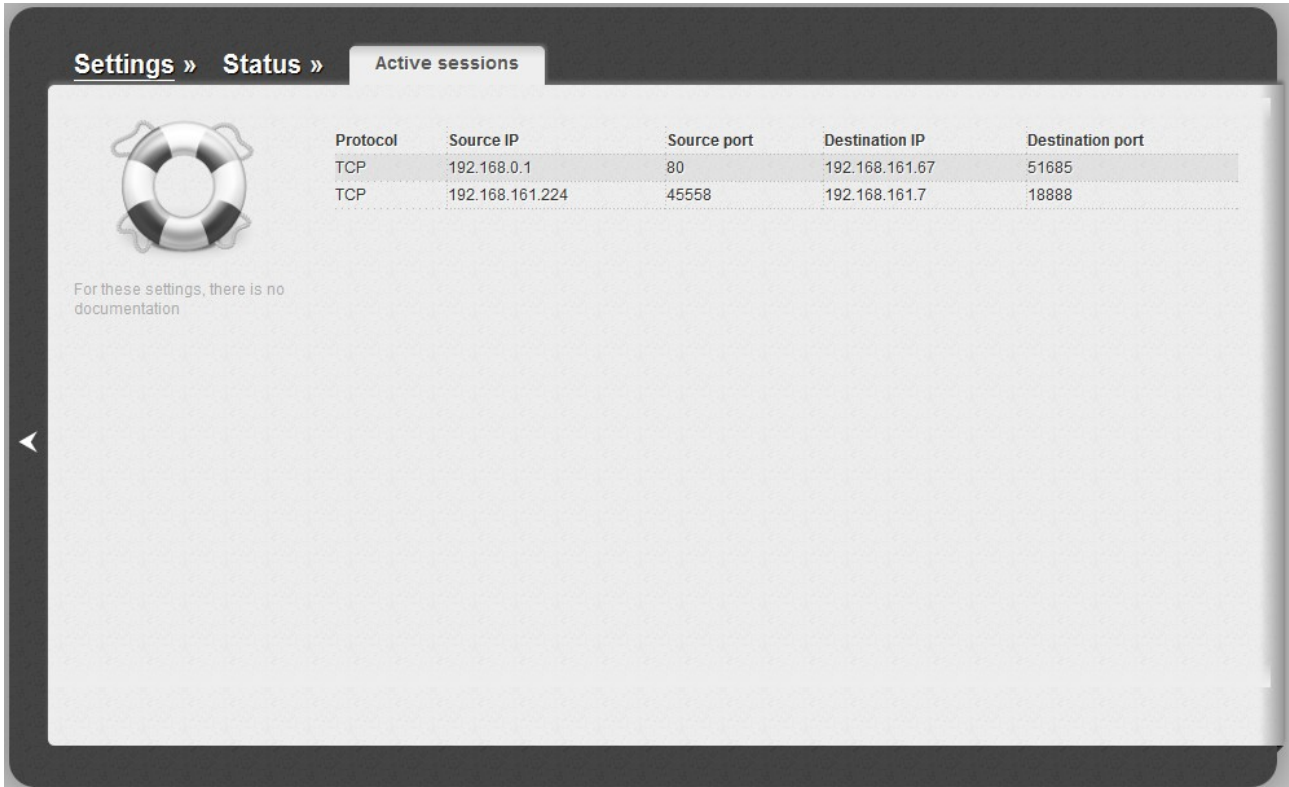


Figure 70. The **Status / Active sessions** page.

## Net

In this menu you can configure basic parameters of the router's local area network and configure connection to the Internet (a WAN connection).

## WAN

On the **Net / WAN** page, you can create and edit connections used by the router.

By default, the **WAN** connection is configured in the system. It is assigned to the **INTERNET** port of the router. You can edit this connection or delete it.

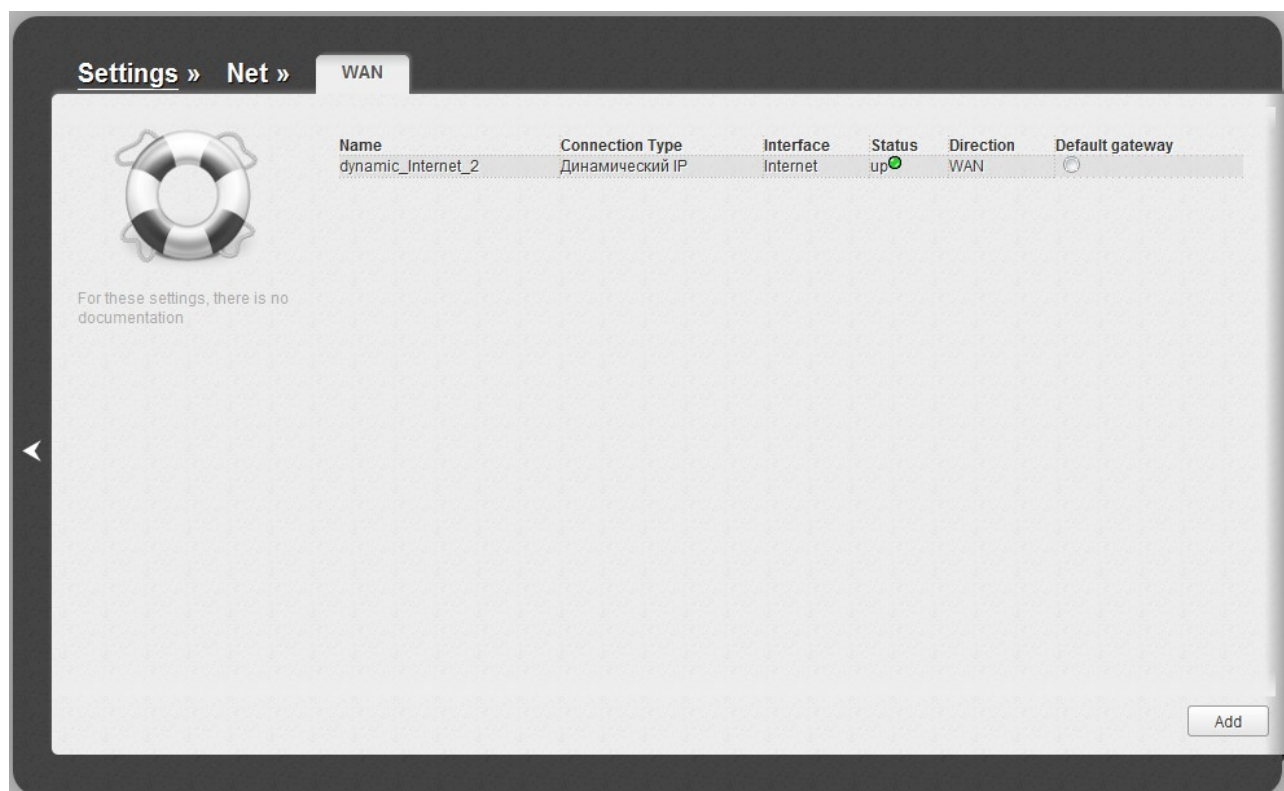


Figure 71. The **Net / WAN** page.

To create a new connection, click the **Add** button. On the page displayed, specify the relevant values.


To edit an existing connection, left-click the relevant line in the table. On the page displayed, change the parameters and click the **Apply** button.

To delete an existing connection, left-click the relevant line in the table. On the page displayed, click the **Delete** button.

To use one of existing WAN connections as a default gateway, select the choice of the **Default gateway** radio button located in the line corresponding to this connection.

## Creating PPPoE WAN Connection

To create a connection of the PPPoE type, click the **Add** button on the **Net / WAN** page. On the opened page, select the **PPPoE** value from the **Connection Type** drop-down list and specify the needed values.

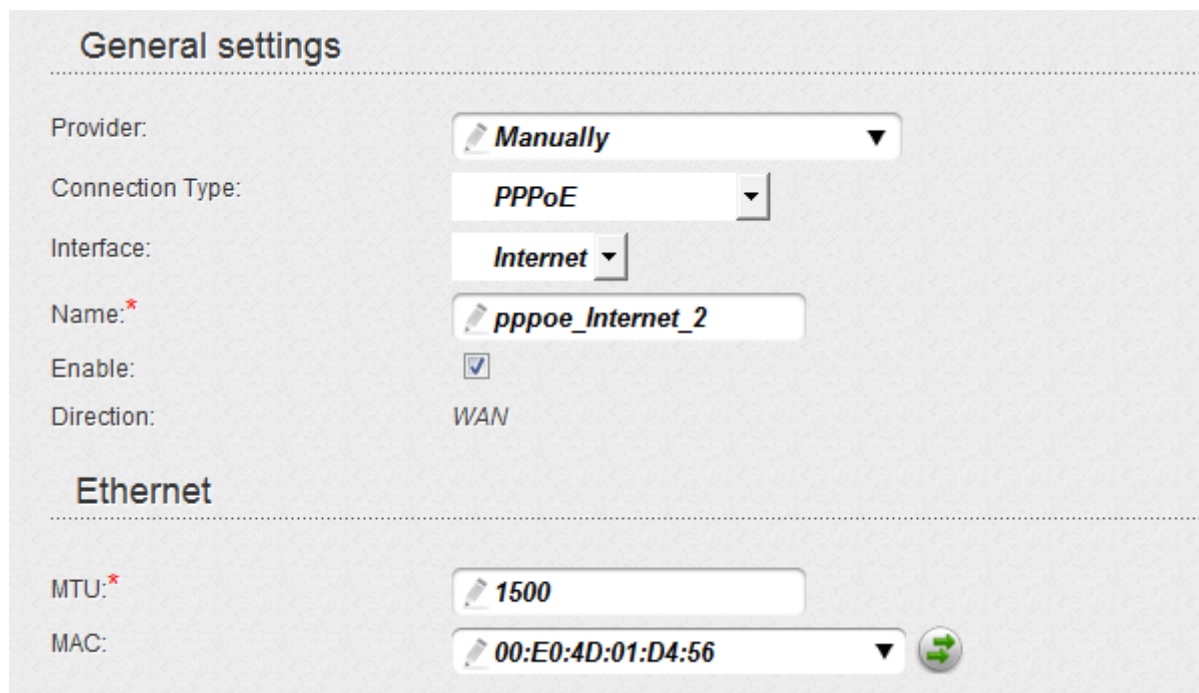

The screenshot shows a web-based configuration page for creating a new connection. It is divided into two main sections: **General settings** and **Ethernet**.

**General settings:**


- Provider:** Manually (dropdown menu)
- Connection Type:** PPPoE (dropdown menu)
- Interface:** Internet (dropdown menu)
- Name:** pppoe\_Internet\_2 (text input field)
- Enable:**  (checkbox)
- Direction:** WAN (text label)

**Ethernet:**

- MTU:** 1500 (text input field)
- MAC:** 00:E0:4D:01:D4:56 (text input field with a refresh button)

Figure 72. The page for creating a new connection. The **General settings** and **Ethernet** sections.

Parameter	Description
<b>General settings</b>	
<b>Provider</b>	Leave the <b>Manually</b> value.
<b>Interface</b>	A physical or virtual interface to which the new connection will be assigned.
<b>Name</b>	A name for connection for easier identification.
<b>Enable</b>	Select the checkbox to enable the connection.
<b>Direction</b>	The direction of this connection.
<b>Ethernet</b>	
<b>MTU</b>	The maximum size of units transmitted by the interface.

Parameter	Description
<p style="text-align: center;"><b>MAC</b></p>	<p>A MAC address assigned to the interface. This parameter is mandatory if your ISP uses MAC address binding. In the field, enter the MAC address registered by your ISP upon concluding the agreement.</p> <p>You can click the <b>Clone MAC Address</b> button () to set the MAC address of the network interface card (of the computer that is being used to configure the router at the moment) as the MAC address of the WAN interface.</p> <p>Also you can set the address of a device connected to the router's LAN at the moment. To do this, select the relevant value from the drop-down list (the field will be filled in automatically).</p>

### PPP

---

Username:\*

Without authorization:

Password:\*

Password confirmation:\*

Service name:

Authentication algorithm: AUTO ▼

MTU:\*

Keep Alive:

LCP interval (sec):\*

LCP fails:\*

Dial on demand:

PPP IP extension:

Static IP Address:

PPP debug:

Figure 73. The page for creating a new connection. The **PPP** section.

Parameter	Description
<b>PPP</b>	
<b>Username</b>	A username (login) to access the Internet.
<b>Without authorization</b>	Select the checkbox if you don't need to enter a username and password to access the Internet.
<b>Password</b>	A password to access the Internet.
<b>Password confirmation</b>	The confirmation of the entered password (to avoid mistypes).
<b>Service name</b>	The name of the PPPoE authentication server.
<b>Authentication algorithm</b>	Select a required authentication method from the drop-down list or leave the <b>AUTO</b> value.
<b>MTU</b>	The maximum size of units transmitted by the interface.
<b>Keep Alive</b>	Select the checkbox if you want the router to keep you connected to your ISP even when the connection has been inactive for a specified period of time. When the checkbox is selected, the <b>LCP interval</b> and <b>LCP fails</b> fields are available. Specify the required values.
<b>Dial on demand</b>	Select the checkbox if you want the router to establish connection to the Internet on demand. In the <b>Maximum idle time</b> field, specify a period of inactivity (in seconds) after which the connection should be terminated.
<b>PPP IP extension</b>	This option is used by some ISPs. Contact your ISP to clarify if this checkbox needs to be enabled.
<b>Static IP Address</b>	Fill in the field if you want to use a static IP address to access the Internet.
<b>PPP debug</b>	Select the checkbox if you want to log all data on PPP connection debugging.

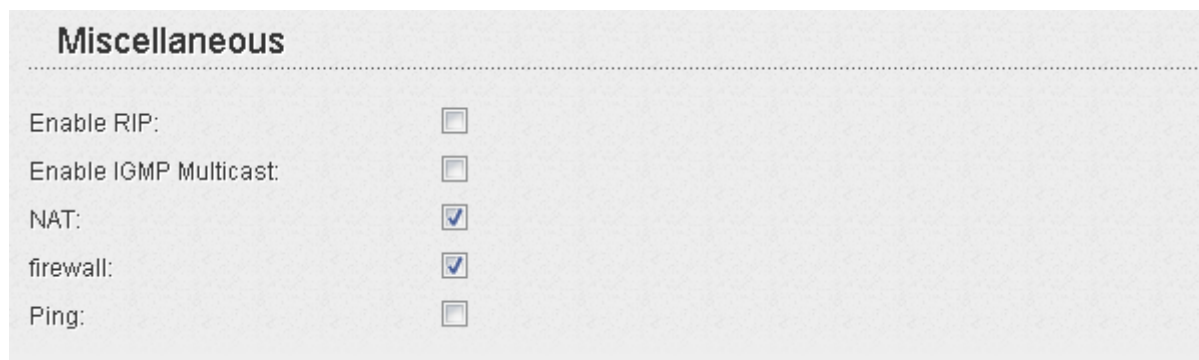


Figure 74. The page for creating a new connection. The **Miscellaneous** section.


Parameter	Description
<b>Miscellaneous</b>	
<b>Enable RIP</b>	Select the checkbox to allow using RIP for this connection.
<b>Enable IGMP Multicast</b>	Select the checkbox to allow multicast traffic from the external network (e.g. video streaming) to be received.
<b>NAT</b>	Select the checkbox if you want one WAN IP address to be used for all computers of your LAN.
<b>Firewall</b>	Select the checkbox to enable protection against ARP and DDoS attacks.
<b>Ping</b>	Select the checkbox to allow the router to answer ping requests from the external network through this connection. For security reasons, it is recommended not to select this checkbox.

When all needed settings are configured, click the **Apply** button.



## Creating Static IP WAN Connection


To create a connection of the Static IP type, click the **Add** button on the **Net / WAN** page. On the opened page, select the **Static IP** value from the **Connection Type** drop-down list and specify the needed values.

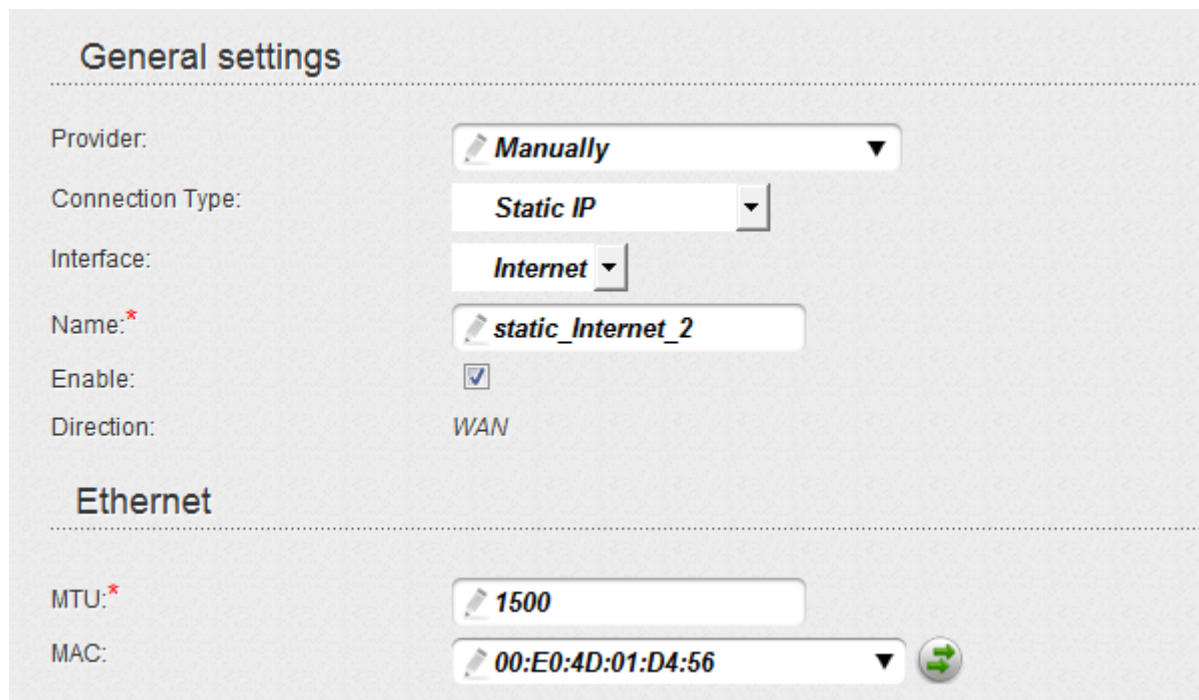

The screenshot shows a configuration page with two main sections: **General settings** and **Ethernet**. In the **General settings** section, the **Provider** is set to *Manually*, **Connection Type** is *Static IP*, **Interface** is *Internet*, **Name** is *static\_Internet\_2*, **Enable** is checked, and **Direction** is *WAN*. In the **Ethernet** section, **MTU** is *1500* and **MAC** is *00:E0:4D:01:D4:56*.

Figure 75. The page for creating a new connection. The **General settings** and **Ethernet** sections.

Parameter	Description
<b>General settings</b>	
<b>Provider</b>	Leave the <b>Manually</b> value.
<b>Interface</b>	A physical or virtual interface to which the new connection will be assigned.
<b>Name</b>	A name for connection for easier identification.
<b>Enable</b>	Select the checkbox to enable the connection.
<b>Direction</b>	The direction of this connection.
<b>Ethernet</b>	
<b>MTU</b>	The maximum size of units transmitted by the interface.

Parameter	Description
<p style="text-align: center;"><b>MAC</b></p>	<p>A MAC address assigned to the interface. This parameter is mandatory if your ISP uses MAC address binding. In the field, enter the MAC address registered by your ISP upon concluding the agreement.</p> <p>You can click the <b>Clone MAC Address</b> button (  ) to set the MAC address of the network interface card (of the computer that is being used to configure the router at the moment) as the MAC address of the WAN interface.</p> <p>Also you can set the address of a device connected to the router's LAN at the moment. To do this, select the relevant value from the drop-down list (the field will be filled in automatically).</p>

### IP

---

IP Address:\*

Netmask:\*

Gateway IP address:\*

Primary DNS server:\*

Secondary DNS server:

### Miscellaneous

---

Enable RIP:

Enable IGMP Multicast:

NAT:

firewall:

Ping:


Figure 76. The page for creating a new connection. The **IP** and **Miscellaneous** sections.

Parameter	Description
<b>IP</b>	
<b>IP Address</b>	Enter an IP address for this WAN connection.
<b>Netmask</b>	Enter a subnet mask for this WAN connection.
<b>Gateway IP address</b>	Enter an IP address of the gateway used by this WAN connection.
<b>Primary DNS server/ Secondary DNS server</b>	Enter addresses of the primary and secondary DNS servers in the relevant fields.
<b>Miscellaneous</b>	
<b>Enable RIP</b>	Select the checkbox to allow using RIP for this connection.
<b>Enable IGMP Multicast</b>	Select the checkbox to allow multicast traffic from the external network (e.g. video streaming) to be received.
<b>NAT</b>	Select the checkbox if you want one WAN IP address to be used for all computers of your LAN.
<b>Firewall</b>	Select the checkbox to enable protection against ARP and DDoS attacks.
<b>Ping</b>	Select the checkbox to allow the router to answer ping requests from the external network through this connection. For security reasons, it is recommended not to select this checkbox.

When all needed settings are configured, click the **Apply** button.

## Creating Dynamic IP WAN Connection

To create a connection of the Dynamic IP type, click the **Add** button on the **Net / WAN** page. On the opened page, select the **Dynamic IP** value from the **Connection Type** drop-down list and specify the needed values.

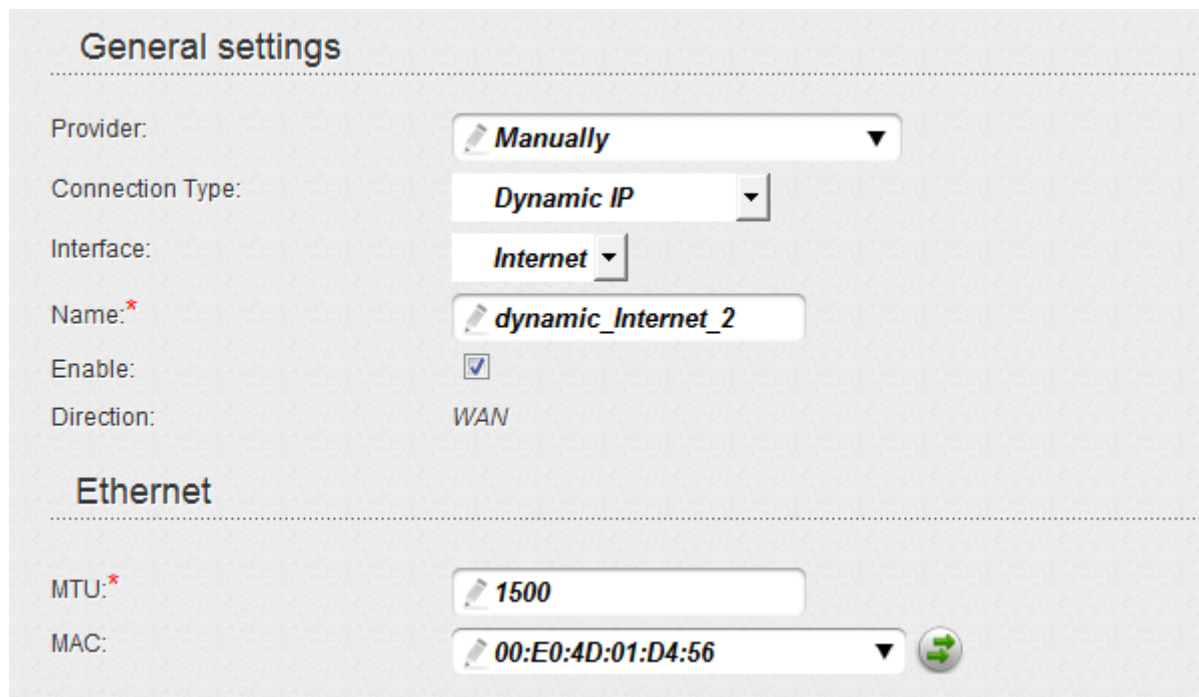

The screenshot shows a configuration page with two main sections: 'General settings' and 'Ethernet'. In the 'General settings' section, there are several fields: 'Provider' is a dropdown menu set to 'Manually'; 'Connection Type' is a dropdown menu set to 'Dynamic IP'; 'Interface' is a dropdown menu set to 'Internet'; 'Name' is a text input field containing 'dynamic\_Internet\_2'; 'Enable' is a checked checkbox; and 'Direction' is a text field containing 'WAN'. The 'Ethernet' section contains two fields: 'MTU' is a text input field containing '1500'; and 'MAC' is a dropdown menu containing '00:E0:4D:01:D4:56' with a refresh icon to its right.

Figure 77. The page for creating a new connection. The **General settings** and **Ethernet** sections.

Parameter	Description
<b>General settings</b>	
<b>Provider</b>	Leave the <b>Manually</b> value.
<b>Interface</b>	A physical or virtual interface to which the new connection will be assigned.
<b>Name</b>	A name for connection for easier identification.
<b>Enable</b>	Select the checkbox to enable the connection.
<b>Direction</b>	The direction of this connection.
<b>Ethernet</b>	
<b>MTU</b>	The maximum size of units transmitted by the interface.


Parameter	Description
<b>MAC</b>	<p>A MAC address assigned to the interface. This parameter is mandatory if your ISP uses MAC address binding. In the field, enter the MAC address registered by your ISP upon concluding the agreement.</p> <p>You can click the <b>Clone MAC Address</b> button () to set the MAC address of the network interface card (of the computer that is being used to configure the router at the moment) as the MAC address of the WAN interface.</p> <p>Also you can set the address of a device connected to the router's LAN at the moment. To do this, select the relevant value from the drop-down list (the field will be filled in automatically).</p>




Figure 78. The page for creating a new connection. The **IP** and **Miscellaneous** sections.

Parameter	Description
<b>IP</b>	
<b>Obtain DNS server addresses automatically</b>	Select the checkbox to configure automatic assignment of DNS server addresses. If the checkbox is selected, the <b>Primary DNS server</b> and <b>Secondary DNS server</b> fields are not displayed.
<b>Primary DNS server/ Secondary DNS server</b>	Enter addresses of the primary and secondary DNS servers in the relevant fields.
<b>Vendor ID</b>	The identifier of your ISP. <i>Optional.</i>
<b>Miscellaneous</b>	
<b>Enable RIP</b>	Select the checkbox to allow using RIP for this connection.
<b>Enable IGMP Multicast</b>	Select the checkbox to allow multicast traffic from the external network (e.g. video streaming) to be received.
<b>NAT</b>	Select the checkbox if you want one WAN IP address to be used for all computers of your LAN.
<b>Firewall</b>	Select the checkbox to enable protection against ARP and DDoS attacks.
<b>Ping</b>	Select the checkbox to allow the router to answer ping requests from the external network through this connection. For security reasons, it is recommended not to select this checkbox.

When all needed settings are configured, click the **Apply** button.

## Creating PPTP + Static IP or L2TP + Static IP WAN Connection


To create a connection of the PPTP + Static IP or L2TP + Static IP type, click the **Add** button on the **Net / WAN** page. On the opened page, select the relevant value from the **Connection Type** drop-down list and specify the needed values.

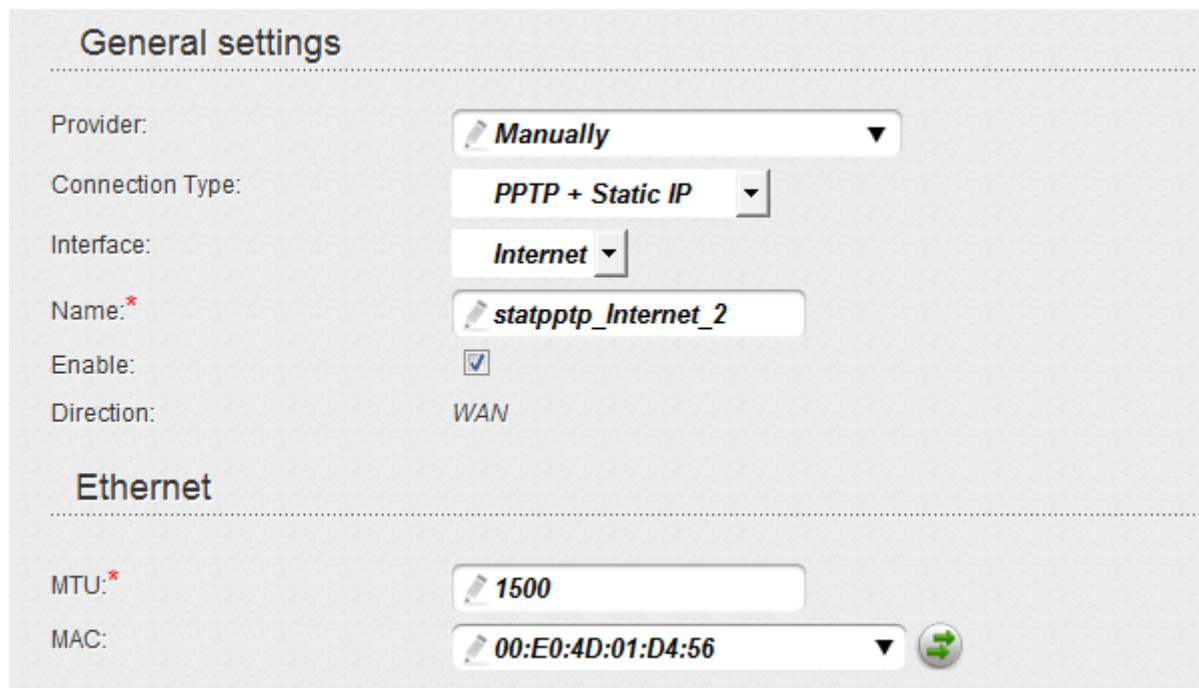


The screenshot shows a configuration page with two main sections: **General settings** and **Ethernet**. In the **General settings** section, there are several fields: **Provider** is set to **Manually**; **Connection Type** is set to **PPTP + Static IP**; **Interface** is set to **Internet**; **Name** is **statpptp\_Internet\_2**; **Enable** is checked; and **Direction** is **WAN**. In the **Ethernet** section, **MTU** is set to **1500** and **MAC** is set to **00:E0:4D:01:D4:56**.

Figure 79. The page for creating a new connection. The **General settings** and **Ethernet** sections.

Parameter	Description
<b>General settings</b>	
<b>Provider</b>	Leave the <b>Manually</b> value.
<b>Interface</b>	A physical or virtual interface to which the new connection will be assigned.
<b>Name</b>	A name for connection for easier identification.
<b>Enable</b>	Select the checkbox to enable the connection.
<b>Direction</b>	The direction of this connection.
<b>Ethernet</b>	
<b>MTU</b>	The maximum size of units transmitted by the interface.

Parameter	Description
<b>MAC</b>	<p>A MAC address assigned to the interface. This parameter is mandatory if your ISP uses MAC address binding. In the field, enter the MAC address registered by your ISP upon concluding the agreement.</p> <p>You can click the <b>Clone MAC Address</b> button () to set the MAC address of the network interface card (of the computer that is being used to configure the router at the moment) as the MAC address of the WAN interface.</p> <p>Also you can set the address of a device connected to the router's LAN at the moment. To do this, select the relevant value from the drop-down list (the field will be filled in automatically).</p>

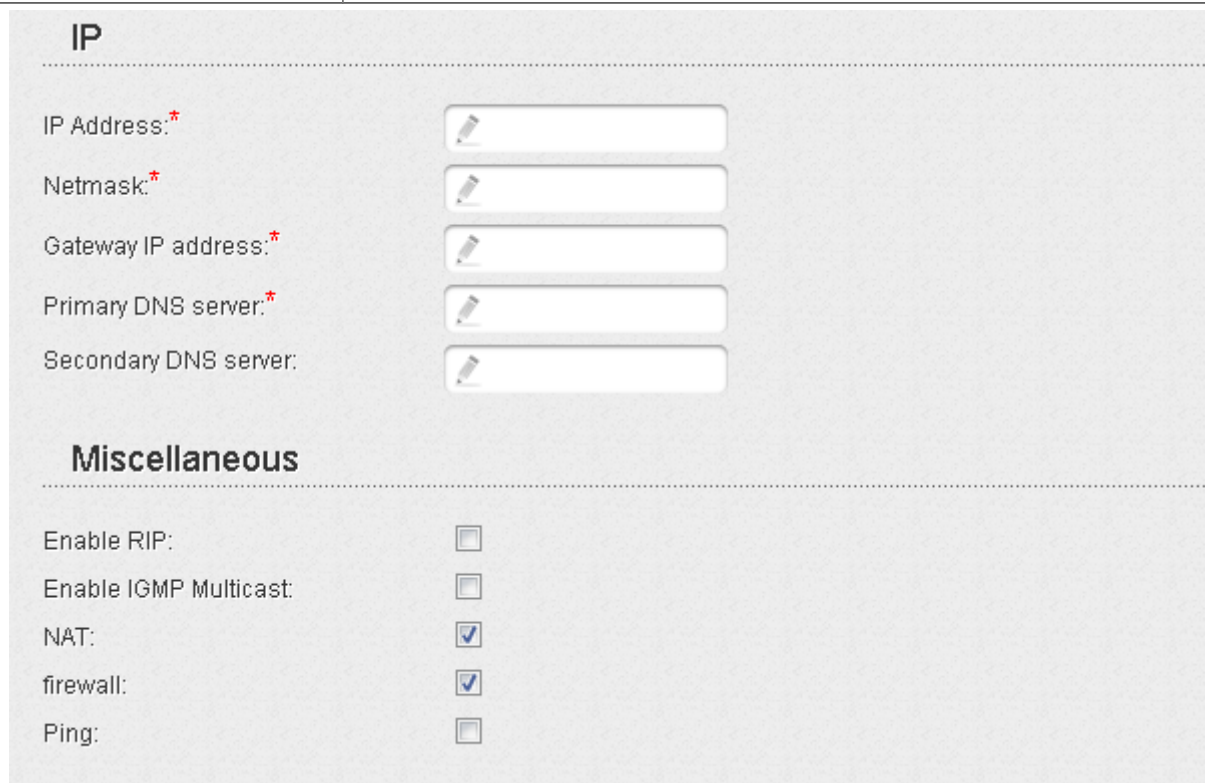

The screenshot shows a web interface for configuring a new connection. It is divided into two main sections: **IP** and **Miscellaneous**.

**IP Section:** This section contains five input fields, each with a pencil icon to its right, indicating they are editable. The fields are:
 

- IP Address:\*
- Netmask:\*
- Gateway IP address:\*
- Primary DNS server:\*
- Secondary DNS server:

**Miscellaneous Section:** This section contains five checkboxes:
 

- Enable RIP:
- Enable IGMP Multicast:
- NAT:
- firewall:
- Ping:

Figure 80. The page for creating a new connection. The **IP** and **Miscellaneous** sections.

Parameter	Description
<b>IP</b>	
<b>IP Address</b>	Enter an IP address for this WAN connection.
<b>Netmask</b>	Enter a subnet mask for this WAN connection.
<b>Gateway IP address</b>	Enter an IP address of the gateway used by this WAN connection.



Parameter	Description
<b>Primary DNS server/ Secondary DNS server</b>	Enter addresses of the primary and secondary DNS servers in the relevant fields.
<b>Miscellaneous</b>	
<b>Enable RIP</b>	Select the checkbox to allow using RIP for this connection.
<b>Enable IGMP Multicast</b>	Select the checkbox to allow multicast traffic from the external network (e.g. video streaming) to be received.
<b>NAT</b>	Select the checkbox if you want one WAN IP address to be used for all computers of your LAN.
<b>Firewall</b>	Select the checkbox to enable protection against ARP and DDoS attacks.
<b>Ping</b>	Select the checkbox to allow the router to answer ping requests from the external network through this connection. For security reasons, it is recommended not to select this checkbox.

### VPN

---

Connect automatically:

Username:\*

Without authorization:

Password:\*

Password confirmation:\*

VPN server address:\*

Encryption: No encrypt ▼

Authentication algorithm: AUTO ▼

MTU:\*

Keep Alive:

Extra options:

Dial on demand:

Static IP Address:

PPP debug:

IP received:

Figure 81. The page for creating a new connection. The **VPN** section.

Parameter	Description
<b>VPN</b>	
<b>Connect automatically</b>	Select the checkbox to enable auto-start of the connection upon the boot-up of the router.
<b>Username</b>	A username (login) to access the Internet.
<b>Without authorization</b>	Select the checkbox if you don't need to enter a username and password to access the Internet.
<b>Password</b>	A password to access the Internet.
<b>Password confirmation</b>	The confirmation of the entered password (to avoid mistypes).
<b>VPN server address</b>	The IP or URL address of the PPTP or L2TP authentication server.
<b>Encryption</b>	<p>Select a method of MPPE encryption.</p> <ul style="list-style-type: none"> <li>• <b>No encrypt:</b> MPPE encryption is not applied.</li> <li>• <b>MPPE 40/128 bit:</b> MPPE encryption with a 40-bit or 128-bit key is applied.</li> <li>• <b>MPPE 40 bit:</b> MPPE encryption with a 40-bit key is applied.</li> <li>• <b>MPPE 128 bit:</b> MPPE encryption with a 128-bit key is applied.</li> </ul> <p>MPPE encryption can be applied only if the <b>MS-CHAP</b>, <b>MS-CHAP-V2</b>, or <b>AUTO</b> value is selected from the <b>Authentication algorithm</b> drop-down list.</p>
<b>Authentication algorithm</b>	Select a required authentication method from the drop-down list or leave the <b>AUTO</b> value.
<b>MTU</b>	The maximum size of units transmitted by the interface.
<b>Keep Alive</b>	Select the checkbox if you want the router to keep you connected to your ISP even when the connection has been inactive for a specified period of time. When the checkbox is selected, the <b>LCP interval</b> and <b>LCP fails</b> fields are available. Specify the required values.
<b>Extra options</b>	Advanced options of the pppd daemon which need to be specified for this connection. <i>Optional.</i>
<b>Dial on demand</b>	Select the checkbox if you want the router to establish connection to the Internet on demand. In the <b>Maximum idle time</b> field, specify a period of inactivity (in seconds) after which the connection should be terminated.

Parameter	Description
<b>Static IP Address</b>	Fill in the field if you want to use a static IP address to access the Internet.
<b>PPP debug</b>	Select the checkbox if you want to log all data on PPP connection debugging.
<b>IP received</b>	The IP address assigned by the ISP.

**Miscellaneous**

---

Enable RIP:

NAT:

firewall:

Ping:


Figure 82. The page for creating a new connection. The **Miscellaneous** section.

Parameter	Description
<b>Miscellaneous</b>	
<b>Enable RIP</b>	Select the checkbox to allow using RIP for this connection.
<b>NAT</b>	Select the checkbox if you want one WAN IP address to be used for all computers of your LAN.
<b>Firewall</b>	Select the checkbox to enable protection against ARP and DDoS attacks.
<b>Ping</b>	Select the checkbox to allow the router to answer ping requests from the external network through this connection. For security reasons, it is recommended not to select this checkbox.

When all needed settings are configured, click the **Apply** button.

## Creating PPTP + Dynamic IP or L2TP + Dynamic IP WAN Connection

To create a connection of the PPTP + Dynamic IP or L2TP + Dynamic IP type, click the **Add** button on the **Net / WAN** page. On the opened page, select the relevant value from the **Connection Type** drop-down list and specify the needed values.

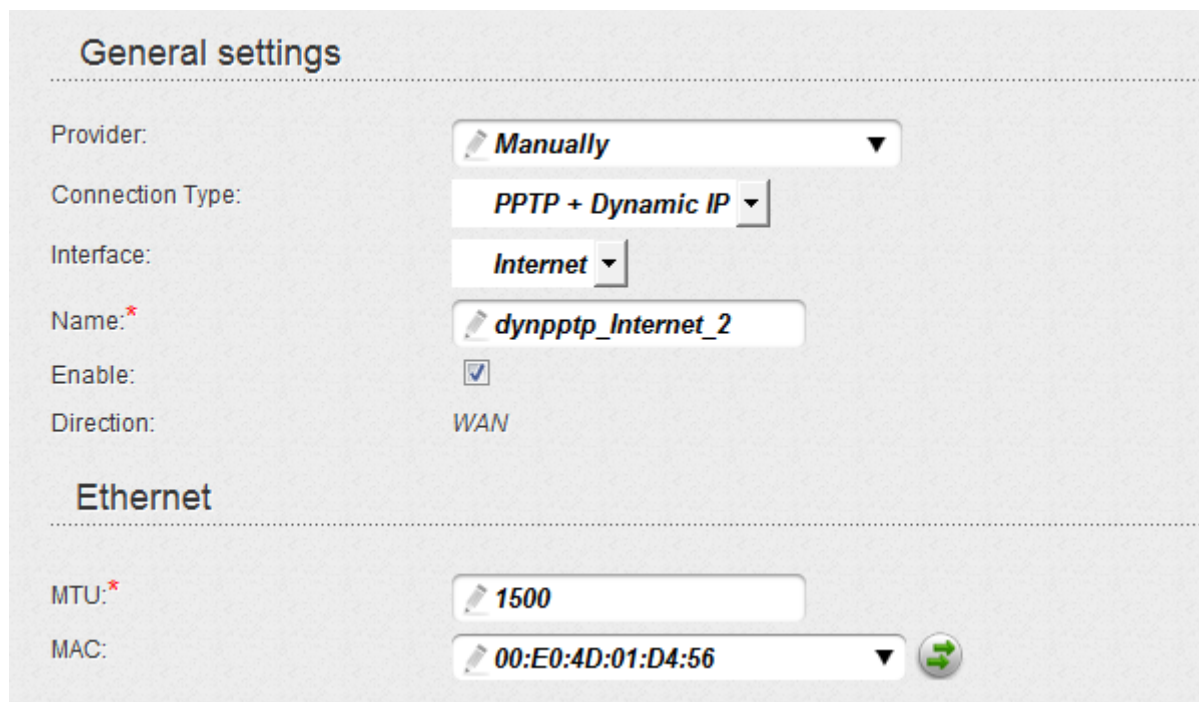

The screenshot shows a configuration page with two main sections: **General settings** and **Ethernet**.  
**General settings** includes:  
 - Provider: Manually (dropdown)  
 - Connection Type: PPTP + Dynamic IP (dropdown)  
 - Interface: Internet (dropdown)  
 - Name: dynpptp\_Internet\_2 (text input)  
 - Enable:   
 - Direction: WAN  
**Ethernet** section includes:  
 - MTU: 1500 (text input)  
 - MAC: 00:E0:4D:01:D4:56 (dropdown with a refresh icon)

Figure 83. The page for creating a new connection. The **General settings** and **Ethernet** sections.

Parameter	Description
<b>General settings</b>	
<b>Provider</b>	Leave the <b>Manually</b> value.
<b>Interface</b>	A physical or virtual interface to which the new connection will be assigned.
<b>Name</b>	A name for connection for easier identification.
<b>Enable</b>	Select the checkbox to enable the connection.
<b>Direction</b>	The direction of this connection.
<b>Ethernet</b>	
<b>MTU</b>	The maximum size of units transmitted by the interface.


Parameter	Description
<b>MAC</b>	<p>A MAC address assigned to the interface. This parameter is mandatory if your ISP uses MAC address binding. In the field, enter the MAC address registered by your ISP upon concluding the agreement.</p> <p>You can click the <b>Clone MAC Address</b> button () to set the MAC address of the network interface card (of the computer that is being used to configure the router at the moment) as the MAC address of the WAN interface.</p> <p>Also you can set the address of a device connected to the router's LAN at the moment. To do this, select the relevant value from the drop-down list (the field will be filled in automatically).</p>



Figure 84. The page for creating a new connection. The **IP** and **Miscellaneous** sections.

Parameter	Description
<b>IP</b>	
<b>Obtain DNS server addresses automatically</b>	Select the checkbox to configure automatic assignment of DNS server addresses. If the checkbox is selected, the <b>Primary DNS server</b> and <b>Secondary DNS server</b> fields are not displayed.
<b>Primary DNS server/ Secondary DNS server</b>	Enter addresses of the primary and secondary DNS servers in the relevant fields.
<b>Vendor ID</b>	The identifier of your ISP. <i>Optional.</i>

Parameter	Description
<b>Miscellaneous</b>	
<b>Enable RIP</b>	Select the checkbox to allow using RIP for this connection.
<b>Enable IGMP Multicast</b>	Select the checkbox to allow multicast traffic from the external network (e.g. video streaming) to be received.
<b>NAT</b>	Select the checkbox if you want one WAN IP address to be used for all computers of your LAN.
<b>Firewall</b>	Select the checkbox to enable protection against ARP and DDoS attacks.
<b>Ping</b>	Select the checkbox to allow the router to answer ping requests from the external network through this connection. For security reasons, it is recommended not to select this checkbox.

### VPN

---

Connect automatically:

Username:\*

Without authorization:

Password:\*

Password confirmation:\*

VPN server address:\*

Encryption: No encrypt ▼

Authentication algorithm: AUTO ▼

MTU:\*

Keep Alive:

Extra options:

Dial on demand:

Static IP Address:

PPP debug:

IP received:

Figure 85. The page for creating a new connection. The **VPN** section.

Parameter	Description
<b>VPN</b>	
<b>Connect automatically</b>	Select the checkbox to enable auto-start of the connection upon the boot-up of the router.
<b>Username</b>	A username (login) to access the Internet.
<b>Without authorization</b>	Select the checkbox if you don't need to enter a username and password to access the Internet.
<b>Password</b>	A password to access the Internet.
<b>Password confirmation</b>	The confirmation of the entered password (to avoid mistypes).
<b>VPN server address</b>	The IP or URL address of the PPTP or L2TP authentication server.
<b>Encryption</b>	<p>Select a method of MPPE encryption.</p> <ul style="list-style-type: none"> <li>• <b>No encrypt:</b> MPPE encryption is not applied.</li> <li>• <b>MPPE 40/128 bit:</b> MPPE encryption with a 40-bit or 128-bit key is applied.</li> <li>• <b>MPPE 40 bit:</b> MPPE encryption with a 40-bit key is applied.</li> <li>• <b>MPPE 128 bit:</b> MPPE encryption with a 128-bit key is applied.</li> </ul> <p>MPPE encryption can be applied only if the <b>MS-CHAP</b>, <b>MS-CHAP-V2</b>, or <b>AUTO</b> value is selected from the <b>Authentication algorithm</b> drop-down list.</p>
<b>Authentication algorithm</b>	Select a required authentication method from the drop-down list or leave the <b>AUTO</b> value.
<b>MTU</b>	The maximum size of units transmitted by the interface.
<b>Keep Alive</b>	Select the checkbox if you want the router to keep you connected to your ISP even when the connection has been inactive for a specified period of time. When the checkbox is selected, the <b>LCP interval</b> and <b>LCP fails</b> fields are available. Specify the required values.
<b>Extra options</b>	Advanced options of the pppd daemon which need to be specified for this connection. <i>Optional.</i>
<b>Dial on demand</b>	Select the checkbox if you want the router to establish connection to the Internet on demand. In the <b>Maximum idle time</b> field, specify a period of inactivity (in seconds) after which the connection should be terminated.

Parameter	Description
<b>Static IP Address</b>	Fill in the field if you want to use a static IP address to access the Internet.
<b>PPP debug</b>	Select the checkbox if you want to log all data on PPP connection debugging.
<b>IP received</b>	The IP address assigned by the ISP.

**Miscellaneous**

---

Enable RIP:

NAT:

firewall:

Ping:

Figure 86. The page for creating a new connection. The **Miscellaneous** section.

Parameter	Description
<b>Miscellaneous</b>	
<b>Enable RIP</b>	Select the checkbox to allow using RIP for this connection.
<b>NAT</b>	Select the checkbox if you want one WAN IP address to be used for all computers of your LAN.
<b>Firewall</b>	Select the checkbox to enable protection against ARP and DDoS attacks.
<b>Ping</b>	Select the checkbox to allow the router to answer ping requests from the external network through this connection. For security reasons, it is recommended not to select this checkbox.

When all needed settings are configured, click the **Apply** button.



## Creating 3G WAN Connection

If the PIN code check is enabled for the SIM card inserted into your USB modem, then prior to creating a 3G WAN connection, proceed to the **3G modem** menu and enter the PIN code on the page displayed (see the **3G Modem** section, page 164). Then proceed to the **Net / WAN** page, click the **Add** button, and select the **3G** value from the **Connection Type** drop-down list.

Figure 87. The page for creating a new connection. The **General settings** and **3G modem** sections.

Parameter	Description
<b>General settings</b>	
<b>Provider</b>	To automatically specify all settings required to connect to the Internet, select your country and operator from the drop-down list. To specify all settings independently, leave the <b>Manually</b> value.
<b>Interface</b>	Select the <b>USB</b> value.
<b>Name</b>	A name for connection for easier identification.
<b>Enable</b>	Select the checkbox to enable the connection.
<b>Direction</b>	The direction of this connection.
<b>3G modem</b>	

Parameter	Description
<b>Mode</b>	<p>The value of the field specifies the type of the network to which the router connects. Leave the <b>auto</b> value to let the router connect automatically to an available type of network, or select a needed value from the drop-down list.</p> <p><i>For GSM USB modems only.</i></p>

Figure 88. The page for creating a new connection. The **PPP** section.

Parameter	Description
<b>PPP</b>	
<b>Username</b>	A username (login) to connect to the network of the operator.
<b>Without authorization</b>	Select the checkbox if your operator does not require authorization.
<b>Password</b>	A password to connect to the network of the operator.
<b>Password confirmation</b>	The confirmation of the entered password (to avoid mistypes).
<b>APN</b>	An access point name. <i>For GSM USB modems only.</i>
<b>Dial number</b>	A number dialed to connect to the authorization server of the operator.
<b>Authentication algorithm</b>	Select a required authentication method from the drop-down list or leave the <b>AUTO</b> value.

Parameter	Description
<b>MTU</b>	The maximum size of units transmitted by the interface. <i>Optional.</i>
<b>Keep Alive</b>	Select the checkbox if you want the router to keep you connected to the network of your operator even when the connection has been inactive for a specified period of time. When the checkbox is selected, the <b>LCP interval</b> and <b>LCP fails</b> fields are available. Specify the required values.
<b>Extra options</b>	In the field, you can specify additional data for encryption or authentication. <i>Optional.</i>
<b>Dial on demand</b>	Select the checkbox if you want the router to establish connection to the Internet on demand. In the <b>Maximum idle time</b> field, specify a period of inactivity (in seconds) after which the connection should be terminated.
<b>PPP debug</b>	Select the checkbox if you want to log all data on PPP connection debugging.

**Miscellaneous**

---

NAT:

firewall:

Ping:

Figure 89. The page for creating a new connection. The **Miscellaneous** section.

Parameter	Description
<b>Miscellaneous</b>	
<b>NAT</b>	Select the checkbox if you want one WAN IP address to be used for all computers of your LAN.
<b>Firewall</b>	Select the checkbox to enable protection against ARP and DDoS attacks.
<b>Ping</b>	Select the checkbox to allow the router to answer ping requests from the external network through this connection. For security reasons, it is recommended not to select this checkbox.

When all needed settings are configured, click the **Apply** button.

## Creating LTE WAN Connection

To create a connection of the LTE type, click the **Add** button on the **Net / WAN** page. On the opened page, select the **LTE** value from the **Connection Type** drop-down list and specify the needed values.

The screenshot shows a web-based configuration interface. The top section is titled 'General settings' and contains the following fields:
 

- Provider:** A dropdown menu with 'Manually' selected.
- Connection Type:** A dropdown menu with 'LTE' selected.
- Interface:** A dropdown menu with 'USB' selected.
- Name:** A text input field containing 'lte\_USB\_2'.
- Enable:** A checked checkbox.
- Direction:** A text field containing 'WAN'.

 Below this is a section titled '3G modem' with a **Mode:** dropdown menu set to 'auto'.

Figure 90. The page for creating a new connection. The **General settings** and **3G modem** sections.

Parameter	Description
<b>General settings</b>	
<b>Provider</b>	Leave the <b>Manually</b> value.
<b>Interface</b>	Select the <b>USB</b> value.
<b>Name</b>	A name for connection for easier identification.
<b>Enable</b>	Select the checkbox to enable the connection.
<b>Direction</b>	The direction of this connection.
<b>3G modem</b>	
<b>Mode</b>	The value of the field specifies the type of the network to which the router connects. Leave the <b>auto</b> value to let the router connect automatically to an available type of network, or select a needed value from the drop-down list.  <i>For Huawei E367 and Huawei E392 USB modems only.</i>

The screenshot shows a web-based configuration page. The top section is titled "IP" and contains the following options:

- "Obtain DNS server addresses automatically:" with an unchecked checkbox.
- "Primary DNS server:\*" with a text input field.
- "Secondary DNS server:" with a text input field.
- "Vendor ID:" with a text input field.

The bottom section is titled "Miscellaneous" and contains the following options:

- "NAT:" with a checked checkbox.
- "firewall:" with a checked checkbox.
- "Ping:" with an unchecked checkbox.


Figure 91. The page for creating a new connection. The **IP** and **Miscellaneous** sections.

Parameter	Description
<b>IP</b>	
<b>Obtain DNS server addresses automatically</b>	Select the checkbox to configure automatic assignment of DNS server addresses. If the checkbox is selected, the <b>Primary DNS server</b> and <b>Secondary DNS server</b> fields are not displayed.
<b>Primary DNS server/ Secondary DNS server</b>	Enter addresses of the primary and secondary DNS servers in the relevant fields.
<b>Vendor ID</b>	The identifier of your ISP. <i>Optional.</i>
<b>Miscellaneous</b>	
<b>NAT</b>	Select the checkbox if you want one WAN IP address to be used for all computers of your LAN.
<b>Firewall</b>	Select the checkbox to enable protection against ARP and DDoS attacks.
<b>Ping</b>	Select the checkbox to allow the router to answer ping requests from the external network through this connection. For security reasons, it is recommended not to select this checkbox.

When all needed settings are configured, click the **Apply** button.

## LAN

To configure the router's local interface, proceed to the **Net / LAN** page.

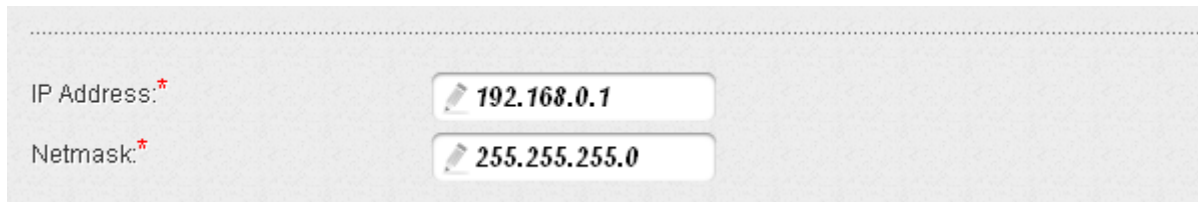

The screenshot shows the LAN configuration interface. It features two input fields: 'IP Address:\*' with a value of '192.168.0.1' and 'Netmask:\*' with a value of '255.255.255.0'. Each field has a small edit icon to its left.


Figure 92. Basic settings of the local interface.

If needed, edit the basic settings of the local interface.

Parameter	Description
<b>IP Address</b>	The IP address of the router in the local subnet. By default, the following value is specified: <b>192.168.0.1</b> .
<b>Netmask</b>	The mask of the local subnet. By default, the following value is specified: <b>255.255.255.0</b> .

When needed settings are configured, click the **Apply** button.

In the **DHCP server** section, you can configure the built-in DHCP server of the router.

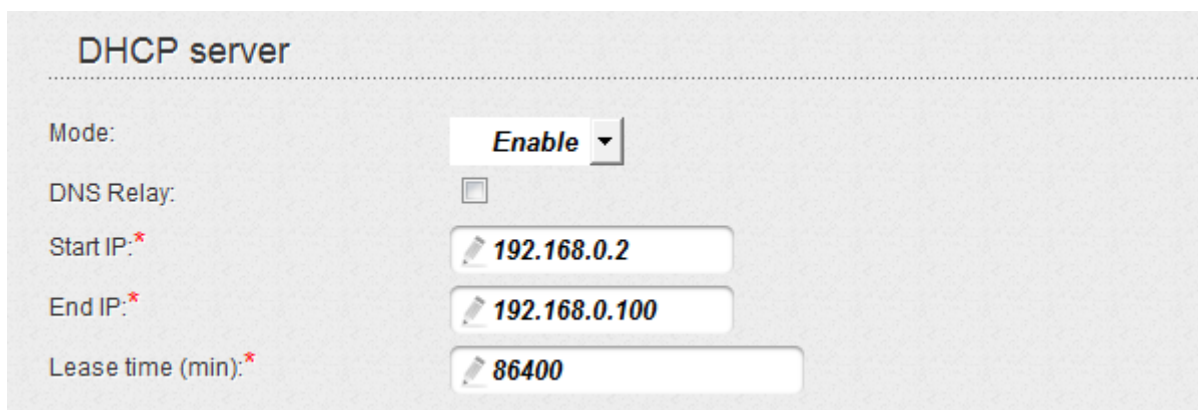

The screenshot shows the DHCP server configuration section. It includes a title 'DHCP server' and several settings: 'Mode' is set to 'Enable' (dropdown menu), 'DNS Relay' is an unchecked checkbox, 'Start IP:\*' is '192.168.0.2', 'End IP:\*' is '192.168.0.100', and 'Lease time (min):\*' is '86400'. Each setting has an edit icon to its left.

Figure 93. The section for configuring the DHCP server.

Parameter	Description
<b>Mode</b>	<p>An operating mode of the router's DHCP server.</p> <p><b>Enable:</b> the router assigns IP addresses to clients automatically in accordance with the specified parameters. When this value is selected, the <b>DNS Relay</b>, <b>Start IP</b>, <b>End IP</b>, and the <b>Lease time</b> fields are displayed on the page.</p> <p><b>Disable:</b> the router's DHCP server is disabled, clients' IP addresses are assigned manually.</p> <p><b>Relay:</b> an external DHCP server is used to assign IP addresses to clients. When this value is selected, the <b>External DHCP server IP</b> field is displayed on the page.</p>
<b>DNS Relay</b>	<p>Select the checkbox so that the devices connected to the router obtain the address of the router as the DNS server address.</p> <p>Deselect the checkbox so that the devices connected to the router obtain the address transmitted by the ISP or specified on the <b>Advanced / DNS</b> page as the DNS server address.</p>
<b>Start IP</b>	<p>The start IP address of the address pool used by the DHCP server to distribute IP addresses to clients.</p>
<b>End IP</b>	<p>The end IP address of the address pool used by the DHCP server to distribute IP addresses to clients.</p>
<b>Lease time</b>	<p>The lifetime of IP addresses leased by the DHCP server. At the end of this period the leased IP address is revoked and can be distributed to another device, unless the previous device has confirmed the need to keep the address.</p>
<b>External DHCP server IP</b>	<p>The IP address of the external DHCP server which assigns IP addresses to the router's clients.</p>

When all needed settings are configured, click the **Apply** button.

In the **Static DHCP** section, you can specify MAC address and IP address pairs (set a fixed IP address in the local area network for a device with a certain MAC address). The router assigns IP addresses in accordance with the specified pairs only when the DHCP server is enabled (in the **DHCP server** section, in the **Mode** drop-down list, the **Enable** value is selected).



	IP*	MAC*	Host
<input type="checkbox"/>			

Figure 94. The section for creating MAC-IP pairs.

To create a MAC-IP pair, click the **Add** button. In the **IP** field, enter an IP address which will be assigned to the device from the LAN, then in the **MAC** field, enter the MAC address of this device. In the **Host** field, specify a network name of the device for easier identification (*optional*).

Also you can create a MAC-IP pair for a device connected to the router's LAN at the moment. To do this, select the relevant value from the **Known IP/MAC** addresses drop-down list (the **IP** and **MAC** fields will be filled in automatically).

When all needed MAC-IP pairs are specified, click the **Apply** button.

Existing MAC-IP pairs are displayed in the table of the **Static DHCP** section. To remove a pair, select the checkbox in the relevant line in the table and click the **Remove** button. Then click the **Apply** button.



## Wi-Fi

In this menu you can specify all needed settings for your wireless network.

### Basic Settings

On the **Wi-Fi / Basic settings** page, you can enable your wireless local area network (WLAN) and configure its basic parameters.

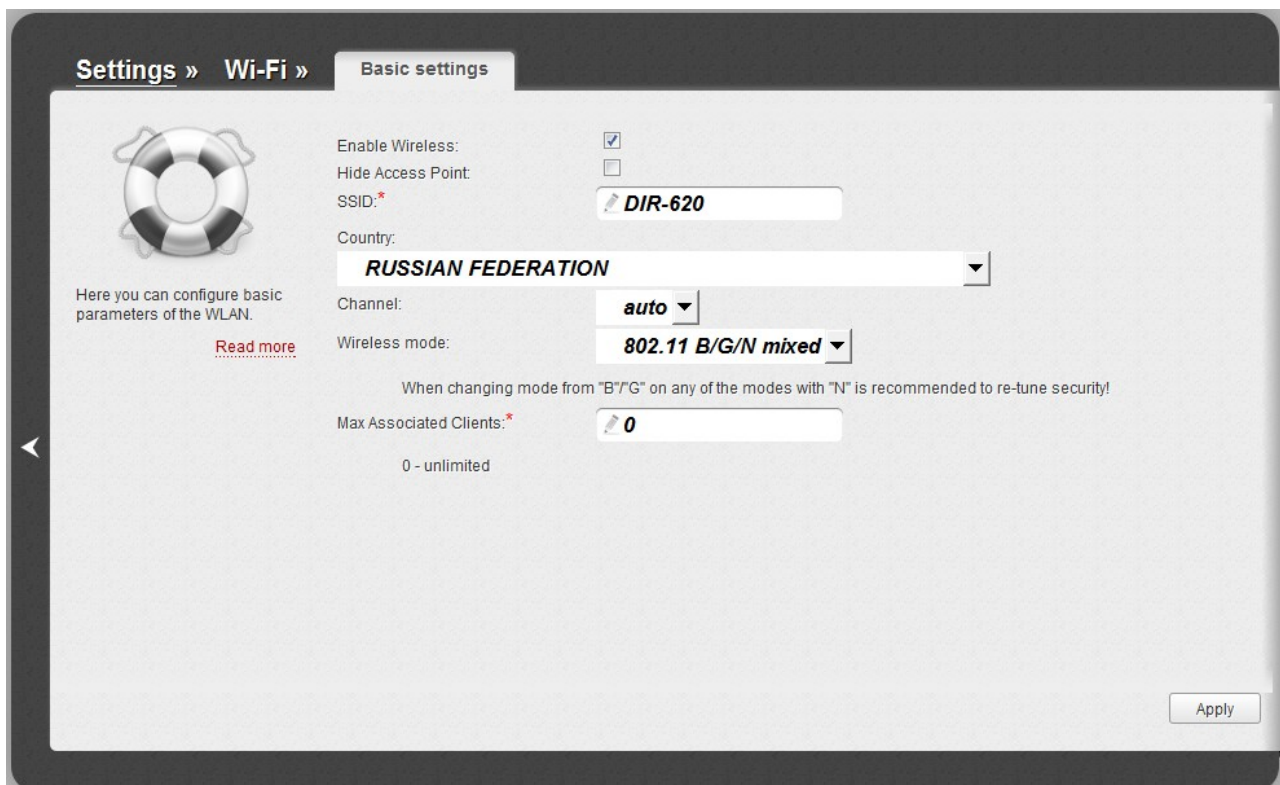


Figure 95. Basic settings of the wireless LAN.

Parameter	Description
<b>Enable Wireless</b>	The checkbox enables Wi-Fi connections. If you want to disable your WLAN, deselect the checkbox.
<b>Hide Access Point</b>	If the checkbox is selected, other users cannot see your Wi-Fi network. (It is recommended not to select this checkbox in order to simplify initial configuration of your WLAN.)
<b>SSID</b>	A name for the WLAN. By default, the value <b>DIR-620</b> is specified. It is recommended to specify another name for the network upon initial configuration (use digits and Latin characters).
<b>Country</b>	The country you are in. Select a value from the drop-down list.
<b>Channel</b>	The wireless channel number. When the <b>auto</b> value is selected, the router itself chooses the channel with the least interference.

Parameter	Description
<b>Wireless mode</b>	Operating mode of the wireless network of the router. This parameter defines standards of the devices that will be able to use your wireless network. Select a value from the drop-down list.
<b>Max Associated Clients</b>	The maximum number of devices connected to the wireless network of the router. When the value <b>0</b> is specified, the device does not limit the number of connected clients.

When you have configured the parameters, click the **Apply** button.

## Security Settings

On the **Wi-Fi / Security settings** page, you can modify security settings of the WLAN.

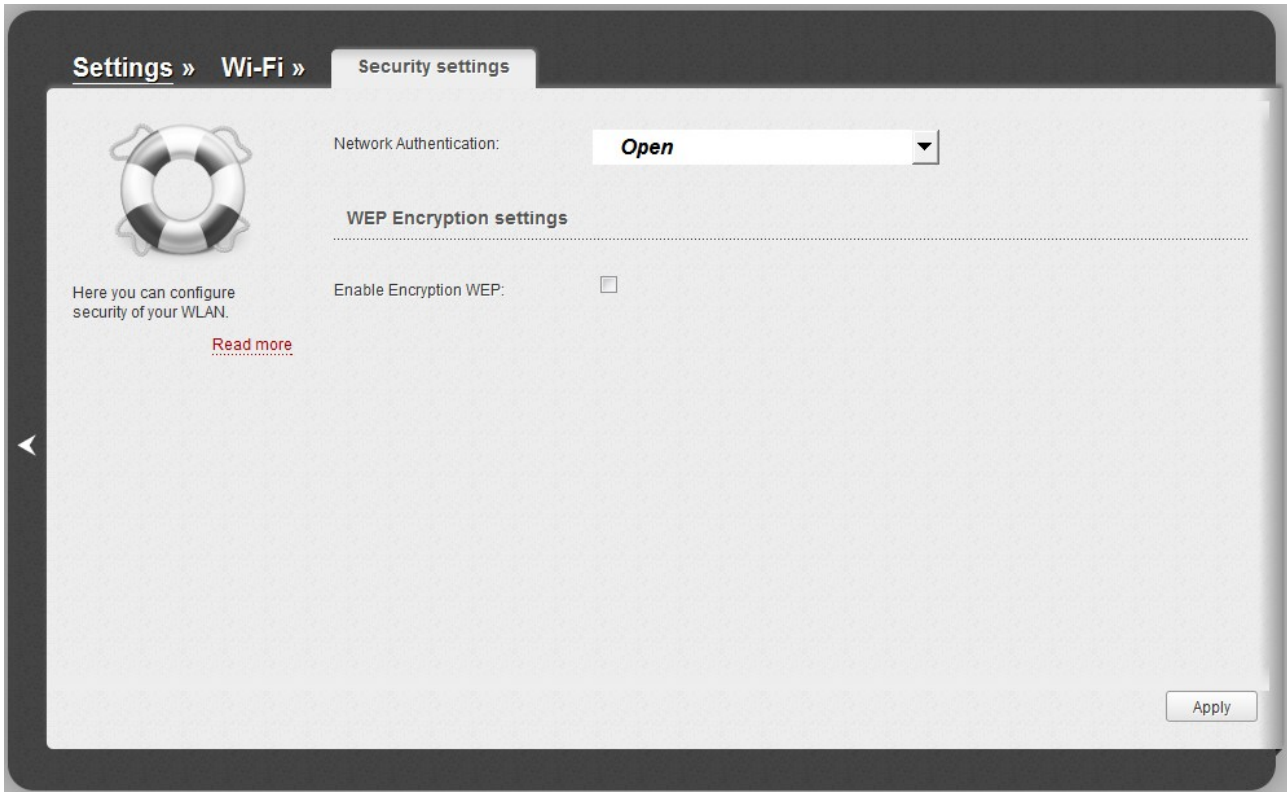


Figure 96. The default security settings.

By default, the **Open** network authentication type with no encryption is specified for the WLAN.

- ! The default security settings do not provide sufficient protection for the WLAN. Please, specify your own security settings for the WLAN.

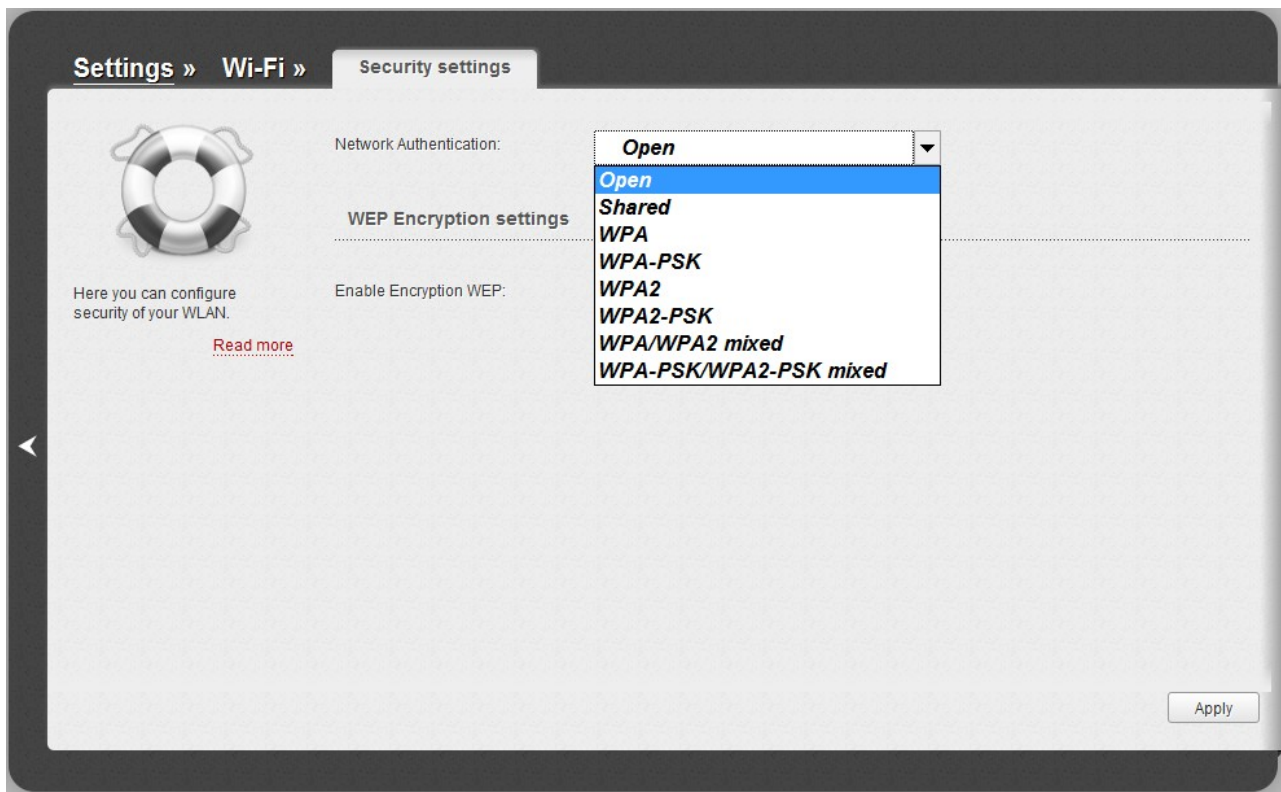


Figure 97. Network authentication types supported by the router.

The router supports the following authentication types:

Authentication type	Description
<b>Open</b>	Open authentication (with WEP encryption for wireless network modes not supporting 802.11n devices).
<b>Shared</b>	Shared key authentication with WEP encryption. This authentication type is not available when on the <b>Wi-Fi / Basic settings</b> page, in the <b>Wireless mode</b> drop-down list, a mode supporting 802.11n devices is selected.
<b>WPA</b>	WPA-based authentication using a RADIUS server.
<b>WPA-PSK</b>	WPA-based authentication using a PSK.
<b>WPA2</b>	WPA2-based authentication using a RADIUS server.
<b>WPA2-PSK</b>	WPA2-based authentication using a PSK.
<b>WPA/WPA2 mixed</b>	A mixed type of authentication. When this value is selected, devices using the <b>WPA</b> authentication type and devices using the <b>WPA2</b> authentication type can connect to the WLAN of the router.

Authentication type	Description
<b>WPA-PSK/WPA2-PSK mixed</b>	A mixed type of authentication. When this value is selected, devices using the <b>WPA-PSK</b> authentication type and devices using the <b>WPA2-PSK</b> authentication type can connect to the WLAN of the router.

**!** The **WPA**, **WPA2**, and **WPA/WPA2 mixed** authentication types require a **RADIUS server**.

When the **Open** or **Shared** value is selected, the **WEP Encryption settings** section is displayed (the section is unavailable for the wireless network operating modes which support the standard 802.11n):

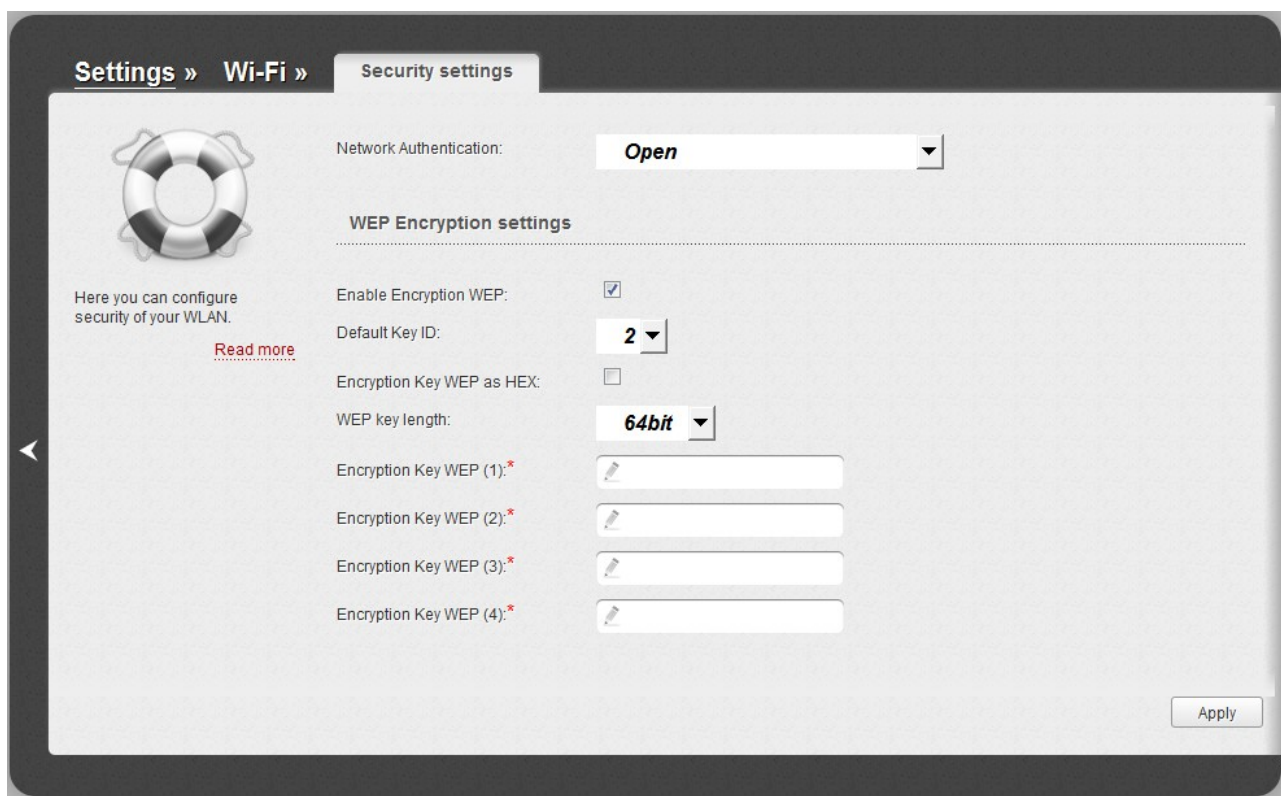


Figure 98. The **Open** value is selected from the **Network Authentication** drop-down list.

Parameter	Description
<b>Enable Encryption WEP</b>	The checkbox activating WEP encryption. When the checkbox is selected, the <b>Default Key ID</b> field, the <b>Encryption Key WEP as HEX</b> checkbox, and four <b>Encryption Key WEP</b> fields are displayed on the page. For the <b>Shared</b> authentication type the checkbox is always selected.
<b>Default Key ID</b>	The number of the key (from first to fourth) which will be used for WEP encryption.

Parameter	Description
<b>Encryption Key WEP as HEX</b>	Select the checkbox to set a hexadecimal number as a key for encryption.
<b>WEP key length</b>	The length of WEP encryption key. Select the value <b>64bit</b> to specify keys containing 5 ASCII symbols or 10 HEX symbols. Select the value <b>128bit</b> to specify keys containing 13 ASCII symbols or 26 HEX symbols.
<b>Encryption Key WEP (1-4)</b>	Keys for WEP encryption. The router uses the key selected from the <b>Default Key ID</b> drop-down list. It is required to specify all the fields.

When the **WPA-PSK**, **WPA2-PSK**, or **WPA-PSK/WPA2-PSK mixed** value is selected, the **WPA Encryption settings** section is displayed:

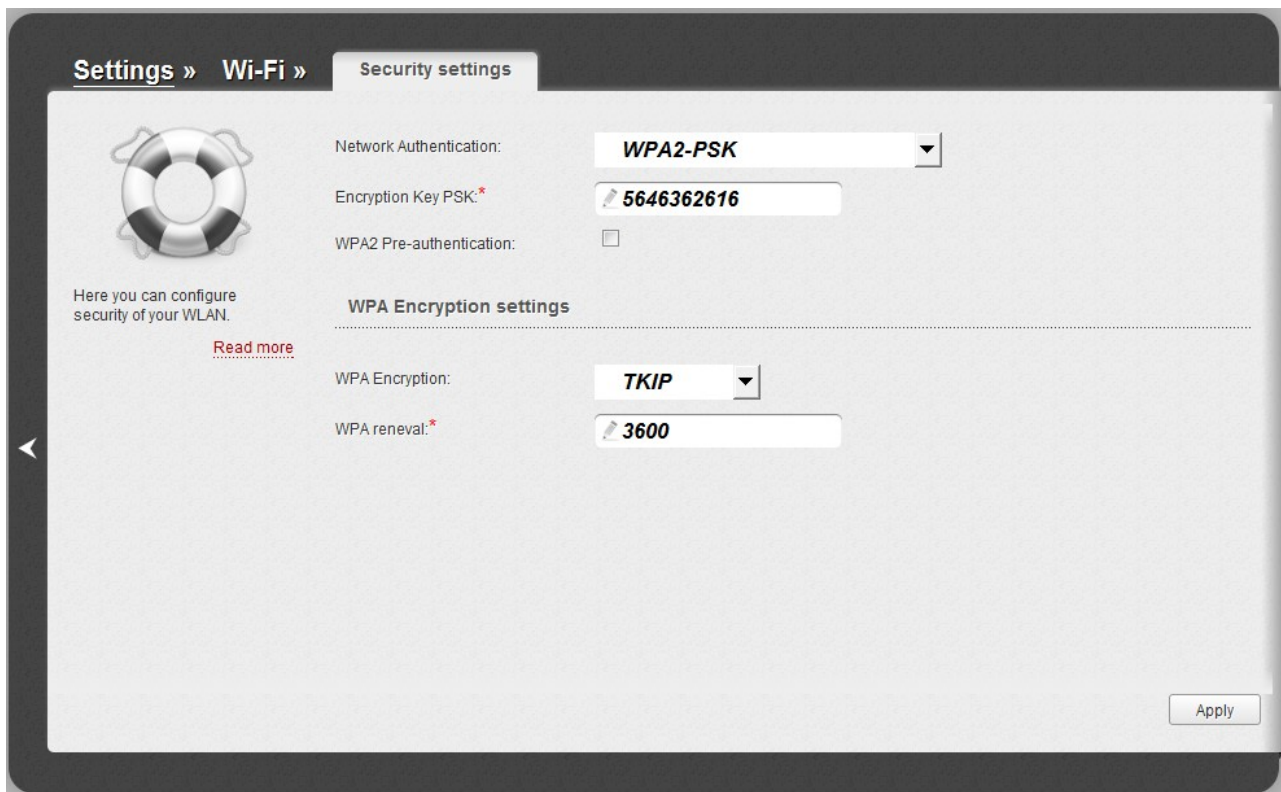


Figure 99. The **WPA2-PSK** value is selected from the **Network Authentication** drop-down list.

Parameter	Description
<b>Encryption Key PSK</b>	A key for WPA encryption. The key can contain digits and/or Latin characters.
<b>WPA2 Pre-authentication</b>	The checkbox activating preliminary authentication (displayed only for the <b>WPA2-PSK</b> and <b>WPA-PSK/WPA2-PSK mixed</b> authentication types).
<b>WPA Encryption</b>	An encryption method: <b>TKIP</b> , <b>AES</b> , or <b>TKIP+AES</b> . For the wireless network operating modes which support 802.11n standard (see the value of the <b>Wireless mode</b> drop-down list on the <b>Wi-Fi / Basic settings</b> page), the <b>AES</b> value is only available.
<b>WPA renewal</b>	The time period (in seconds), at the end of which a new key for WPA encryption is generated. When the value <b>0</b> is specified for this field, the key is not renewed.

When the **WPA**, **WPA2**, or **WPA/WPA2 mixed** value is selected, the **RADIUS settings** and **WPA Encryption settings** sections are available:

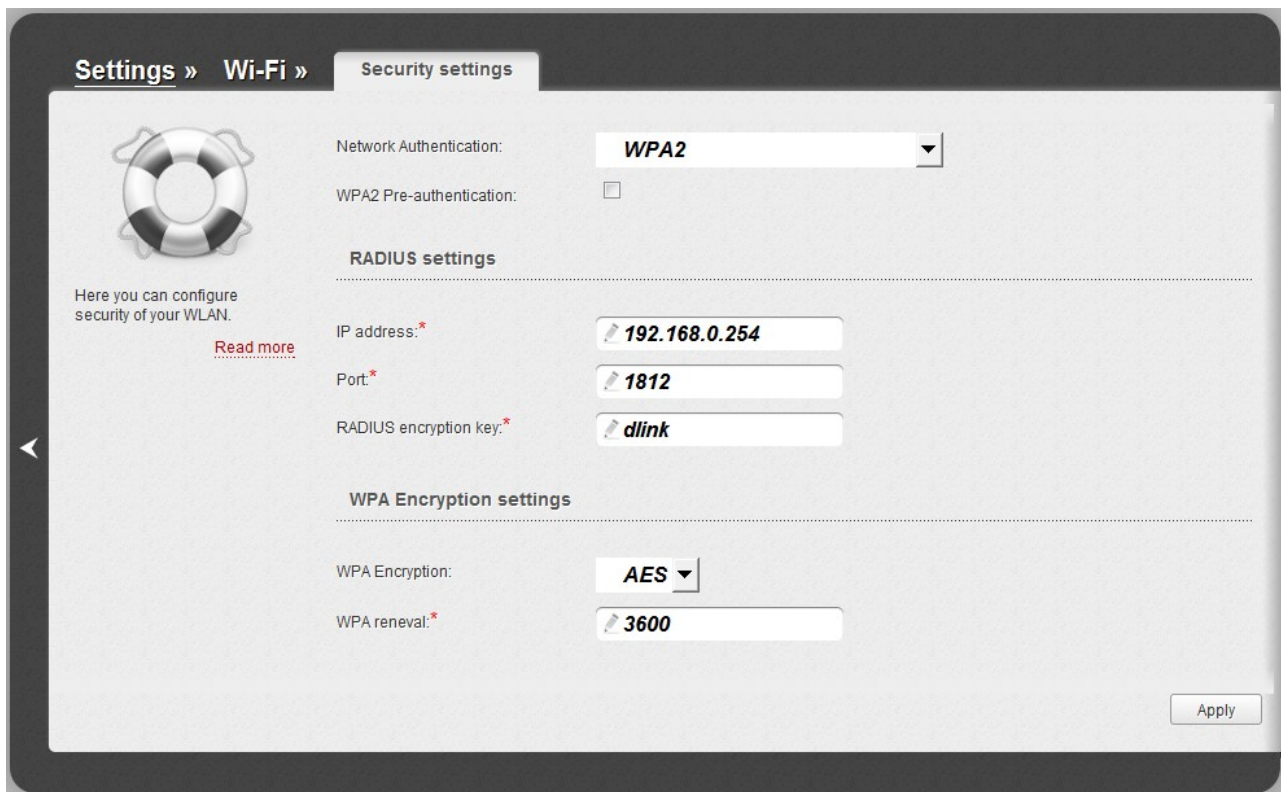


Figure 100. The **WPA2** value is selected from the **Network Authentication** drop-down list.

Parameter	Description
<b>WPA2 Pre-authentication</b>	The checkbox activating preliminary authentication (displayed only for the <b>WPA2</b> and <b>WPA/WPA2 mixed</b> authentication types).
<b>IP address</b>	The IP address of the RADIUS server.
<b>Port</b>	A port of the RADIUS server.
<b>RADIUS encryption key</b>	The password which the router uses for communication with the RADIUS server (the value of this parameter is specified in the RADIUS server settings).
<b>WPA Encryption</b>	An encryption method: <b>TKIP</b> , <b>AES</b> , or <b>TKIP+AES</b> .
<b>WPA renewal</b>	The time period (in seconds), at the end of which a new key for WPA encryption is generated. When the value <b>0</b> is specified for this field, the key is not renewed.

When you have configured the parameters, click the **Apply** button.



## MAC Filter

On the **Wi-Fi / MAC Filter** page, you can define a set of MAC addresses of devices which will be allowed to access the WLAN, or define MAC addresses of devices which will not be allowed to access the WLAN.

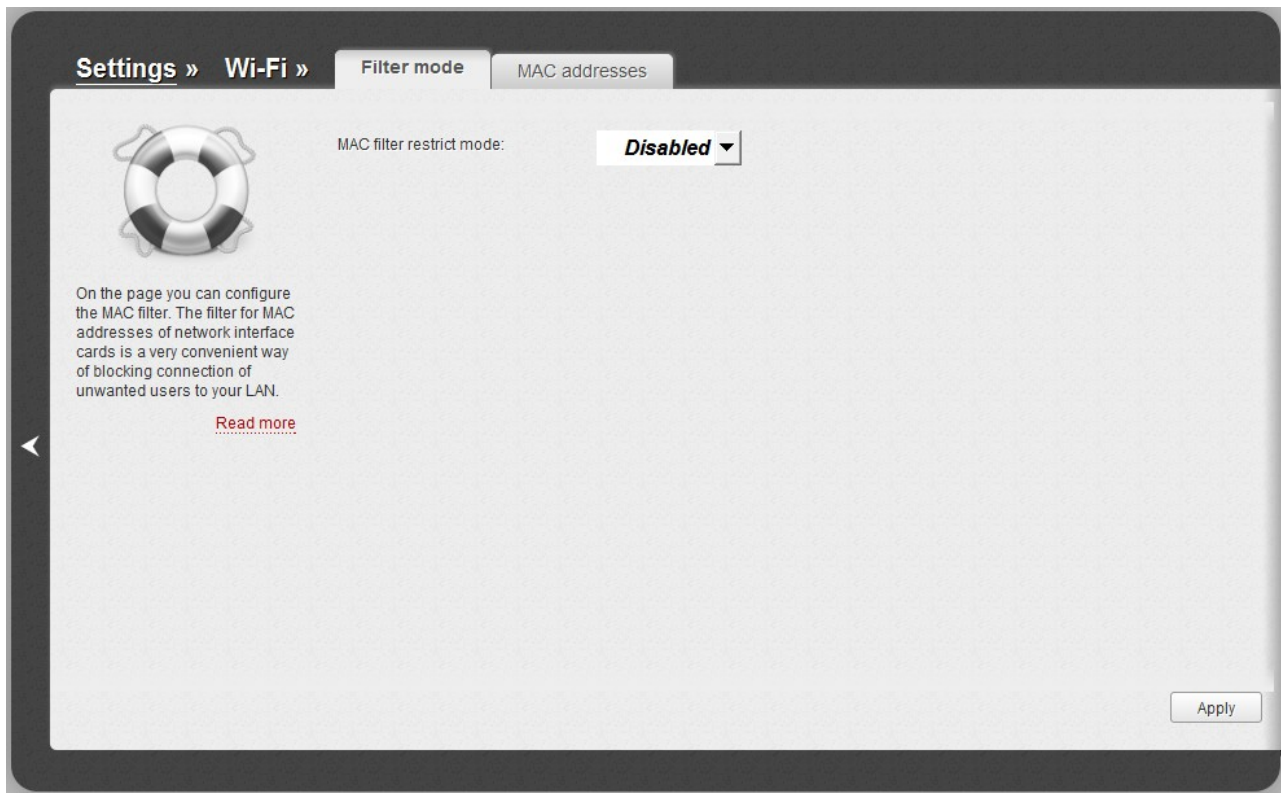


Figure 101. The MAC filter for the wireless network.

By default, MAC filtering is not active (the **Disabled** value is selected from the **MAC filter restrict mode** drop-down list on the **Filter mode** tab).

To open your wireless network for the devices which MAC addresses are specified on the **MAC addresses** tab and to close the wireless network for all other devices, select the **Allow** value from the **MAC filter restrict mode** drop-down list and click the **Apply** button.

To close your wireless network for the devices which MAC addresses are specified on the **MAC addresses** tab, select the **Deny** value from the **MAC filter restrict mode** drop-down list and click the **Apply** button.

To add a MAC address to which the selected filtering mode will be applied, proceed to the **MAC addresses** tab.

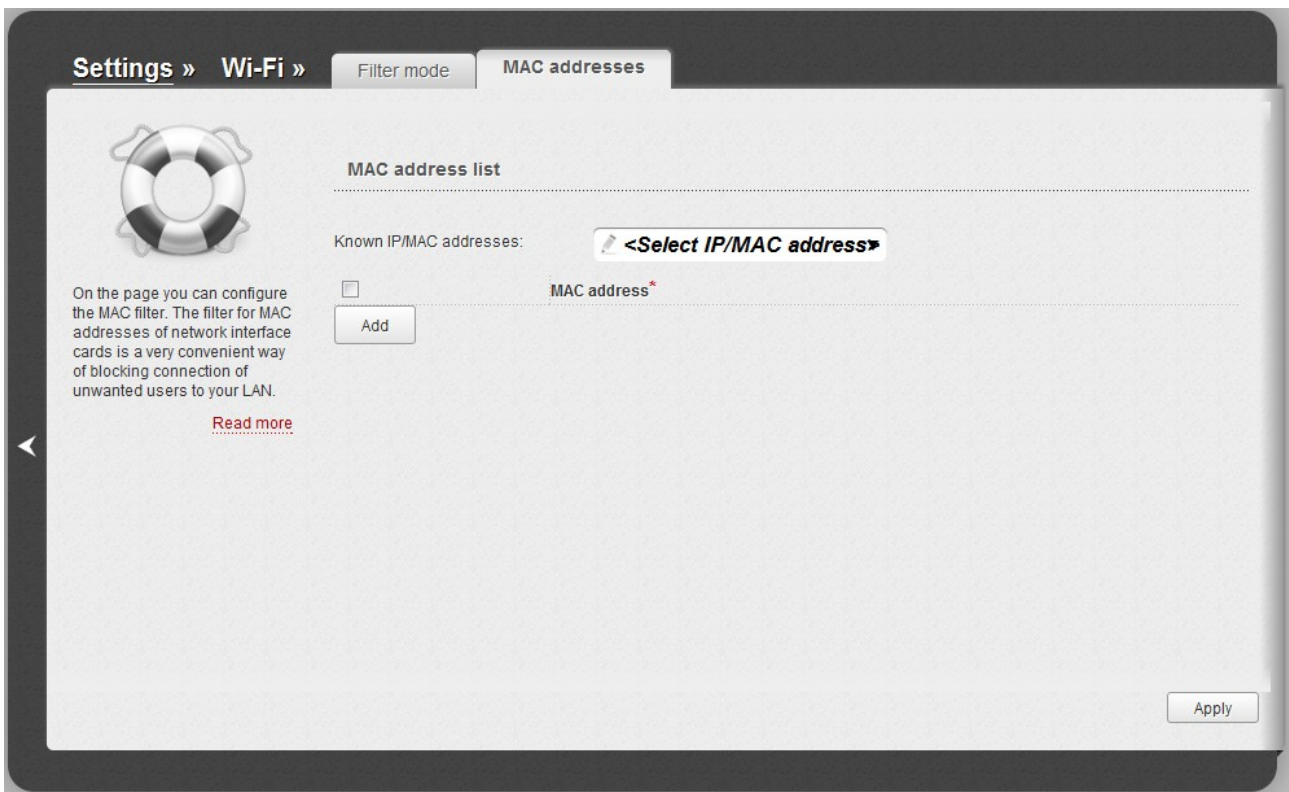


Figure 102. The tab for adding a MAC address.

Click the **Add** button and enter an address in the field displayed. Also you can enter the MAC address of a device connected to the router's LAN at the moment. To do this, select the relevant device from the **Known IP/MAC addresses** drop-down list (the field will be filled in automatically). Then click the **Apply** button.

To remove a MAC address from the list of MAC addresses, select the checkbox located to the left of the relevant MAC address and click the **Apply** button.

## Station List

On the **Wi-Fi / Station List** page, you can view the list of wireless clients connected to the router.

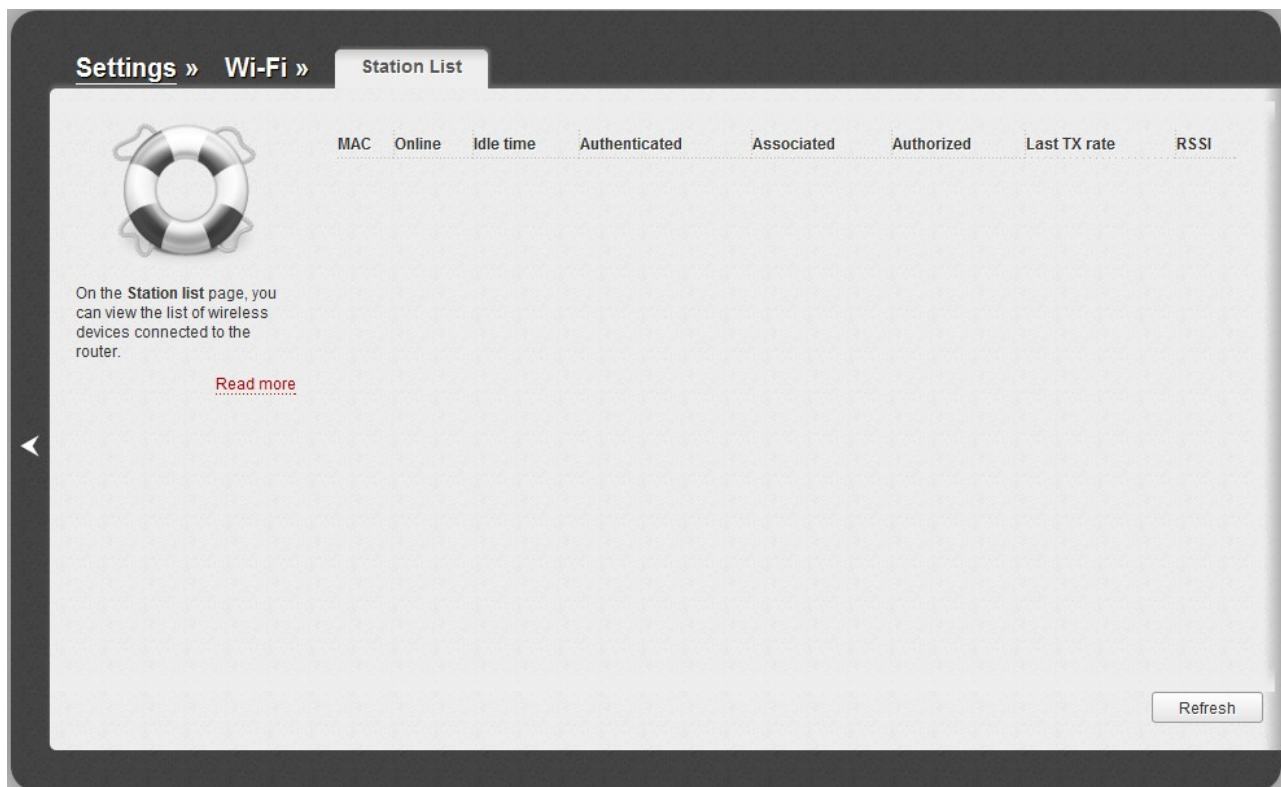


Figure 103. The list of the wireless clients.

To view the latest data on the devices connected to the WLAN, click the **Refresh** button.

## WPS

On the **Wi-Fi / WPS** page, you can enable the function for secure configuration of the WLAN and select a method used to easily add wireless devices to the WLAN.

The WPS function helps to configure the protected wireless network automatically. Devices connecting to the wireless network via the WPS function must support the WPS function.

**!** Before using the function you need to configure one of the following authentication types: **Open** with no encryption, **WPA2-PSK** or **WPA-PSK/WPA2-PSK mixed** with the **AES** encryption method (on the **Wi-Fi / Security settings** page). When other security settings are specified, controls of the tab on the **Wi-Fi / WPS** page are not available.

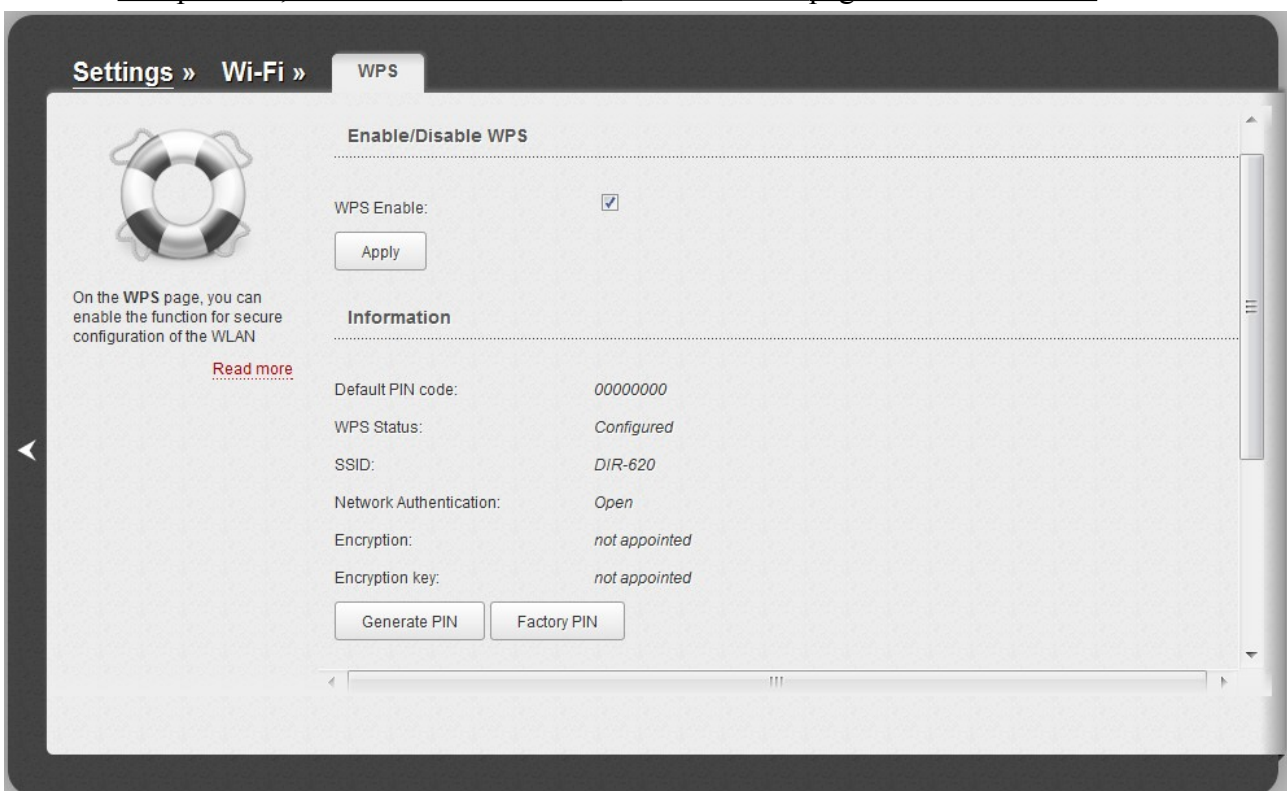


Figure 104. The page for configuring the WPS function.

To activate the WPS function, select the **WPS Enable** checkbox and click the **Apply** button. When the checkbox is selected, the **Information** and **Connection** sections are available on the page.

Parameter	Description
<b>Default PIN code</b>	The PIN code of the router. This parameter is used when connecting the router to a registrar to set the parameters of the WPS function.
<b>WPS Status</b>	The state of the WPS function: <ul style="list-style-type: none"> <li>• <b>Configured</b> (all needed settings are specified; these settings will be used upon establishing the wireless connection)</li> <li>• <b>Unconfigured</b> (after activating the WPS function, needed settings will be configured automatically: the MAC address of the wireless interface will be added to the SSID, the network authentication type will be changed to WPA2-PSK with a random encryption key).</li> </ul>
<b>SSID</b>	The name of the router's WLAN.
<b>Network Authentication</b>	The network authentication type specified for the WLAN.
<b>Encryption</b>	The encryption type specified for the WLAN.
<b>Encryption key</b>	The encryption key specified for the WLAN.
<b>Generate PIN</b>	Click the button to generate a new PIN code for the router (a random eight-digit number).
<b>Factory PIN</b>	Click the button to restore the factory PIN code of the router.
<b>Connection status</b>	The state of connection to a wireless device.
<b>WPS Method</b>	A method of the WPS function. Select a value from the drop-down list. <b>PIN</b> : Connecting the device via the PIN code. <b>PBC</b> : Connecting the device via the push button (actual or virtual).
<b>PIN Code</b>	The PIN code of the WPS-enabled device that needs to be connected to the wireless network of the router. The field is displayed only when the <b>PIN</b> value is selected from the <b>WPS Method</b> drop-down list.
<b>Connect</b>	Click the button to connect the wireless device to the router's WLAN via the WPS function.

## ***Using WPS Function via Web-based Interface***

To add a wireless device via the PIN method of the WPS function, follow the next steps:

1. Select the **WPS Enable** checkbox.
2. Click the **Apply** button.
3. Select the **PIN** value from the **WPS Method** drop-down list.
4. Select the PIN method in the software of the wireless device that you want to connect to the router's WLAN.
5. Click the relevant button in the software of the wireless device that you want to connect to the WLAN.
6. Right after that, enter the PIN code specified on the cover of the wireless device or in its software in the **PIN Code** field.
7. Click the **Connect** button in the web-based interface of the router.

To add a wireless device via the PBC method of the WPS function, follow the next steps:

1. Select the **WPS Enable** checkbox.
2. Click the **Apply** button.
3. Select the **PBC** value from the **WPS Method** drop-down list.
4. Select the PBC method in the software of the wireless device that you want to connect to the router's WLAN.
5. Click the relevant button in the software or press the WPS button on the cover of the wireless device that you want to connect to the WLAN.
6. Click the **Connect** button in the web-based interface of the router.

## ***Using WPS Function without Web-based Interface***

You can add a wireless device to the router's WLAN without accessing the web-based interface of the router. To do this, you need to configure the following router's settings:

1. Specify corresponding security settings for the wireless network of the router.
2. Select the **WPS Enable** checkbox.
3. Click the **Apply** button.
4. Save the settings and close the web-based interface (click the **Save** line in the top-page menu displayed when the mouse pointer is over the **System** caption, then click the **Logout** line).

Later you will be able to add wireless devices to the WLAN by pressing the **WPS** button of the router.

1. Select the PBC method in the software of the wireless device that you want to connect to the router's WLAN.
2. Click the relevant button in the software or press the WPS button on the cover of the wireless device that you want to connect to the WLAN.
3. Press the **WPS** button of the router, hold it for 2 seconds, and release. The **WPS** LED starts blinking.

## Additional Settings

On the **Wi-Fi / Additional settings** page, you can define additional parameters for the WLAN of the router.

**!** Changing parameters presented on this page may negatively affect your WLAN!

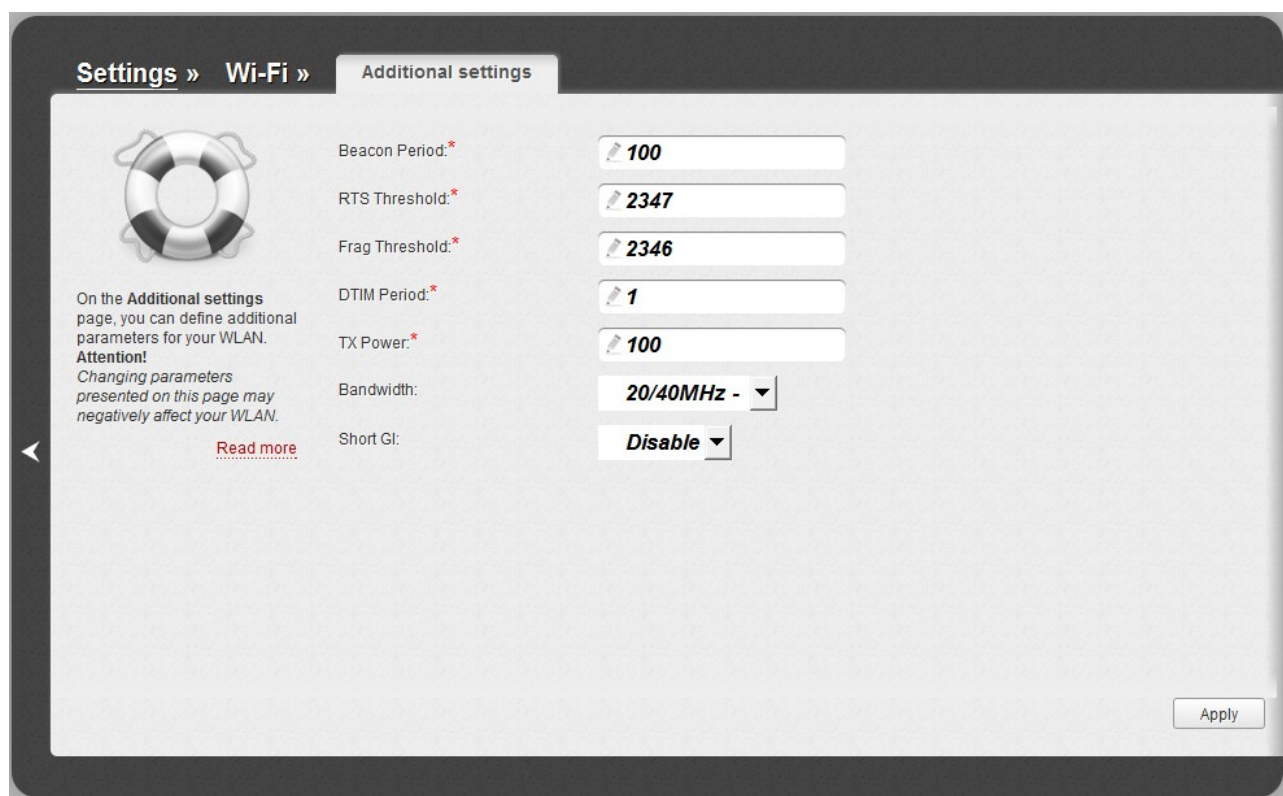


Figure 105. Additional settings of the WLAN.

The following fields are available on the page:

Parameter	Description
<b>Beacon Period</b>	The time interval (in milliseconds) between packets sent to synchronize the wireless network.
<b>RTS Threshold</b>	The minimum size (in bites) of a packet for which an RTS frame is transmitted.
<b>Frag Threshold</b>	The maximum size (in bites) of a non-fragmented packet. Larger packets are fragmented (divided).
<b>DTIM Period</b>	The time period (in seconds) between sending a DTIM (a message notifying on broadcast or multicast transmission) and data transmission.
<b>TX Power</b>	The transmit power (in percentage terms) of the router.



Parameter	Description
<b>Bandwidth</b>	<p>The channel bandwidth for 802.11n devices.</p> <p><b>20MHz:</b> 802.11n devices operate at 20MHz channels.</p> <p><b>40MHz:</b> 802.11n devices operate at 40MHz channels.</p> <p><b>20/40MHz -:</b> 802.11n devices operate at 20MHz and 40MHz channels (the channel is combined with the previous adjacent channel).</p> <p><b>20/40MHz +:</b> 802.11n devices operate at 20MHz and 40MHz channels (the channel is combined with the next adjacent channel).</p>
<b>Short GI</b>	<p>Guard interval (in nanoseconds). This parameter defines the interval between symbols transmitted when the router is communicating to wireless devices.</p> <p><b>Enable:</b> the router uses the 400 ns short guard interval. For the wireless network operating modes which support 802.11n standard only (see the value of the <b>Wireless mode</b> drop-down list on the <b>Wi-Fi / Basic settings</b> page).</p> <p><b>Disable:</b> the router uses the 800 ns standard guard interval.</p> <p><b>Auto:</b> the router itself chooses the length of the guard interval.</p>

When you have configured the parameters, click the **Apply** button.

## WMM

On the **Wi-Fi / WMM** page, you can enable the Wi-Fi Multimedia function.

The WMM function implements the QoS features for Wi-Fi networks. It helps to improve the quality of data transfer over Wi-Fi networks by prioritizing different types of traffic.

To enable the function, select the **WMM** checkbox and click the **Apply** button.

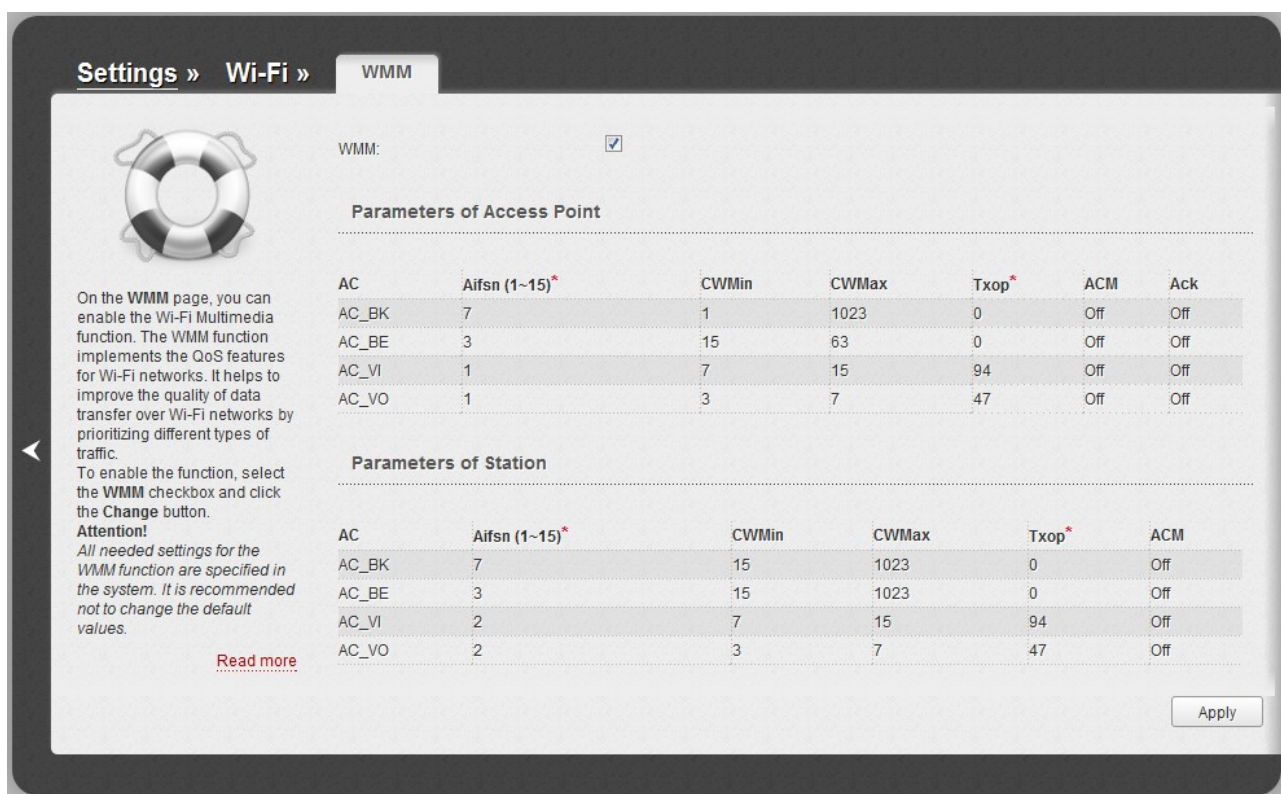


Figure 106. The page for configuring the WMM function.

**!** All needed settings for the WMM function are specified in the device's system. It is recommended not to change the default values.

The WMM function allows assigning priorities for four Access Categories (AC):

- **AC\_BK** (*Background*), low priority traffic (print jobs, file downloads, etc.).
- **AC\_BE** (*Best Effort*), traffic from legacy devices or devices/applications that do not support QoS.
- **AC\_VI** (*Video*).
- **AC\_VO** (*Voice*).

Parameters of the Access Categories are defined for both the router itself (in the **Parameters of Access Point** section) and wireless devices connected to it (in the **Parameters of Station** section).

For every Access Category the following fields are available:

Parameter	Description
<b>Aifsn</b>	<i>Arbitrary Inter-Frame Space Number.</i> This parameter influences time delays for the relevant Access Category. The lower the value, the higher is the Access Category priority.
<b>CWMin/CWMax</b>	<i>Contention Window Minimum/Contention Window Maximum.</i> Both fields influence time delays for the relevant Access Category. The <b>CWMax</b> field value should not be lower, than the <b>CWMin</b> field value. The lower the difference between the <b>CWMax</b> field value and the <b>CWMin</b> field value, the higher is the Access Category priority.
<b>Txop</b>	<i>Transmission Opportunity.</i> The higher the value, the higher is the Access Category priority.
<b>ACM</b>	<i>Admission Control Mandatory.</i> If selected, prevents from using the relevant Access Category.
<b>Ack</b>	<i>Acknowledgment.</i> Answering response requests while transmitting. Displayed only in the <b>Parameters of Access Point</b> section. If not selected, the router answers requests. If selected, the router does not answer requests.

When you have configured the parameters, click the **Apply** button.

## ***Advanced***

In this menu you can configure advanced settings of the router:

- create groups of ports for VLANs
- enable the UPnP function
- configure a DDNS service
- add name servers
- define static routes
- create rules for remote access to the web-based interface
- allow the router to use IGMP, SIP, RTSP, and enable the PPPoE pass through function
- configure TR-069 client.

## VLAN

On the **Advanced / VLAN** page, you can create and edit groups of ports for virtual networks (VLANs).

By default, 2 groups are created in the router's system:

- **lan**: it includes ports 1-4 and the wireless interface;
- **wan**: for the WAN interface; it includes the **INTERNET** port.

The **VLAN ID** parameter is not specified for both groups. Such a setting means that these groups of ports are not assigned to any VLAN.

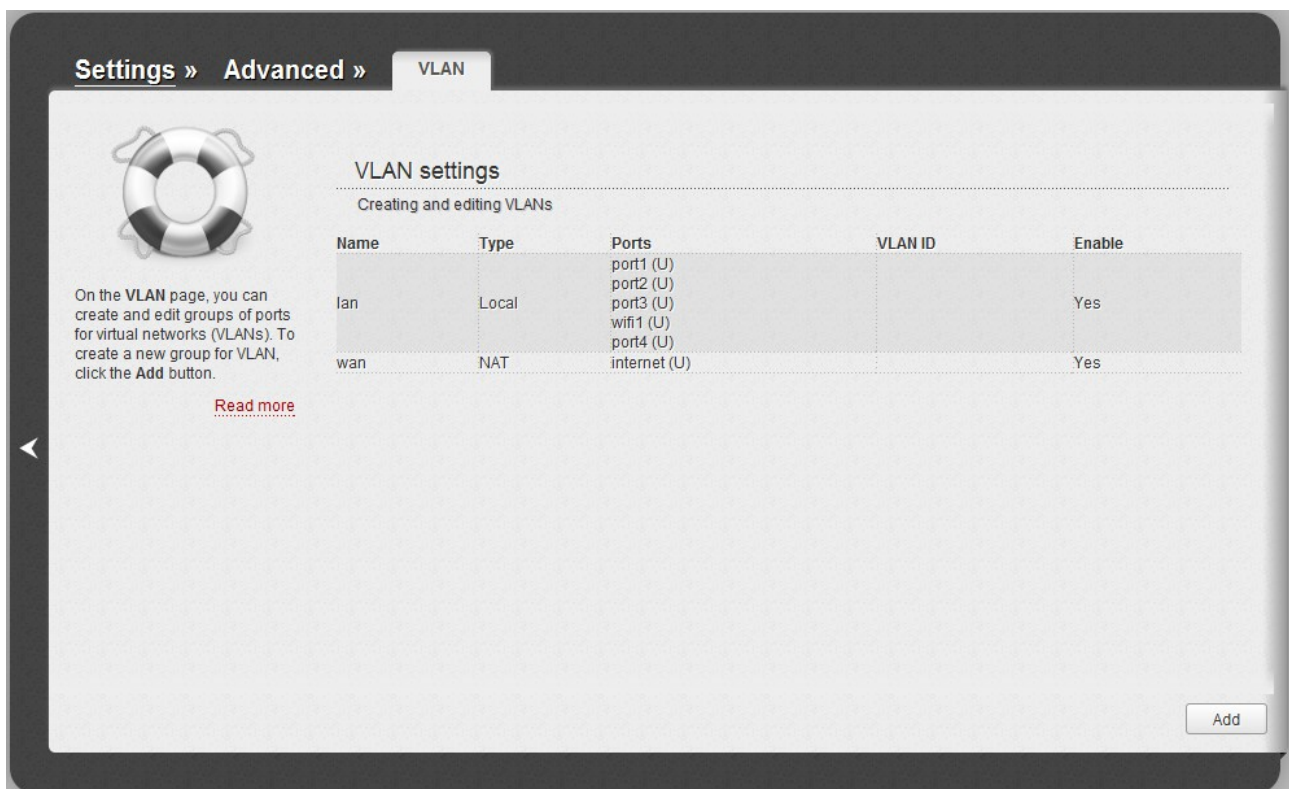


Figure 107. The **Advanced / VLAN** page.

To create a new group for VLAN, click the **Add** button.

- ! If you want to create a group including LAN ports or the wireless network of the router, first delete relevant records from the **lan** group on this page.

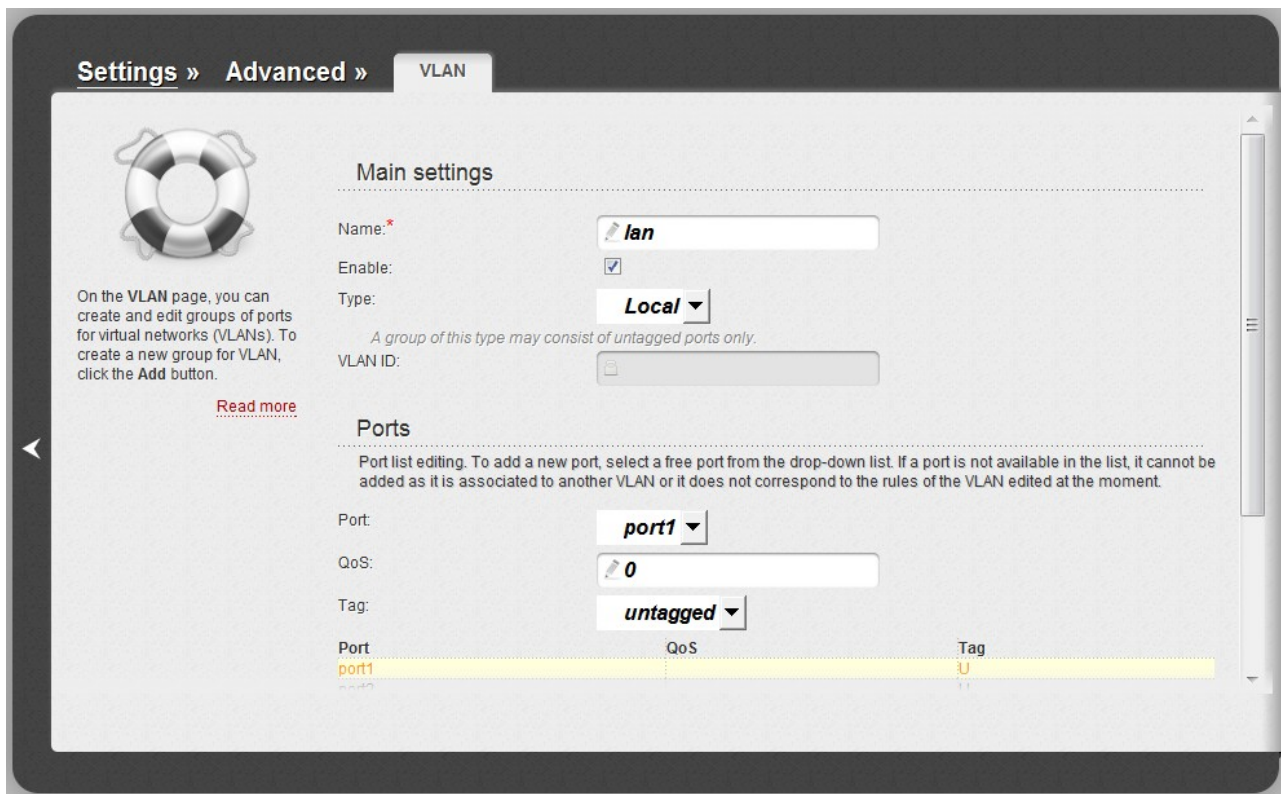


Figure 108. The page for editing a group of ports for VLAN.

You can specify the following parameters:

Parameter	Description
<b>Main settings</b>	
<b>Name</b>	A name for the port for easier identification.
<b>Enable</b>	Select the checkbox to allow using this group of ports.
<b>Type</b>	<p>The type of the VLAN which identifier is specified in the <b>VLAN ID</b> field.</p> <p><b>Local.</b> The group of this type is a channel used to connect local clients to the router. It is mostly used to connect different types of clients, which require separate connection settings.</p> <p><b>NAT.</b> The group of this type is an external connection with address translation. It is mostly used to connect to the Internet. Later the VLAN which identifier is specified in the <b>VLAN ID</b> field is used to create a WAN connection (on the <b>Net / WAN</b> page).</p> <p><b>Transparent.</b> The group of this type is a transparent connection between an internal port and an external connection. It is mostly used to connect IPTV set-top boxes.</p>

Parameter	Description
<b>VLAN ID</b>	An identifier of the VLAN to which this group of ports will be assigned.
<b>Ports</b>	
<b>Port</b>	From the list, select an available value (a physical port of the router, the wireless interface) to assign it to this group. The port will be displayed in the table at the bottom of the page.
<b>QoS</b>	A priority tag for the traffic transmitted through the port highlighted in the table at the bottom of the page.
<b>Tag</b>	Select a value for the port highlighted in the table at the bottom of the page: <ul style="list-style-type: none"><li>• <b>tagged</b>,</li><li>• <b>untagged</b>.</li></ul>

Click the **Apply** button.

Click the **Delete port** button to delete the port highlighted in the table at the bottom of the page.

Click the **Delete VLAN** button to delete this group of ports from the system.



For further use of groups of ports for VLAN it is required to save the changed settings to the non-volatile memory of the router and reboot it (click the **Save&Reboot** line in the top-page menu displayed when the mouse pointer is over the **System** caption).

## UPnP

On the **Advanced / UPnP** page, you can enable and disable the UPnP function.

UPnP is a set of networking protocols designed for automatic configuration of network devices. The UPnP function in the router allows using the UPnP IGD protocol for automatic configuration of the device's parameters for network applications requiring an incoming connection to the router.

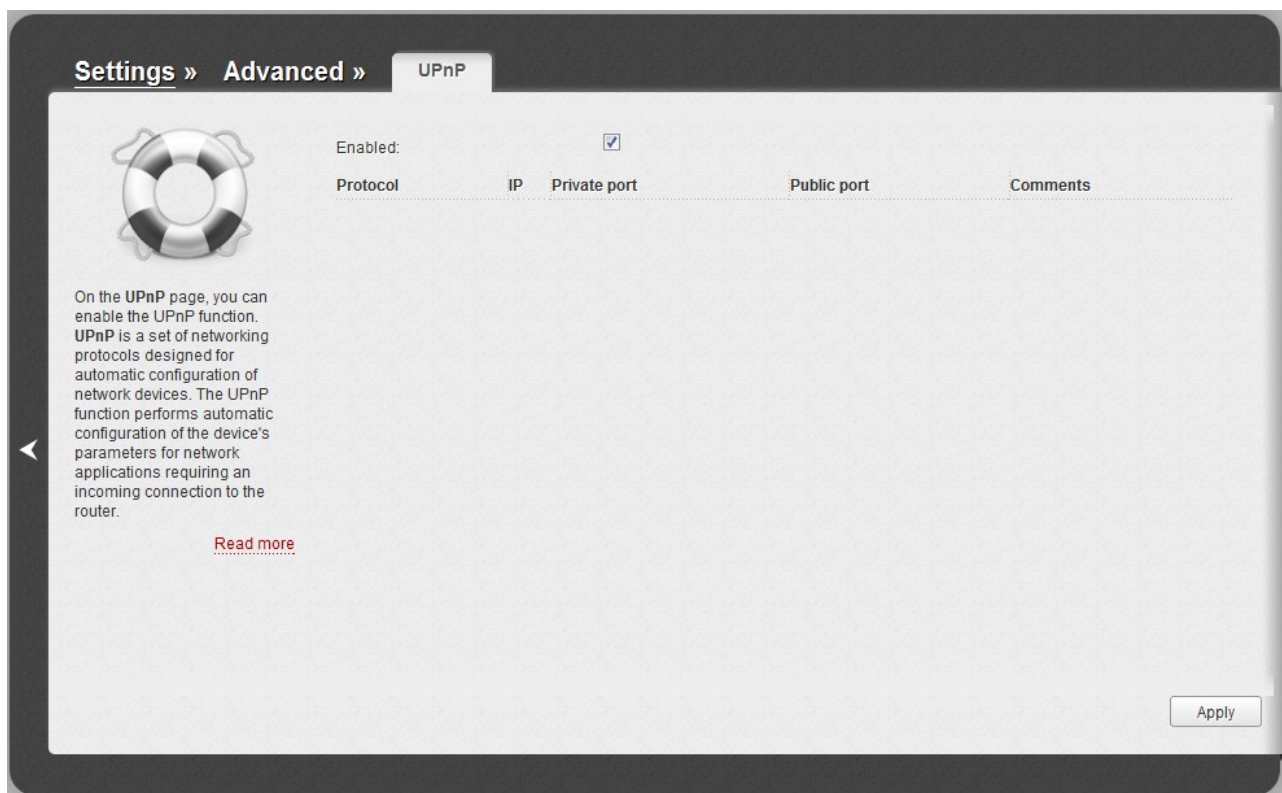


Figure 109. The **Advanced / UPnP** page.

If you want to manually specify all parameters needed for network applications, deselect the **Enabled** checkbox and click the **Apply** button.

If you want to enable the UPnP function in the router, select the **Enabled** checkbox and click the **Apply** button.

After activating the UPnP function the router's parameters configured automatically via the UPnP IGD protocol are displayed on the page:

Parameter	Description
<b>Protocol</b>	A protocol for network packet transmission.
<b>IP</b>	The IP address of a client from the local area network.
<b>Private port</b>	A port of a client's IP address to which traffic is directed from a public port of the router.



---

<b>Parameter</b>	<b>Description</b>
<b>Public port</b>	A public port of the router from which traffic is directed to a client's IP address.
<b>Comments</b>	Information transmitted by a client's network application.

## DDNS

On the **Advanced / DDNS** page, you can define parameters of the DDNS service, which allows associating a domain name with dynamic IP addresses.

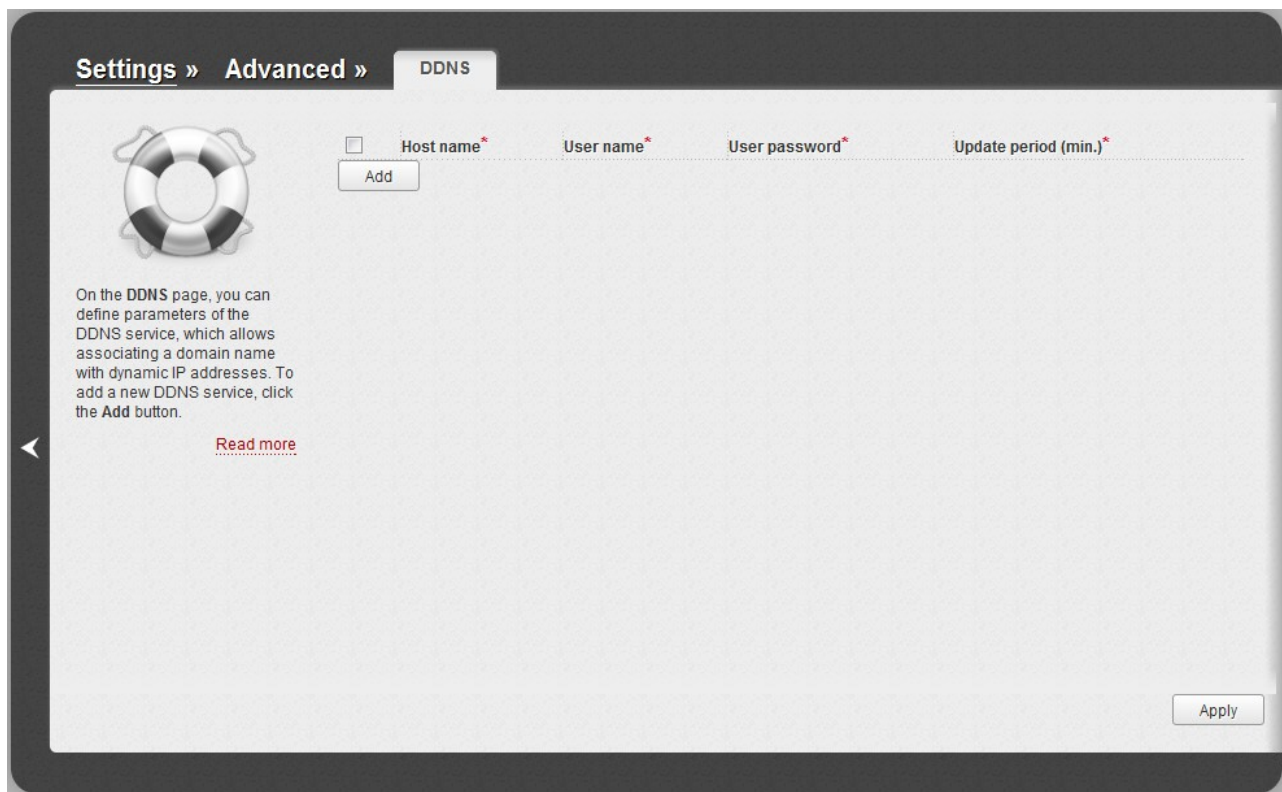


Figure 110. The **Advanced / DDNS** page.

To add a new DDNS service, click the **Add** button. In the line displayed, you can specify the following parameters:

Parameter	Description
<b>Host name</b>	The domain name registered at your DDNS provider.
<b>User name</b>	The username to authorize for your DDNS provider.
<b>User password</b>	The password to authorize for your DDNS provider.
<b>Update period</b>	An interval (in minutes) between sending data on the router's external IP address to the relevant DDNS service.

After specifying the needed parameters, click the **Apply** button.

To edit parameters of the existing DDNS service, select a needed field in the relevant line of the table, change its value, and click the **Apply** button.

To remove an existing DDNS service, select the checkbox located to the left of the relevant line in the table and click the **Apply** button.

## DNS

On the **Advanced / DNS** page, you can add DNS servers to the system.

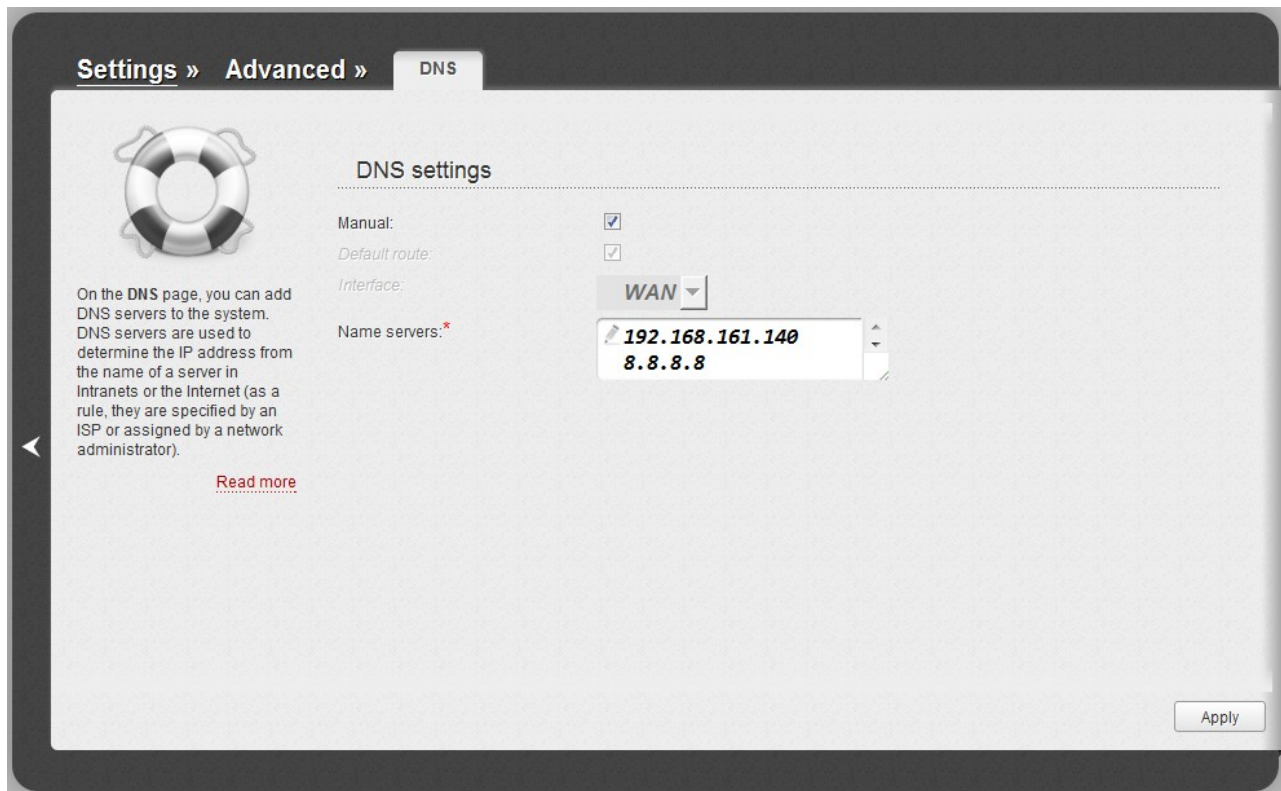


Figure 111. The **Advanced / DNS** page.

DNS servers are used to determine the IP address from the name of a server in Intranets or the Internet (as a rule, they are specified by an ISP or assigned by a network administrator).

The device performs the DNS relay function, i.e., it redirects the DNS requests of users to external DNS servers. You can specify the addresses of DNS servers manually on this page, or configure the router to obtain DNS servers addresses automatically from your ISP upon installing a connection.

**!** When you use the built-in DHCP server, the network parameters (including DNS servers) are distributed to clients automatically.

If you want to configure automatic obtainment of DNS servers addresses, deselect the **Manual** checkbox, select a WAN connection which will be used to obtain addresses of DNS servers automatically from the **Interface** drop-down list or select the **Default route** checkbox, so that the router could use the connection set as the default gateway (on the **Net / WAN** page) to obtain DNS server addresses, and click the **Apply** button.

If you want to specify the DNS server manually, select the **Manual** checkbox and enter a DNS server address in the **Name servers** list. To specify several addresses, press the **Enter** key and enter a needed address in the next line. Then click the **Apply** button.

To remove a DNS server from the system, remove the relevant line from the **Name servers** field and click the **Apply** button.

## Routing

On the **Advanced / Routing** page, you can add static routes (routes for networks that are not connected directly to the device but are available through the interfaces of the device) into the system.

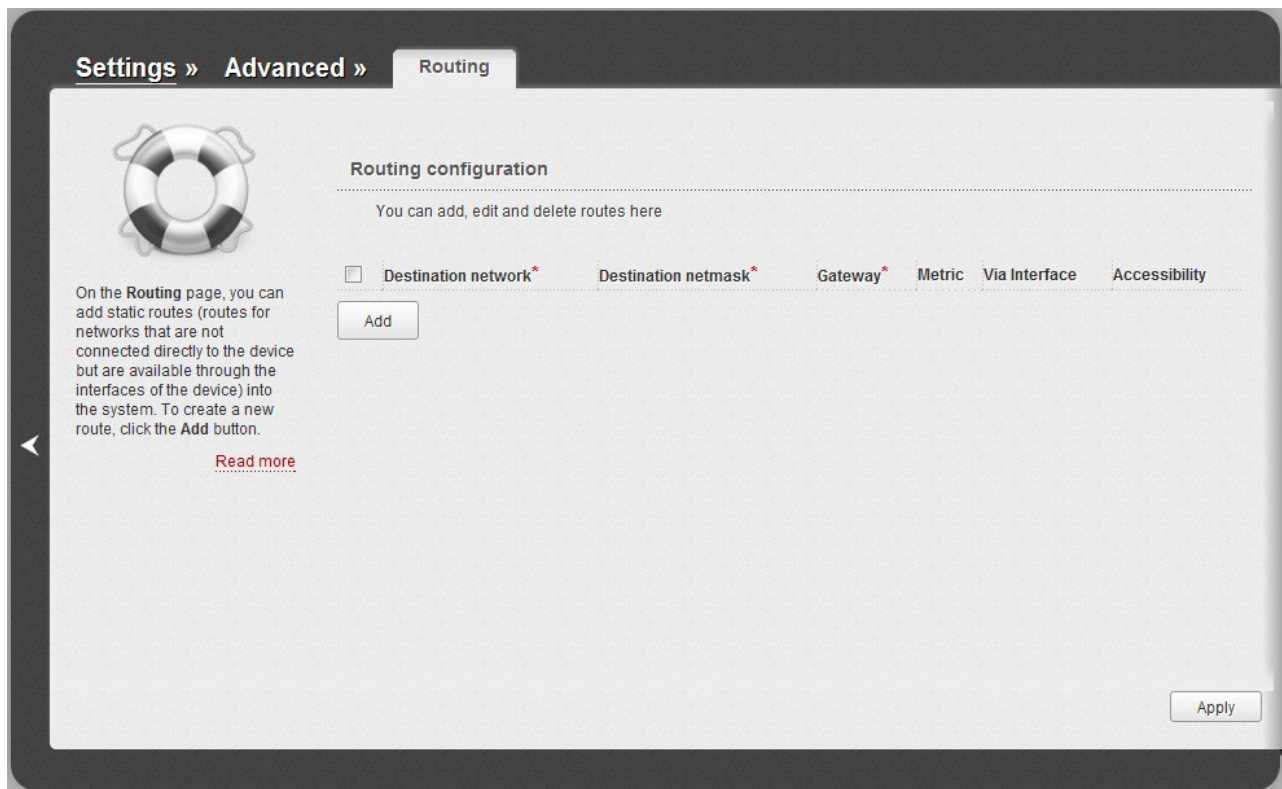


Figure 112. The **Advanced / Routing** page.

To create a new route, click the **Add** button. In the line displayed, you can specify the following parameters:

Parameter	Description
<b>Destination network</b>	A destination network to which this route is assigned.
<b>Destination netmask</b>	The destination network mask.
<b>Gateway</b>	An IP address through which the destination network can be accessed. The field is displayed when the <b>&lt;Auto&gt;</b> value is selected from the <b>Via Interface</b> drop-down list.
<b>Metric</b>	A metric for the route. The lower the value, the higher is the route priority. <i>Optional.</i>
<b>Via Interface</b>	Select an interface through which the destination network can be accessed from the drop-down list. If you have selected the <b>&lt;Auto&gt;</b> value of this drop-down list, the router itself sets the interface on the basis of data on connected networks.

After specifying the needed parameters, click the **Apply** button.

To edit an existing route, select a needed field in the relevant line of the table, change its value, and click the **Apply** button.

To remove an existing route, select the checkbox located to the left of the relevant line in the table and click the **Apply** button.

## Remote Access

On the **Advanced / Remote access** page, you can configure access to the web-based interface of the router. By default, the access from external networks to the router is closed. If you need to allow access to the router from the external network, create relevant rules.

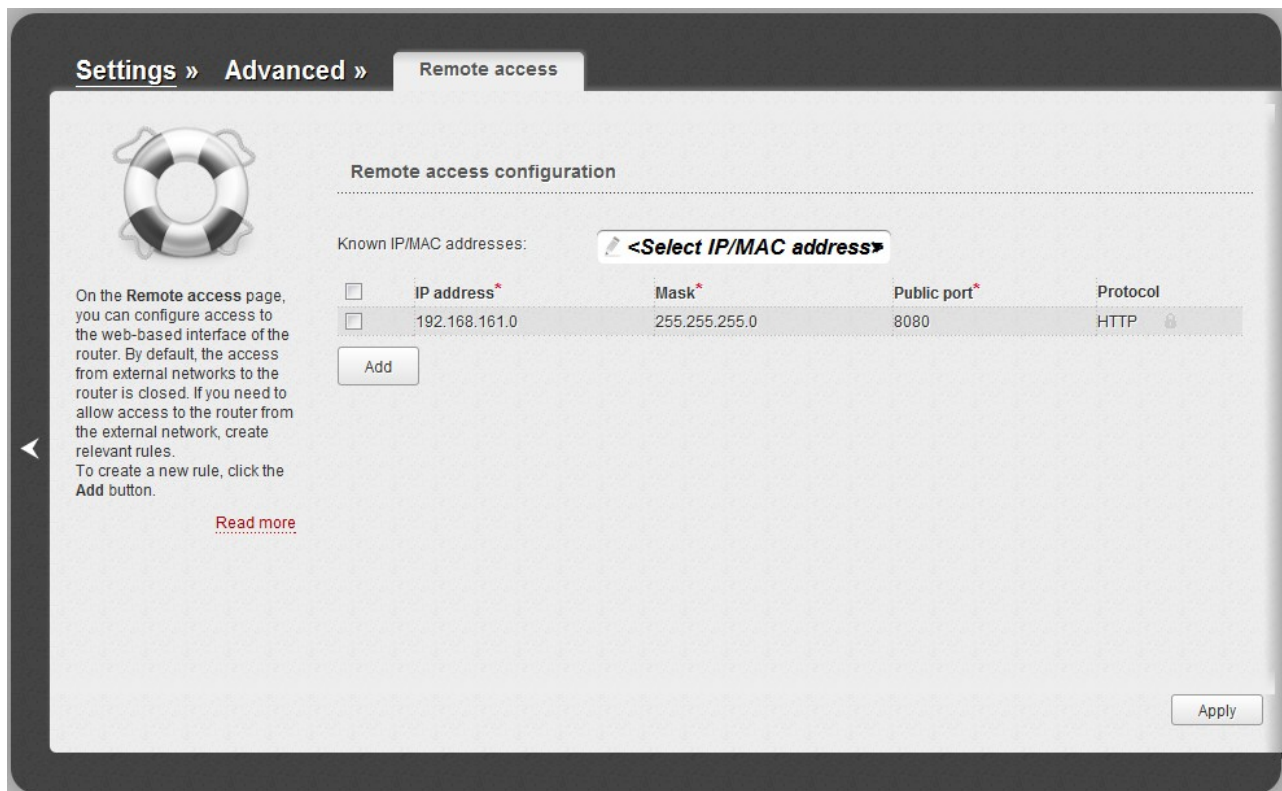


Figure 113. The **Advanced / Remote access** page.

To create a new rule, click the **Add** button. In the line displayed, you can specify the following parameters:

Parameter	Description
<b>IP address</b>	A host or a subnet to which the rule is applied.
<b>Mask</b>	The mask of the subnet.
<b>Public port</b>	An external port of the router. You can specify only one port.
<b>Protocol</b>	The protocol available for remote management of the router.

After specifying the needed parameters, click the **Apply** button.

To edit a rule for remote access, select a needed field in the relevant line of the table, change its value, and click the **Apply** button.

To remove a rule for remote access, select the checkbox located to the left of the relevant line in the table and click the **Apply** button.

## Miscellaneous

On the **Advanced / Miscellaneous** page, you can enable IGMP, SIP, RTSP, and the PPPoE pass through function for the router.

IGMP is used for managing multicast traffic (transferring data to a group of destinations). This protocol allows using network resources for some applications, e.g., for streaming video, more efficiently.

SIP is used for creating, modifying, and terminating communication sessions. This protocol allows telephone calls via the Internet.

RTSP is used for real-time streaming multimedia data delivery. This protocol allows some applications to receive streaming audio/video from the Internet.

The PPPoE pass through function allows PPPoE clients of computers from your LAN to connect to the Internet through PPPoE connections of the router.

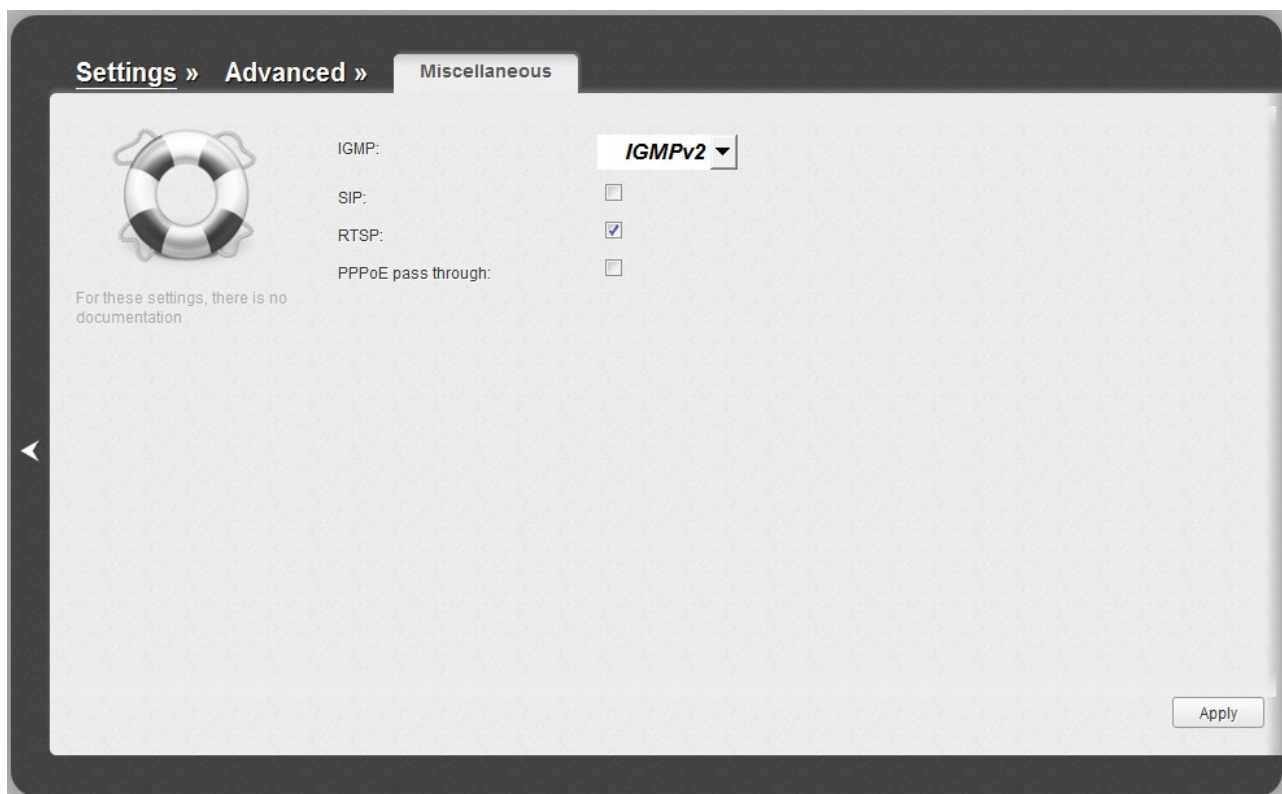


Figure 114. The **Advanced / Miscellaneous** page.

To enable IGMP, select a version of IGMP from the **IGMP** drop-down list and click the **Apply** button. Such a setting allows using the IGMP Proxy function for all WAN connections for which the **Enable IGMP Multicast** checkbox is selected.

To disable IGMP, select the **Off** value from the **IGMP** drop-down list and click the **Apply** button.

To enable SIP, select the **SIP** checkbox and click the **Apply** button. Such a setting allows using the SIP ALG function. This function allows VoIP traffic to pass through the NAT-enabled router.<sup>7</sup>

To disable the SIP ALG function, deselect the **SIP** checkbox and click the **Apply** button.

To enable RTSP, select the **RTSP** checkbox and click the **Apply** button. Such a setting allows managing media stream: fast forward streaming audio/video, pause and start it.

To disable RTSP, deselect the **RTSP** checkbox and click the **Apply** button.

To enable the PPPoE pass through function, select the **PPPoE pass through** checkbox and click the **Apply** button.

To disable the PPPoE pass through function, deselect the **PPPoE pass through** checkbox and click the **Apply** button.

---

<sup>7</sup> On the **Net / WAN** page, create a WAN connection, on the **Advanced / Miscellaneous** page, select the **SIP** checkbox, connect the phone cable between a LAN port of the router and the IP phone. Specify SIP parameters on the IP phone and configure it to obtain an IP address automatically (as DHCP client).



## TR-069 Client

On the **Advanced / TR-069 Client** page, you can configure the router for communication with a remote Auto Configuration Server (ACS).

The TR-069 client is used for remote monitoring and management of the device.

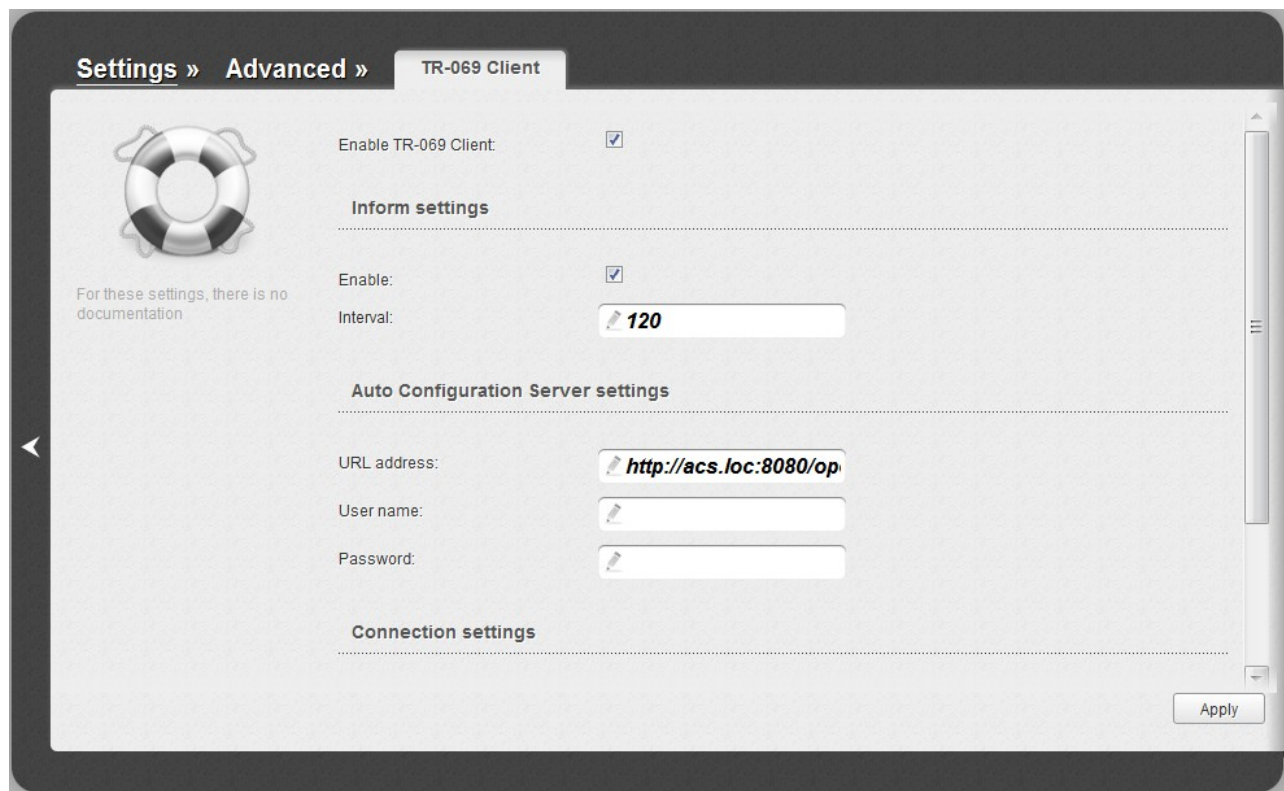


Figure 115. The page for configuring the TR-069 client.

You can specify the following parameters:

Parameter	Description
<b>Enable TR-069 Client</b>	Select the checkbox to enable the TR-069 client.
<b>Inform settings</b>	
<b>Enable</b>	Select the checkbox so the router may send reports (data on the device and network statistics) to the ACS.
<b>Interval</b>	Specify the time period (in seconds) between sending reports.
<b>Auto Configuration Server settings</b>	
<b>URL address</b>	The URL address of the ACS provided by the ISP.
<b>User name</b>	The username to connect to the ACS. The username can contain digits, Latin letters (uppercase and/or lowercase), and characters available on the keyboard.

Parameter	Description
<b>Password</b>	The password to connect to the ACS. The password can contain digits, Latin letters (uppercase and/or lowercase), and characters available on the keyboard.
<b>Connection settings</b>	
<b>User name</b>	The username which the ACS uses to connect to the router. The username can contain digits, Latin letters (uppercase and/or lowercase), and characters available on the keyboard.
<b>Password</b>	The password which the ACS uses to connect to the router. The password can contain digits, Latin letters (uppercase and/or lowercase), and characters available on the keyboard.

When you have configured the parameters, click the **Apply** button.

## Firewall

In this menu you can configure the firewall of the router:

- add rules for IP filtering
- create virtual servers
- define a DMZ
- configure the MAC filter.

## IP Filters

On the **Firewall / IP filters** page, you can create new rules for filtering IP packets and edit or remove existing rules.

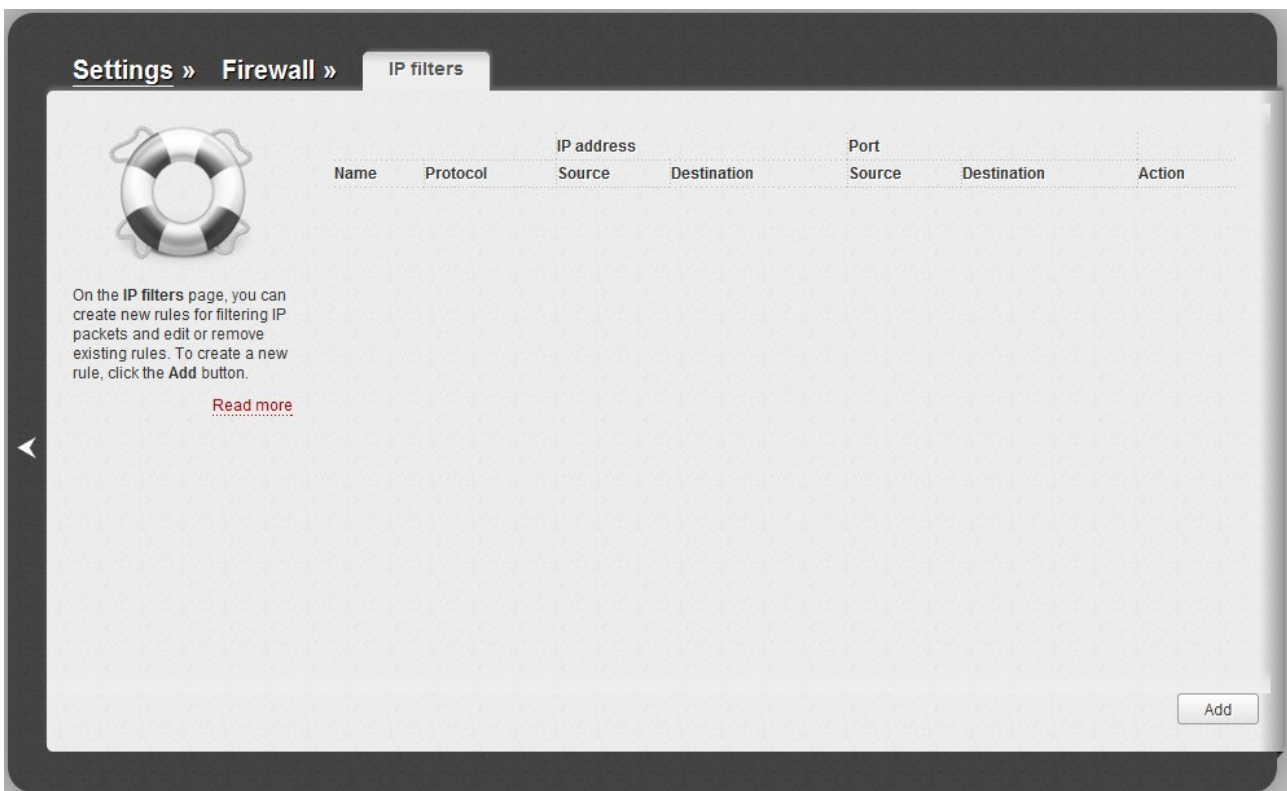


Figure 116. The **Firewall / IP filters** page.

To create a new rule, click the **Add** button.

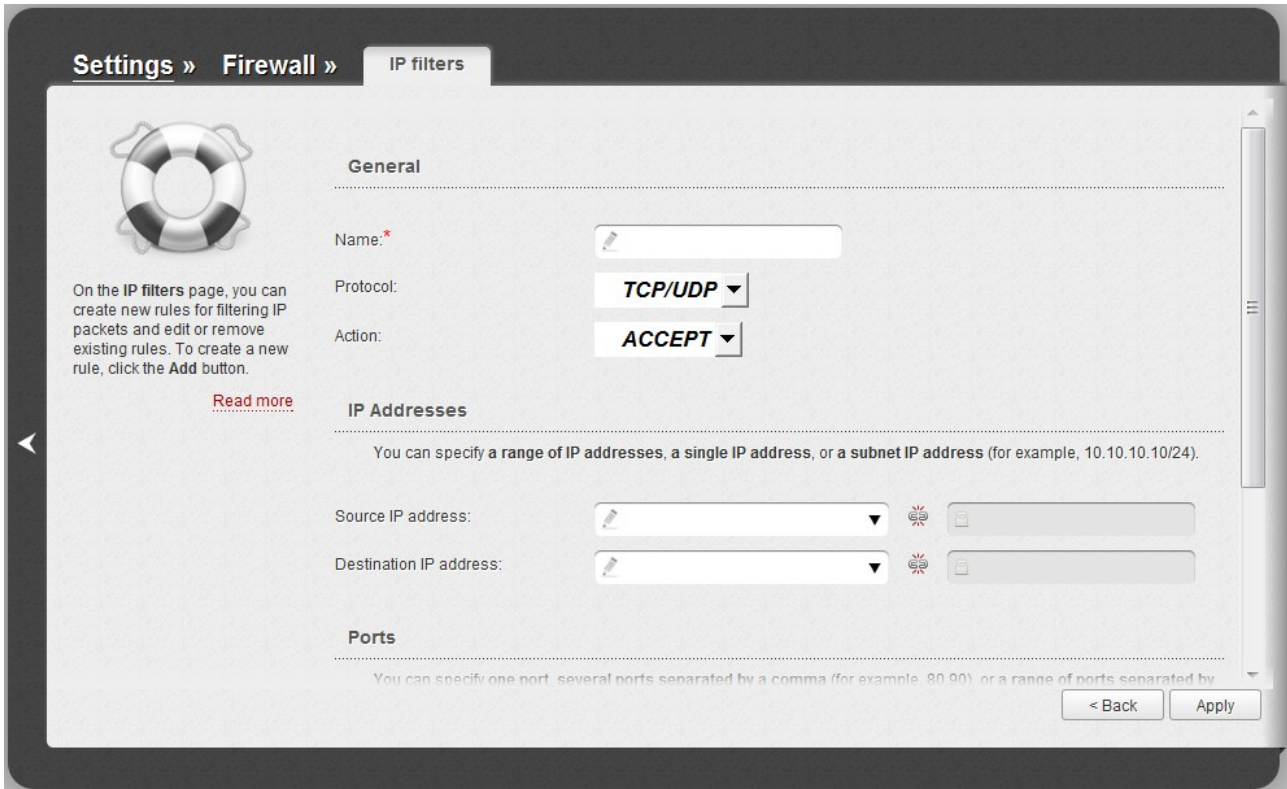




Figure 117. The page for adding a rule for IP filtering.

You can specify the following parameters:

Parameter	Description
<b>General</b>	
<b>Name</b>	A name for the rule for easier identification.
<b>Protocol</b>	A protocol for network packet transmission. Select a value from the drop-down list.
<b>Action</b>	Select an action for the rule. <b>ACCEPT:</b> Allows packet transmission in accordance with the criteria specified by the rule. <b>DROP:</b> Denies packet transmission in accordance with the criteria specified by the rule.
<b>IP Addresses</b>	

Parameter	Description
<b>Source IP address</b>	<p>The source host/subnet IP address.</p> <p>To choose a device connected to the router's LAN at the moment, select the relevant IP address from the drop-down list (the field will be filled in automatically).</p> <p>If you want to specify a range of IP addresses, click the <b>Range</b> icon () and enter the starting and ending addresses in the left and right fields correspondingly.</p>
<b>Destination IP address</b>	<p>The destination host/subnet IP address.</p> <p>To choose a device connected to the router's LAN at the moment, select the relevant IP address from the drop-down list (the field will be filled in automatically).</p> <p>If you want to specify a range of IP addresses, click the <b>Range</b> icon () and enter the starting and ending addresses in the left and right fields correspondingly.</p>
<b>Ports</b>	
<b>Source port</b>	A port of the source IP address. You can specify one port, several ports separated by a comma, or a range of ports separated by a colon.
<b>Destination port</b>	A port of the destination IP address. You can specify one port, several ports separated by a comma, or a range of ports separated by a colon.

Click the **Apply** button.

To edit a rule for IP filtering, click the link to the relevant rule. On the opened page, change the needed parameters and click the **Apply** button.

To remove a rule for IP filtering, click the link to the relevant rule. On the opened page, click the **Delete** button.

To remove all rules from this page, click the **Clear all** button (the button is displayed if at least one rule exists).

## Virtual Servers

On the **Firewall / Virtual servers** page, you can create virtual servers for redirecting incoming Internet traffic to a specified IP address in the local area network.

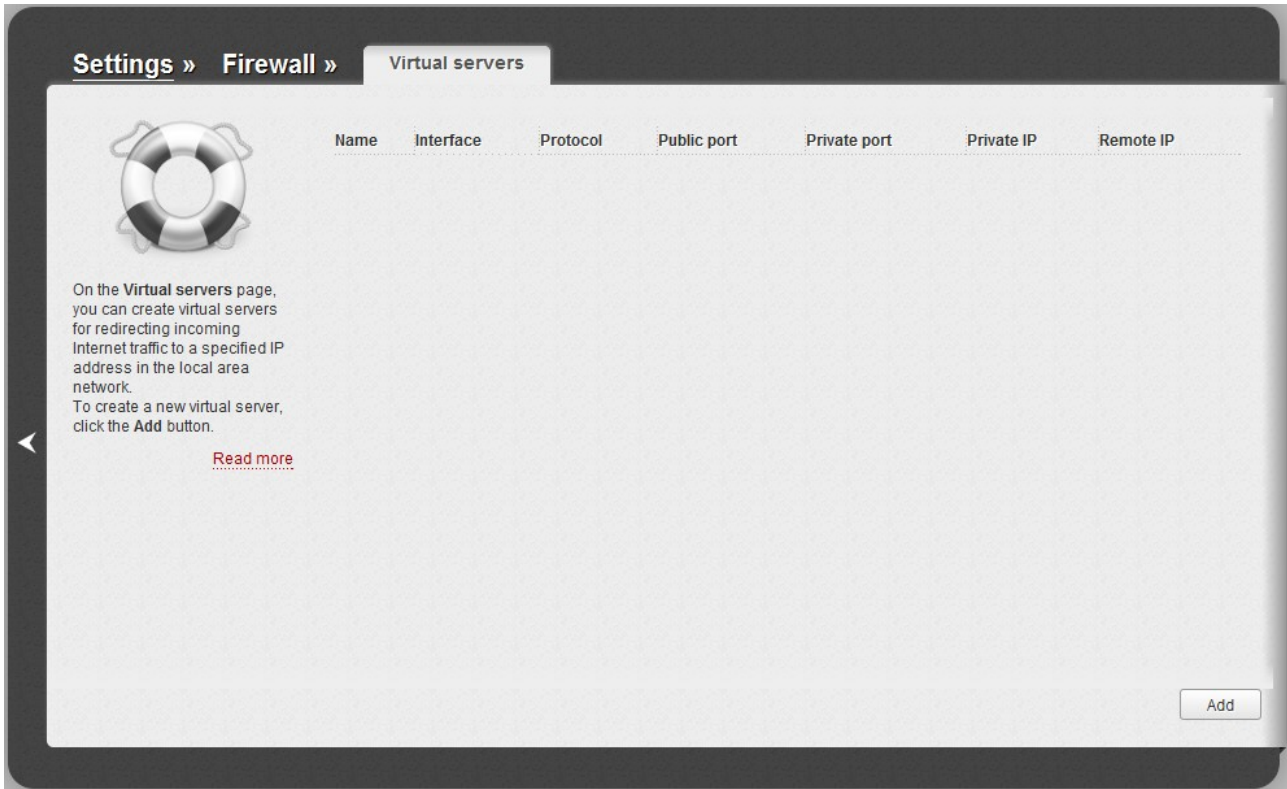


Figure 118. The **Firewall / Virtual servers** page.

To create a new virtual server, click the **Add** button.

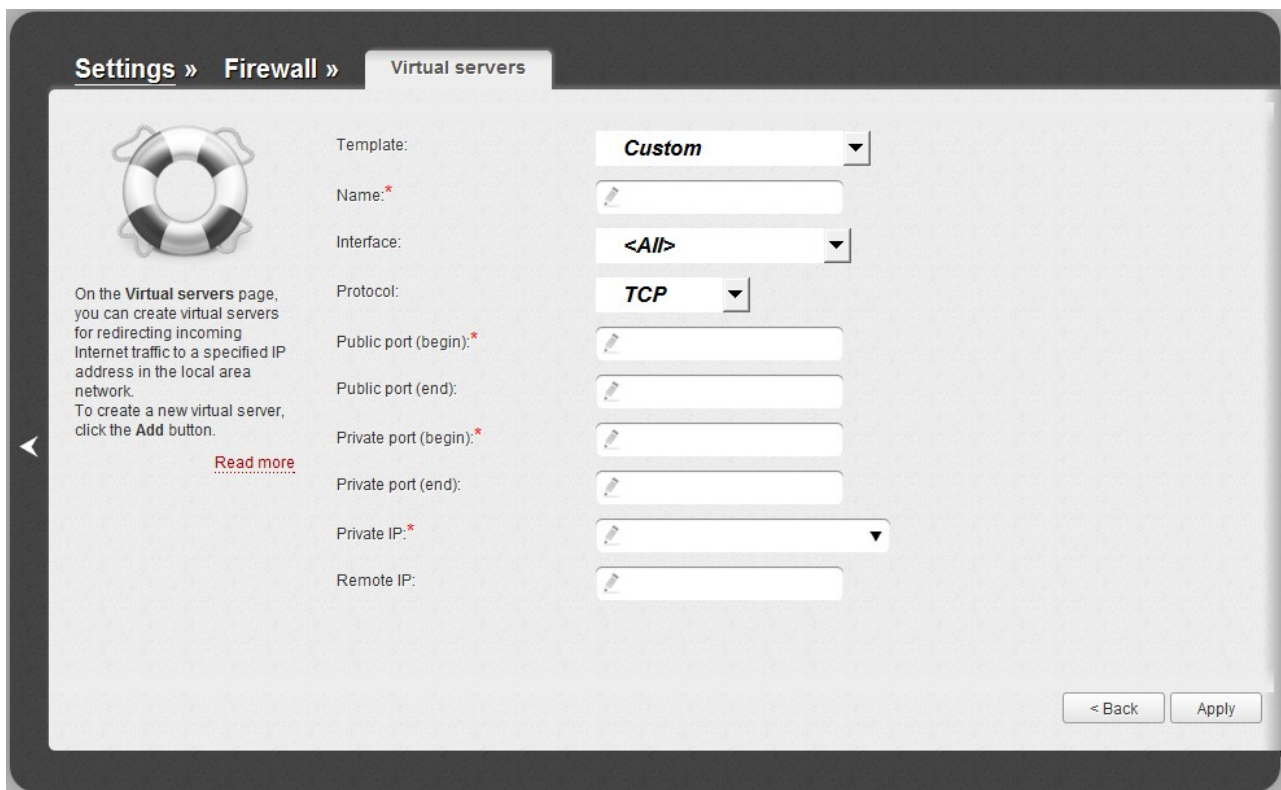


Figure 119. The page for adding a virtual server.

You can specify the following parameters:

Parameter	Description
<b>Template</b>	Select a virtual server template from the drop-down list, or select <b>Custom</b> to specify all parameters of the new virtual server manually.
<b>Name</b>	A name for the virtual server for easier identification. You can specify any name.
<b>Interface</b>	A WAN connection to which this virtual server will be assigned.
<b>Protocol</b>	A protocol that will be used by the new virtual server. Select a value from the drop-down list.
<b>Public port (begin)/ Public port (end)</b>	A port of the router from which traffic is directed to the IP address specified in the <b>Private IP</b> field. Specify the start and the end value for the port range. If you need to specify one port, enter the needed value in the <b>Public port (begin)</b> field and leave the <b>Public port (end)</b> field blank.
<b>Private port (begin)/ Private port (end)</b>	A port of the IP address specified in the <b>Private IP</b> field to which traffic is directed from the <b>Public port</b> . Specify the start and the end value for the port range. If you need to specify one port, enter the needed value in the <b>Private port (begin)</b> field and leave the <b>Private port (end)</b> field blank.

Parameter	Description
<b>Private IP</b>	The IP address of the server from the local area network. To choose a device connected to the router's LAN at the moment, select the relevant value from the drop-down list (the field will be filled in automatically).
<b>Remote IP</b>	The IP address of the server from the external network.

Click the **Apply** button.

To edit the parameters of an existing server, follow the link with the name of the server. On the opened page, change the needed parameters and click the **Apply** button.

To remove an existing server, follow the link with the name of the server. On the opened page, click the **Delete** button.

To remove all servers from this page, click the **Clear all** button (the button is displayed if at least one server exists).



## DMZ

A DMZ is a host or network segment located “between” internal (local) and external (global) networks. In the router, the DMZ implements the capability to transfer a request coming to a port of the router from the external network to a specified host of the internal network.

On the **Firewall / DMZ** page you can specify the IP address of the DMZ host.

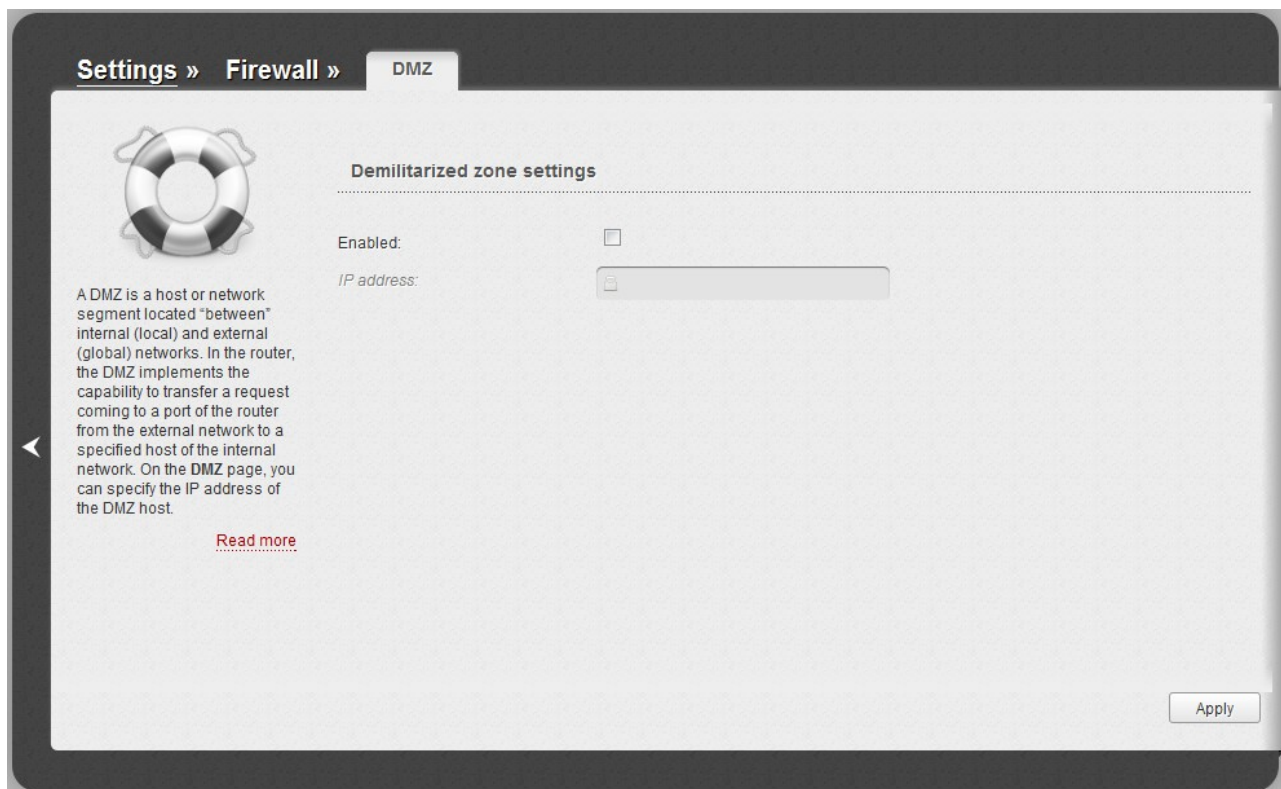


Figure 120. The **Firewall / DMZ** page.

To enable the DMZ, select the **Enabled** checkbox, enter the IP address of a host from your network in the **IP address** field, and click the **Apply** button.

Note that when the DMZ is enabled, all traffic coming to a port of the WAN interface of the router is directed to the same port of the specified IP address. Also note that virtual servers have higher priority than the DMZ host. In other words, if there has been created a virtual server that directs traffic from external port 80 to a port of the device from the router's local network, then entering [http://router\\_WAN\\_IP](http://router_WAN_IP) in the address bar, users of the external network are directed to the specified port and IP address configured for the virtual server, but not to port 80 of the device with the IP address specified on the **Firewall / DMZ** page.

To disable the DMZ, deselect the **Enabled** checkbox and click the **Apply** button.

## MAC Filter

On the **Firewall / MAC filter** page, you can configure MAC-address-based filtering for computers of the router's LAN.

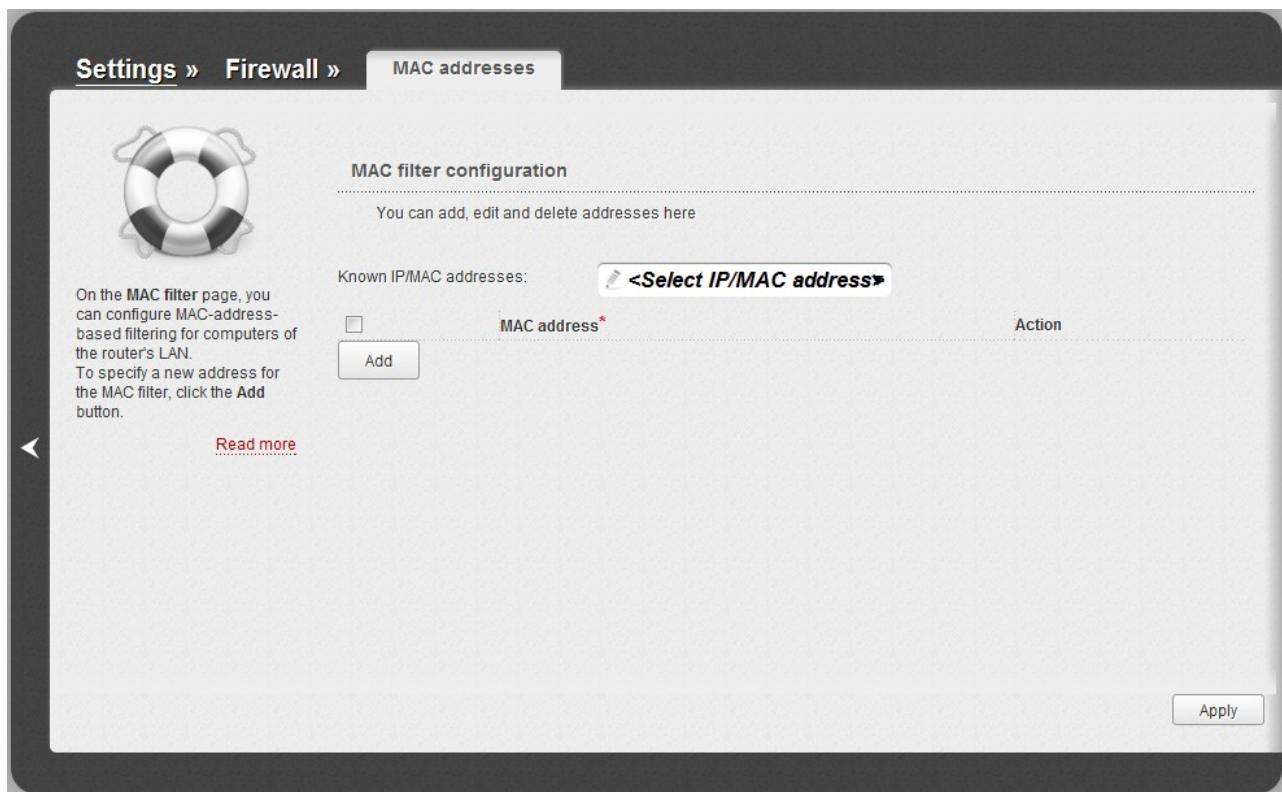


Figure 121. The **Firewall / MAC filter** page.

To specify a new address for the MAC filter, click the **Add** button. In the line displayed, you can specify the following parameters:

Parameter	Description
<b>MAC address</b>	The MAC address of a device from the router's LAN. You can enter the MAC address of a device connected to the router's LAN at the moment. To do this, select the relevant device from the <b>Known IP/MAC addresses</b> drop-down list (the field will be filled in automatically).
<b>Action</b>	Select an action for the rule. <b>Deny:</b> Blocks access to the router's network for the device with the specified MAC address. <b>Allow:</b> Allows access to the router's network and to the Internet for the device with the specified MAC when the rules on the <b>Firewall / IP filters</b> page block access for this device.

After specifying the needed parameters, click the **Apply** button.

To edit a rule for filtering, select a needed field in the relevant line of the table, change its value, and click the **Apply** button.

To remove a rule for filtering, select the checkbox located to the left of the relevant line in the table and click the **Apply** button.

## 3G Modem

This menu is designed to operate USB modems.

If the PIN code check for the SIM card inserted into your USB modem is not disabled, then upon the first access to the pages of the **3G modem** menu (under the current web-interface session) the page for checking the PIN code is displayed<sup>8</sup>. Enter the PIN code in the relevant field and click the **Enter** link.

### Information

On the **3G modem / Information** page, you can view data on the USB modem connected to the router.

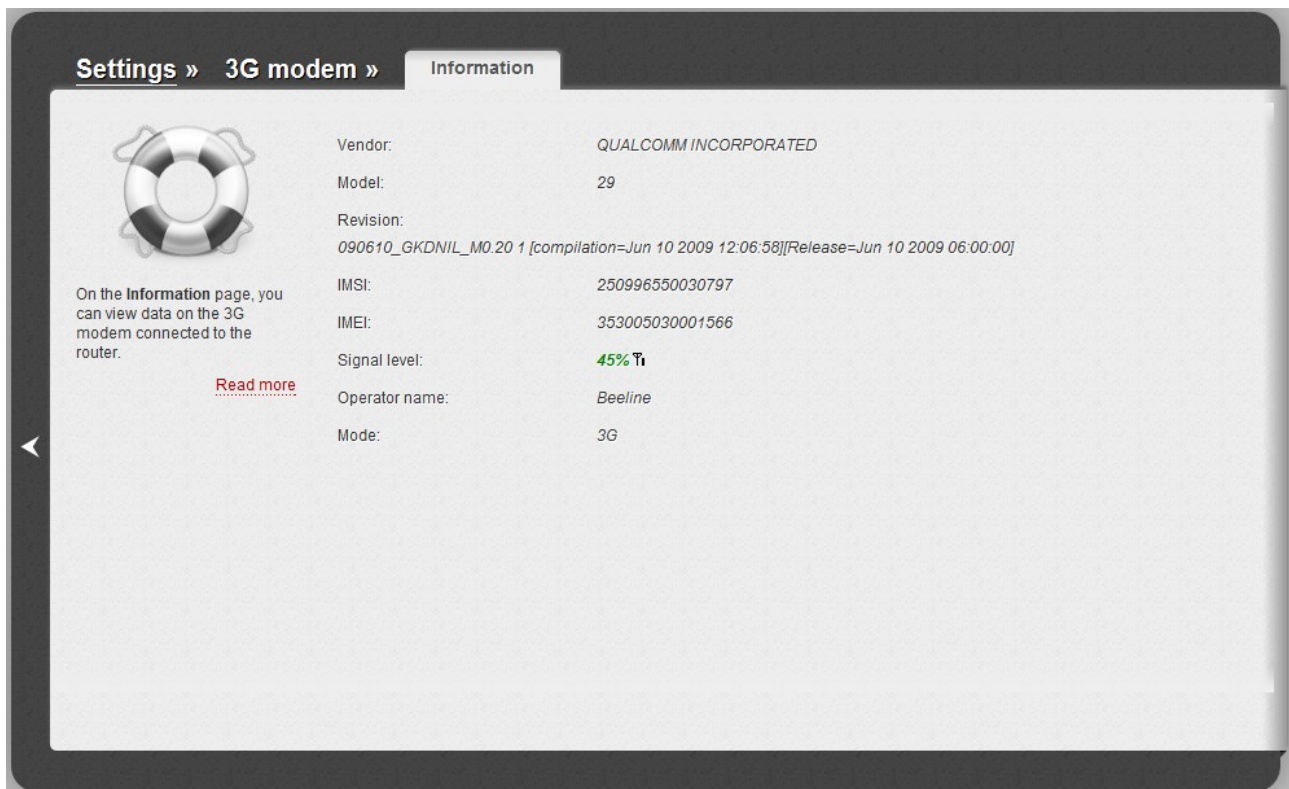


Figure 122. The **3G modem / Information** page.

When a USB modem is connected to the router, the following data are displayed on the page:

Parameter	Description
<b>Vendor</b>	The manufacturer of your USB modem.
<b>Model</b>	The alphanumeric code of the model of your USB modem.
<b>Revision</b>	The revision of the firmware of your USB modem.

<sup>8</sup> For GSM USB modems only. For LTE and CDMA USB modems, it is required to disable the PIN code check on the identification card prior to connecting the USB modem to the router.

Parameter	Description
<b>IMSI</b>	The code stored in the SIM card inserted to your USB modem.
<b>IMEI</b>	The code stored in the memory of the USB modem.
<b>Signal level</b>	The signal level at the input of the modem's receiver. The zero signal level shows that you are out of the coverage area of the selected operator's network.
<b>Operator name</b>	When the needed network is available, the name of the operator is displayed in this field.
<b>Mode</b>	A type of the network to which the USB modem is connected.

## PIN

On the **3G modem / PIN** page, you can change the PIN code of the identification card inserted into your USB modem, disable or enable the check of the PIN code.

**!** The operations presented on this page are not available for LTE and CDMA USB modems.

The current state of the identification card inserted into your USB modem is displayed in the **Status** field. If the PIN code is entered incorrectly or the PIN code is not entered when the PIN code check is enabled, the **Device is locked** value is displayed in the **Status** field. If the PIN code is entered correctly or the PIN check is disabled, the **Device is unlocked** value is displayed in the **Status** field.

If the PIN code check for the SIM card inserted into your USB modem is not disabled, the **Yes** value is displayed in the **PIN check** field. If the PIN check is disabled, the **No** value is displayed in the **PIN check** field.

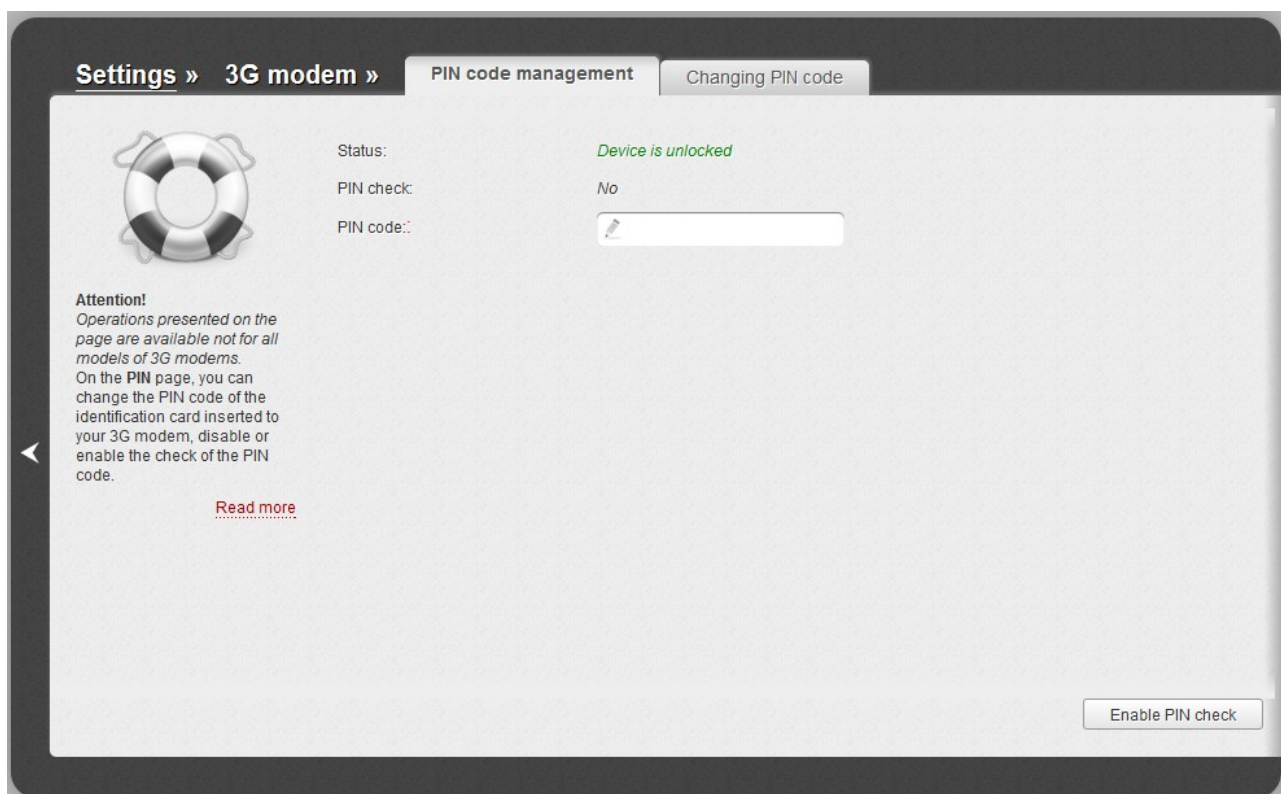


Figure 123. The **3G modem / PIN** page. The **PIN code management** tab.

To disable the PIN code check, enter the current PIN code in the **PIN code** field and click the **Disable PIN check** button (the button is displayed if the PIN code check is enabled).

To enable the PIN code check, enter the PIN code, used before disabling the check, in the **PIN code** field and click the **Enable PIN check** button (the button is displayed if the PIN code check is disabled).

To change the PIN code, enable the PIN code check and proceed to the **Changing PIN code** tab.

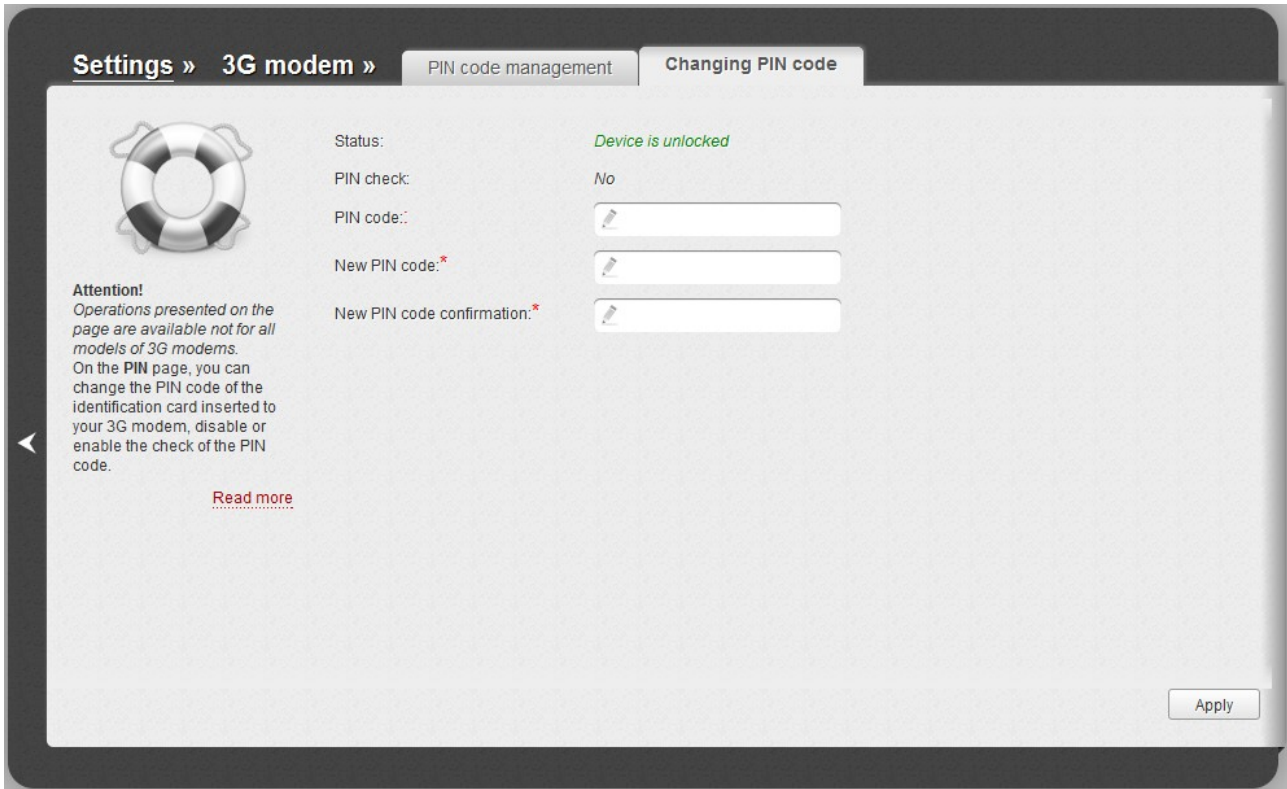


Figure 124. The 3G modem / PIN page. The Changing PIN code tab.

Enter the current code in the **PIN code** field, then enter a new code in **New PIN code** and **New PIN code confirmation** fields and click the **Apply** button.

If upon one of the operations described above you have entered an incorrect value in the **PIN code** field three times (the number of remaining attempts is displayed in the **Attempts left** field), the identification card inserted into your USB modem is blocked.

For further use of the card, enter the PUK code in the relevant field, and then specify a new PIN code for your SIM card in the **New PIN code** field. Click the **Enter** button.

## WiMAX

This menu is designed to operate WiMAX USB modems.

### Information

On the **WiMAX / Information** page, you can connect to the network of your WiMAX ISP to establish a high-speed wireless connection to the Internet.

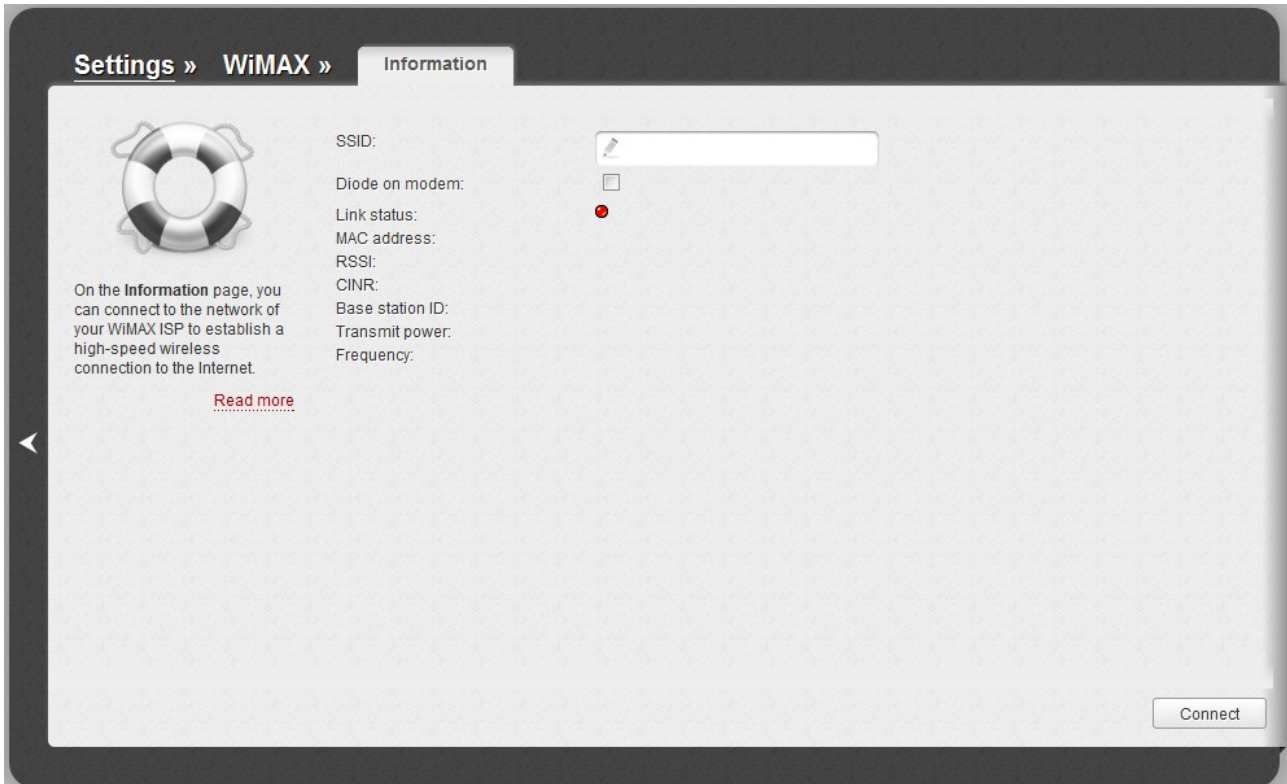


Figure 125. The **WiMAX / Information** page.

The following fields and controls are available on the page:

Parameter	Description
<b>SSID</b>	An identifier for the WiMAX network. Specify the parameter if your WiMAX ISP requires this.
<b>Diode on modem</b>	Select the checkbox to enable the modem's LED indicator.
<b>Link status</b>	The state of connection to the WiMAX network. <b>Red light:</b> The connection is not established. <b>Yellow light:</b> The USB modem is connecting to the network. <b>Green light:</b> The connection is established.
<b>MAC address</b>	The MAC address of the WiMAX USB modem.



Parameter	Description
<b>RSSI</b>	The signal level at the input of the modem's receiver.
<b>CINR</b>	The relation of the signal level to the noise level. This parameter is used to measure the quality of the signal.
<b>Base station ID</b>	The identifier of the base station.
<b>Transmit power</b>	The signal level at the output of the modem's receiver.
<b>Frequency</b>	The frequency of the signal transmitted by the modem's receiver.
<b>Connect</b>	Click the button to connect to the WiMAX network. Beforehand, you need to create a WAN connection with relevant parameters. <i>The button is displayed when the connection is not established.</i>
<b>Disconnect</b>	Click the button to disconnect from the WiMAX network. <i>The button is displayed when the connection is established or is being established.</i>

To save the values of the **SSID** and **Diode on modem** field, click the **Connect** button.

## USB Storage

This menu is designed to operate USB storages. Here you can do the following:

- view data on the connected USB storage
- view content of the connected USB storage
- configure the router as a print server
- configure SMB-based access to the USB storage
- enable the built-in FTP server of the router
- enable the built-in DLNA server of the router.

## Information

On the **USB storage / Information** page, you can view data on the USB storage connected to the router.

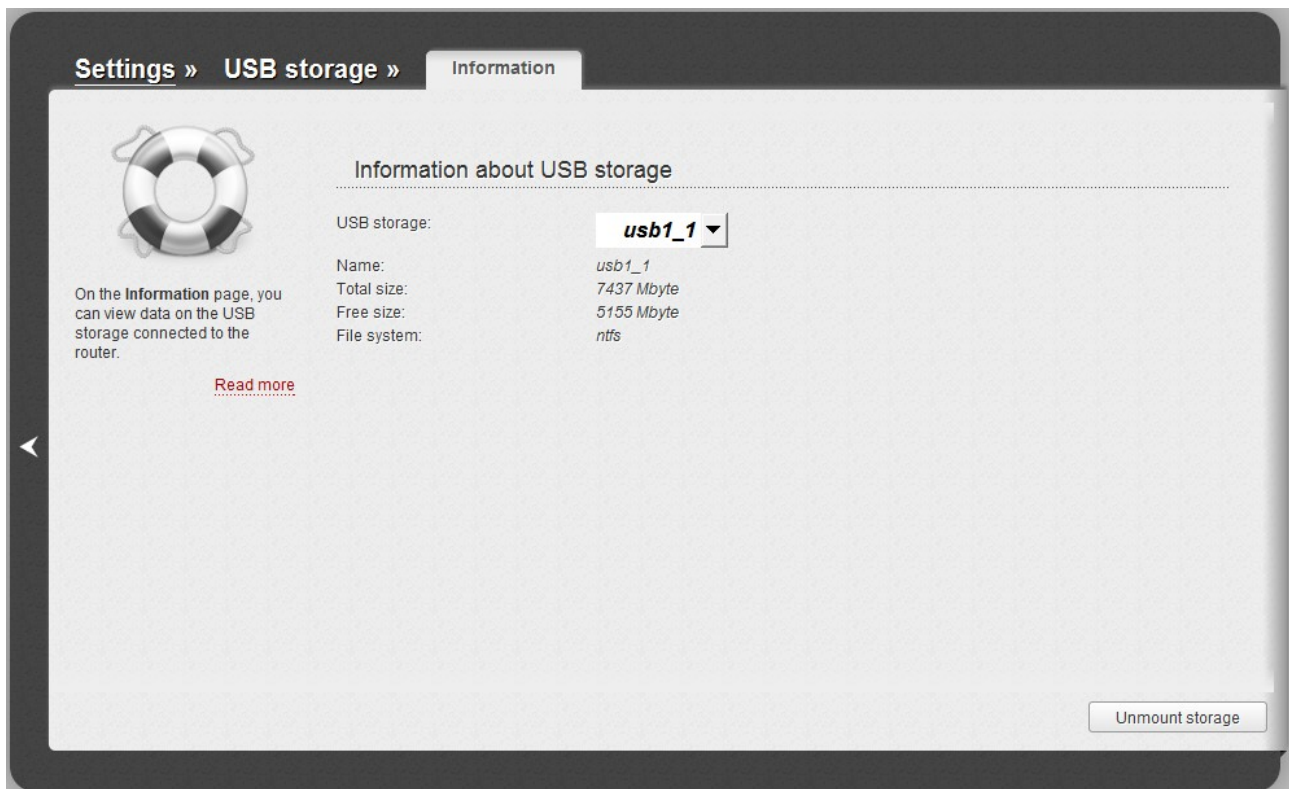


Figure 126. The **USB storage / Information** page.

The following data are presented on the page: the name, total and free space of the storage, and the type of its file system.

If the USB storage is divided into volumes, several values are displayed in the **USB storage** drop-down list. Select the needed value to view data on the volume (partition) of the USB storage.

To safely disconnect the USB storage, click the **Unmount storage** button. When the **No** value is displayed in the **USB storage** drop-down list, remove the storage from the router.

To disconnect one volume of the storage, select the needed value from the **USB storage** drop-down list and click the **Unmount volume** button.

## Filebrowser

On the **USB storage / Filebrowser** page, you can view the content of your USB storage connected to the router and remove separate folders and files from the USB storage.

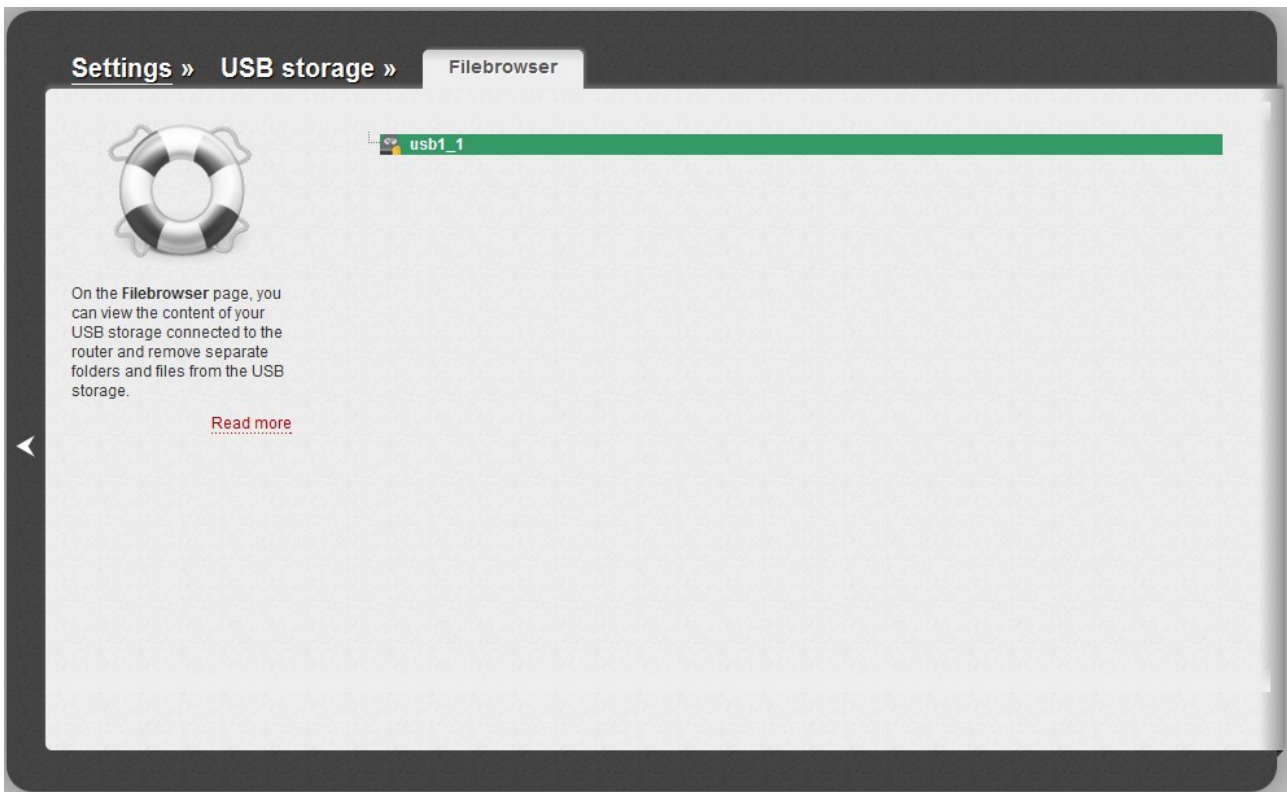


Figure 127. The **USB storage / Filebrowser** page.

To view the content of the USB storage, double-click the icon of the storage or storage partition. The list of folders and files will be displayed on the page.

To proceed to a folder, select it in the directory structure on the left part of the page.

To refresh the folder contents, right-click the line corresponding to this folder, and select the **Refresh** value in the menu displayed.

To remove a folder or file, right-click the line corresponding to this folder or file, and select the **Delete** value in the menu displayed.

## Print Server

On the **USB storage / Print-server** page, you can configure the router as a print server. Being configured in this way, the router will allow your LAN users to share the printer connected to the USB port of the router.

To connect a printer to the router, power off both devices. Connect printer to the USB port of the router, power on the printer, then power on the router.

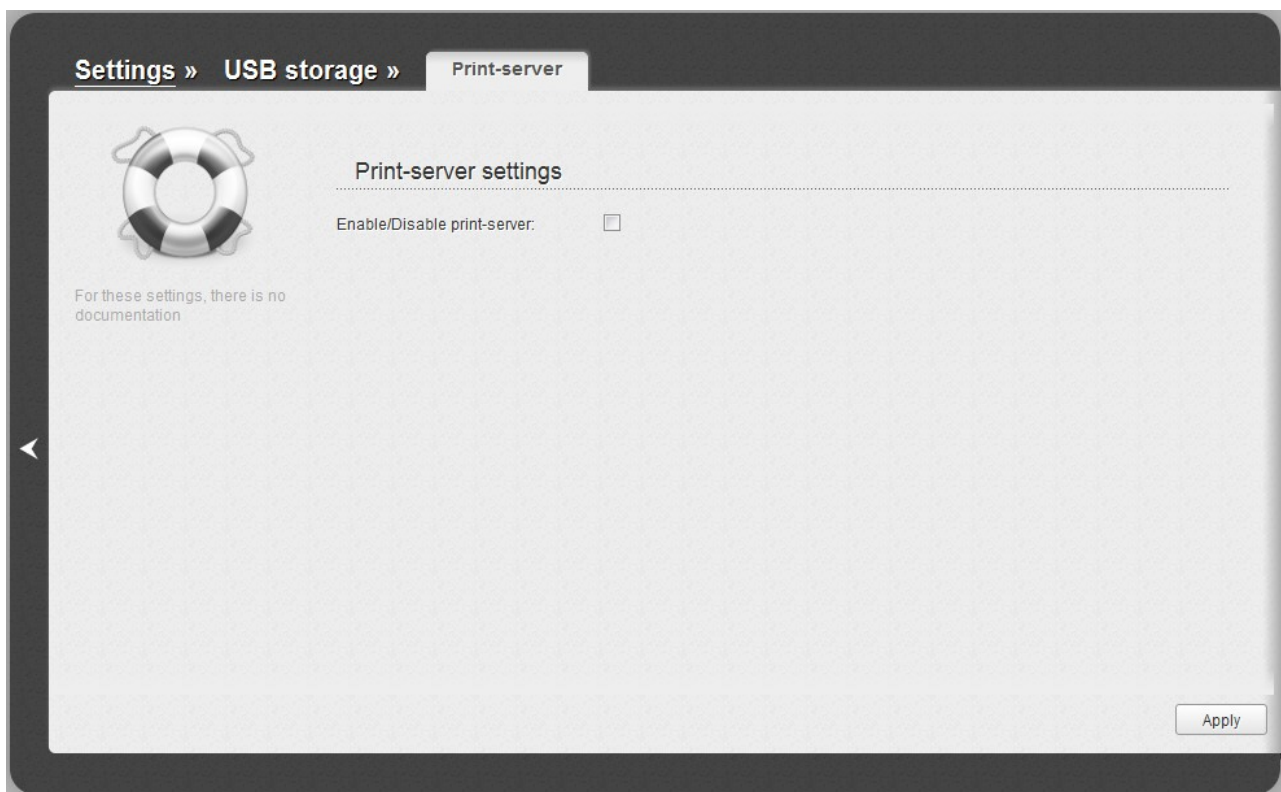


Figure 128. The **USB storage / Print-server** page.

To configure the router as a print server, select the **Enable/Disable print-server** checkbox and click the **Apply** button.

If you don't want to use the router as a print server, deselect the **Enable/Disable print-server** checkbox and click the **Apply** button.

## Samba

On the **USB storage / Samba** page, you can enable the built-in Samba server of the router to provide access to the USB storage for users of your LAN.

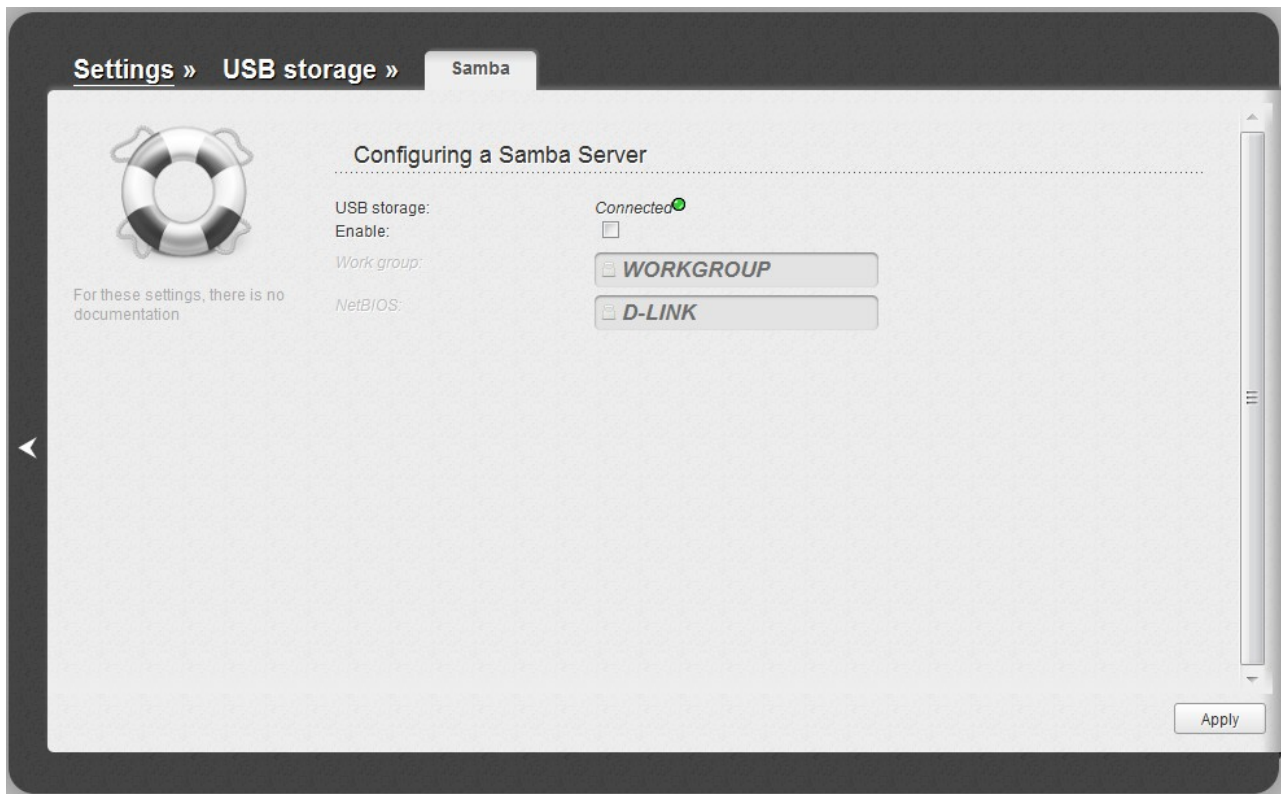


Figure 129. The **USB storage / Samba** page.

You can enable the Samba server only when a USB storage is connected to the router (in this case, the **Connected** value is displayed in the **USB storage** field). To enable the Samba server, select the **Enable** checkbox.

In the **Workgroup** field, leave the value specified by default (**WORKGROUP**) or specify a new name of a workgroup participants of which will have access to the content of the USB storage.

In the **NetBIOS** field, specify a new name of the USB storage for identification in your LAN. Use digits and/or Latin characters.

After specifying the needed parameters, click the **Apply** button.

To allow access to the content of the USB storage for users of your LAN, proceed to the **System / Users** page and create needed accounts.

To disable the built-in Samba server of the router, deselect the **Enable** checkbox and click the **Apply** button.

## FTP

On the **USB storage / FTP** page, you can enable the built-in FTP server of the router to provide access to the USB storage for users of your LAN.

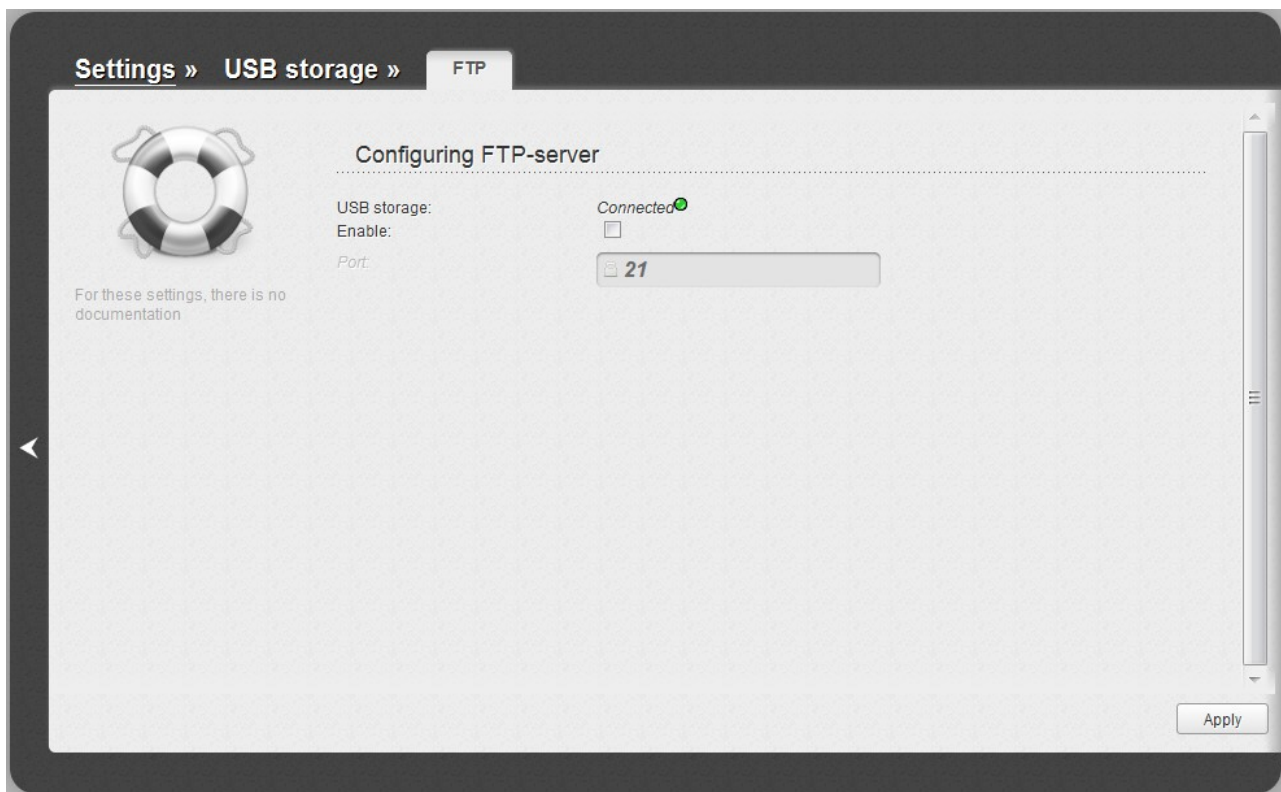


Figure 130. The **USB storage / FTP** page.

You can enable the FTP server only when a USB storage is connected to the router (in this case, the **Connected** value is displayed in the **USB storage** field). Select the **Enable** checkbox; if needed, change the router's port used by the FTP server in the **Port** field (by default, the standard port **21** is specified). Then click the **Apply** button.

To allow access to the content of the USB storage for users of your LAN, proceed to the **System / Users** page and create needed accounts.

To disable the built-in FTP server of the router, deselect the **Enable** checkbox and click the **Apply** button.

## DLNA

On the **USB storage / DLNA page**, you can enable the built-in DLNA server of the router to provide access to the USB storage for users of your LAN.

The built-in media server allows DLNA certified devices of your LAN to play multimedia content of the USB storage. Multimedia content can be played only when a USB storage is connected to the router.

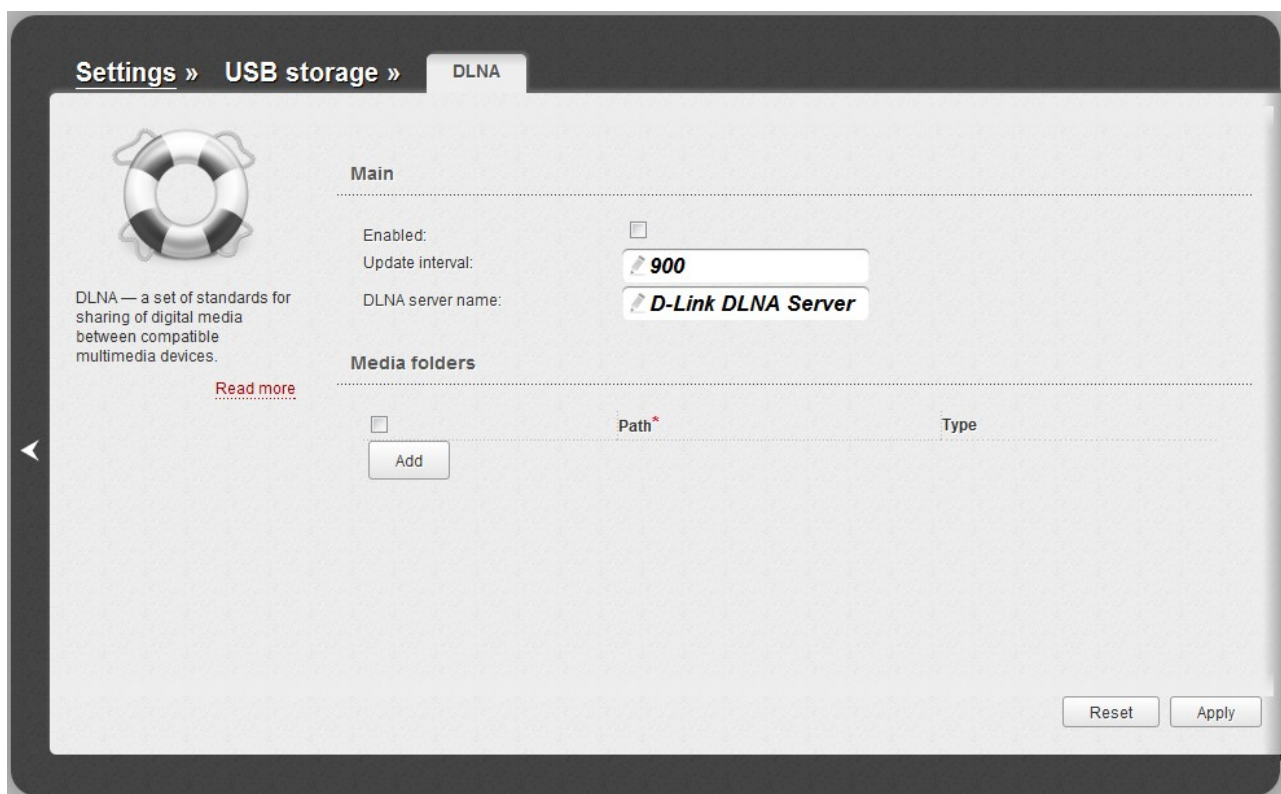


Figure 131. The **USB storage / DLNA** page.

To enable the DLNA server, select the **Enabled** checkbox.

In the **Update interval** field, specify the time period (in seconds), at the end of which the media server updates the file list of the USB storage, or leave the value specified by default (**900**). The minimal value you can specify is 60 seconds.

In the **DLNA server name** field, specify a new name of the DLNA server for easier identification in your LAN or leave the value specified by default (**D-Link DLNA Server**). Use digits and/or Latin characters.

To allow access to the content of the USB storage for users of your LAN, click the **Add** button. In the line displayed, locate a folder. To do this, click the button located to the right of the **Path** field (the button is available if the **Path** field is selected). In the opened window, double-click the icon of the storage or storage partition, select the needed folder in the directory structure, and click the **Open** button.

For each folder you can define the type of files which will be available for users of your LAN. To do this, select the needed type of files from the **Type** drop-down list. To share all files of a folder, select the **All** value from the **Type** drop-down list.

To undo the last changes, click the **Reset** button.

After specifying the needed parameters, click the **Apply** button.

To remove a folder from the list, select the checkbox in the line containing the relevant folder and click the **Apply** button.

To disable the built-in DLNA server of the router, deselect the **Enabled** checkbox and click the **Apply** button.



## Transmission

In this menu you can configure the built-in Transmission torrent client and manage distributing and downloading processes.

### Transmission Settings

On the **Transmission / Transmission settings** page, you can configure all needed settings for the built-in Transmission client.

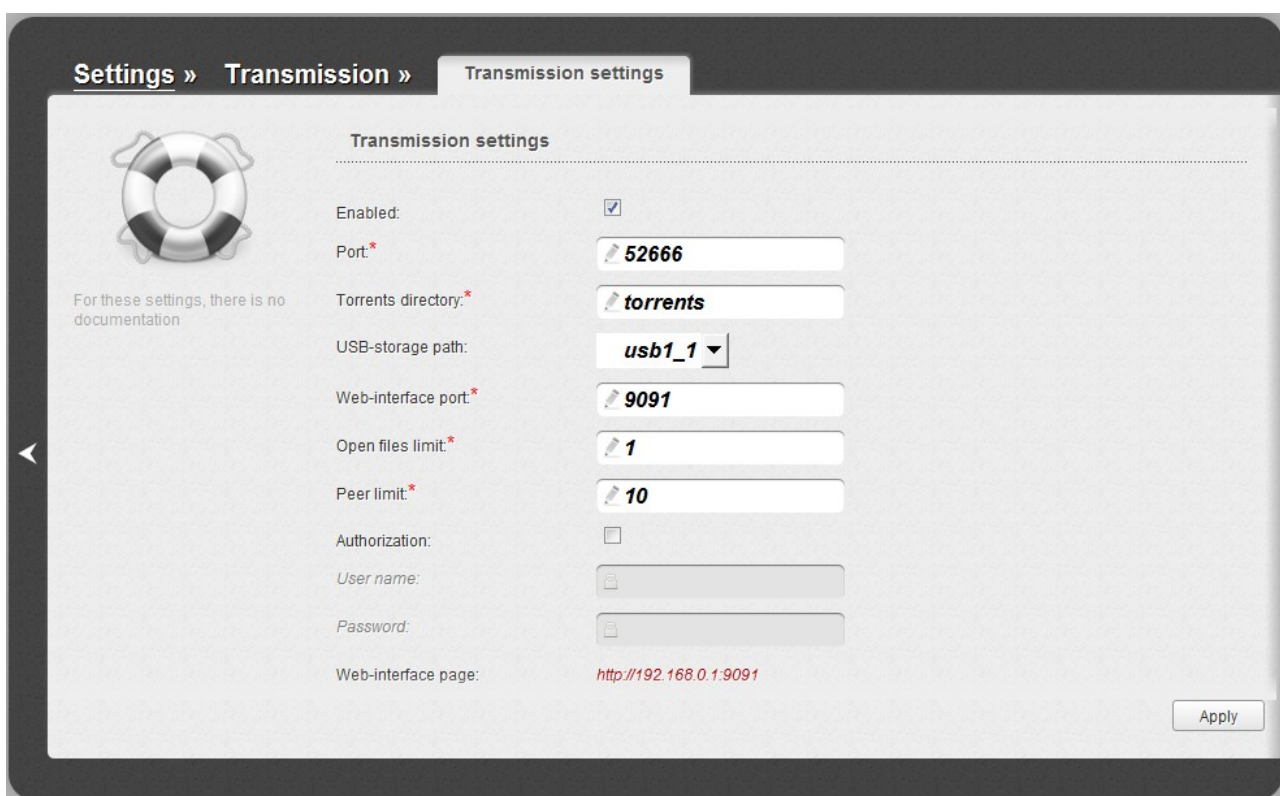


Figure 132. The **Transmission / Transmission settings** page.

You can specify the following parameters:

Parameter	Description
<b>Enabled</b>	Select the checkbox to activate the Transmission client.
<b>Port</b>	The router's port which will be used by the Transmission client.
<b>Torrents directory</b>	The folder on the USB storage where files of the Transmission client will be stored.
<b>USB-storage path</b>	The path to the USB storage in the file system of the router.
<b>Web-interface port</b>	The port on which the web-based interface of the Transmission client is available.

Parameter	Description
<b>Open files limit</b>	The maximum number of files which clients can download simultaneously.
<b>Peer limit</b>	The maximum number of the service users from which you can download files.
<b>Authorization</b>	Select the checkbox if you want the Transmission client to request for username and password when accessing its web-based interface. Then fill in the <b>User name</b> and <b>Password</b> fields.
<b>User name</b>	The username to access the web-based interface of the Transmission client.
<b>Password</b>	The password to access the web-based interface of the Transmission client.

In the **Web-interface page** field, the address of the web-based interface of the Transmission client is displayed.

After specifying the needed parameters, click the **Apply** button.

## Web-interface Page

Using the web-based interface of the built-in Transmission torrent client you can manage the process of downloading files to the USB storage connected to the router.








Figure 133. The web-based interface of the Transmission torrent client.

To add a new torrent file, click the button  (**Add**) and select a file stored on your PC. Click the button **Добавить (Add)** in the dialog box appeared.

To stop downloading of a file, select it in the list and click the button  (**Stop**).

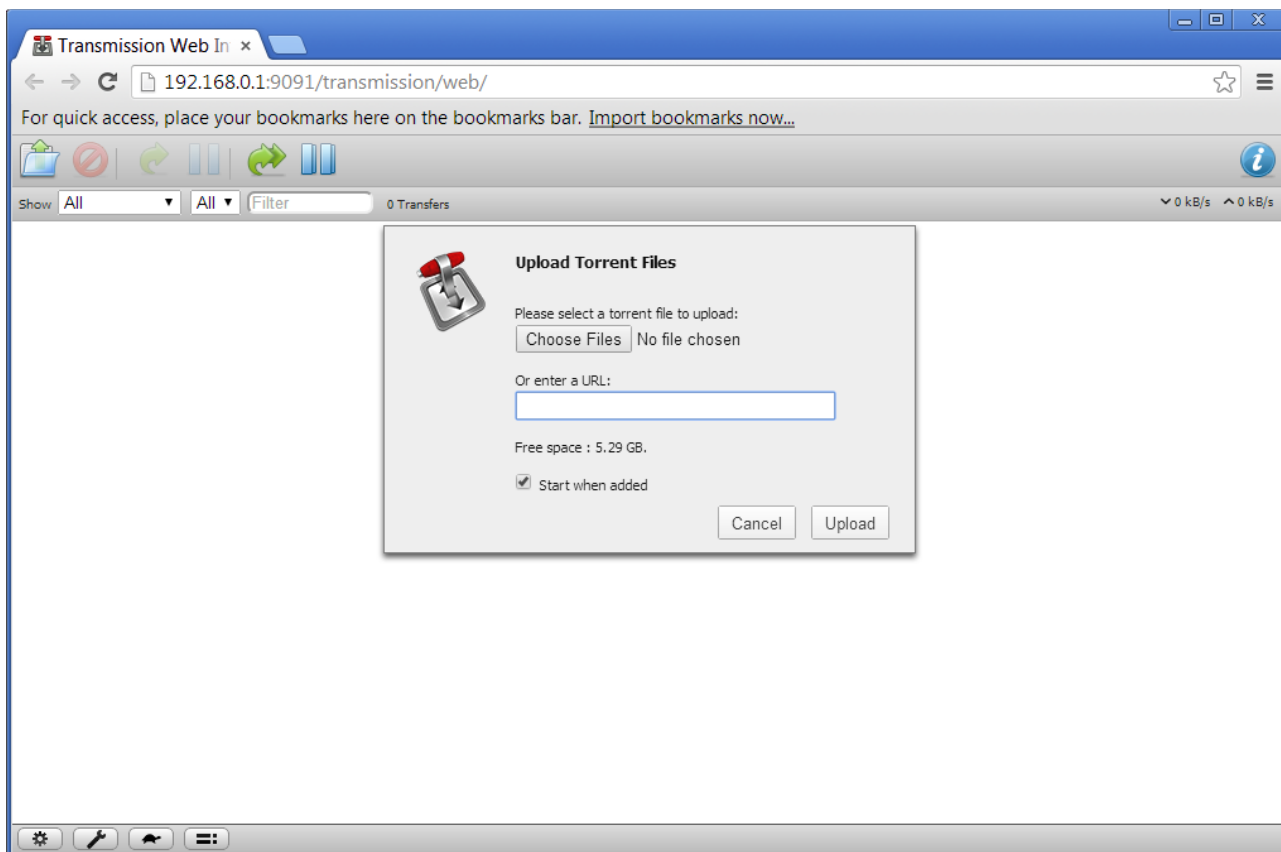To resume downloading of a file, select it in the list and click the button  (**Resume**).

To view data on a file, select it in the list and click the button  (**Inspector**).

To remove a file presented on the page, select it in the list and click the button  (**Remove**).

## System


In this menu you can do the following:

- change the password used to access the router's settings
- save the current settings to the non-volatile memory
- create a backup of the router's configuration
- restore the router's configuration from a previously saved file
- restore the factory default settings
- view the system log
- update the firmware of the router
- configure automatic notification on new firmware version
- configure automatic synchronization of the system time or manually configure the date and time for the router
- check availability of a host on the Internet through the web-based interface of the router
- trace the route to a host
- allow or forbid access to the router via TELNET
- create accounts for users to allow access to the content of the USB storage.

## Administrator Password

On the **System / Administrator password** page, you can change the password for the administrator account used to access the web-based interface of the router and to access the device settings via TELNET.

- ! For security reasons, it is strongly recommended to change the administrator password upon initial configuration of the router.

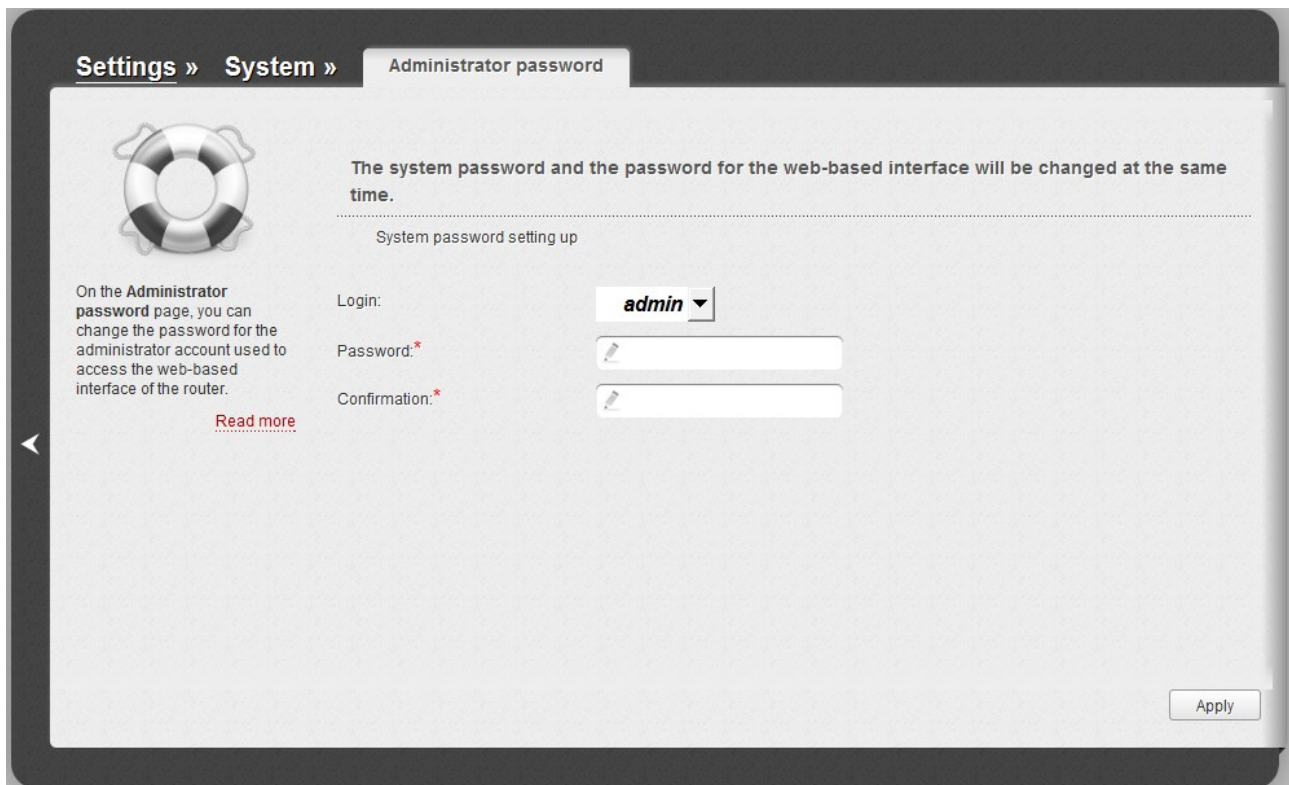

The screenshot shows the 'Administrator password' configuration page. At the top, there is a breadcrumb trail: 'Settings » System » Administrator password'. Below this, there is a warning icon (a lifebuoy) and a message: 'The system password and the password for the web-based interface will be changed at the same time.' Below the message, there is a section titled 'System password setting up'. On the left side, there is a text box explaining that the password for the administrator account will be changed, with a 'Read more' link. In the center, there are three input fields: 'Login:' with a dropdown menu showing 'admin', 'Password:\*' with a text input field, and 'Confirmation:\*' with a text input field. At the bottom right, there is an 'Apply' button.

Figure 134. The page for modifying the administrator password.

Enter the new password in the **Password** and **Confirmation** fields and click the **Apply** button.

## Configuration

On the **System / Configuration** page, you can save the changed settings to the non-volatile memory, restore the factory defaults, backup the current configuration, or restore the router's configuration from a previously created file.

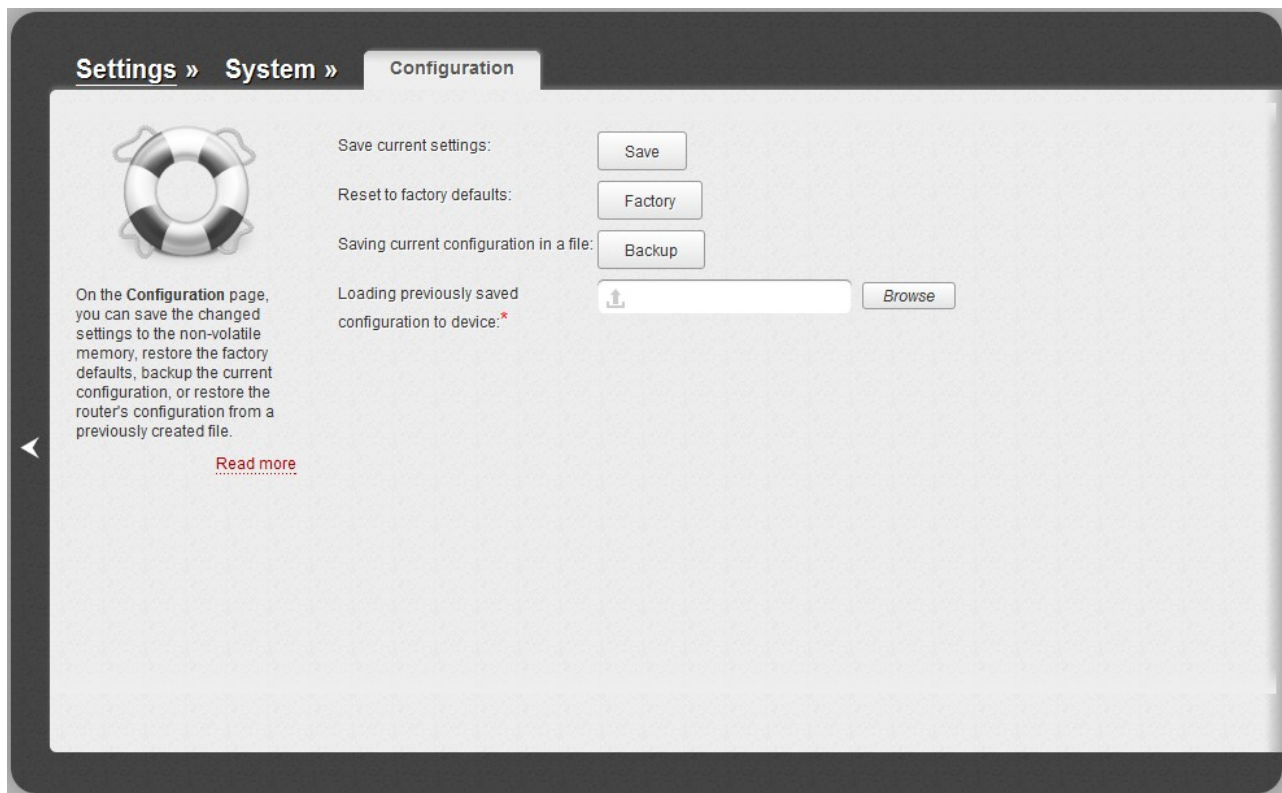


Figure 135. The **System / Configuration** page.

The following buttons are available on the page:

Control	Description
<b>Save</b>	Click the button to save settings to the non-volatile memory. Please, save settings every time you change the router's parameters. Otherwise the changes will be lost upon hardware reboot of the router.
<b>Factory</b>	Click the button to restore the factory default settings. Also you can restore the factory defaults via the hardware <b>RESET</b> button (see the <i>Saving and Restoring Settings</i> section, page 36).
<b>Backup</b>	Click the button and follow the dialog box appeared to save the configuration (all settings of the router) to your PC.
<b>Browse</b>	Click the button and follow the dialog box appeared to select a previously saved configuration file (all settings of the router) located on your PC and upload it.

Actions of the **Save**, **Factory**, and **Backup** buttons also can be performed via the top-page menu displayed when the mouse pointer is over the **System** caption.

## System Log

On the **System / System log** page, you can set the system log options and configure sending the system log to a remote host.

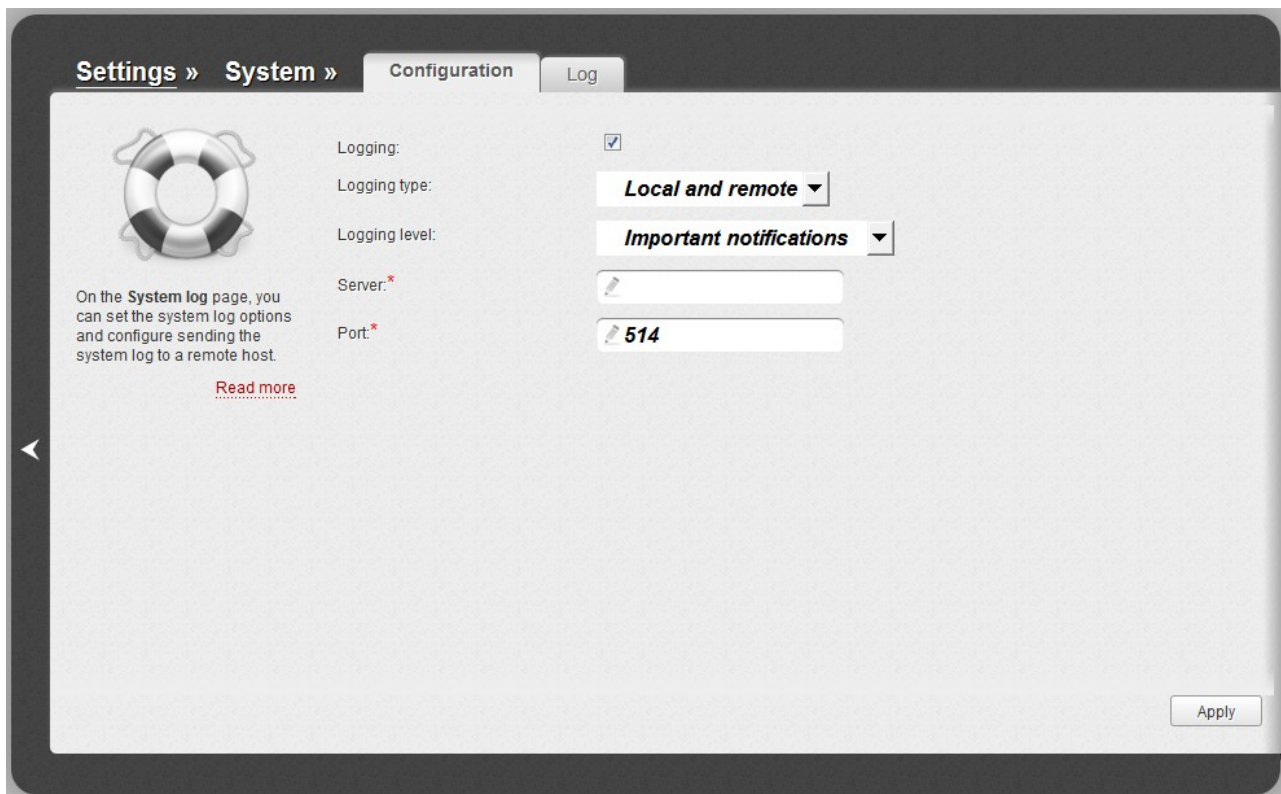


Figure 136. The **System / System log** page. The **Configuration** tab.

To enable logging of the system events, select the **Logging** checkbox on the **Configuration** tab. Then specify the needed parameters.

Control	Description
<b>Logging type</b>	<p>Select a type of logging from the drop-down list.</p> <ul style="list-style-type: none"> <li>• <b>Local:</b> the system log is stored in the router's memory (and displayed on the <b>Log</b> tab). When this value is selected, the <b>Server</b> and <b>Port</b> fields are not displayed.</li> <li>• <b>Remote:</b> the system log is sent to the remote host specified in the <b>Server</b> field.</li> <li>• <b>Local and remote:</b> the system log is stored in the router's memory (and displayed on the <b>Log</b> tab) and sent to the remote host specified in the <b>Server</b> field.</li> </ul>
<b>Logging level</b>	Select a type of messages and alerts/notifications to be logged.
<b>Server</b>	The IP or URL address of the host from the local or global network, to which the system log will be sent.



Control	Description
<b>Port</b>	A port of the host specified in the <b>Server</b> field. By default, the value <b>514</b> is specified.

After specifying the needed parameters, click the **Apply** button.

To disable logging of the system events, deselect the **Logging** checkbox and click the **Apply** button.

On the **Log** tab, the events specified in the **Logging level** list are displayed.

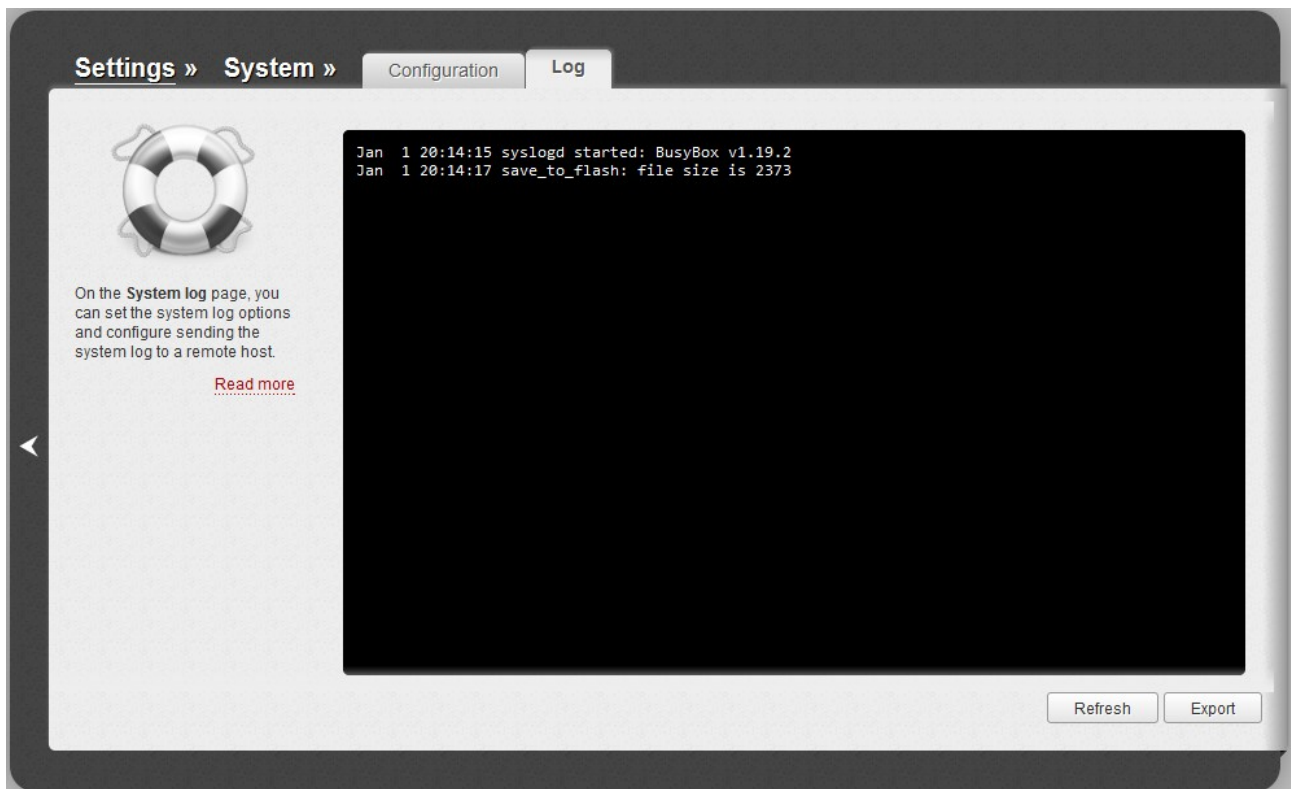


Figure 137. The **System / System log** page. The **Log** tab.

To view the latest system events, click the **Refresh** button.

To save the system log to your PC, click the **Export** button and follow the dialog box appeared.

## Firmware Upgrade

On the **System / Firmware upgrade** page, you can upgrade the firmware of the router and configure the automatic check for updates of the router's firmware.

**!** Upgrade the firmware only when the router is connected to your PC via a wired connection.

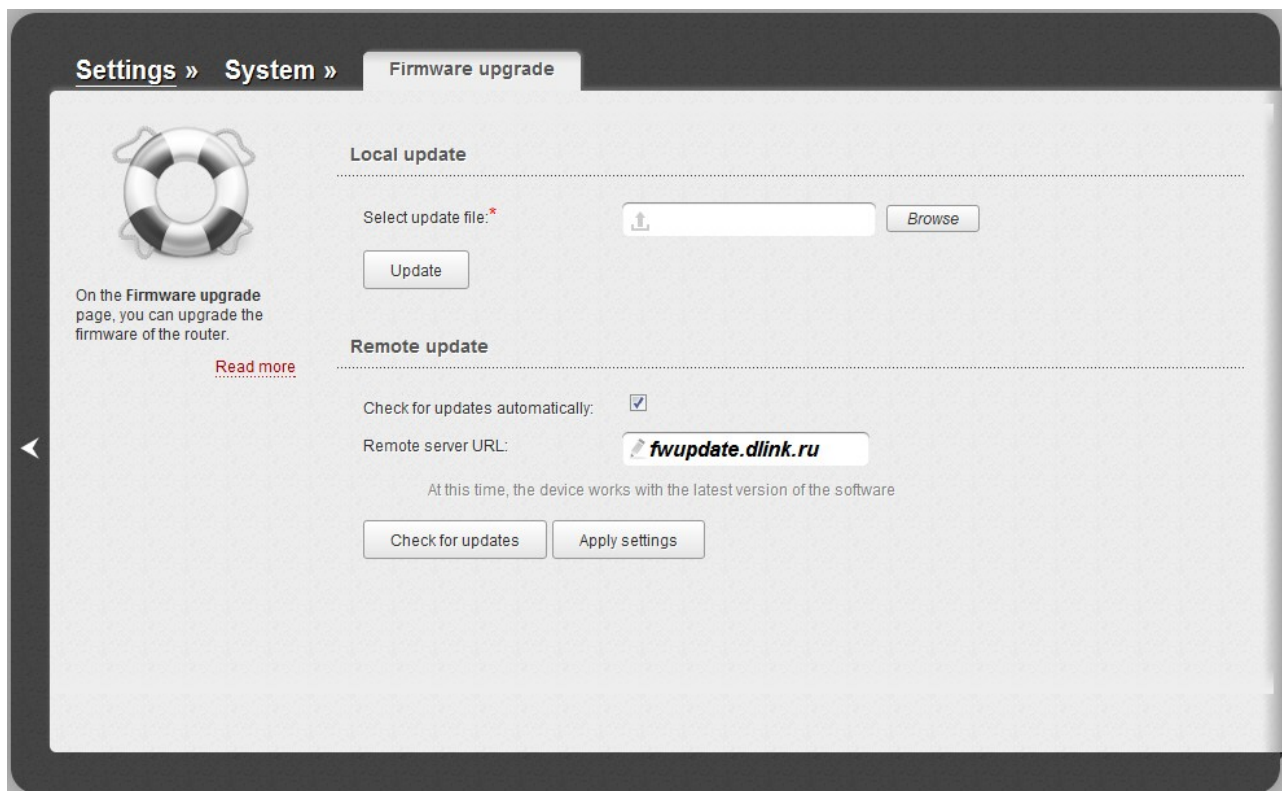


Figure 138. The **System / Firmware upgrade** page.

The current version of the router's firmware is displayed in the **Firmware version** field located next the D-Link logo in the top left corner of the page.

By default, the automatic check for the router's firmware updates is enabled. If a firmware update is available, a notification will be displayed in the top right corner of the page.

To disable the automatic check for firmware updates, in the **Remote update** section, deselect the **Check for updates automatically** checkbox and click the **Apply settings** button.

To enable the automatic check for firmware updates, in the **Remote update** section, select the **Check for updates automatically** checkbox and click the **Apply settings** button. By default, in the **Remote server URL** field, the D-Link update server address (**fwupdate.dlink.ru**) is specified.

You can upgrade the firmware of the router locally (from the hard drive of your PC) or remotely (from the update server).

## Local Update

**!** Attention! Do not turn off the router before the firmware upgrade is completed. This may cause the device breakdown.

To update the firmware of the router locally, follow the next steps:

1. Download a new version of the firmware from [www.dlink.ru](http://www.dlink.ru).
2. Click the **Browse** button on the **System / Firmware upgrade** page to locate the new firmware file.
3. Click the **Update** button to upgrade the firmware of the router.
4. Wait until the router is rebooted (about one and a half or two minutes).
5. Log into the web-based interface using the login (**admin**) and the current password.
6. Select the **Factory** line in the top-page menu displayed when the mouse pointer is over the **System** caption.
7. Wait until the router is rebooted. Log into the web-based interface, using the default IP address, login and password (**192.168.0.1**, **admin**, **admin**).

After the upgrade is completed, the new version of the firmware will be displayed in the **Firmware version** field in the top left corner of the page.

## Remote Update

**!** Attention! Do not turn off the router before the firmware upgrade is completed. This may cause the device breakdown.

To update the firmware of the router remotely, follow the next steps:

1. On the **System / Firmware upgrade** page, in the **Remote update** section, click the **Check for updates** button to check if a newer firmware version exists.
2. Click the **OK** button in the window displayed to upgrade the firmware of the router. Also you can upgrade the firmware of the router by clicking the **Remote update** button (the button is displayed if a newer version of the firmware is available).
3. Wait until the router is rebooted (about one and a half or two minutes).
4. Log into the web-based interface using the login (**admin**) and the current password.
5. Select the **Factory** line in the top-page menu displayed when the mouse pointer is over the **System** caption.
6. Wait until the router is rebooted. Log into the web-based interface, using the default IP address, login and password (**192.168.0.1**, **admin**, **admin**).

After the upgrade is completed, the new version of the firmware will be displayed in the **Firmware version** field in the top left corner of the page.

## NTP Client

On the **System / NTP client** page, you can manually set the time and date of the router or configure automatic synchronization of the system time with a time server on the Internet.

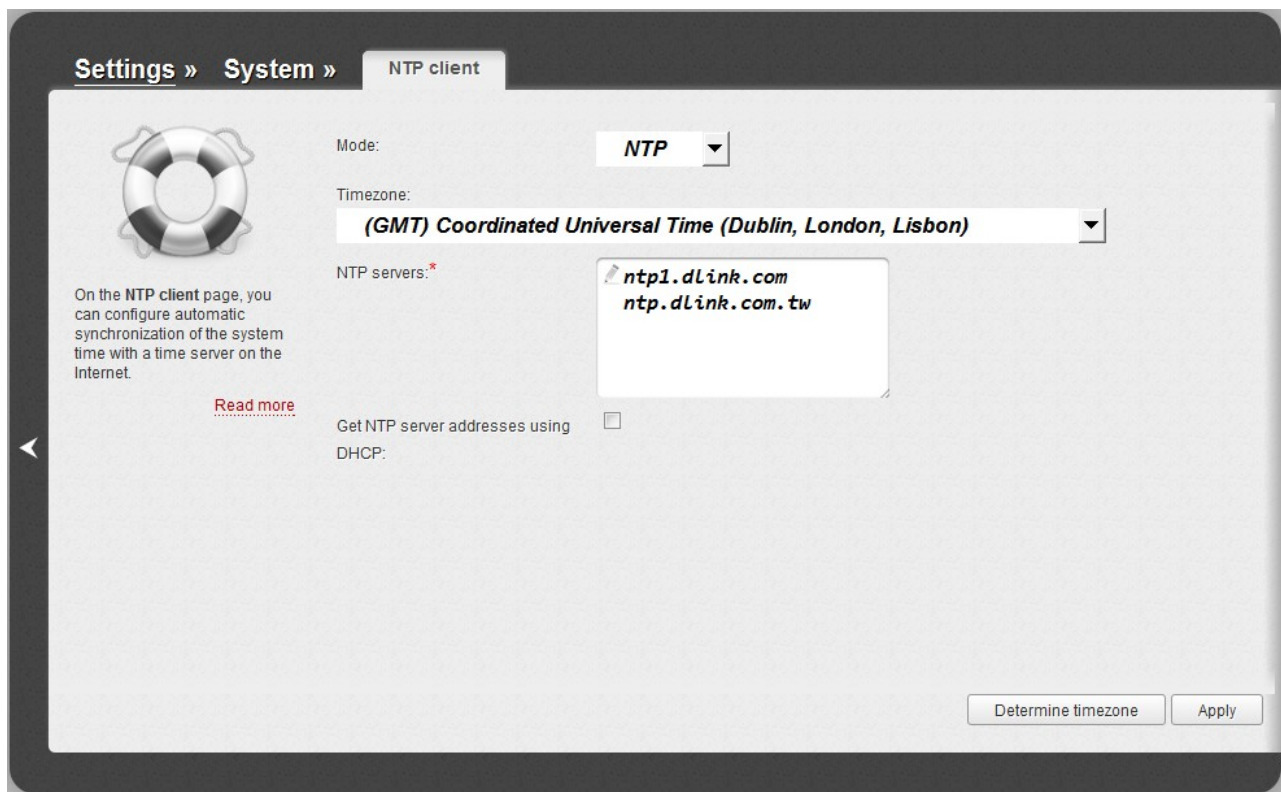


Figure 139. The **System / NTP client** page.

To set the system time manually, select the **Manual** value from the **Mode** drop-down list and set the time and date in the fields displayed. Then click the **Apply** button.

To enable automatic synchronization with a time server, follow the next steps:

1. Select the **NTP** value from the **Mode** drop-down list.
2. Select your time zone from the drop-down list. To set the time zone in accordance with the settings of your operating system, click the **Determine timezone** button in the bottom right corner of the page.
3. Specify the needed NTP server in the **NTP servers** field or leave the server specified by default.
4. Click the **Apply** button.

In some cases NTP servers addresses are provided by your ISP. In this case, you need to select the **Get NTP server addresses using DHCP** checkbox. Contact your ISP to clarify if this checkbox needs to be enabled. If the **Get NTP server addresses using DHCP** checkbox is selected, the **NTP servers** field is not available.



When the router is powered off or rebooted, the system time is reset to the default value. If you have set automatic synchronization for the system time, the internal clock of the device will be configured after connecting to the Internet. If you have set the system time manually, you need to set the time and date again (see above).

## Ping

On the **System / Ping** page, you can check availability of a host from the local or global network via the Ping utility.

The Ping utility sends echo requests to a specified host and receives echo replies.

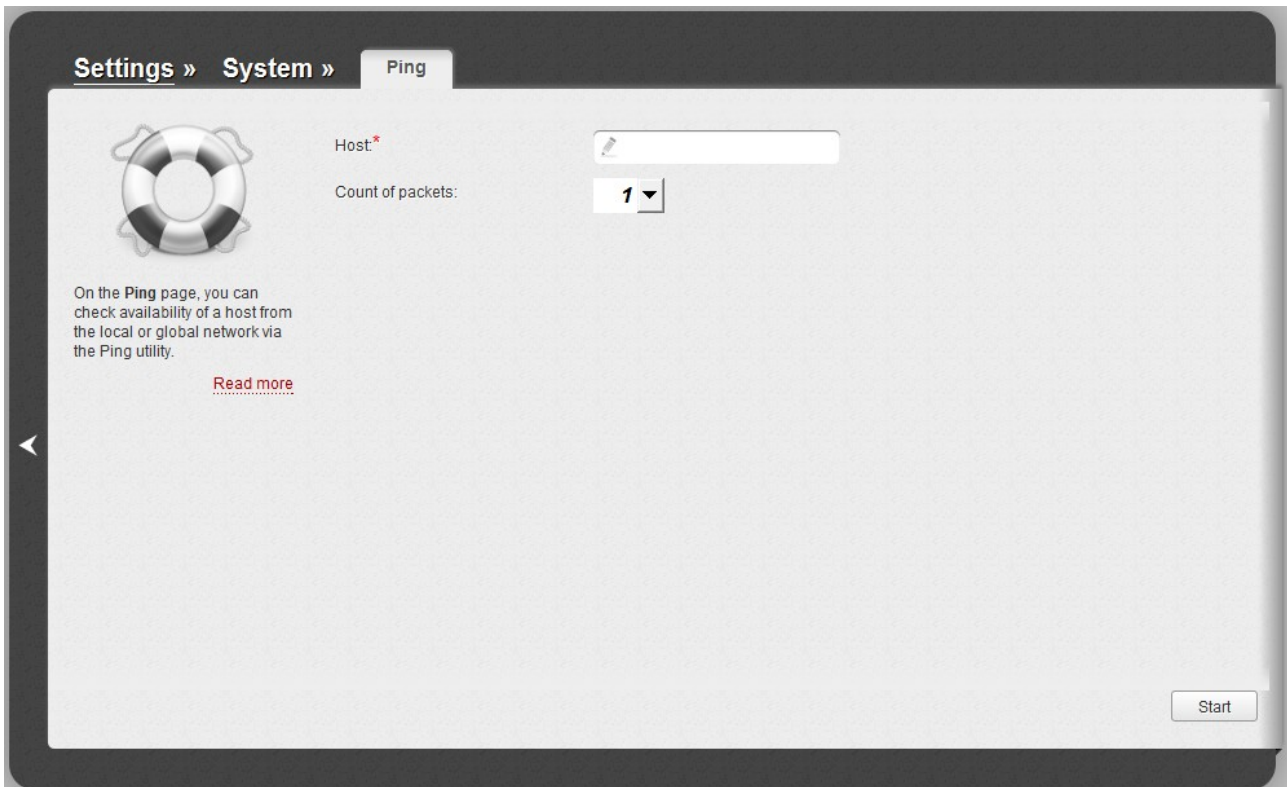


Figure 140. The **System / Ping** page.

To check availability of a host, enter the IP address or name of this host in the **Host** field, and select a number of requests that will be sent in order to check its availability from the **Count of packets** drop-down list. Click the **Start** button. After a while, the results will be displayed on the page.

## Traceroute

On the **System / Traceroute** page, you can define the route of data transfer to a host via the traceroute utility.

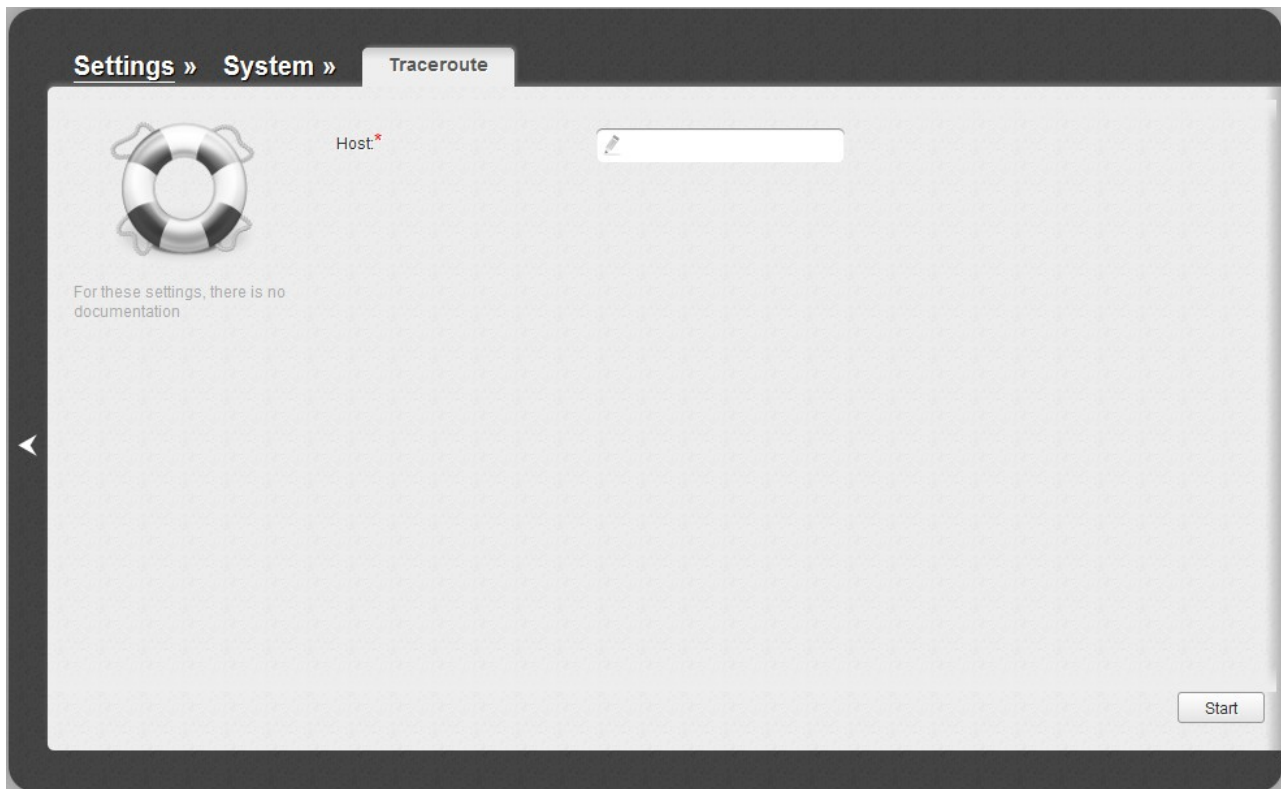


Figure 141. The **System / Traceroute** page.

To define the route, enter the name or IP address of a host in the **Host** field and click the **Start** button. After a while, the results will be displayed on the page.

## Telnet

On the **System / Telnet** page, you can enable or disable access to the device settings via TELNET from your LAN. By default, access is enabled.

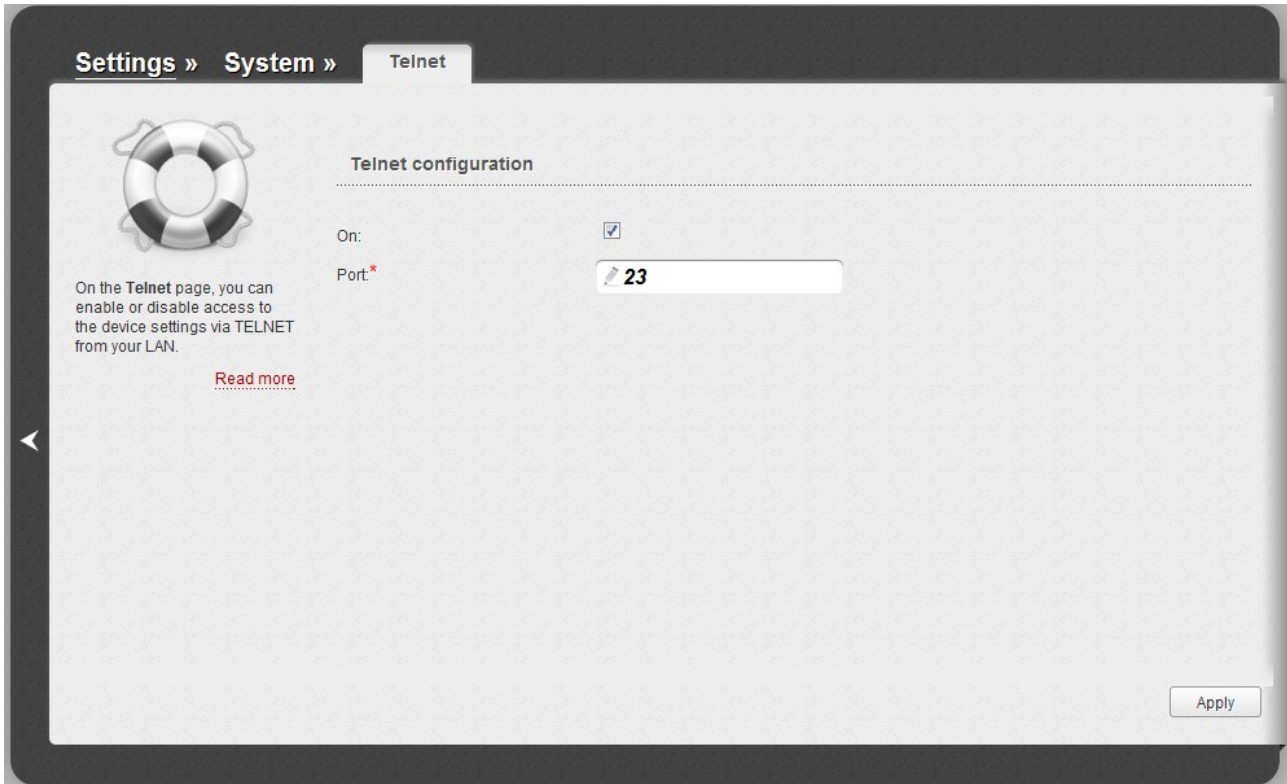


Figure 142. The **System / Telnet** page.

To disable access via TELNET, deselect the **On** checkbox and click the **Apply** button.

To enable access via TELNET again, select the **On** checkbox. In the **Port** field, enter the number of the router's port through which access will be allowed (by default, the port **23** is specified). Then click the **Apply** button.



## Users

On the **System / Users** page, you can create user accounts to provide access to data on the USB storage connected to the router.

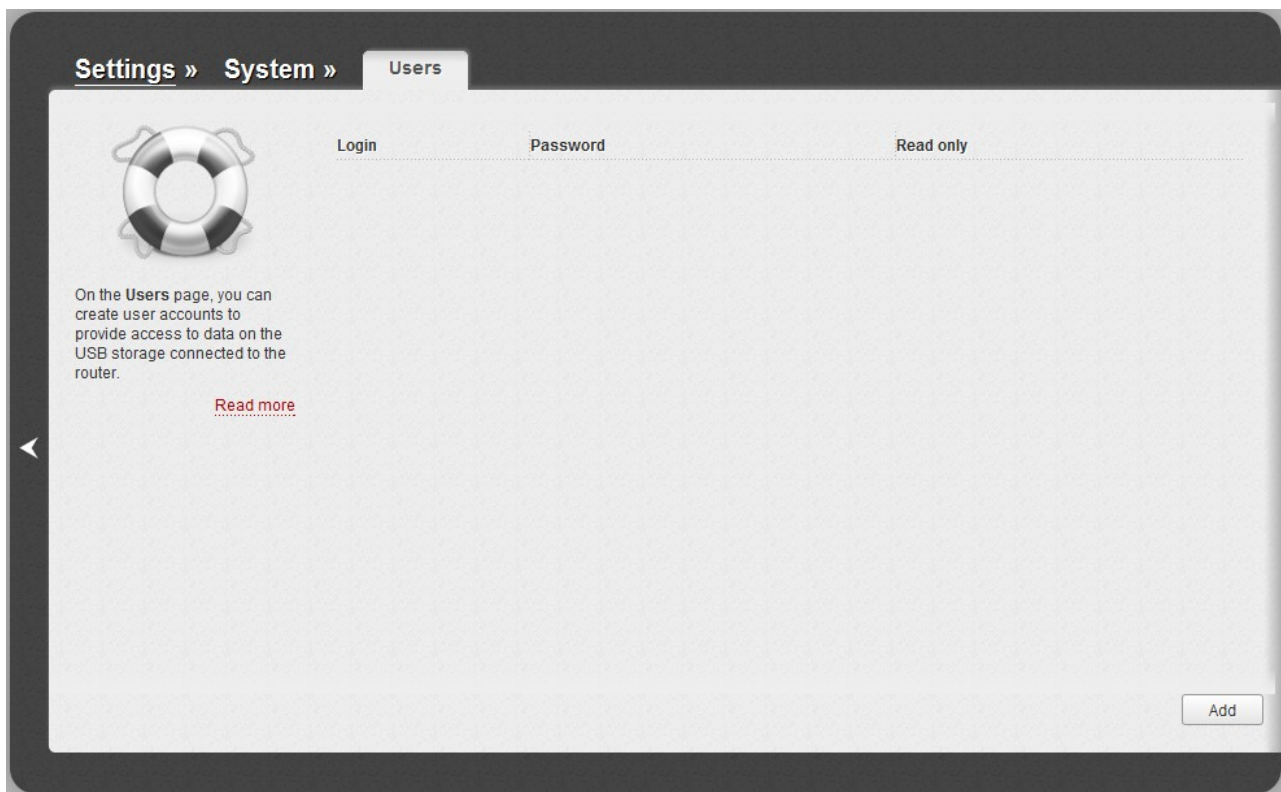


Figure 143. The **System / Users** page.

To create a new user account, click the **Add** button.

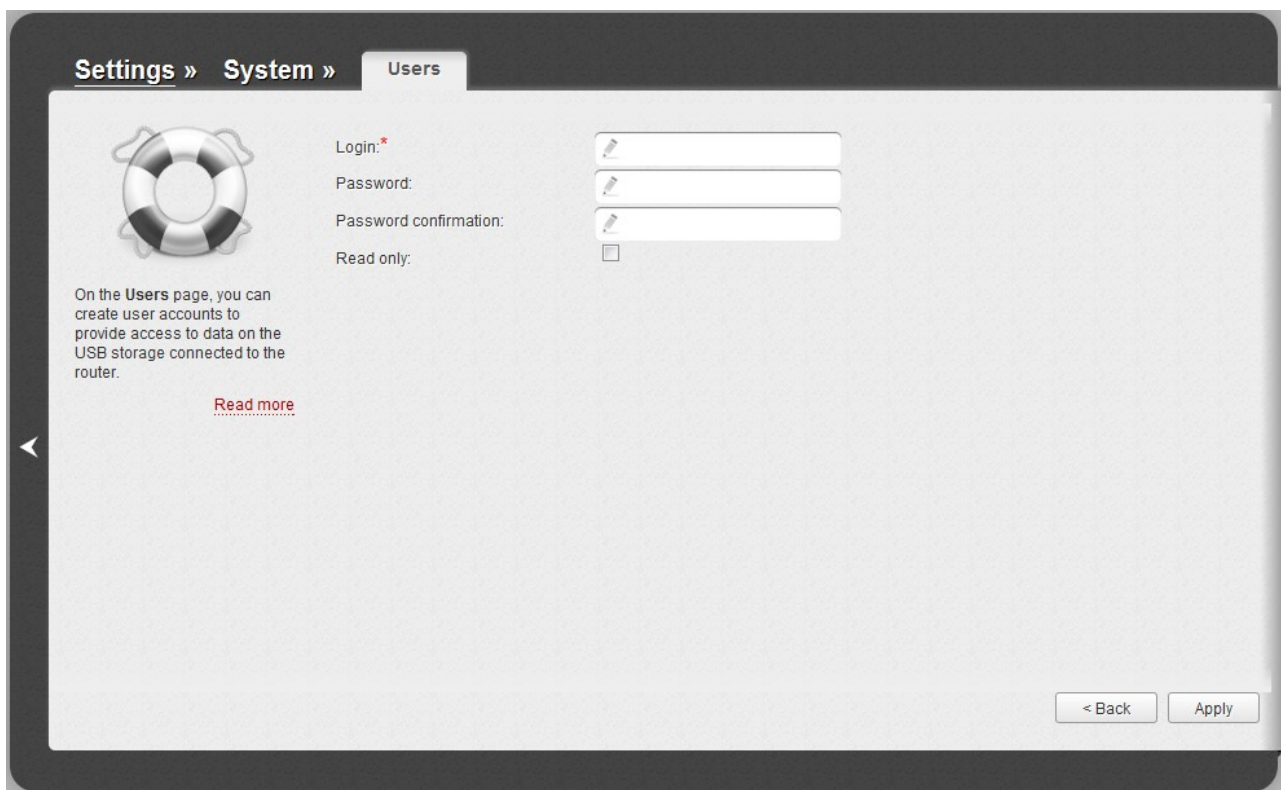


Figure 144. The page for adding a user.

On the opened page, in the **Login** field, specify a username, and in the **Password** and **Password confirmation** fields – the password for the account. You can use letters of the Latin and Russian alphabets (uppercase and/or lowercase) and digits.

**!** You cannot create accounts with the following usernames: **ftp**, **admin**, **support**, **user**, **nobody**.

To change the password of an account, select the relevant line in the table. On the opened page, enter a new value in the **Password** and **Password confirmation** fields, then click the **Apply** button.

To remove an account, select a relevant line in the table. On the opened page, click the **Delete** button.

To remove all accounts from this page, click the **Clear all** button (the button is displayed if at least one account exists).

## CHAPTER 5. OPERATION GUIDELINES

### ***Safety Instructions***

Place your router on a flat horizontal surface or mount the router on the wall (the mounting holes are located on the back panel of the device). Make sure that the router is provided with sufficient ventilation.

To prevent overheating, do not obstruct the ventilation openings of the router.

Plug the router into a surge protector to reduce the risk of damage from power surges and lightning strikes.

Operate the router only from an electrical outlet with the correct power source as indicated on the adapter.

Do not open the cover of the router. Otherwise any warranty will be invalidated.

Unplug the equipment before dusting and cleaning. Use a damp cloth to clean the equipment. Do not use liquid/aerosol cleaners or magnetic/static cleaning devices.

## ***Wireless Installation Considerations***

The DIR-620 device lets you access your network using a wireless connection from virtually anywhere within the operating range of your wireless network. Keep in mind, however, that the number, thickness and location of walls, ceilings, or other objects that the wireless signals must pass through, may limit the range. Typical ranges vary depending on the types of materials and background RF noise in your home or office. To maximize your wireless range, follow the guidelines below.

1. Keep the number of walls and ceilings between the DIR-620 device and other network devices to a minimum – each wall or ceiling can reduce your wireless network range by 3-90 feet (1-30 meters).
2. Be aware of the direct line between network devices. Place your devices so that the signal travels straight through a wall or ceiling (instead of at an angle) for better reception.
3. Building materials make a difference. A solid metal door or aluminum studs may have a negative effect on your wireless range. Try to position your router, access points, and computers so that the signal passes through drywalls or open doorways. Materials and objects such as glass, steel, metal, walls with insulation, water (fish tanks), mirrors, file cabinets, brick, and concrete will degrade your wireless signal.
4. Keep your router away (at least 3-6 feet or 1-2 meters) from electrical devices or appliances that generate RF noise.
5. If you are using 2.4 GHz cordless phones or X-10 equipment (wireless devices such as ceiling fans, lights, and home security systems), your wireless connection may degrade dramatically or drop completely. Make sure your 2.4 GHz phone base is as far away from your wireless devices as possible. Note, that the base transmits a signal even if the phone is not in use.

## ***Connecting to Cable or DSL Modem***

If you need to connect the router to a cable or DSL modem, do the following.

1. Place the router in an open location in the supposed center of your wireless network. Do not plug the power adapter into the router.
2. Turn off your PC.
3. Unplug the Ethernet cable (that connects your PC to your modem) from your computer and place it into the **INTERNET** port of your router.
4. Plug another Ethernet cable into one of the four LAN ports on the router. Plug the other end into the Ethernet port of your PC.
5. Turn on your modem. Wait until the modem is booted (about 30 seconds).
6. Plug the power adapter to the router and connect to an electrical outlet or power strip. Wait until the router is booted (about 30 seconds).
7. Turn on your PC.
8. Verify the LEDs of the router. The following LEDs should be on: **POWER**, **LAN** (of the relevant Ethernet port), and **INTERNET**. If not, make sure that your computer, modem, and router are powered on and the relevant cables are connected correctly.

## CHAPTER 6. ABBREVIATIONS AND ACRONYMS

<b>3G</b>	Third Generation
<b>AC</b>	Access Category
<b>AES</b>	Advanced Encryption Standard
<b>ARP</b>	Address Resolution Protocol
<b>BSSID</b>	Basic Service Set Identifier
<b>CCK</b>	Complementary Code Keying
<b>CDMA</b>	Code Division Multiple Access
<b>CINR</b>	Carrier to Interference + Noise Ratio
<b>CRC</b>	Cyclic Redundancy Check
<b>DDNS</b>	Dynamic Domain Name System
<b>DDoS</b>	Distributed Denial of Service
<b>DHCP</b>	Dynamic Host Configuration Protocol
<b>DLNA</b>	Digital Living Network Alliance
<b>DMZ</b>	DeMilitarized Zone
<b>DNS</b>	Domain Name System
<b>DTIM</b>	Delivery Traffic Indication Message
<b>FTP</b>	File Transfer Protocol
<b>GMT</b>	Greenwich Mean Time
<b>GSM</b>	Global System for Mobile Communications
<b>IGD</b>	Internet Gateway Device
<b>IGMP</b>	Internet Group Management Protocol
<b>IMEI</b>	International Mobile Equipment Identity
<b>IMSI</b>	International Mobile Subscriber Identity
<b>IP</b>	Internet Protocol
<b>ISP</b>	Internet Service Provider
<b>L2TP</b>	Layer 2 Tunneling Protocol

<b>LAN</b>	Local Area Network
<b>LCP</b>	Link Control Protocol
<b>LTE</b>	Long Term Evolution
<b>MAC</b>	Media Access Control
<b>MTU</b>	Maximum Transmission Unit
<b>NAT</b>	Network Address Translation
<b>NTP</b>	Network Time Protocol
<b>OFDM</b>	Orthogonal Frequency Division Multiplexing
<b>PBC</b>	Push Button Configuration
<b>PIN</b>	Personal Identification Number
<b>PPPoE</b>	Point-to-point protocol over Ethernet
<b>PPTP</b>	Point-to-point tunneling protocol
<b>PSK</b>	Pre-shared key
<b>PUK</b>	PIN Unlock Key
<b>QoS</b>	Quality of Service
<b>R-UIM</b>	Removable User Identity Module
<b>RADIUS</b>	Remote Authentication in Dial-In User Service
<b>RIP</b>	Routing Information Protocol
<b>RSSI</b>	Received Signal Strength Indicator
<b>RTS</b>	Request To Send
<b>RTSP</b>	Real Time Streaming Protocol
<b>SIM</b>	Subscriber Identification Module
<b>SIP</b>	Session Initiation Protocol
<b>SMB</b>	Server Message Block
<b>SSID</b>	Service Set Identifier
<b>TKIP</b>	Temporal Key Integrity Protocol
<b>UDP</b>	User Datagram Protocol
<b>UPnP</b>	Universal Plug and Play

---

<b>URL</b>	Uniform Resource Locator
<b>USB</b>	Universal Serial Bus
<b>VLAN</b>	Virtual Local Area Network
<b>VPN</b>	Virtual Private Network
<b>WAN</b>	Wide Area Network
<b>WEP</b>	Wired Equivalent Privacy
<b>Wi-Fi</b>	Wireless Fidelity
<b>WiMAX</b>	Worldwide Interoperability for Microwave Access
<b>WISP</b>	Wireless Internet Service Provider
<b>WLAN</b>	Wireless Local Area Network
<b>WMM</b>	Wi-Fi Multimedia
<b>WPA</b>	Wi-Fi Protected Access
<b>WPS</b>	Wi-Fi Protected Setup